



FL20-S series

Power Range 220V 0.05kW~4.5kW
380V/400V 1.0kW~37kW

Product Manual (English)

Version: N2017122704

aerospace
climate control
electromechanical
filtration
fluid & gas handling
hydraulics
pneumatics
process control
sealing & shielding



ENGINEERING **YOUR** SUCCESS.

FAILURE OR IMPROPER SELECTION OR IMPROPER USE OF THE PRODUCTS
DESCRIBED HEREIN OR RELATED ITEMS CAN CAUSE DEATH, PERSONAL
INJURY AND PROPERTY DAMAGE.

This document and other information from Parker-Hannifin Corporation, its subsidiaries and authorized distributors provide product or system options for further investigation by users having technical expertise.

The user, through its own analysis and testing, is solely responsible for making the final selection of the system and components and assuring that all performance, endurance, maintenance, safety and warning requirements of the application are met. The user must analyze all aspects of the application, follow applicable industry standards, and follow the information concerning the product in the current product catalog and in any other materials provided from Parker or its subsidiaries or authorized distributors.

To the extent that Parker or its subsidiaries or authorized distributors provide component or system options based upon data or specifications provided by the user, the user is responsible for determining that such data and specifications are suitable and sufficient for all applications and reasonably foreseeable uses of the components or systems



FL20-S series

2017 Parker Hannifin Manufacturing Ltd.

All rights strictly reserved. No part of this document may be stored in a retrieval system, or transmitted in any form or by any means to persons not employed by a Parker SSD Drives company without written permission from Parker Automation Wuxi, a division of Parker Hannifin Ltd . Although every effort has been taken to ensure the accuracy of this document it may be necessary, without notice, to make amendments or correct omissions. Parker Automation Wuxi cannot accept responsibility for damage, injury, or expenses resulting therefrom.

WARRANTY

Refer to Parker Hannifin Manufacturing Limited Terms and Conditions of Sale. These documents are available on request at www.parker.com/ADC. Parker Hannifin Manufacturing Limited reserves the right to change the content and product specification without notice.

About this manual

■ Description of technical terms

The terms in this manual are defined as follows:

Servodrive is used to drive and control servo motor.

Servo System means a servo control system that includes the combination of a servodrive, servo motor with a host computer and peripheral devices.

Parameters include monitoring parameter and setting parameters. Monitoring parameters can only be checked, but not be modified, and setting parameters can be checked and modified, which includes function parameters and data parameters.

■ Common symbol

The following symbols are used for convenience.

1. Instruction

| | | |
|--------------------------|---|------------------------|
| P : position mode | Pt : position pulse mode | ALL : all modes |
| | Pr : internal register position mode | |
| S : speed mode | Sr : internal register speed mode | |
| | Sz : analog speed mode | |
| T : torque mode | Tr : internal register torque mode | |
| | Tz : analog torque mode | |

2. Usage of backslash (/)

Backslash is used in the wiring diagram. It describes the default logic of I/O interface.

For input signal (DI terminal), backslash means, when input circuit is ON status, the input signal is valid, i.e. the default logic is positive logic. Without backslash means, when input side is OFF status, the input signal is valid, i.e. the default logic is negative logic.

For output signal (DO terminal), backslash means output side circuit is common-opened, and when the signal is output, the output side circuit is closed. Without backslash means output side circuit is common-closed, and when the signal is output, the output side circuit is opened.

3. Others

NC: no connection

N/A: no unit

| | | |
|------------|---|-----------|
| I | NOTES FOR SAFE OPERATION..... | 11 |
| II | MODEL SELECTION..... | 14 |
| 2.1 | SERVO DRIVE INTRODUCTION..... | 14 |
| 2.1.1 | SERVO DRIVE NAMEPLATE..... | 14 |
| 2.1.2 | CONNECTION TO PERIPHERAL DEVICES | 16 |
| 2.1.3 | SERVO DRIVE SPECIFICATION..... | 17 |
| 2.1.4 | CONNECTION TO PERIPHERAL DEVICES | 20 |
| 2.2 | SERVO MOTOR..... | 21 |
| 2.2.1 | SERVO MOTOR NAMEPLATE AND MODEL..... | 21 |
| 2.2.2 | SERVO MOTOR COMPONENT | 22 |
| 2.2.3 | SERVO MOTOR MODEL..... | 23 |
| 2.3 | COMBINATION OF SERVOMOTOR AND SERVODRIVE..... | 26 |
| III | INSTALLATION | 30 |
| 3.1 | SERVO DRIVES INSTALLATION..... | 30 |
| 3.1.1 | INSTALLATION CONDITIONS..... | 30 |
| 3.1.2 | INSTALLATION PROCEDURE AND MINIMUM CLEARANCES | 31 |
| 3.1.3 | SERVO DRIVE DIMENSION | 32 |
| 3.2 | SERVO MOTOR INSTALLATION..... | 38 |
| 3.2.1 | INSTALLATION LOCATION | 38 |
| 3.2.2 | INSTALLATION CONDITIONS | 38 |
| 3.2.3 | PRECAUTIONS ON SERVO MOTOR INSTALLATION..... | 39 |
| 3.2.4 | SERVO MOTOR DIMENSION | 40 |
| IV | WIRING | 46 |
| 4.1 | MAIN CIRCUIT WIRING..... | 48 |
| 4.1.1 | MAIN CIRCUIT TERMINALS | 48 |
| 4.1.2 | MAIN CIRCUIT TERMINAL WIRING | 49 |
| 4.1.3 | TYPICAL MAIN CIRCUIT WIRING EXAMPLES | 50 |
| 4.1.4 | PRECAUTION FOR MAIN CIRCUIT WIRING | 52 |
| 4.2 | ENCODER WIRING..... | 53 |
| 4.2.1 | ABSOLUTE ENCODER CONNECTOR TERMINAL LAYOUT | 53 |
| 4.2.2 | RESOLVER ENCODER CONNECTOR TERMINAL LAYOUT..... | 54 |
| 4.2.3 | INCREMENTAL ENCODER CONNECTOR TERMINAL LAYOUT..... | 55 |

| | |
|---|-----------|
| 4.3 I/O SIGNAL WIRING | 56 |
| 4.3.1 POSITION COMMAND INPUT SIGNAL AND FUNCTION | 58 |
| 4.3.2 ANALOG COMMAND INPUT SIGNAL AND FUNCTIONS | 63 |
| 4.3.3 ANALOG OUTPUT SIGNAL AND FUNCTIONS | 63 |
| 4.3.4 DIGITAL INPUT SIGNAL AND FUNCTIONS | 64 |
| 4.3.5 ENCODER FREQUENCY-DIVISION OUTPUT SIGNAL AND FUNCTION | 67 |
| 4.3.6 COMMUNICATION WIRING | 68 |
| 4.3.7 WIRING WHEN USING MORE THAN ONE SERVOS | 69 |
| 4.3.8 ABSOLUTE VALUE ENCODER | 71 |
| 4.4 SERVO DRIVE AND SERVO MOTOR WIRING | 72 |
| 4.4.1 ENCODER WIRING | 72 |
| 4.4.2 POWER CABLE OF SERVO DRIVE AND SERVO MOTOR | 75 |
| V. OPERATION AND PARAMETERS..... | 77 |
| 5.1 KEYPAD DESCRIPTION | 77 |
| 5.1.1 INSTRUCTION OF KEYPAD | 77 |
| 5.2 KEYPAD OPERATING PROCEDURE | 78 |
| 5.2.1 SWITCHOVER BETWEEN PARAMETER SECTION..... | 78 |
| 5.2.2 PARAMETERS INSTRUCTIONS | 79 |
| 5.3 KEYPAD OPERATING PROCEDURE | 81 |
| 5.3.1 EXAMPLE OF MONITOR FUNCTION PARAMETER | 81 |
| 5.3.2 EXAMPLE OF AUXILIARY PARAMETERS USAGE..... | 82 |
| 5.3.3 PARAMETER SETTING | 83 |
| VI RUN..... | 85 |
| 6.1 BASIC PARAMETERS SETTING | 88 |
| 6.1.1 BEFORE RUNNING..... | 88 |
| 6.1.2 POWER ON | 88 |
| 6.1.3 PARAMETERS SETTING..... | 88 |
| 6.1.4 SETTING THE OVERTRAVEL LIMIT FUNCTION | 92 |
| 6.1.5 JOG OPERATION PROCEDURE | 95 |
| 6.1.6 TIMING SEQUENCE CONTROL..... | 96 |
| 6.1.7 SETTING THE BRAKING | 98 |
| 6.2 SPEED MODE | 101 |
| 6.2.1 PARAMETERS SETTING..... | 101 |

| | |
|--|-----|
| 6.2.1 PARAMETERS SETTING..... | 102 |
| 6.2.2 SOFT START | 109 |
| 6.2.3 S CURVE SMOOTHNESS FUNCTION | 110 |
| 6.2.4 ZERO CLAMP FUNCTION | 111 |
| 6.2.5 SPEED OUTPUT SIGNAL | 111 |
| 6.3 TORQUE MODE..... | 115 |
| 6.3.1 PARAMETERS SETTING | 115 |
| 6.3.2 SOFT START | 121 |
| 6.3.3 SPEED LIMITING AT TORQUE MODE..... | 122 |
| 6.3.4 LIMITING TORQUE | 122 |
| 6.3.5 RELATED OUTPUT | 124 |
| 6.4 POSITION PULSE MODE | 124 |
| 6.4.1 PARAMETERS SETTING..... | 125 |
| 6.4.2 SETTING ELECTRONIC GEAR | 141 |
| 6.4.3 POSITION COMMAND FILTER..... | 144 |
| 6.4.4 SOFT START OF POSITION COMMAND | 144 |
| 6.4.5 POSITION COMMAND INHIBIT FUNCTION..... | 145 |
| 6.4.6 COMMAND PULSE CLEAR FUNCTION..... | 145 |
| 6.4.7 FREQUENCY-DIVISION OUTPUT FUNCTION | 146 |
| 6.4.8 HOMESearchMODE..... | 150 |
| 6.4.9 MECHANICAL ORIGIN SEARCH FUNCTION | 156 |
| 6.4.10 FIXED LENGTH INTERRUPT FUNCTION | 158 |
| 6.4.11 DO OUTPUT RELATED TO POSITION PULSE | 160 |
| 6.4.12 FULL CLOSED LOOP FUNCTION | 161 |
| 6.4.13 GANTRY SYNCHRON FUNCTION | 165 |
| 6.4.14 ELECTRONIC CAM (E-CAM) FUNCTION..... | 168 |
| 6.5 DUAL MODE..... | 179 |
| 6.5.1 USER PARAMETER SETTING..... | 179 |
| 6.5.2 INTERNAL SPEED AND POSITION PULSE DUAL MODE | 180 |
| 6.5.3 ANALOG SPEED AND POSITION PULSE DUAL MODE | 181 |
| 6.5.4 ANALOG SPEED AND INTERNAL REGISTER POSITION DUAL MODE..... | 182 |
| 6.5.5 INTERNAL SPEED AND INTERNAL REGISTER POSITION DUAL MODE..... | 183 |
| 6.5.6 TORQUE MODE AND POSITION PULSE DUAL MODE..... | 183 |
| 6.5.7 TORQUE MODE AND INTERNAL REGISTER POSITION DUAL MODE | 184 |
| 6.5.8 POSITION PULSE AND INTERNAL REGISTER POSITION DUAL MODE..... | 185 |

| | |
|---|------------|
| 6.5.9 INTERNAL SPEED AND ANALOG SPEED DUAL MODE | 186 |
| 6.5.10 SPEED AND TORQUE DUAL MODE | 187 |
| 6.5.11 ANALOG TORQUE AND INTERNAL REGISTER TORQUE DUAL MODE | 189 |
| 6.6 AUXILIARY FUNCTION..... | 190 |
| 6.6.1 SETTING PASSWORD | 190 |
| 6.6.2 SERVO DRIVE STATUS DISPLAY..... | 191 |
| 6.6.3 FAN SETTING..... | 192 |
| 6.6.4 PARAMETER COPY | 192 |
| 6.6.5 REVERTING TO MFR'S VALUE..... | 193 |
| 6.6.6 MOTOR PROTECTION FUNCTION | 193 |
| 6.6.7 ENCODER PULSE FILTERING..... | 195 |
| 6.6.8 TORQUE UNREACHED PROTECTION CONTROL..... | 195 |
| 6.6.9 DI TERMINALS FILTER FUNCTION..... | 195 |
| 6.7 HIGH-SPEED COUNTER FUNCTION | 198 |
| 6.7.1 OVERVIEW | 198 |
| 6.7.2 HIGH-SPEED COUNTING | 198 |
| 6.8 BUILT-IN PLC FUNCTION | 204 |
| 6.8.1 SUMMARY | 204 |
| 6.8.2 SERVO BUILT-IN PLC SOFTWARE ACCESS AREA..... | 205 |
| 6.8.3 BUILT-IN PLC PROGRAM DESIGN..... | 210 |
| 6.8.3.1 DATA MOVE INSTRUCTION | 210 |
| 6.8.3.2 ARITHMETIC INSTRUCTION..... | 211 |
| 6.8.3.3 LOGIC INSTRUCTION | 219 |
| 6.8.3.4 PROGRAM CONTROL INSTRUCTION | 223 |
| 6.8.4 BUILT-IN PLC PARAMETERS..... | 228 |
| 6.8.5 BUILT-IN PC/PLC USE AND APPLICATION EXAMPLE | 231 |
| 6.8.6 BUILT-IN PLC COMMUNICATION OPERATION | 236 |
| 6.8.6.1 MODBUS ADDRESS | 236 |
| 6.8.6.2 DEBUG FUNCTION OF BUILT-IN PLC | 236 |
| VII. ADJUSTMENTS | 237 |
| 7.1 SUMMARY | 237 |
| 7.2 INERTIA IDENTIFICATION | 238 |
| 7.2.1 OFFLINE INERTIA IDENTIFICATION..... | 238 |
| 7.2.2 ONLINE INERTIA IDENTIFICATION | 240 |

| | |
|--|------------|
| 7.3 GAIN ADJUSTMENT | 242 |
| 7.3.1 SUMMARY | 242 |
| 7.3.2 AUTOMATIC GAIN ADJUSTMENT | 243 |
| 7.3.3 MANUAL GAIN ADJUSTMENT | 245 |
| 7.3.4 GAIN SWITCH..... | 247 |
| 7.4 VIBRATION INHIBITION..... | 250 |
| 7.4.1 VIBRATION INHIBITION FUNCTION | 250 |
| 7.4.2 LOW-FREQUENCY VIBRATION INHIBITION FUNCTION..... | 251 |
| VIII LIST OF PARAMETERS | 252 |
| 8.1 .1 MONITOR FUNCTION GROUP (Lo-□□) | 252 |
| 8.1.2 UTILITY FUNCTION GROUP (So-□□) | 255 |
| 8.1.3 MAIN FUNCTION GROUP (Po-□□□) | 263 |
| 8.1.4 MOTOR FUNCTION GROUP (Ho-□□□) | 294 |
| 8.1.5 ALARM RECORD PARAMETERS (Ho2□□~Ho3□□) | 296 |
| 8.1.6 HIGH-SPEED COUNTER PARAMETERS (PL□□□) | 299 |
| IX MAINTENANCE AND INSPECTION | 314 |
| 9.1 ALARM AND TROUBLE SHOOTING AT START..... | 314 |
| 9.1.1 POSITION CONTROL MODE | 314 |
| 9.1.2 SPEED CONTROL MODE..... | 316 |
| 9.1.3 TORQUE CONTROL MODE..... | 317 |
| 9.2 ALARM CODE AND POSSIBLE CAUSE | 318 |
| 9.3 ALARM DISPLAY TABLE AND TROUBLE SHOOTING | 319 |
| 9.3.1 OTHER MALFUNCTIONS | 323 |
| X COMMUNICATION | 324 |
| 10.1 COMMUNICATION | 324 |
| 10.1.1 MODBUS GENERAL..... | 324 |
| 10.1.2 MODBUS PROTOCOL..... | 324 |
| 10.1.3 PARAMETER RELATED TO COMMUNICATION | 328 |
| XI APPENDIX | 330 |

| | |
|--|------------|
| 11.1 ENCODER CABLE SELECTION | 330 |
| 11.1.1 ABSOLUTE ENCODER CABLE | 330 |
| 11.1.2 INCREMENTAL ENCODER CABLE | 331 |
| 11.1.3 RESOLVER ENCODER CABLE | 332 |
| 11.2 CONTROL CABLE | 332 |
| 11.3 POWER CABLE | 333 |
| 11.4 OTHER CABLE | 334 |
| 11.5 MOTOR AND MATCHED CABLE | 334 |
| XII APPENDIX 2 | 337 |
| 12.1 ETHERCAT COMMUNICATION CARD | 337 |
| 12.1.1 INSTALLATION AND CONNECTION | 339 |
| 12.1.2 HARDWARE LAYOUT | 340 |
| 12.1.3 TOPOLOGY WAY | 340 |
| 12.1.4 LED INDICATOR | 341 |
| 12.1.5 DIAL SWITCH SW2 | 341 |
| 12.1.6 SERVO RELATED PARAMETER SETTING | 341 |
| 12.2 CANOPEN COMMUNICATION CARD | 342 |
| 12.2.1 INSTALLATION AND CONNECTION | 343 |
| 12.2.2 HARDWARE LAYOUT..... | 344 |
| 12.2.3 CAN-BUS CONNECTION | 344 |
| 12.2.4 CANOPEN BUS INTERFACE PINS | 344 |
| 12.2.5 STATUS INDICATOR | 345 |
| 12.2.6 SWITCH CODE..... | 346 |
| 12.2.7 SERVO RELATED PARAMETER SETTING | 346 |

I Notes for safe operation

Read this manual thoroughly before checking products on delivery, storage and transportation, installation, wiring, operation and inspection, and disposal of the servo drives.



WARNING

- Do not touch terminals for five minutes after voltage resistance test.
- Do not touch terminals for five minutes after the power is turned off. Residual voltage may cause electric shock.
- Never touch any rotating motor parts while the motor is running.
- Never touch the inside of the SERVOPACKs.
- Follow the procedures and instructions for trial operation precisely as described in this manual.
- Do not remove the front cover, cables, connectors, or optional items while the power is ON.
- Do not damaged, press, exert excessive force or place heavy objects on the cables.
- Do not change the max speed value (Po002) except special purpose. Failure to observe this warning may result in damaged to products.
- Do not come close to the machine Immediate after resetting momentary power loss to avoid an unexpected restart. Take appropriate measures to ensure safety against an unexpected restart.
- Do not modify products. Failure to observe this warning may result in injury or damage to products.
- MCtt (electromagnetic contactor) and NFB (no fuse breaker) must be installed between main circuit power (L1/R, L2/S, L3/T for 3-phase).

Storage and Transportation**CAUTION**

- Do not store or install the product in the following places:
 1. Locations subject to direct sunlight.
 2. Locations subject to temperatures outside the range specified in the storage or installation temperature conditions.
 3. Locations subject to humidity outside the range specified in the storage or installation temperature conditions.
 4. Locations subject to corrosive or flammable gases.
 5. Locations subject to dust, salts or iron dust.
 6. Locations subject to exposure to water, oil, or chemicals.
 7. Locations subject to shock or vibration.
- Do not hold the product by the cables or motor shaft while transporting it.
- Do not place any load exceeding the limit specified on the packing box.

Installation**CAUTION**

- Never use the products in an environment subject to water, corrosive gases, inflammable gases, or combustibles.
- Do not step on or place a heavy object on the product.
- Do not cover the inlet or outlet ports and prevent any foreign objects from entering the product.
- Be sure to install the product in the correct direction.
- Provide the specified clearances between the SERVOPACK and the control panel or with other devices.
- Do not apply any strong impact.

Wiring



CAUTION

- Do not connect a three-phase power supply to the U, V, or W output terminals.
- Connect U, V and W of servo drive directly to U, V, and W of servo motor, avoid using contactor in between.
- Securely connect the power supply terminals and motor output terminals.
- Do not connect servo drive for 220V directly to 400V voltage.
- Do not bundle or run power and signal lines together in the same duct. Keep power and signal lines separated by at least 30 cm.
- Use twisted-pair shielded wires or mult-core twisted pair shielded wires for signal and encoder cables.
- The maximum length is 3m for reference input lines and the maximum length is 20m for encoder cables.
- Take appropriate and sufficient countermeasures for each form of potential interference when installing systems in the following locations.
 - Locations subjects to static electricity or other forms of noise.
 - Locations subjects to strong electromagnetic fields and magnetic fields.
 - Locations subjects to possible exposure to radioactivity.
- Repair or maintain the servo drive only after the CHARGE indication on the servo drive goes off.

Maintenance and Inspection



CAUTION

- Repair or maintenance of the servo drive can be performed only by qualified personnel.
- Please cut off all connection between servo drive with resistor before performing an insulation test of resistor.
- When replacing the servo drive, resume operation only after transferring the previous servo drive parameters to the new servo drive or computer.
- Do not attempt to change wiring while the power is ON.
- Do not disassemble the servo motor.

II Model selection

2.1 Servo drive introduction

2.1.1 Servo Drive Nameplate

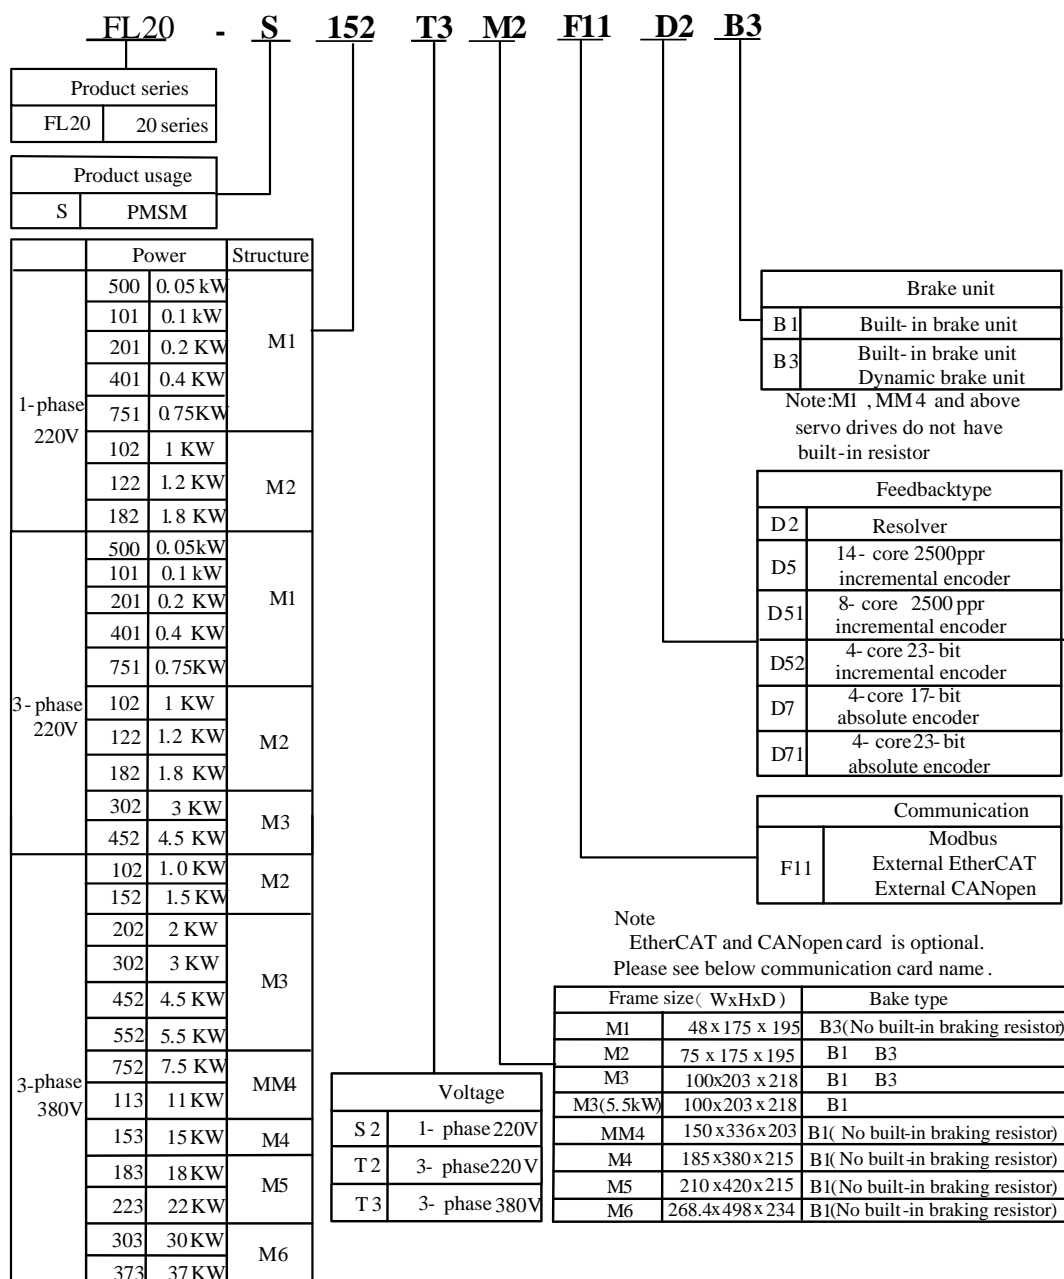


Fig 2.1.1 Servo Drive naming rule

| Communication card | |
|--------------------|----------|
| 20S-0006 | EtherCAT |
| 20S-0007 | CANopen |

Fig 2.1.2 Optional function naming rule


|  | | Parker Hannifin Corporation <small>www . Parker . com</small> | |
|---|---------------------------------------|---|-----------------|
| Model | FL20- S202 T3M3 | Function code | F11D5B3 |
| Input | AC 3 PH 380 V 50 / 60 Hz | | |
| Output | AC 3 PH 6 A 0 ~380 V | | |
| | 0 ~400Hz | Matched motor | FMMA- 202F67 ED |
| BAR CODE | | | |

Fig 2.1.3 Servo Drive nameplate

2.1.2 Connection to Peripheral Devices

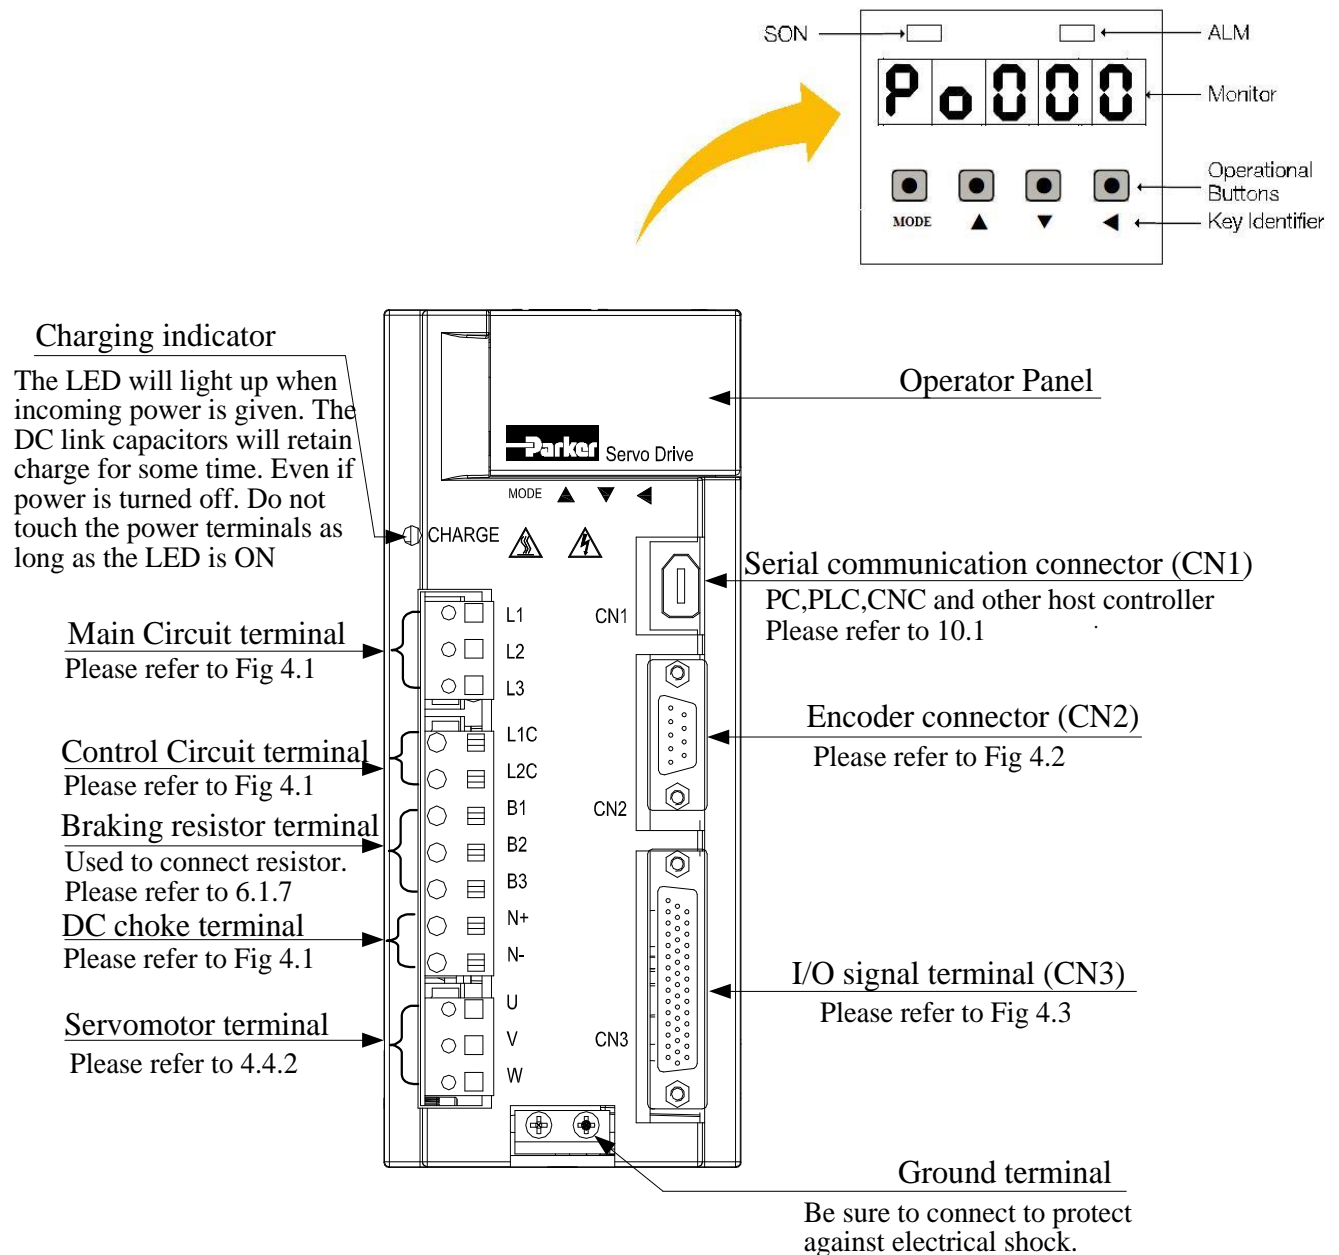


Fig 2.1.4 Connection to Peripheral Devices

2.1.3 Servo drive specification

1) Electrical specification

a) 220V servo drive

| Name | M1 | | | | | M2 | | | M3 | |
|--------------------------------------|--|-----|-----|-----|-----|----------------------------|------|------|------|------|
| Servo drive FL20-S | 500 | 101 | 201 | 401 | 751 | 102 | 122 | 182 | 302 | 452 |
| Continuous output current Arms | 0.6 | 1.2 | 1.5 | 2.8 | 3.5 | 4.5 | 6.0 | 8.0 | 12 | 17 |
| Max output current Arms | 1.8 | 3.6 | 4.2 | 8.4 | 9.8 | 12.6 | 16.8 | 22.4 | 33.6 | 47.6 |
| Power of main circuit | 1-phase/3-phase AC 220V -15~+10% 50/60Hz | | | | | | | | | |
| Power of control circuit | 1-phase/3-phase AC 220V -15~+10% 50/60Hz | | | | | | | | | |
| Braking type | External braking resistor | | | | | Built-in braking resistor. | | | | |

b) 380V/400V servo drive

| Name | M2 | | M3 | | | | MM4 | | M4 | M5 | | M6 | |
|--------------------------------------|--|-----|-----|----------|----------|------|-----|---------------------------|-----|-----|-----|-----|-----|
| Servo drive FL20-S | 102 | 152 | 202 | 302 | 452 | 552 | 752 | 113 | 153 | 183 | 223 | 303 | 373 |
| Continuous output current Arms | 3 | 3.5 | 6.0 | 8.0 | 10. 0 | 12.0 | 20 | 23 | 32 | 38 | 44 | 60 | 75 |
| Max output current Arms | 8.4 | 9.8 | 16 | 19. 2 | 28 | 33 | 56 | 64 | 80 | 95 | 110 | 150 | 187 |
| Power of main circuit | 1-phase/3-phase AC 380V -10~+10% 50/60Hz | | | | | | | | | | | | |
| Power of control circuit | Without control circuit | | | | | | | | | | | | |
| Braking type | Built-in braking resistor. | | | | | | | External braking resistor | | | | | |

2) Technical specification

A. Basic specifications

| Items | | Contents |
|--------------|-------|-----------------------------|
| Power supply | S2/T2 | 220VAC -15~+10% 50/60Hz |
| | T3 | 380/400VAC -10~+10% 50/60Hz |

| | | |
|---------------------------|--|---|
| Control mode | | Pt Position pulse mode Pr Internal register position mode _ Sz Analog speed mode Sr Internal register speed mode Tz Analog torque mode Tr Internal register torque mode |
| Regenerative braking | | Built-in or External (External braking should be selected and purchased) |
| Control characteristic | Control mode | PMSM |
| | Frequency response | 1.2KHz |
| | Speed fluctuation | $\pm 0.01\%$ (VC, load fluctuation 0 to 100%) |
| | Speed control range | 1 : 10000 |
| | Input pulse frequency | 1. 500KHz (differential drive); 200KHz (Open collector) 2. At high-speed pulse circuit, receiving frequency is 4MHZ.(Differential) |
| Input signal | Control input | Servo on, Alarm reset, Pulse clear, Pulse prohibited, Forward run prohibited, Reverse run prohibited, Forward torque limit, Reverse torque limit, Internal speed selection, Internal position triggered, "Home" searching triggered, Zero speed CLAMP |
| | Speed Feedback | 1. Absolute encoder. 2. Incremental encoder. 3. Resolver |
| Output signal | Control output | Servo ready, Servo alarm activated, At positioning completed, At speed reached, Electromagnetic brake control, Rotation Detection, At speed limit, Homing completed, At torque limit, and so on. |
| | Encoder signal frequency-division output | 1. Encoder Z phase open-collector output. 2. Encoder signal output (A, B Z Line Driver) frequency-division output 3. Z pulse time extend function. |
| Position control | Input mode | 1. A phase+B phase 2. Forward pulse+Reverse pulse 3. Pulse+Direction 4. Internal register |
| | Electronic gear | 1. $0.01 \leq B / A \leq 100$ 2. Two groups electronic gear can be selected by users. |
| Analog speed control | | -10V ~ +10V analog speed signal input, the voltage scope can be set by function code. |
| Analog torque control | | -10V ~ +10V analog torque signal input, the voltage scope can be set by function code. |
| Acceleration/Deceleration | | Accele/decele time is set to 1 ~ 30000ms(related to 0←→rated speed) |
| Communication | | 1. RS485 communication port is connected with PC, to set control parameters and to monitor servo. 2. CANopen or EtherCAT can be selected as option. |
| Parameters setting | Keypad | The parameters are set by keypad, which is displayed by 5LEDs. |
| | PC/PLC | RS485 communication can set parameters by some PC/PLC software. |
| Monitor function | | Output current, PN voltage, motor speed, motor feedback pulse, motor feedback rotation, given pulse, given pulse error, given speed, given torque, analog speed given and analog torque given. |
| Protection function | | Overvoltage, Undervoltage, Overload, Overcurrent, Encoder error, Overspeed, Abnormal pulse control command, Emergency stop, Servo |

| | |
|-------------------------|---|
| | overheat, Input power phase loss, Regeneration error, Overposition. |
| Applicable load inertia | Lower than 5 times of servo motor inertia. |

B. Performance index

| Control mode | Specification | | |
|---------------|-------------------------|--|--|
| Speed mode | Soft start | 0 ~ 30S (Acceleration time and deceleration time can be set). | |
| | Input signal | Input voltage | DC±10V/ rated speed (It is default setting, which can be changed by function code) |
| | | Input impedance | About 50K |
| | | Circuit time parameter | About 52us |
| | Internal register speed | 3 kinds of speed are combined by SD-S1 and SD-S2, the running direction is controlled by SD-DIR (positive/negative logic is set by function code). | |
| Position mode | Specification | Feedforward compensation | 0 ~ 100% (resolution is 1%) |
| | | Positional accuracy | 1 command unit |
| | Input signal | Pulse form | Select one from “direction +pulse” or “90° phase difference orthogonal pulse”, or “forward pulse + reverse pulse”. |
| | | Input form | Differential input, open-collector input. |
| | | Input pulse frequency | 1. Optocoupler input Differential driver: max frequency is 500KHZ ; Collector driver: max frequency is 200KHZ ; 2. Differential chip input, the max frequency is 4MHZ |
| | | Electronical gear | $0.01 \leq B/A \leq 100$ |
| | Output signal | Output form | A phase, B phase, Z phase: differential driver output Z phase open collector output. |
| | | Frequency-division ratio | A, B phase frequency-division output except Z phase |
| | Control signal | Pulse command clear | Bias pulse can be cleared by external signal. |
| | Built-in power | +24V (100mA) | |
| Torque mode | Input signal | Input voltage | DC±10V/ rated torque (It is default setting, which can be changed by function code) |
| | | Input impedance | About 50K |
| | | Circuit time parameter | About 52us |

2.1.4 Connection to Peripheral Devices

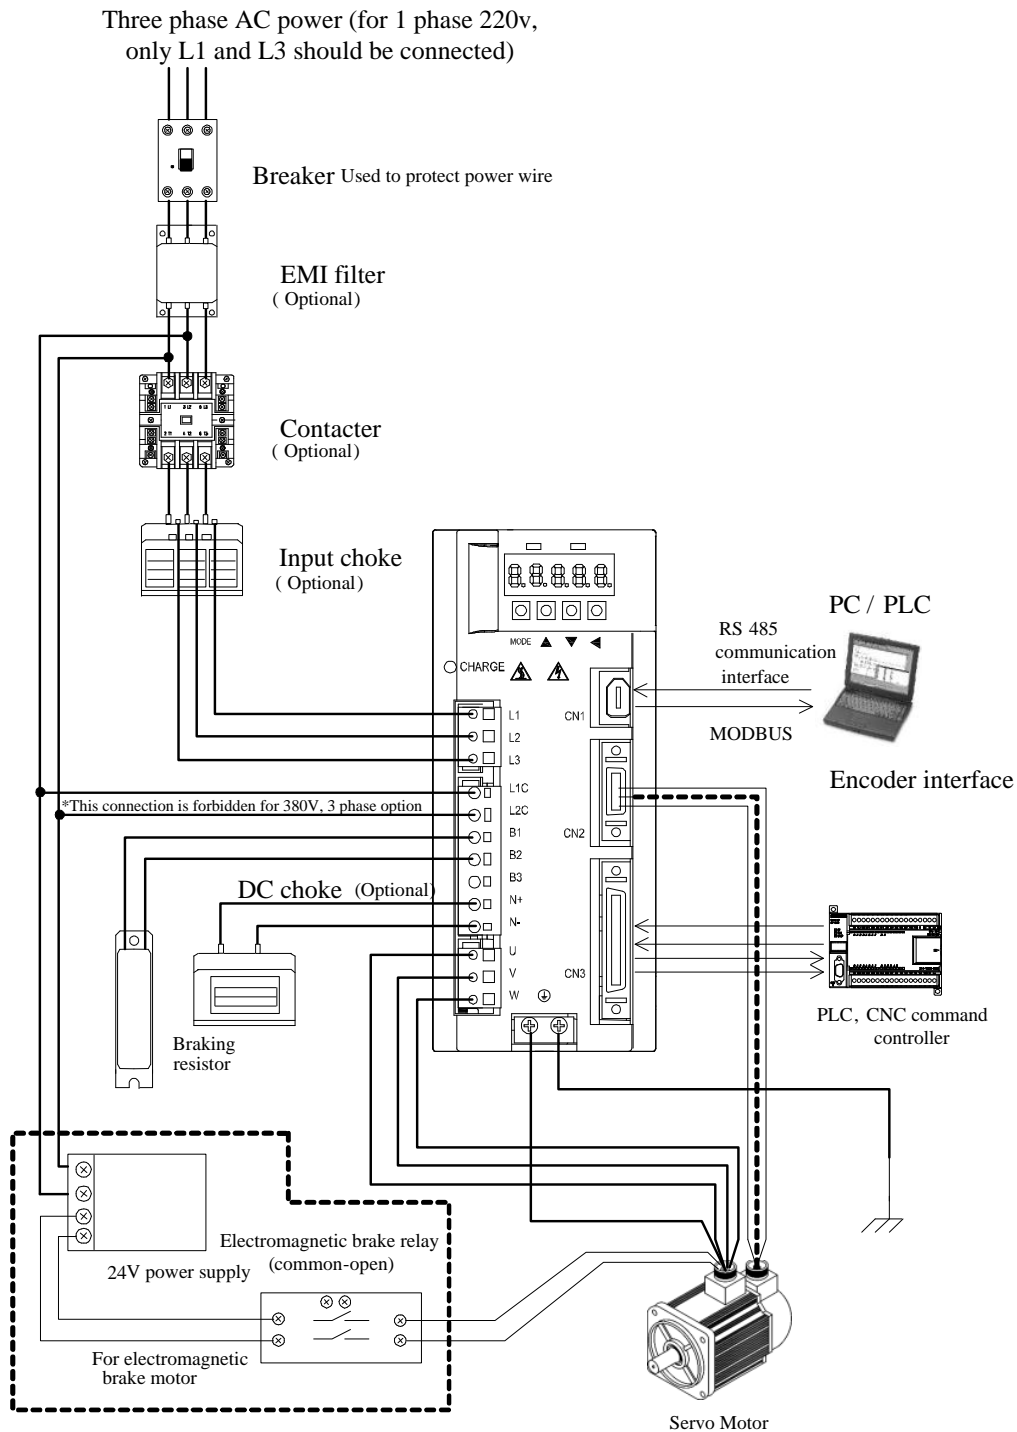


Fig 2.1.5 Servo drive system

Note)

For 220V input servo drive, L1C and L2C should be connected to power supply.

For 380V input servo drive, L1C and L2C are forbidden to connect.

2.2 Servo motor

2.2.1 Servo motor nameplate and model

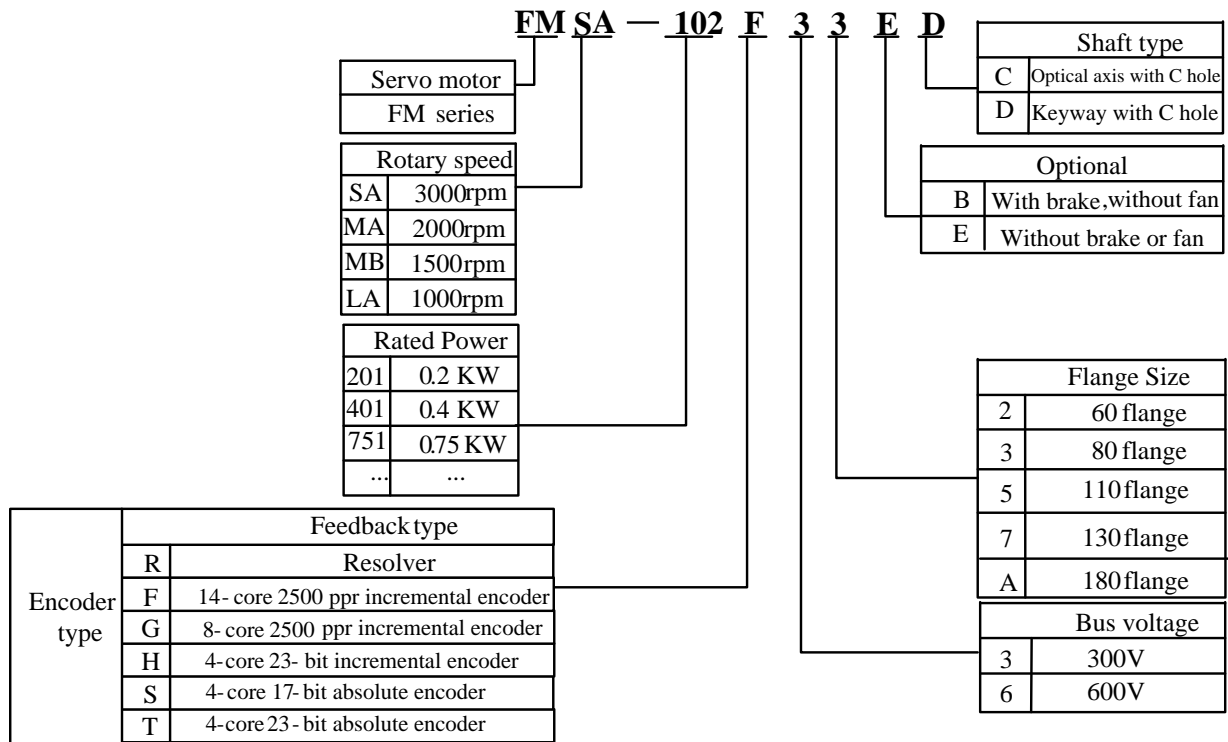


Fig 2.2.1 Servo motor naming rule (for 180 flange and below 180 flange motor)

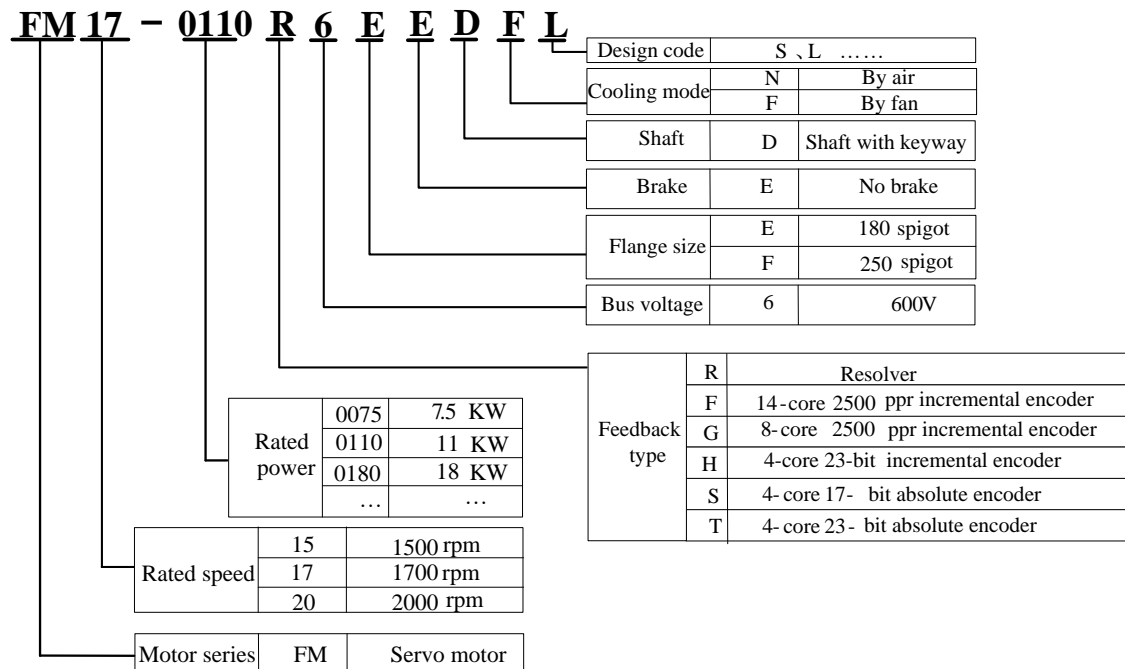


Fig 2.2.2 Servo motor naming rule (for 180 spigot and 250 spigot motor)

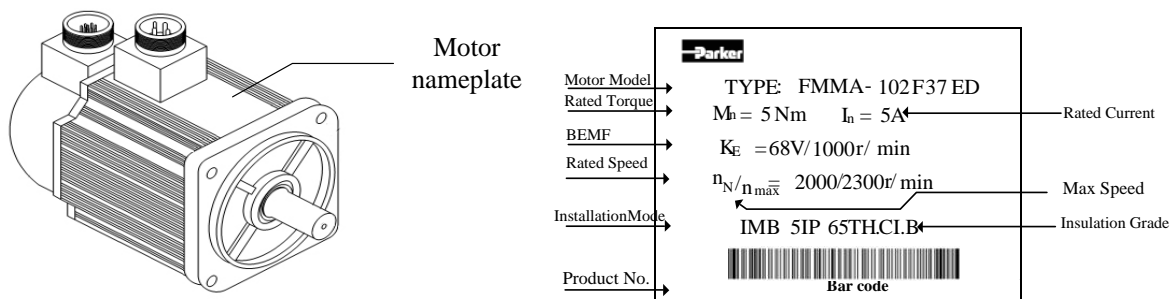


Fig2.2.3 Servo motor naming rule (for 180 flange and below 180 flange motor)

| FM17-0110R6EEDFL | | |
|---|----------|-------------------|
| Pn :11kw | Un :380V | Tn :64N.m |
| Nn: 1700r/ min | In :23A | Fan voltage: 220V |
| TH.CL.F IP54 | No.: | |
| Magnetic Field Angle: | | Date: |
| AC permanent magnetic synchronous servo motor | | |

Fig 2.2.4 Servo motor naming rule (for 180 spigot and 250 spigot motor)

【note】

1. Please refer to the chapter in the 《3.2.4 servo motor dimension》 for flange dimension.
2. 11KW and above 11kw servo motor can be mounted by flange and base, user can choose mounting method according to requirement.

2.2.2 Servo motor component

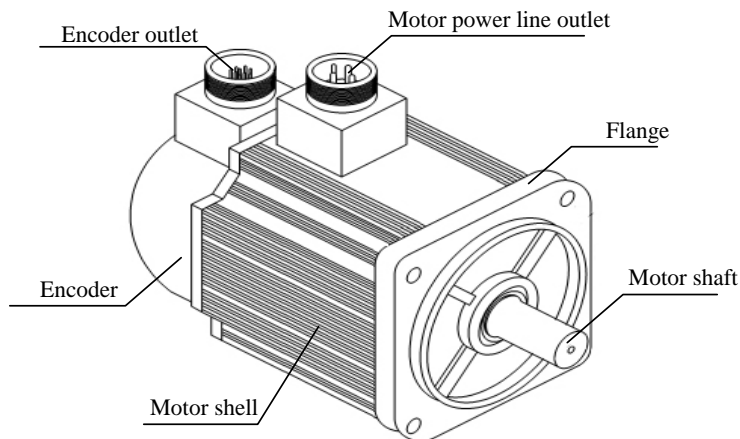


Fig 2.2.5 Name of part of servo motor

2.2.3 Servo motor model

1) 220V motor model

| Motor model ^{note} | | Rated power | Rated torque | Rated current | Rotation inertia |
|-----------------------------|-----------------|-------------|--------------|---------------|------------------------------------|
| | | W | N·m | A | 10 ⁻⁴ Kg·m ² |
| FMS series 3000r/min | FMSA-201*32*** | 200 | 0.64 | 1.2 | 0.17 |
| | FMSA-401*32*** | 400 | 1.27 | 2.8 | 0.29 |
| | FMSA-751*33*** | 750 | 2.39 | 3.5 | 1.82 |
| | FMSA-102*33*** | 1000 | 3.5 | 4.5 | 2.9 |
| | FMSA-122*35*** | 1200 | 4 | 5 | 6.9 |
| | FMSA-152*37*** | 1500 | 5 | 7.5 | 12.2 |
| | FMSA-182*35*** | 1800 | 6 | 8 | 10.1 |
| | FMSA-232*37*** | 2300 | 7.7 | 10 | 18.2 |
| | FMSA-302*37*** | 3000 | 10 | 15.5 | 24.2 |
| FMM series 2000 r/min | FMMA-801*35*** | 800 | 4 | 3.5 | 6.9 |
| | FMMA-851*37*** | 850 | 4 | 4 | 10.8 |
| | FMMA-102*37*** | 1000 | 5 | 5 | 12.2 |
| | FMMA-122*35*** | 1200 | 6 | 5 | 10.1 |
| | FMMA-132*37*** | 1300 | 6 | 6 | 15 |
| | FMMA-152*37*** | 1500 | 7.7 | 7.5 | 18.2 |
| | FMMA-202*37*** | 2000 | 10 | 10 | 24.2 |
| | FMMA-312*37*** | 3100 | 15 | 14 | 34.9 |
| | FMMA-352**3A*** | 3500 | 17.2 | 16 | 55.3 |
| FMM series 1500 r/min | FMMB-122*37*** | 1200 | 7.7 | 5 | 18.2 |
| | FMMB-152*37*** | 1500 | 10 | 6 | 24.2 |
| | FMMB-232*37*** | 2300 | 14.6 | 10 | 34.9 |
| | FMMB-272*3A*** | 2700 | 17.2 | 11 | 55.3 |
| | FMMB-302*3A*** | 3000 | 19 | 12 | 66.3 |
| | FMMB-432*3A*** | 4300 | 27 | 16 | 84.8 |
| FML series 1000 r/min | FMLA-102*37*** | 1000 | 10 | 4.5 | 24.2 |
| | FMLA-152*37*** | 1500 | 14.3 | 7 | 34.9 |
| | FMLA-292*3A*** | 2900 | 27 | 12 | 84.8 |
| | FMLA-372*3A*** | 3700 | 35 | 16 | 119.5 |

2) 380V motor model

| Motor model ^{note} | | Rated power | Rated torque | Rated current | Rotation inertia |
|-----------------------------|----------------|-------------|--------------|---------------|------------------------------------|
| | | W | N·m | A | 10 ⁻⁴ Kg·m ² |
| FMS series 3000 r/min | FMSA-751*63*** | 750 | 2.39 | 2 | 1.82 |
| | FMSA-102*63*** | 1000 | 3.5 | 3 | 2.9 |
| | FMSA-122*65*** | 1200 | 4 | 4 | 6.9 |
| | FMSA-152*67*** | 1500 | 5 | 5 | 12.2 |
| | FMSA-182*65*** | 1800 | 6 | 6 | 10.1 |
| | FMSA-232*67*** | 2300 | 7.7 | 7 | 18.2 |
| | FMSA-302*67*** | 3000 | 10 | 8 | 24.2 |
| FMM series 2000 r/min | FMMA-801*65*** | 800 | 4 | 2.5 | 6.9 |
| | FMMA-851*67*** | 850 | 4 | 3 | 10.8 |
| | FMMA-102*67*** | 1000 | 5 | 3 | 12.2 |
| | FMMA-122*65*** | 1200 | 6 | 3.5 | 10.1 |
| | FMMA-132*67*** | 1300 | 6 | 3.5 | 15 |
| | FMMA-152*67*** | 1500 | 7.7 | 4.5 | 18.2 |
| | FMMA-202*67*** | 2000 | 10 | 5.5 | 24.2 |
| | FMMA-312*67*** | 3100 | 15 | 9 | 34.9 |
| | FMMA-352*6A*** | 3500 | 17.2 | 8 | 55.3 |
| | FMMA-452*6A*** | 4500 | 21.5 | 10 | 74.8 |
| | FMMA-602*6A*** | 6000 | 27 | 14 | 84.8 |
| | FMMA-802*6A*** | 8000 | 35 | 18 | 119.5 |
| | FMMA-103*6A*** | 10000 | 48 | 24 | 133 |
| FMM series 1500 r/min | FMMB-122*67*** | 1200 | 7.7 | 4 | 18.2 |
| | FMMB-152*67*** | 1500 | 10 | 4 | 24.2 |
| | FMMB-232*67*** | 2300 | 14.6 | 6 | 34.9 |
| | FMMB-302*67*** | 3000 | 14.6 | 7.5 | 34.9 |
| | FMMB-272*6A*** | 2700 | 17.2 | 8 | 55.3 |
| | FMMB-302*6A*** | 3000 | 19 | 8 | 66.3 |
| | FMMB-432*6A*** | 4300 | 27 | 10 | 84.8 |
| | FMMB-552*6A*** | 5500 | 35 | 12.5 | 119.5 |
| | FMMB-752*6A*** | 7500 | 48 | 17 | 133 |

| | | | | | |
|--------------------------|----------------|------|----|---|-------|
| FML series 1000 r/min | FMLA-102*67*** | 1000 | 10 | 3 | 24.2 |
| | FMLA-292*6A*** | 2900 | 27 | 7 | 84.8 |
| | FMLA-372*6A*** | 3700 | 35 | 9 | 119.5 |

3) Servo motor of 180 spigot and 250 spigot

| Motor model ^{note} | | Rated power | Rated torque | Rated current |
|-----------------------------|------------------|-------------|--------------|---------------|
| | | KW | N·m | A |
| FMM series 1500 r/min | FM15-0082*6EE*FL | 8.2 | 52 | 16.6 |
| | FM15-0100*6EE*FL | 10 | 64 | 20.7 |
| | FM15-0124*6EE*FL | 12.4 | 80 | 24.7 |
| | FM15-0160*6EE*FL | 16 | 102 | 33.5 |
| | FM15-0180*6EE*FL | 18 | 118 | 40 |
| | FM15-0210*6FE*FL | 21 | 135 | 43.2 |
| | FM15-0240*6EE*FL | 24 | 152 | 46.7 |
| | FM15-0290*6FE*FL | 29 | 185 | 57.5 |
| | FM15-0350*6FE*FL | 35 | 225 | 71.7 |
| FMM series 1700 r/min | FM17-0075*6EE*FL | 7.5 | 42 | 13.7 |
| | FM17-0092*6EE*FL | 9.2 | 52 | 18 |
| | FM17-0110*6EE*FL | 11 | 64 | 23 |
| | FM17-0140*6EE*FL | 14 | 80 | 29.2 |
| | FM17-0180*6EE*FL | 18 | 102 | 38.5 |
| | FM17-0210*6FE*FL | 21 | 118 | 45 |
| | FM17-0240*6EE*FL | 24 | 135 | 48.5 |
| | FM17-0270*6EE*FL | 27 | 152 | 57.5 |
| | FM17-0330*6FE*FL | 33 | 185 | 68 |
| FMM series 2000 r/min | FM20-0070*6EE*FL | 7 | 33.6 | 14.8 |
| | FM20-0100*6EE*FL | 10 | 52 | 22 |
| | FM20-0140*6EE*FL | 14 | 64 | 30 |
| | FM20-0180*6EE*FL | 18 | 80 | 37 |
| | FM20-0220*6EE*FL | 22 | 102 | 43 |
| | FM20-0250*6EE*FL | 25 | 118 | 49 |
| | FM20-0280*6EE*FL | 28 | 135 | 56.9 |
| | FM20-0300*6EE*FL | 30 | 152 | 67 |

| | | | | |
|--|------------------|------|-----|------|
| | FM20-0360*6FE*FL | 36 | 185 | 74 |
| | FM20-0071*6FEDNL | 7.1 | 34 | 14.5 |
| | FM20-0094*6EEDNL | 9.4 | 45 | 18.8 |
| | FM20-0117*6EEDNL | 11.7 | 56 | 24.4 |
| | FM20-0140F6EEDNL | 14 | 67 | 28.6 |

Note: ** represents shaft type and brake type, please refer to the chapter of servo motor naming rule.

2.3 Combination of servomotor and servodrive

1) 220V servo motor and FL20 servo drive

| Motor model ^{note} | | Power | Adaptable servodrive (Note) | | |
|-----------------------------|------------------|-------|-----------------------------|---------------|---------------|
| | | W | 1 phase220V | 3 phase 220V | Function code |
| FMS series 3000r/min | FMSA-201F/S32*** | 200 | FL20-S201S2M1 | FL20-S201T2M1 | F11D*B* |
| | FMSA-401F/S32*** | 400 | FL20-S401S2M1 | FL20-S401T2M1 | |
| | FMSA-751*33*** | 750 | FL20-S751S2M1 | FL20-S751T2M1 | |
| | FMSA-102*33*** | 1000 | FL20-S102S2M2 | FL20-S102T2M2 | |
| | FMSA-122*35*** | 1200 | FL20-S122S2M2 | FL20-S122T2M2 | |
| | FMSA-152*37*** | 1500 | FL20-S182S2M2 | FL20-S182T2M2 | |
| | FMSA-182*35*** | 1800 | | | |
| | FMSA-232*37*** | 2300 | — | FL20-S302T2M3 | |
| | FMSA-302*37*** | 3000 | — | FL20-S452T2M3 | |
| FMM series 2000r/min | FMMA-801*35*** | 800 | FL20-S102S2M2 | FL20-S102T2M2 | |
| | FMMA-851*37*** | 850 | | | |
| | FMMA-102*37*** | 1000 | FL20-S122S2M2 | FL20-S122T2M2 | |
| | FMMA-122*35*** | 1200 | | | |
| | FMMA-132*37*** | 1300 | FL20-S182S2M2 | FL20-S182T2M2 | |
| | FMMA-152*37*** | 1500 | | | |
| | FMMA-202*37*** | 2000 | — | FL20-S302T2M3 | |
| | FMMA-312*37*** | 3100 | — | FL20-S452T2M3 | |
| | FMMA-352*3A*** | 3500 | — | | |
| FMM series 1500r/min | FMMB-122*37*** | 1200 | FL20-S122S2M2 | FL20-S122T2M2 | |
| | FMMB-152*37*** | 1500 | FL20-S182S2M2 | FL20-S182T2M2 | |
| | FMMB-232*37*** | 2300 | — | FL20-S302T2M3 | |
| | FMMB-272*3A*** | 2700 | — | | |
| | FMMB-302*3A*** | 3000 | — | | |
| | FMMB-432*3A*** | 4300 | — | FL20-S452T2M3 | |

| | | | | | |
|-------------------------|----------------|------|---------------|---------------|--|
| FML series 1000r/min | FMLA-102*37*** | 1000 | FL20-S102S2M2 | FL20-S102T2M2 | |
| | FMLA-152*37*** | 1500 | FL20-S182S2M2 | FL20-S182T2M2 | |
| | FMLA-292*3A*** | 2900 | — | FL20-S302T2M3 | |
| | FMLA-372*3A*** | 3700 | — | FL20-S452T2M3 | |

2) 380V servo motor and FL20 servo drive

| Motor model ^{note} | | Power | Adaptable servodrive (Note) | |
|-----------------------------|----------------|-------|-----------------------------|---------------|
| | | W | Three-phase 380 v | Function code |
| FMS series 3000r/min | FMSA-751*63*** | 750 | FL20-S102T3M2 | F11D*B* |
| | FMSA-102*63*** | 1000 | | |
| | FMSA-122*65*** | 1200 | FL20-S202T3M3 | |
| | FMSA-152*67*** | 1500 | | |
| | FMSA-182*65*** | 1800 | | |
| | FMSA-232*67*** | 2300 | FL20-S302T3M3 | |
| | FMSA-302*67*** | 3000 | FL20-S302T3M3 | |
| FMM series 2000r/min | FMMA-801*65*** | 800 | FL20-S102T3M2 | |
| | FMMA-851*67*** | 850 | | |
| | FMMA-102*67*** | 1000 | | |
| | FMMA-122*65** | 1200 | FL20-S152T3M2 | |
| | FMMA-132*67*** | 1300 | | |
| | FMMA-152*67** | 1500 | FL20-S202T3M3 | |
| | FMMA-202*67*** | 2000 | | |
| | FMMA-312*67*** | 3100 | FL20-S452T3M3 | |
| | FMMA-352*6A*** | 3500 | | |
| | FMMA-452*6A*** | 4500 | | |
| | FMMA-602*6A*** | 6000 | FL20-S752T3MM4 | |
| | FMMA-802*6A*** | 8000 | | |
| | FMMA-103*6A*** | 10000 | FL20-S153T3M4 | |
| FMM series 1500r/min | FMMB-122*67*** | 1200 | FL20-S152T3M3 | |
| | FMMB-152*67*** | 1500 | FL20-S202T3M3 | |
| | FMMB-232*67*** | 2300 | | |
| | FMMB-302*67*** | 3000 | FL20-S302T3M3 | |
| | FMMB-272*6A*** | 2700 | | |
| | FMMB-302*6A*** | 3000 | | |

| | | | |
|-------------------------|------------------|-------|----------------|
| | FMMB-432*6A*** | 4300 | FL20-S452T3M3 |
| | FMMB-552*6A*** | 5500 | FL20-S552T3M3 |
| | FMMB-752*6A*** | 7500 | FL20-S752T3MM4 |
| FML series 1000r/min | FMLA-102*67*** | 1000 | FL20-S152T3M2 |
| | FMLA-292*6A*** | 2900 | FL20-S302T3M3 |
| | FMLA-372*6A*** | 3700 | FL20-S452T3M3 |
| FMM series 1500r/min | FM15-0082*6EE*FL | 8200 | FL20-S752T3MM4 |
| | FM15-0100*6EE*FL | 10000 | FL20-S113T3MM4 |
| | FM15-0124*6EE*FL | 12400 | FL20-S153T3M4 |
| | FM15-0160*6EE*FL | 16000 | FL20-S183T3M5 |
| | FM15-0180*6EE*FL | 18000 | FL20-S223T3M5 |
| | FM15-0210*6EE*FL | 21000 | |
| | FM15-0240*6EE*FL | 24000 | FL20-S303T3M6 |
| | FM15-0290*6EE*FL | 29000 | |
| | FM15-0350*6EE*FL | 35000 | FL20-S373T3M6 |
| FMM series 1700r/min | FM17-0075*6EEDFL | 7500 | FL20-S752T3MM4 |
| | FM17-0092*6EE*FL | 9200 | FL20-S113T3MM4 |
| | FM17-0110*6EE*FL | 11000 | |
| | FM17-0140*6EE*FL | 14000 | FL20-S153T3M4 |
| | FM17-0180*6EE*FL | 18000 | FL20-S183T3M5 |
| | FM17-0210*6EE*FL | 21000 | FL20-S223T3M5 |
| | FM17-0240*6EE*FL | 24000 | FL20-S303T3M6 |
| | FM17-0270*6EE*FL | 27000 | |
| | FM17-0330*6EE*FL | 33000 | FL20-S373T3M6 |
| FMM series 2000r/min | FM20-0070*6EE*FL | 7000 | FL20-S752T3MM4 |
| | FM20-0100*6EE*FL | 10000 | FL20-S113T3MM4 |
| | FM20-0140*6EE*FL | 14000 | FL20-S153T3M4 |
| | FM20-0180*6EE*FL | 18000 | FL20-S183T3M5 |
| | FM20-0220*6EE*FL | 22000 | FL20-S223T3M5 |
| | FM20-0250*6EE*FL | 25000 | FL20-S303T3M6 |
| | FM20-0280*6EE*FL | 28000 | |
| | FM20-0300*6EE*FL | 30000 | FL20-S373T3M6 |
| | FM20-0360*6FE*FL | 36000 | |

| | | | | |
|--|------------------|-------|----------------|--|
| | FM20-0071*6FEDNL | 7100 | FL20-S752T3MM4 | |
| | FM20-0094*6EEDNL | 9400 | | |
| | FM20-0117*6EEDNL | 11700 | FL20-S153T3M4 | |
| | FM20-0140*6EEDNL | 14000 | | |

Note:

1. 5.5 kw and above 5.5kw servo drive doesn't have dynamic brake. M1, MM4 structure and above servodrive doesn't have built-in resistor, customer should purchase braking resistor separately.
2. R means resolver, F means 14-core 2500ppr incremental encoder, G means 8-core 2500ppr incremental encoder, H means 4-core 23-bit incremental encoder, S means 4-core 17-bit absolute, and T means 4-core 23-bit absolute.
3. ** means shaft type and brake type, please refer to the chapter of servo motor naming rule.

III Installation

3.1 Servo drives installation

3.1.1 Installation conditions

| | | |
|---------------------------|-----------------------|---|
| Environment conditions | Equipment location | In an indoor location, Prevent exposure from direct sunlight, Free from dust, tangy caustic gases, flammable gases, steam or the salt-contented, etc. |
| | Altitude | 1000m or below |
| | Atmospheric pressure | 86kPa~106kPa |
| | Operating temperature | -10℃~40℃ |
| | Storage temperature | -20℃~60℃ |
| | Humidity | Below 90% (no water-bead coagulation) |
| | Vibration Strength | Below 0.5G (4.9m/s ²) ,10~60Hz (Discontinuous) |
| | IP rating | IP20 |
| | Power system | TN system (Note) |

Note: TN system: A power distribution system having one point directly earthed, the exposed conductive parts of the installation being connected to that points by protective earth conductor.

3.1.2 Installation procedure and minimum clearances

In order to ensure the drive is well ventilated, ensure that the all ventilation holes are not obstructed and sufficient free space is given to the servo drive.

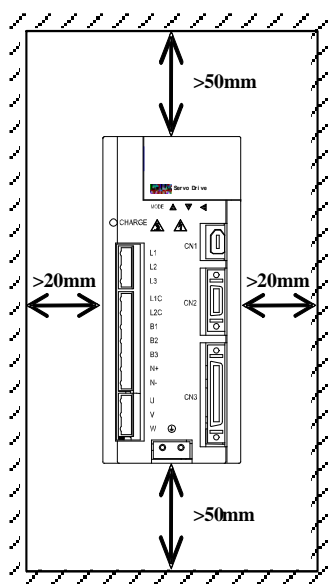


Fig 3.1.1 Minimum clearances for single drive


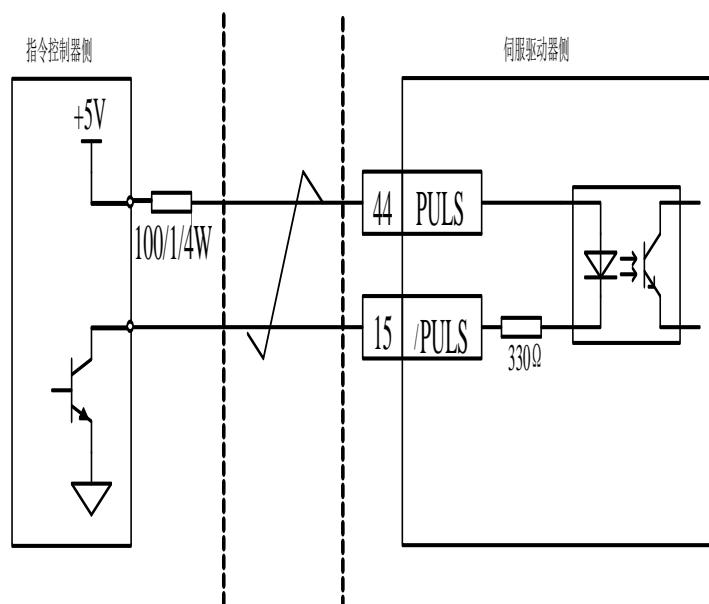


Fig 3.1.2 Minimum clearances for more drives

3.1.3 Servo drive dimension


M1 structure: (unit is mm)

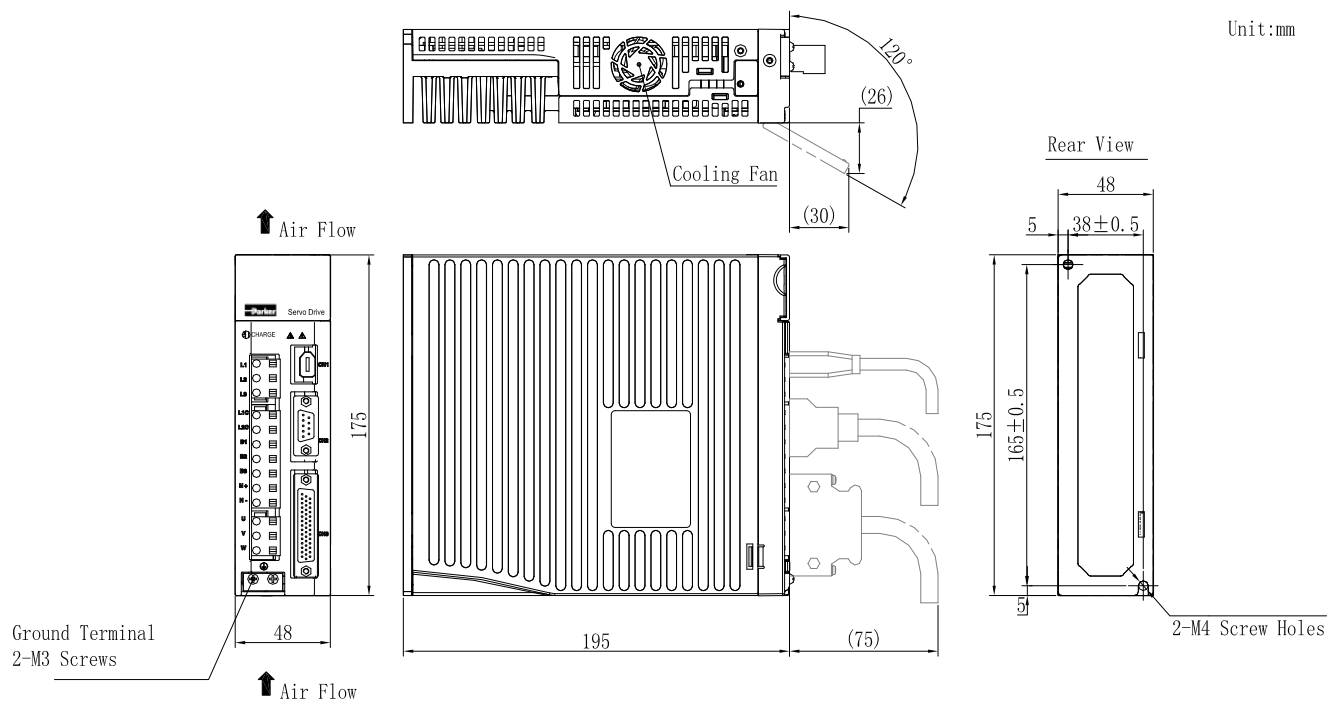

Approx. mass:1.275kg

Fig 3.1.3 Servo drive structure 1

M2 structure: (unit is mm)

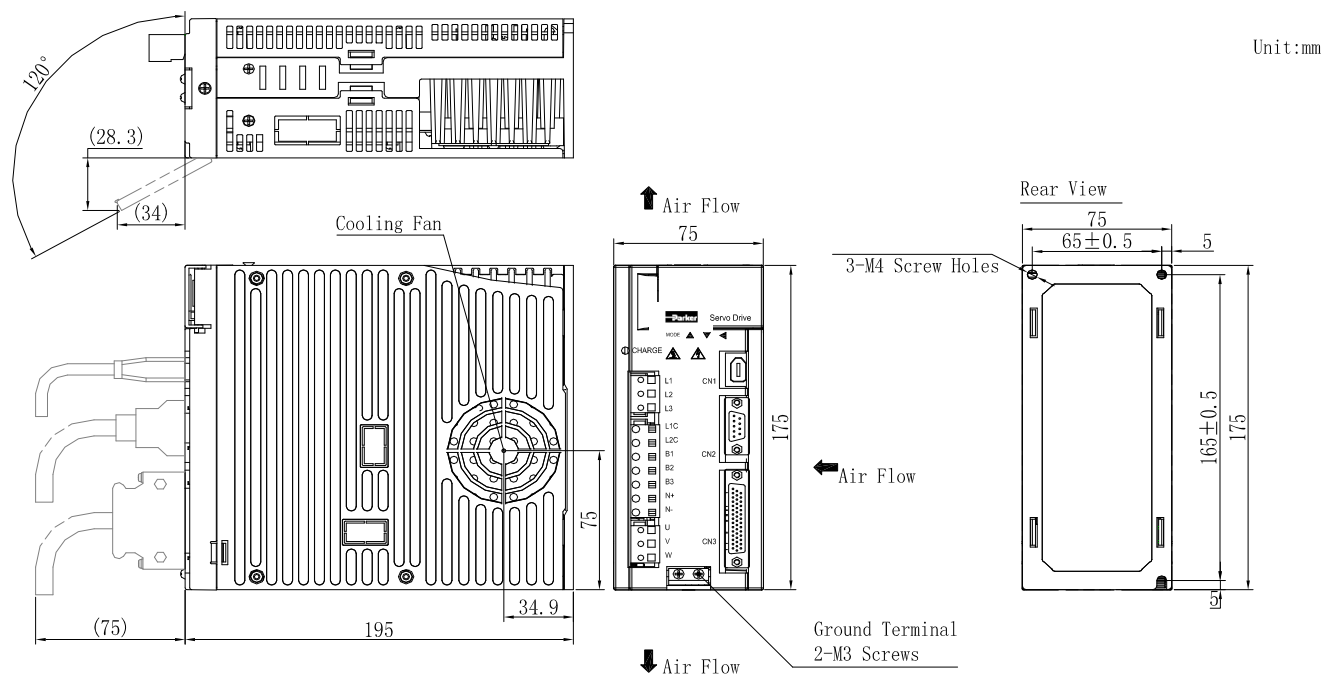

Approx. mass:1.835kg

Fig 3.1.4 Servo drive structure 2

M3 structure:

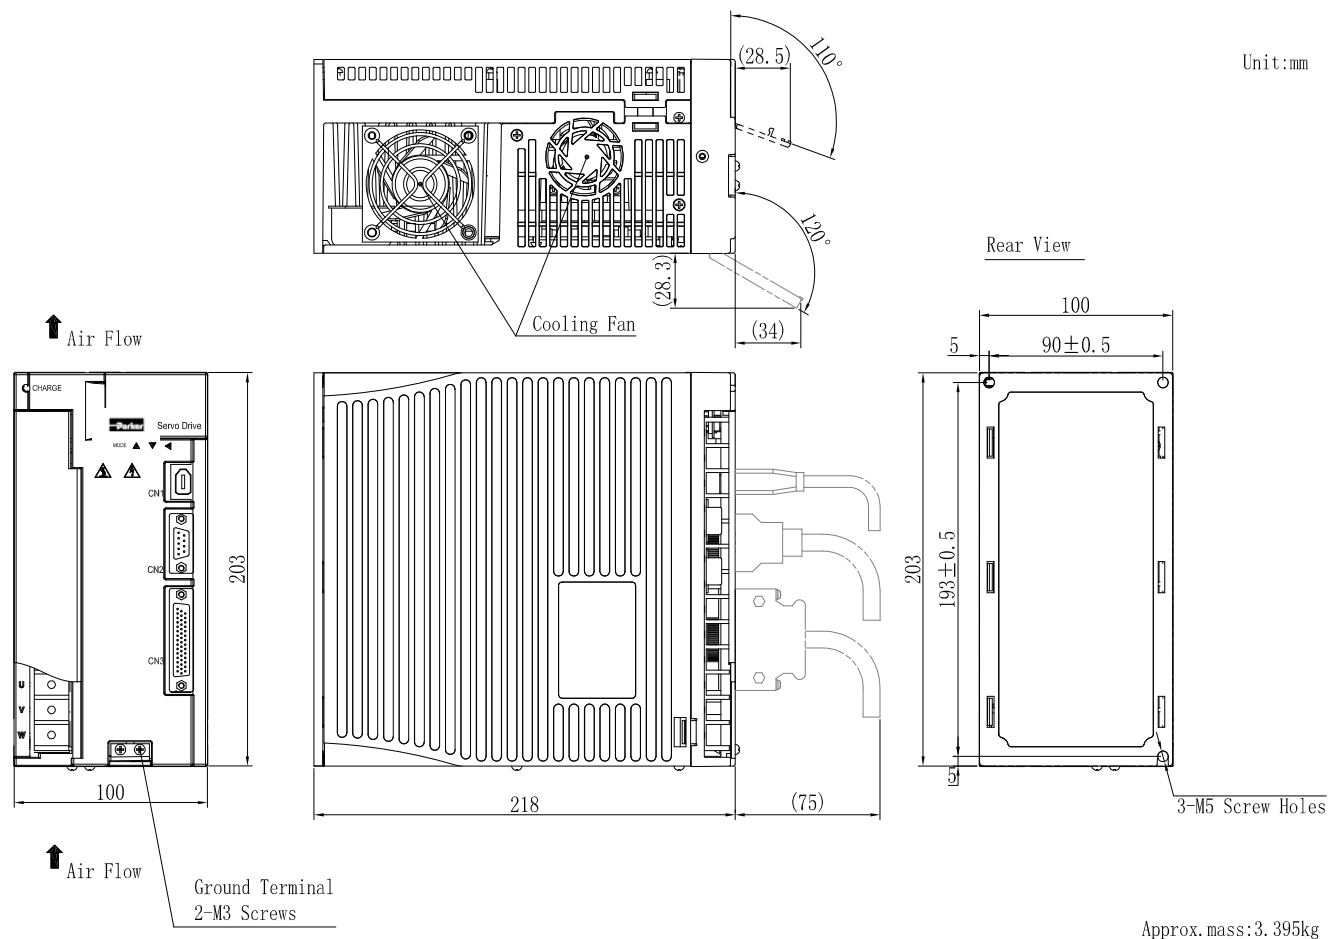


Fig 3.1.5 Servo drive structure 3

M5 structure:

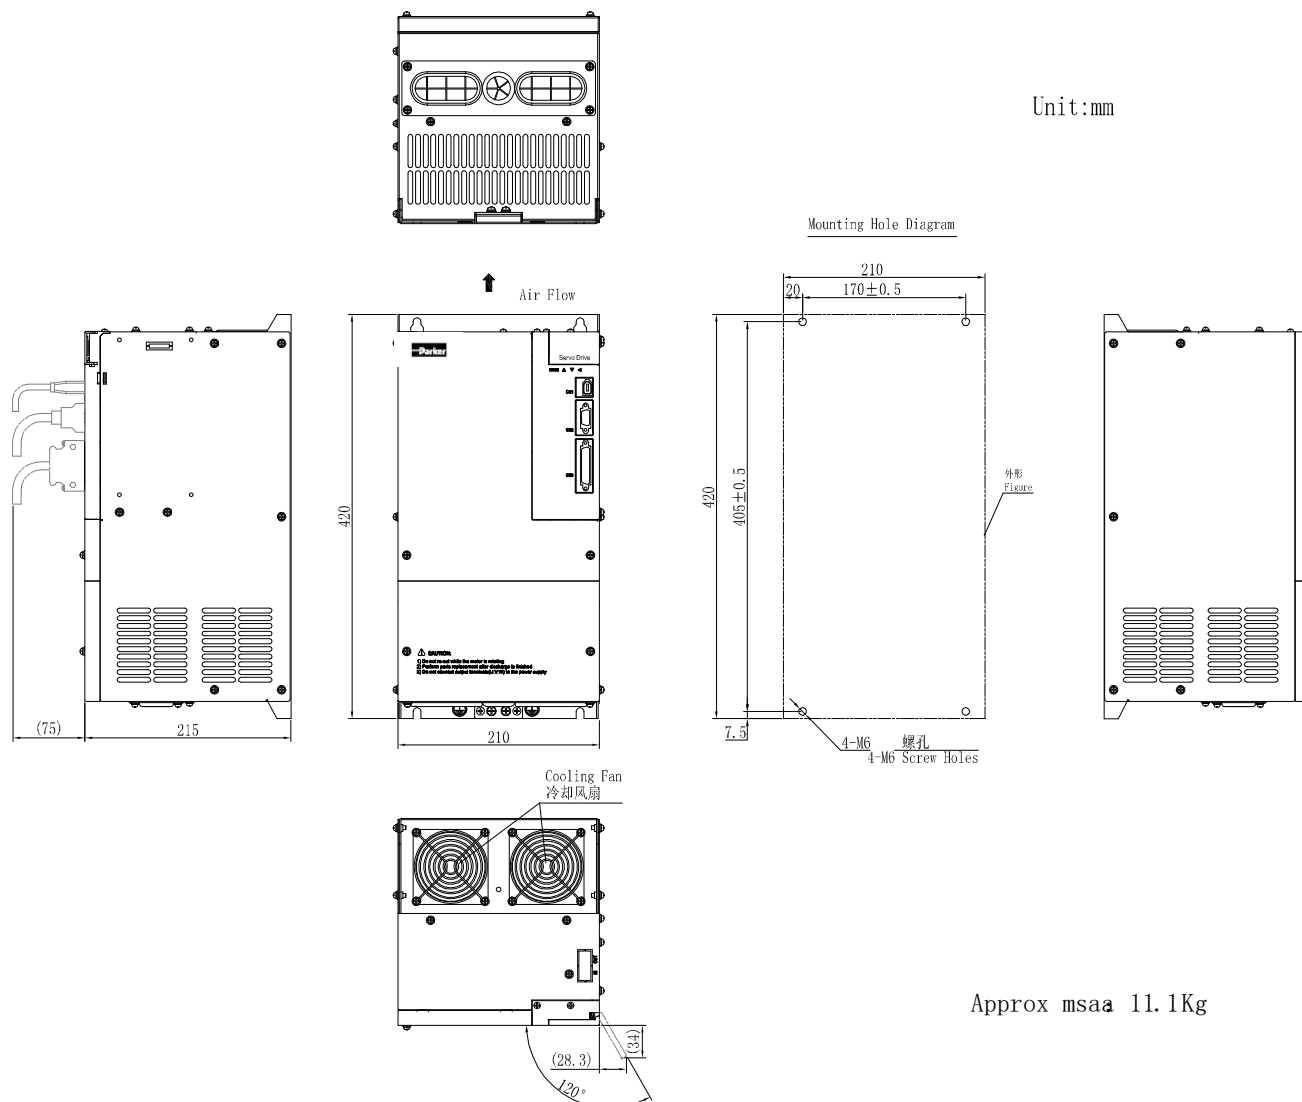


Fig 3.1.8 Servo drive structure 6

M6 structure:

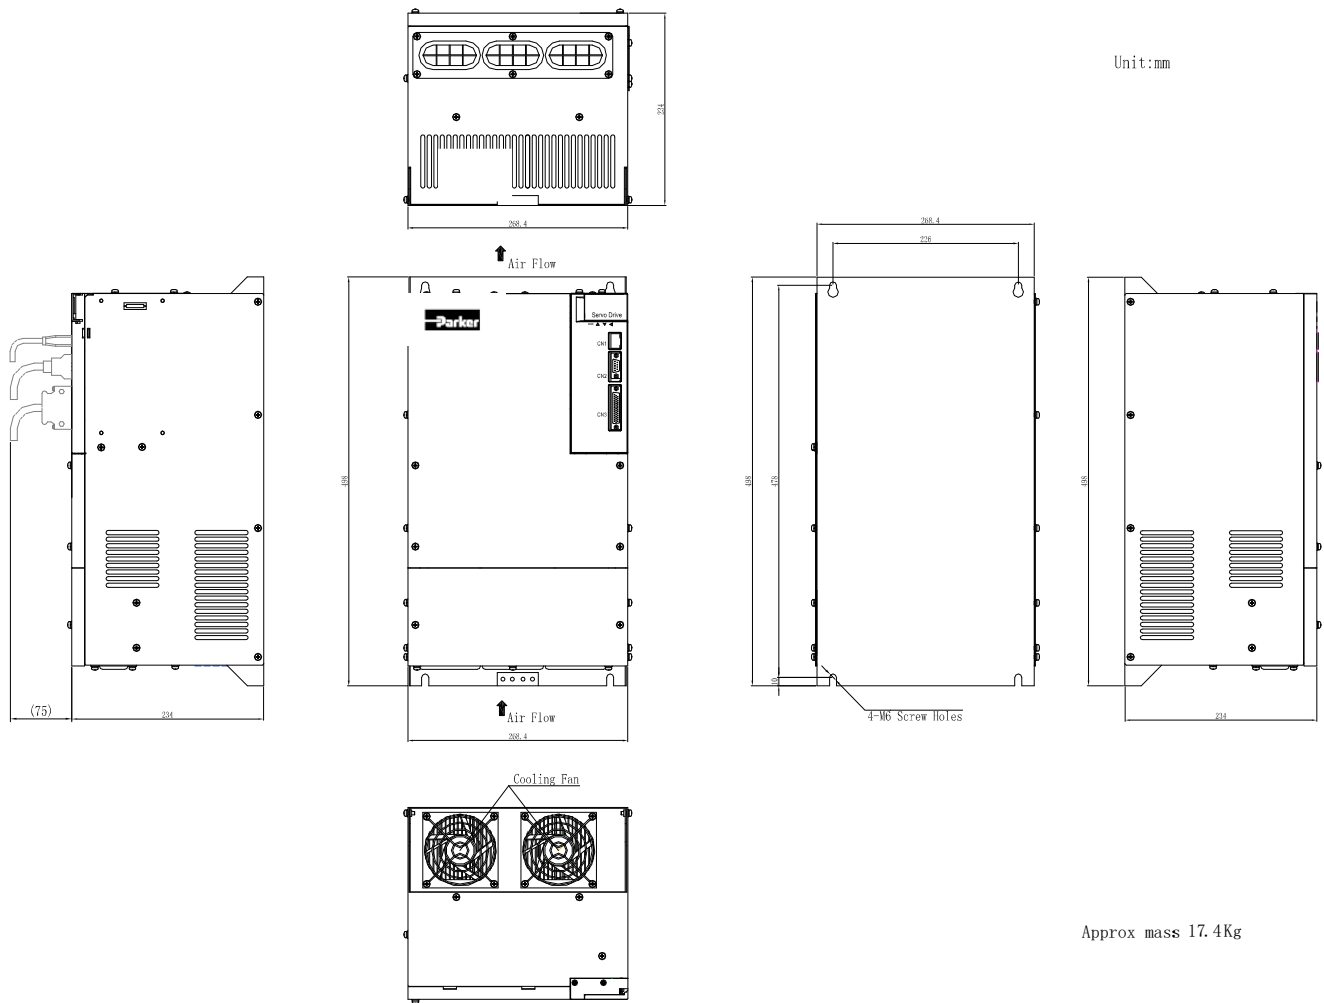


Fig 3.1.9 Servo drive structure 7

3.2 Servo motor installation

3.2.1 Installation location

1. Install the servo motor in an environment free from corrosive or inflammable gases or combustibles, such as hydrogen sulfide, chlorine, ammonia, sulphur gas, chloridize gas, acid, soda and salt.
2. Select and use the servo motor with oil seal in a place with grinding fluid, oil spray, iron powder or cuttings.
3. Install the servo motor away from heat sources such as heating stove.
4. Never use the servo motor in an enclosed environment. Working in the enclosed environment will lead to high temperature of the servo motor, which will shorten its service life.


3.2.2 Installation conditions

| | | |
|---------------------------|-----------------------|--|
| Environment conditions | Equipment location | Prevent tangy caustic gases and flammable gases |
| | Altitude | 1000m or below |
| | Atmospheric pressure | 86kPa~106kPa |
| | Operating temperature | -15°C~40°C (no freezing) |
| | Storage temperature | -20~80°C |
| | Humidity | Below 90% (no water-bead coagulation) |
| | Vibration Strength | Below 0.5G (4.9m/s ²) ,10~60Hz (Discontinuous) |
| | IP rating | IP64 |

3.2.3 Precautions on servo motor installation

| Item | Description |
|------------------------|--|
| Anticorrosive | Before starting installation, thoroughly remove the anticorrosive paint that coats the end of motor shaft. |
| Alignment | Align the shaft of the servo motor with the shaft of the equipment, and then couple the shafts. |
| Orientation | Servo motor can be installed either horizontally or vertically. |
| Handling oil and water | <p>If the servo motor is used in a location that is subject to water drops, make sure of servo motor protective specifications.</p> <p>If the servo motor is used in a location that is subject to water or oil mist, use a servo motor with oil seal.</p> <p>Precautions on using servo motor with oil seal</p> <ul style="list-style-type: none"> ·The oil surface must be under the oil seal lip. ·Use an oil seal in favorably lubricated condition. ·When servo motor is installed vertically, be sure that oil will not stay in the oil seal lips. |
| Cable stress | <p>Make sure there are no bends or tension on the power cables.</p> <p>Be especially carefully to wire signal cables so that they are not subject to stress because the core wires are very thin at only 0.2 to 0.3mm.</p> |
| Connectors | <p>Observe the following precautions:</p> <ul style="list-style-type: none"> ·Make sure there is no foreign matters such as dust and metal chips in the connector before connecting. ·when the connectors are connected to the motor, be sure to connect the end of servo motor circuit cables before connecting the encoder cable's end. If the encoder cable's is connected, the encoder may be damaged because of the voltage differences between PE. ·Make sure of the pin arrangement. ·Do not apply shock to resin connectors. Otherwise, they may be damaged. ·When handling a servo motor with its cable connected, be sure not to apply stress on the connector. The connector may be damaged by stress. |


130 Flange Motor

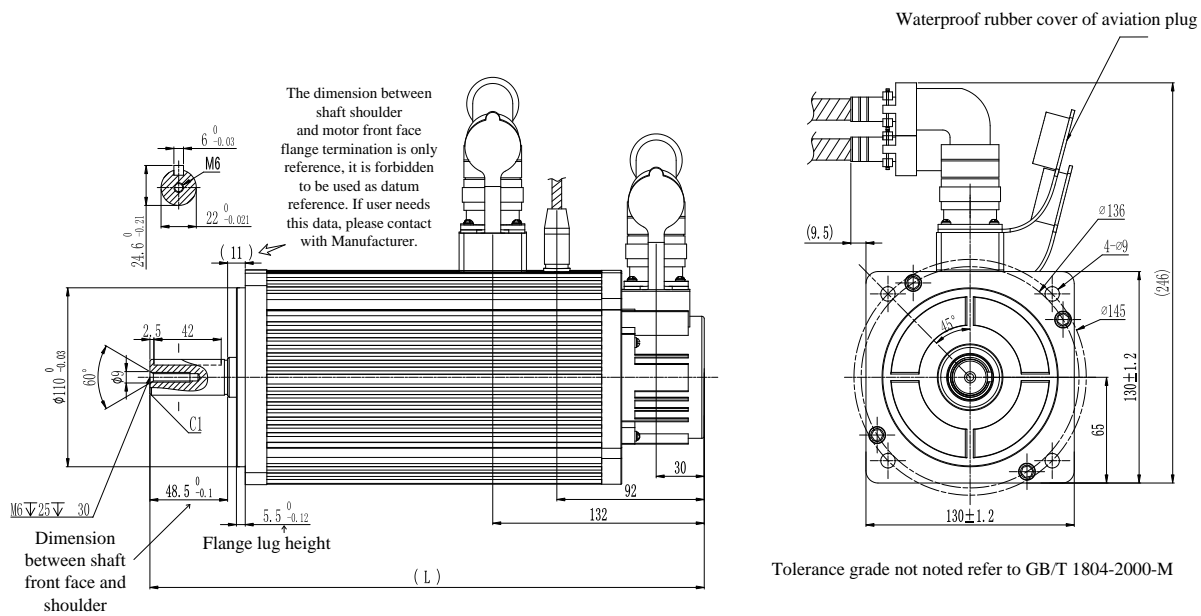

3. 2. 4 Dimension of servo motor

| Model | L (mm) | L (mm) With brake | Weight (Kg) | Remarks |
|--|--------|----------------------|----------------|--------------------------------|
| FMMA-851**7*** FMSA-152**7*** FMMA-102**7*** | 230 | 275 | 7 | The screw hole size is M6 X 25 |
| FMMA-132**7*** | 238 | 283 | 7.7 | |
| FMSA-232**7*** FMMA-152**7*** FMMA-122**7*** | 251 | 296 | 8 | |
| FMSA-302**7*** FMMA-202**7*** FMMA-152**7*** FMLA-102**7*** | 274 | 319 | 10 | |
| FMMA-312**7*** FMLA-152*37*** FMMA-232**7*** | 301 | 346 | 12 | |

FM15, FM17, FM20 series, Air-cooling

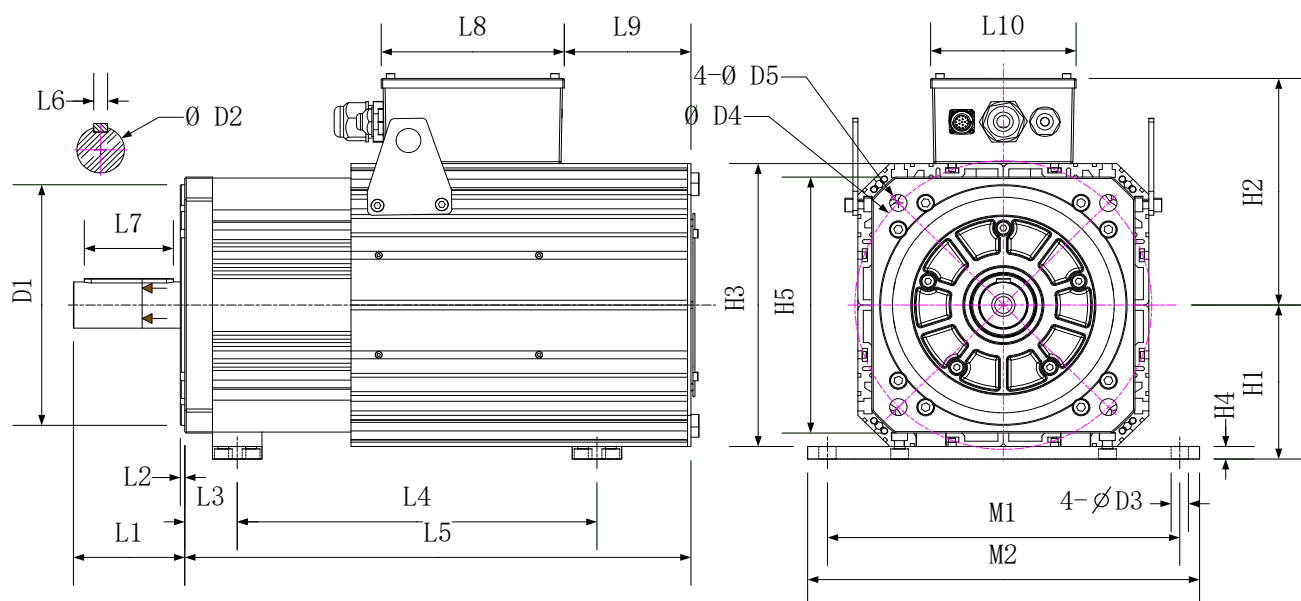**Fig 3.2.6 Dimension of servo motor**

| Stand spigot | D1 | D2 | D3 | D4 | D5 | L1 | L2 | L3 | L6 | L7 | L8 | L9 | L10 | H1 | H2 | H3 | H4 | H5 | M1 | M2 |
|--------------|-----|----|----|-----|------|-------|-----|----|----|----|-----|------|-----|-----|-----|-----|----|-----|-----|-----|
| E | 180 | 42 | 14 | 215 | 14.5 | 77 | 5 | 39 | 12 | 56 | 185 | 75.5 | 147 | 124 | 200 | 224 | 12 | 200 | 254 | 278 |
| F | 250 | 48 | 18 | 300 | 17.5 | 112.5 | 4.5 | 53 | 14 | 90 | 185 | 128 | 147 | 160 | 240 | 294 | 13 | 266 | 356 | 396 |

| | | | | | | | | | | | | | | |
|--|-----|-----|-----|-----|-----|-----|-----|-----|-------|-------|-------|-------|-------|-------|
| Motor rated torque Nm ($\Delta T=100^{\circ}\text{C}$) | 46 | 68 | 84 | 96 | 130 | 147 | 160 | 196 | 220 | 275 | 330 | 380 | 428 | 481 |
| Motor rated torque Nm ($\Delta T=65^{\circ}\text{C}$) | 42 | 52 | 64 | 80 | 102 | 118 | 135 | 152 | 185 | 225 | 270 | 307 | 324 | 385 |
| Stand spigot | E | E | E | E | E | E | E | E | F | F | F | F | F | F |
| L4 (mm) | 267 | 285 | 312 | 354 | 396 | 436 | 478 | 520 | 317 | 370 | 423 | 476 | 529 | 583 |
| L5 (mm) | 345 | 397 | 429 | 471 | 513 | 555 | 597 | 619 | 511.5 | 560.5 | 609.5 | 658.5 | 707.5 | 756.5 |

Note: 1-phase 220V power supply of 50 /60 Hz is usable for servomotor fan.

Green terminal definition: K-220VAC, L-220VAC, M-PE.

IV Wiring

This chapter provides servo system block diagram.

220V

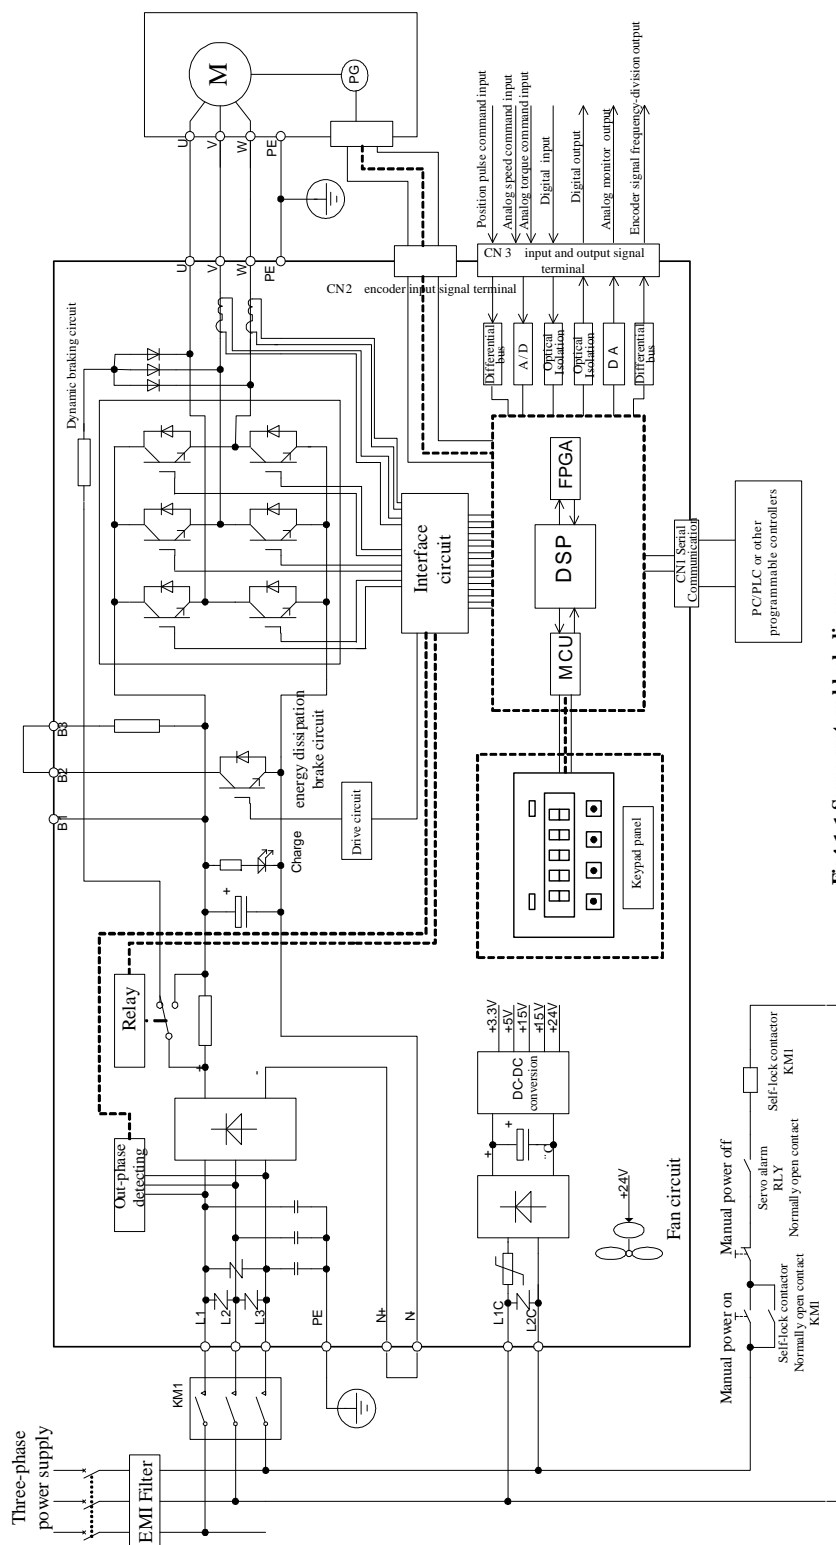


Fig4-1-1 Servo system block diagram

Fig 4.1.1 220V servo drive schematic diagram

380V





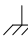
Fig4-1-2 Servo system block diagram

Fig 4.1.2 380V servo drive schematic diagram



4.1 Main circuit wiring

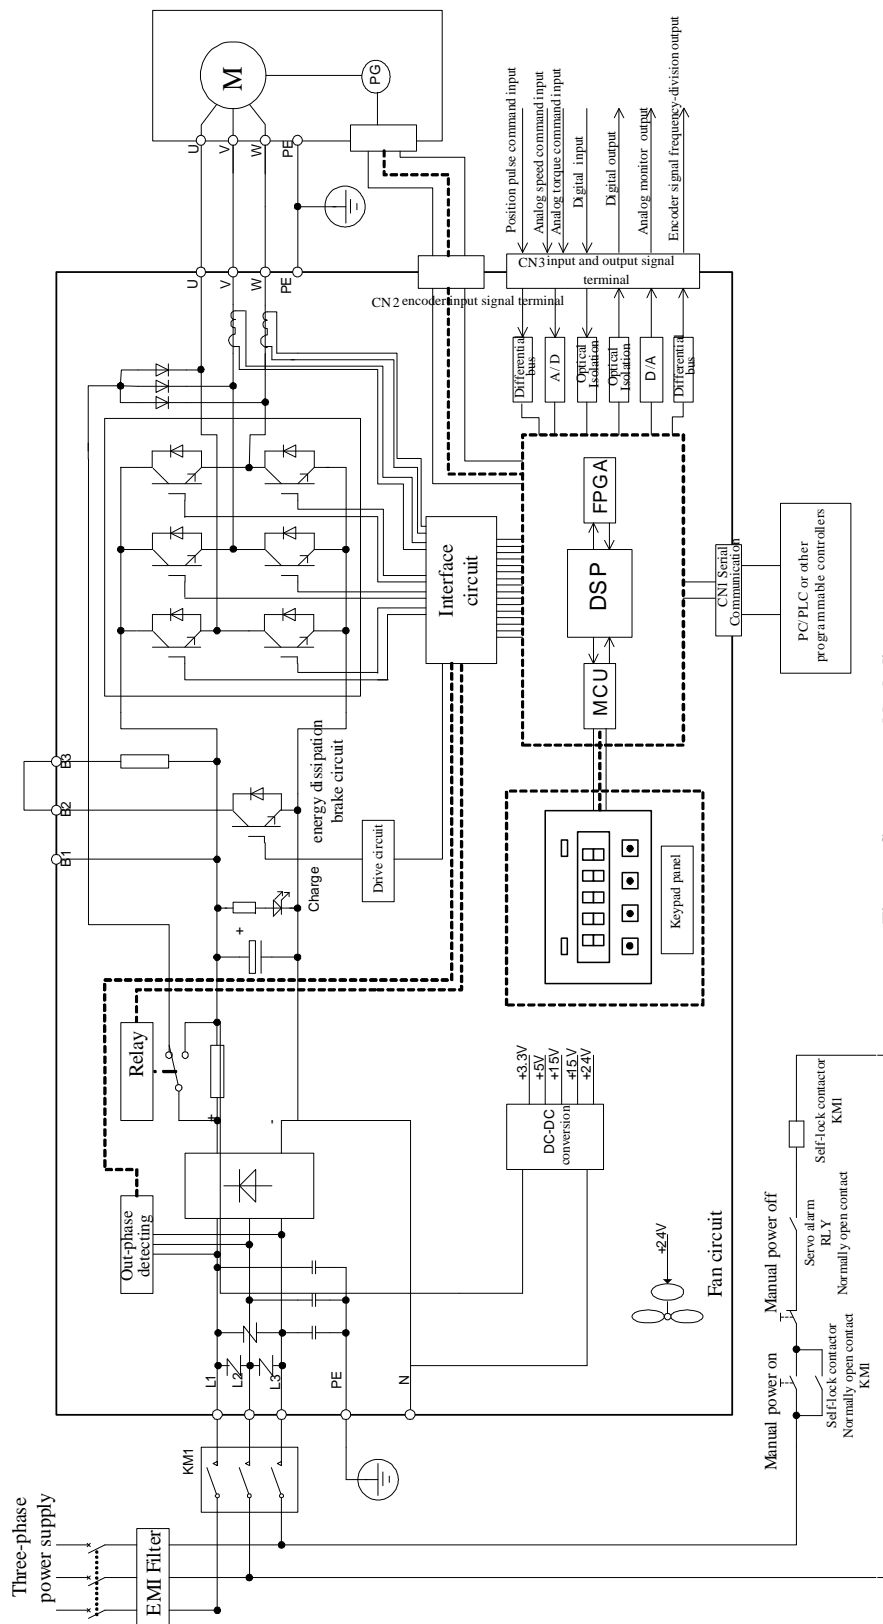4.1.1 Main circuit terminals

(1) Main circuit terminals of 220V servo drive

| Terminal identification | Terminal description | Functions |
|---|--|---|
| L1/R, L2/S, L3/T | Main circuit terminal | Used to connect three-phase AC 220V power. L1 and L3 are used to connect to single-phase 220V power. |
| L1C, L2C | Control circuit terminal | Used to connect to two phases of three-phase power or single-phase power. |
| B1/P, B2/B, B3 | B2, B3: internal braking resistor terminal | Normally short-connect B2 and B3. Built-in braking resistor is installed. (M1 structure servo drive doesn't have built-in braking resistor.) |
| | B1/P, B2/B: external braking resistor terminal | Normally not connected. Remove the wire between B2 and B3 and connect an external braking resistor between B1 and B2 if the internal resistor is insufficient. |
| N+, N- | DC choke terminal | Normally short-connect N+ and N-. If a countermeasure against power supply harmonic is needed connect a DC choke between N+ and N- terminals. |
| U, V, W | Servo motor output | Used to connect to servo motor. |
|  ,  | Ground terminal | Used to connect to the grounding. |

(2) Main circuit terminals of 380V servo drive

| Terminal identification | Terminal description | Functions |
|---|---|---|
| R/L1, S/L2, T/L3 | Main circuit terminal | Used to connect three-phase AC 380V power. |
| L1C, L2C | Forbidden being connected | Invalid |
| B1/P, B2/B, B3 | B2, B3 : internal braking resistor terminal | Normally short B2 and B3. Internal braking resistor is used. (MM4 and above MM4 structure servo drive doesn't have built-in braking resistor.) |
| | B1/P, B2/B : external braking resistor terminal | Normally not connected. Remove the wire between B2 and B3 and connect an external braking resistor between B1 and B2 if the internal resistor is insufficient. |
| N+, N-, - | DC bus | Forbidden being connected to Grounding |
| U, V, W | Servo motor output | Used to connect to servo motor. |
|  ,  | Ground terminal | Used to connect to the grounding. |

4.1.2 Main circuit terminal wiring

(1) Wiring size

The following are applicable wire sizes:

Single wire: $\varnothing 0.5 \sim \varnothing 1.6\text{mm}$; Braided wire: $0.8 \text{ mm}^2 \sim 3.5\text{mm}^2$ (American standard AWG28~AWG12)

(2) Connection procedure

- 1 Strip the end of the wire about 5~6mm.
- 2 Use a supplied lever or a standard flat-blade screwdriver (blade width of 3.0 to 3.5 mm). Put them into the slot, and press down firmly to open the wire terminal.
- 3 Insert the wire core into the opening and then close the opening by releasing the lever or removing the screwdriver.

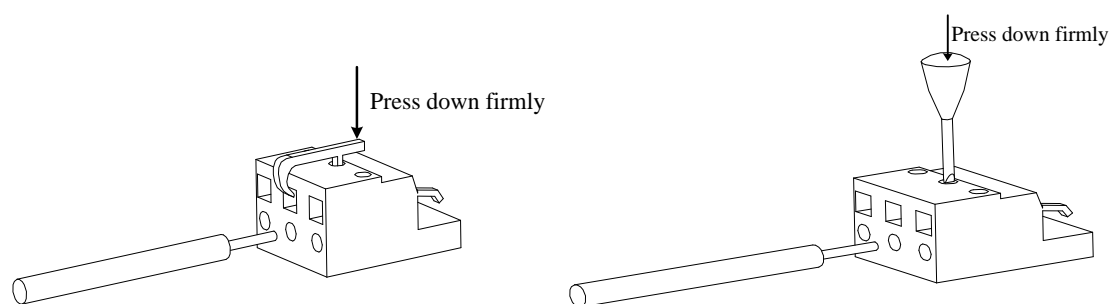


Fig 4.1.3 Connection procedure

4.1.3 Typical main circuit wiring examples

For 220V servo drive

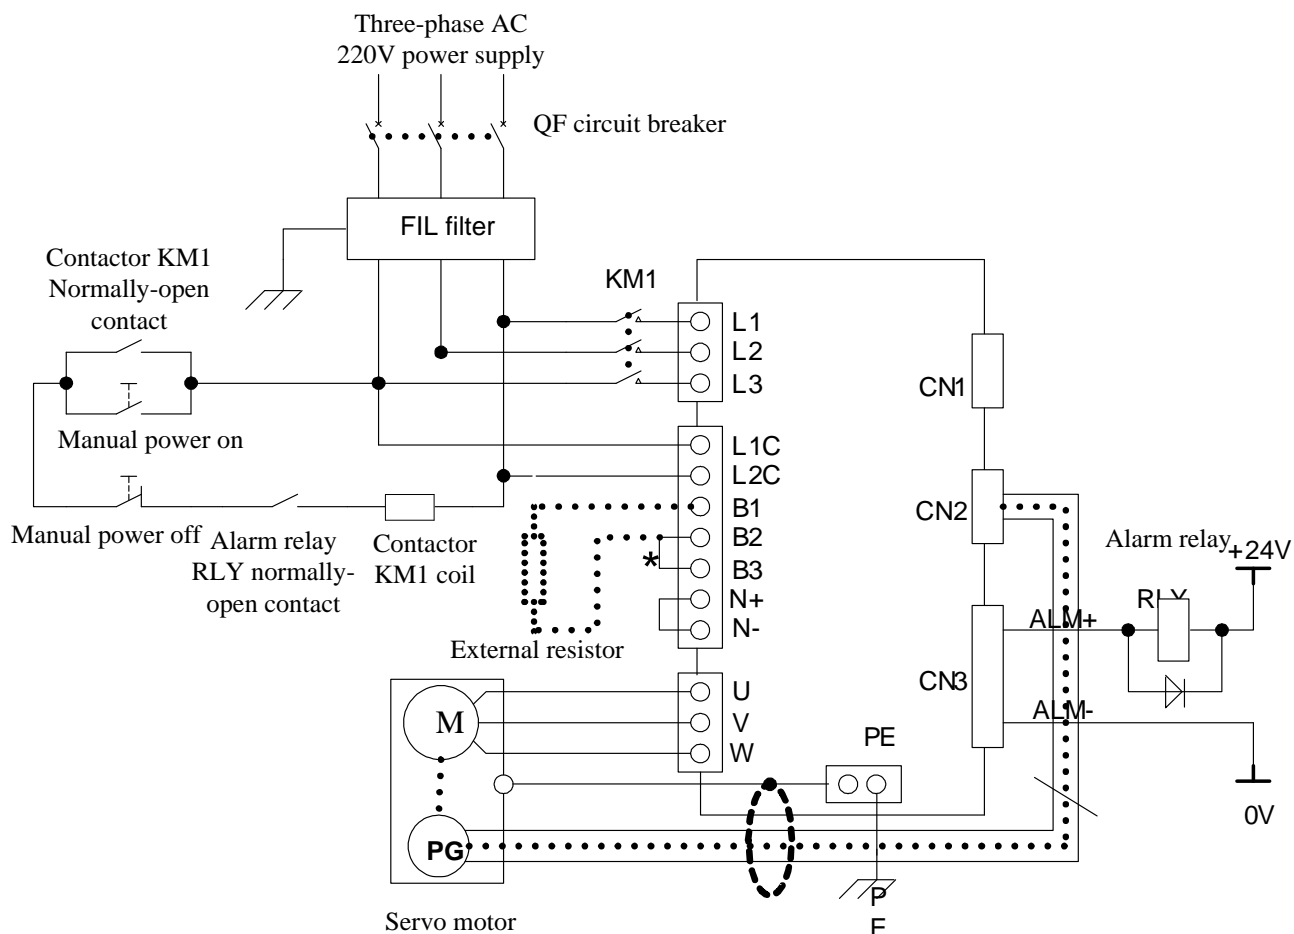


Fig 4-1-4 Typical main circuit wiring of 220V servo drive

Note:

1. Built-in resistor is default and B2 and B3 terminal is short-circuit. If external resistor is used, please remove the short cable between B2 and B3, and then connect external resistor between B1 and B2.
2. RLY : Alarm-signal output relay.
3. KM1: Contactor, connect or disconnect to main circuit power supply through manual switch.
4. If absolute encoder multi-turn function is adopted, please install battery.



Note: please connect an emergency stop circuit to main circuit so that servodrive can stop and power off immediately in case accident occurs.

For 380V servo drive

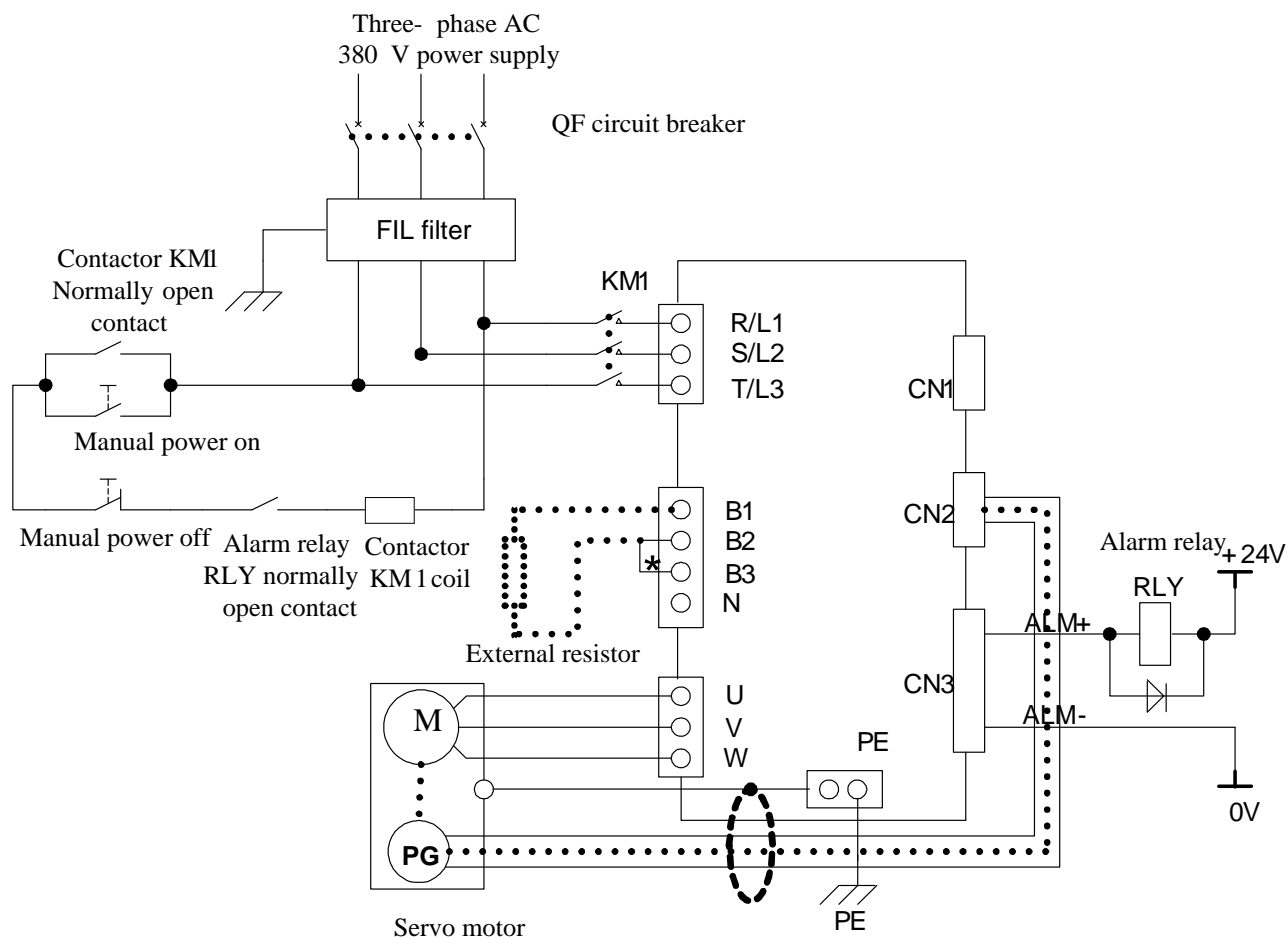


Fig 4-1-5 Typical main circuit wiring of 380V servo drive

Note:

1. Built-in resistor is default and B2 and B3 terminal is short-circuit. If external resistor is used, please remove the short cable between B2 and B3, and then connect external resistor between B1 and B2.
2. RLY : Alarm-signal output relay.
3. KM1: Contactor, connect or disconnect to main circuit power supply through manual switch.
4. N: DC bus.



Note: please connect an emergency stop circuit to main circuit so that servodrive can stop and power off immediately in case accident occurs.

4.1.4 Precaution for main circuit wiring

1. Don't connect input cable to U/V/W, or else, servo drive will be damaged.
2. When user connects external resistor, please remove the wire between B2 and B3 and connect external resistor between B1 and B2. Wrong wiring may damage servo drive.
3. Don't connect braking resistor between B1 and N+(N-), it will cause fire.
4. When cable is bundled and put in pipe, please consider reduction rate of allowable current for heat dissipation.
5. On high temperature condition, please select heat-resisting cable, common cable may be aged in a short time. In low temperature environment, please make thermal insulation for cable, common cable is easy to harden and crack.
6. Make sure that bending radius of cable is more than 10 times of outer diameter to prevent cable core break.
7. Don't put power cable and signal cable in one pipe or bundle them together. Distance of the two cables should be more than 30cm to avoid interference.
8. Servo drive remains high voltage after power off, don't touch power terminal for 5 minutes.
9. Please select earth wire with same area of main circuit.
10. Please ground servo drive reliably.
11. Don't power on when terminal screw or cable is loose, it will cause fire.
12. Only qualified personnel can connect the wiring.
13. To avoid electric shock or injury, when servo drive is powered off, please wait more than 5 minutes and indicator 'Charge' goes out, confirm there is no voltage between B1/P and N+/- by multimeter. Then user can disconnect or install servo drive.
14. Don't damage cable by hanging weight or extruding.
15. Make sure other wire and installation meet local regulations.

4.2 Encoder wiring

Precaution for encoder wire:

1. Make sure servo drive and motor are grounded reliably, otherwise servo drive may have wrong action.
2. Don't connect encoder cable to NC terminal.
3. User must consider of cable resistance and distributed capacitance to select cable length. Cable resistance may cause voltage drop, distributed capacitance will lead to signal attenuation,
4. Encoder cable and power cable must be fixed separately, with at least 30cm distance.
5. If encoder cable is not long enough and needs to connect additional cable, cable shielding layer must be also connected to ensure reliable shielding and grounding.

4.2.1 Absolute encoder connector terminal layout

CN2 Encoder Connector Terminal Layout is as shown in figure 4-2-1.

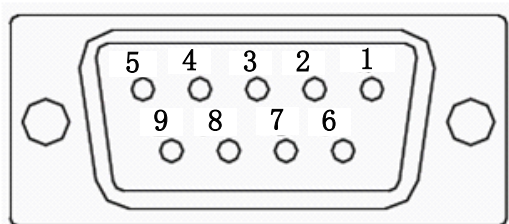


Fig 4.2.1 Absolute Encoder Connector Terminal Layout

Table 4.2.1 Encoder connector terminal

| Terminal code | Terminal abbreviation | Signal name | Function |
|---------------|-----------------------|------------------|---------------|
| CN2- 1 | NC | NO CONNECTION | NO CONNECTION |
| CN2- 2 | VCC | +5V power | +5V power |
| CN2- 3 | PS | PG serial signal | Serial signal |
| CN2- 4 | /PS | PG serial signal | Serial signal |
| CN2- 5 | GND | Grounding | Grounding |
| CN2- 6 | | | |
| CN2- 7 | NC | NO CONNECTION | NO CONNECTION |
| CN2- 8 | NC | NO CONNECTION | NO CONNECTION |
| CN2- 9 | NC | NO CONNECTION | NO CONNECTION |
| | HOUSING | —— | (plug cover) |

4.2.2 Resolver encoder connector terminal layout

CN2 Encoder Connector Terminal Layout is as shown in figure 4-2-2.

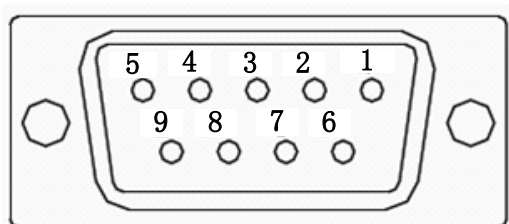


Fig 4.2.2 Resolver encoder connector terminal layout

Table 4.2.2 Encoder connector terminal

| Terminal code | Terminal abbreviation | Signal name | Function |
|---------------|-----------------------|------------------------------------|---|
| CN2- 1 | RE2 | Resolver signal stimulus | Connect to servo motor signal stimulus. |
| CN2- 2 | VCC | Power of motor temperature sensor | Power of motor temperature sensor |
| CN2- 3 | KTY | Signal of motor temperature sensor | Signal of motor temperature sensor |
| CN2- 4 | NC | No connection | No connection |
| CN2- 5 | RE1 | Resolver signal stimulus | Connect to servo motor signal stimulus. |
| CN2- 6 | COS- | Resolver differential signal | Connect to servo motor differential signal. |
| CN2- 7 | COS+ | Resolver differential signal | Connect to servo motor differential signal. |
| CN2- 8 | SIN- | Resolver differential signal | Connect to servo motor differential signal. |
| CN2- 9 | SIN+ | Resolver differential signal | Connect to servo motor differential signal. |
| | HOUSING | —— | (plug cover) |

4.2.3 Incremental encoder connector terminal layout

CN2 Encoder Connector Terminal Layout is as shown in figure 4-2-3.

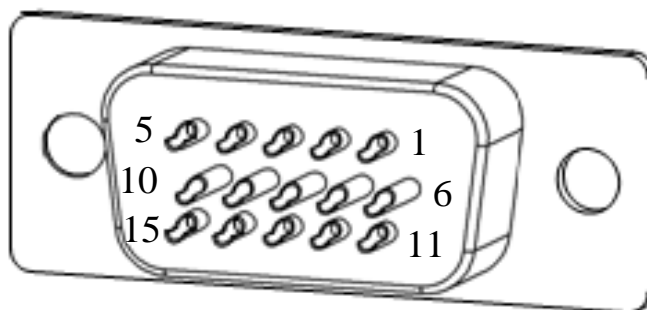


Fig 4.2.3 Incremental encoder connector terminal layout

Table 4.2.3 Encoder connector terminal

| Terminal code | Terminal abbreviation | Signal name | Function |
|---------------|-----------------------|------------------------|-----------------------------------|
| CN2- 1 | V | Encoder V phase input | Connect to motor encoder V phase |
| CN2- 2 | U | Encoder U phase input | Connect to motor encoder U phase |
| CN2- 3 | Z | Encoder Z phase input | Connect to motor encoder Z phase |
| CN2- 4 | B | Encoder B phase input | Connect to motor encoder B phase |
| CN2- 5 | A | Encoder A phase input | Connect to motor encoder A phase |
| CN2- 6 | /V | Encoder /V phase input | Connect to motor encoder /V phase |
| CN2- 7 | /U | Encoder /U phase input | Connect to motor encoder /U phase |
| CN2- 8 | /Z | Encoder /Z phase input | Connect to motor encoder /Z phase |
| CN2- 9 | /B | Encoder /B phase input | Connect to motor encoder /B phase |
| CN2-10 | /A | Encoder /A phase input | Connect to motor encoder /A phase |
| CN2-11 | /W | Encoder /W phase input | Connect to motor encoder /W phase |
| CN2-12 | W | Encoder W phase input | Connect to motor encoder W phase |
| CN2-13 | VCC | +5V power | +5V power |
| CN2-14 | GND | Grounding | Grounding |
| CN2-15 | — | — | NO CONNECTION |
| | HOUSING | — | (plug cover) |

4.3 I/O signal wiring

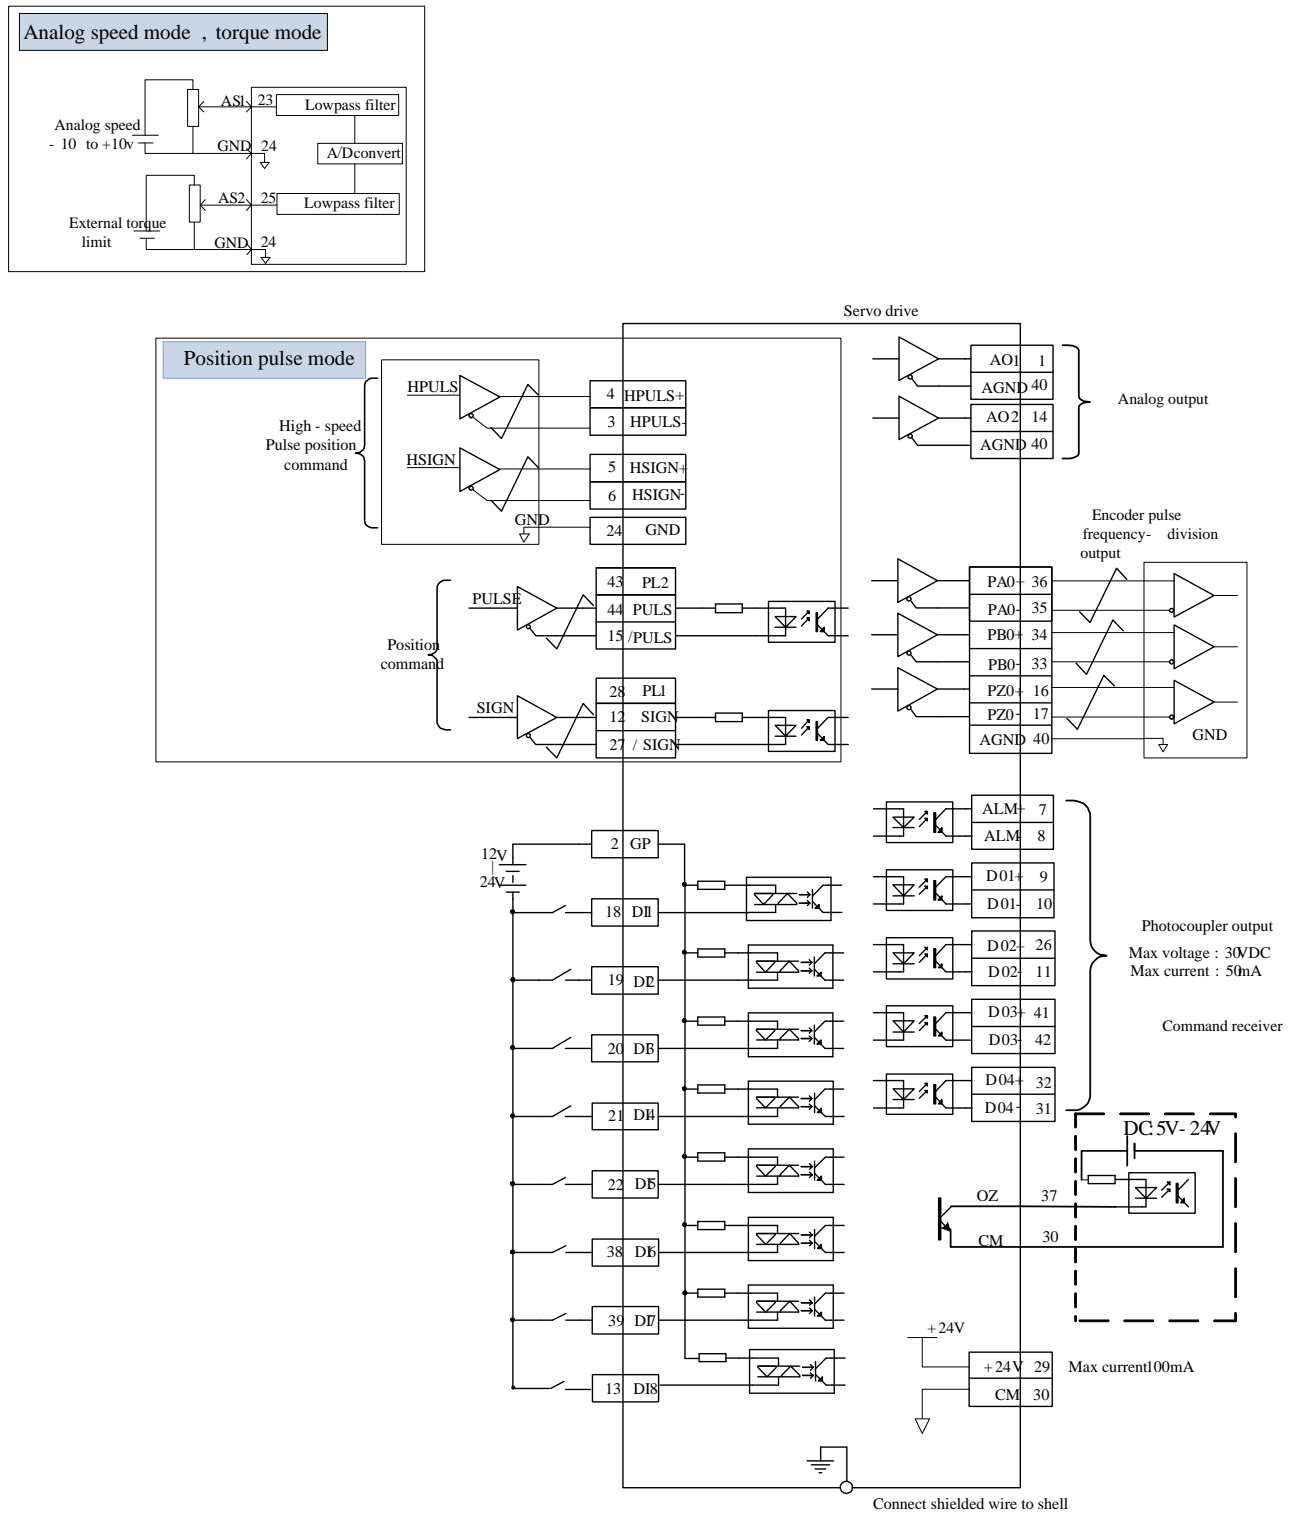


Fig 4.3.1 Wiring diagram in 3 kinds of modes

I/O signal connector terminal layout (connect to CN3) is as following fig when viewed from the solder pieces.

| | | | | | | | | | | | | | | | |
|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|
| 15 | 14 | 13 | 12 | 11 | 10 | 9 | 8 | 7 | 6 | 5 | 4 | 3 | 2 | 1 | |
| | 30 | 29 | 28 | 27 | 26 | 25 | 24 | 23 | 22 | 21 | 20 | 19 | 18 | 17 | 16 |
| | 44 | 43 | 42 | 41 | 40 | 39 | 38 | 37 | 36 | 35 | 34 | 33 | 32 | 31 | |

Fig 4.3.2 I/O signal connector terminal layout

| | |
|----|--------|
| 1 | AO1 |
| 2 | GP |
| 3 | HPULS- |
| 4 | HPULS+ |
| 5 | HSIGN+ |
| 6 | HSIGN- |
| 7 | ALM+ |
| 8 | ALM- |
| 9 | DO1+ |
| 10 | DO1- |
| 11 | DO2- |
| 12 | SIGN |
| 13 | DI8 |
| 14 | AO2 |
| 15 | /PULS |

| | |
|----|-------|
| 16 | PZO+ |
| 17 | PZO- |
| 18 | DI1 |
| 19 | DI2 |
| 20 | DI3 |
| 21 | DI4 |
| 22 | DI5 |
| 23 | AS1 |
| 24 | GND |
| 25 | AS2 |
| 26 | DO2+ |
| 27 | /SIGN |
| 28 | PL1 |
| 29 | +24V |
| 30 | CM |

| | |
|----|------|
| 31 | DO4- |
| 32 | DO4+ |
| 33 | PBO- |
| 34 | PBO+ |
| 35 | PAO- |
| 36 | PAO+ |
| 37 | ZO |
| 38 | DI6 |
| 39 | DI7 |
| 40 | AGND |
| 41 | DO3+ |
| 42 | DO3- |
| 43 | PL2 |
| 44 | PULS |

4.3.1 Position command input signal and function

Table 4.3.1 Position command signal

| Signal name | | Pin No. | Function | |
|---------------------|--------|---------|--|---|
| Position command | PULS | CN3-44 | Low-speed pulse command input modes: differential drive input and open-collector. | Input pulse types: Direction+pulse A+B phase orthogonalpulse CW/CCW pulse |
| | /PULS | CN3-15 | | |
| | SIGN | CN3-12 | | |
| | /SIGN | CN3-27 | | |
| | HPULS+ | CN3-4 | High-speed pulse position command | |
| | HPULS- | CN3-3 | | |
| | HSIGN+ | CN3-5 | High-speed direction command | |
| | HSIGN- | CN3-6 | | |
| | PL1 | CN3-28 | Pulse direction input (24V) | |
| | PL2 | CN3-43 | Pulse command input (24V) | |
| | GND | CN3-24 | Signal reference terminal | |

An output circuit for the reference pulse or symbol signal at the host controller can either be differential drive output or OC output.

| Pulse | | Max frequency | Remarks |
|------------|--------------|---------------|-------------------|
| Low-speed | Differential | 500K | 5V or 24V command |
| | OC | 200K | |
| High-speed | Differential | 4M | 5V command |

1) Low-speed pulse command input

a) Differential drive

5V differential drive signal can be inputted by pulse input terminals of PULS, /PULS and SIGN, /SIGN.

Take the example of terminals PULS and /PULS.

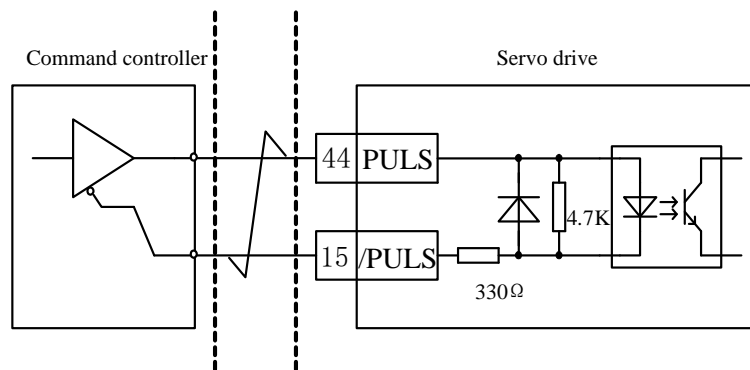


Fig 4.3.3 5V differential pulse input interface circuit

24V differential drive signal can be inputted by pulse input terminals of PL1, /SIGN and PL2, /PULS.
Take the example of terminals PL2 and /PULS.

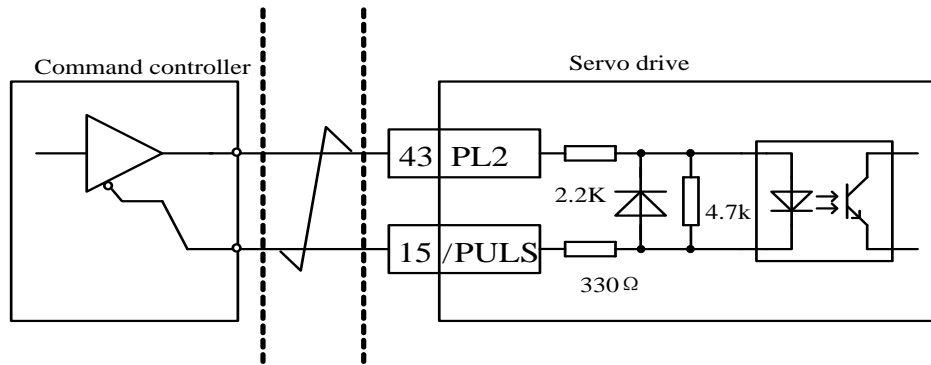


Fig 4.3.4 24V differential pulse input interface circuit

b) Single-end drive

The types of single-end drive include collector (drain) input, emitter (source) input and push pull input, and so on. The input types of differential signal have a better anti-jamming than single-end drive, and the transmission distance of single-end drive is shorter.

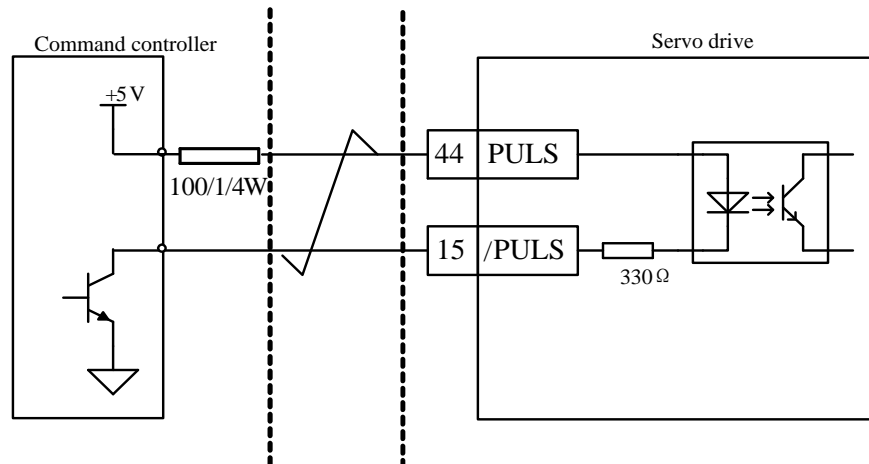


Fig 4.3.5 5V open-collector pulse input interface circuit

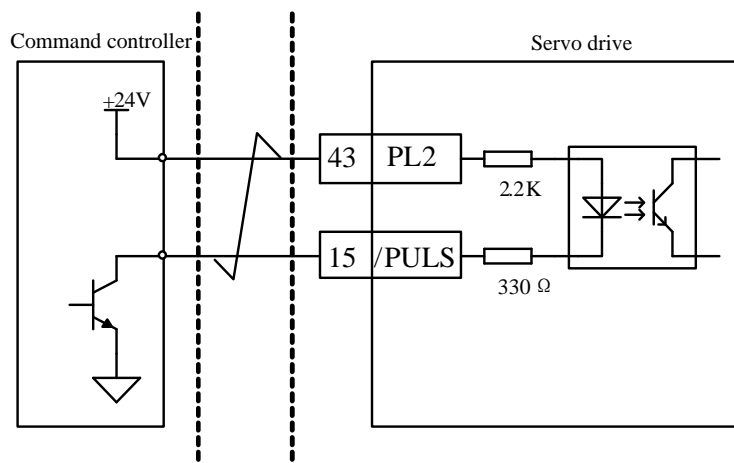



Fig 4.3.6 24V open-collector pulse input interface circuit

c) Wrong example:


Error 1: current-limiting resistor is not connected, which leads to port damaged.

Two errors are as below:


1. If 24V internal servo drive is not used, please connect it to external resistor.
2. if 24V internal servo drive is used, please connect to 43/28 pin.

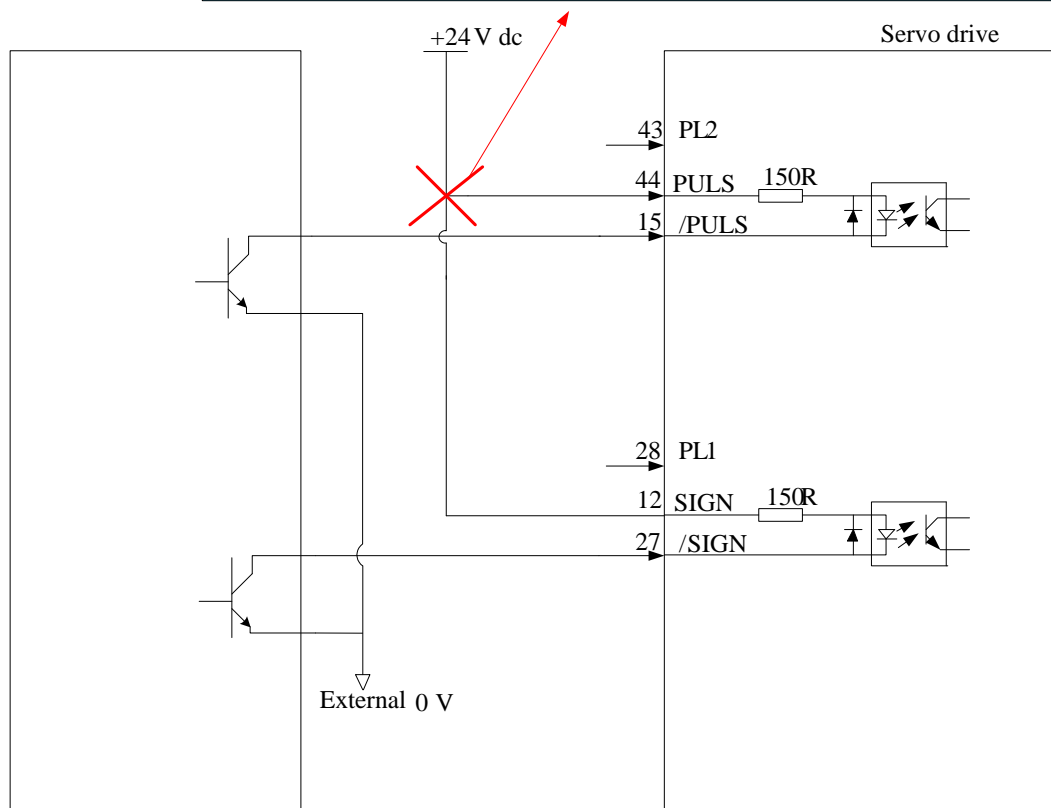

Error 2: When SIGN signal is not connected, direction can not be converted.

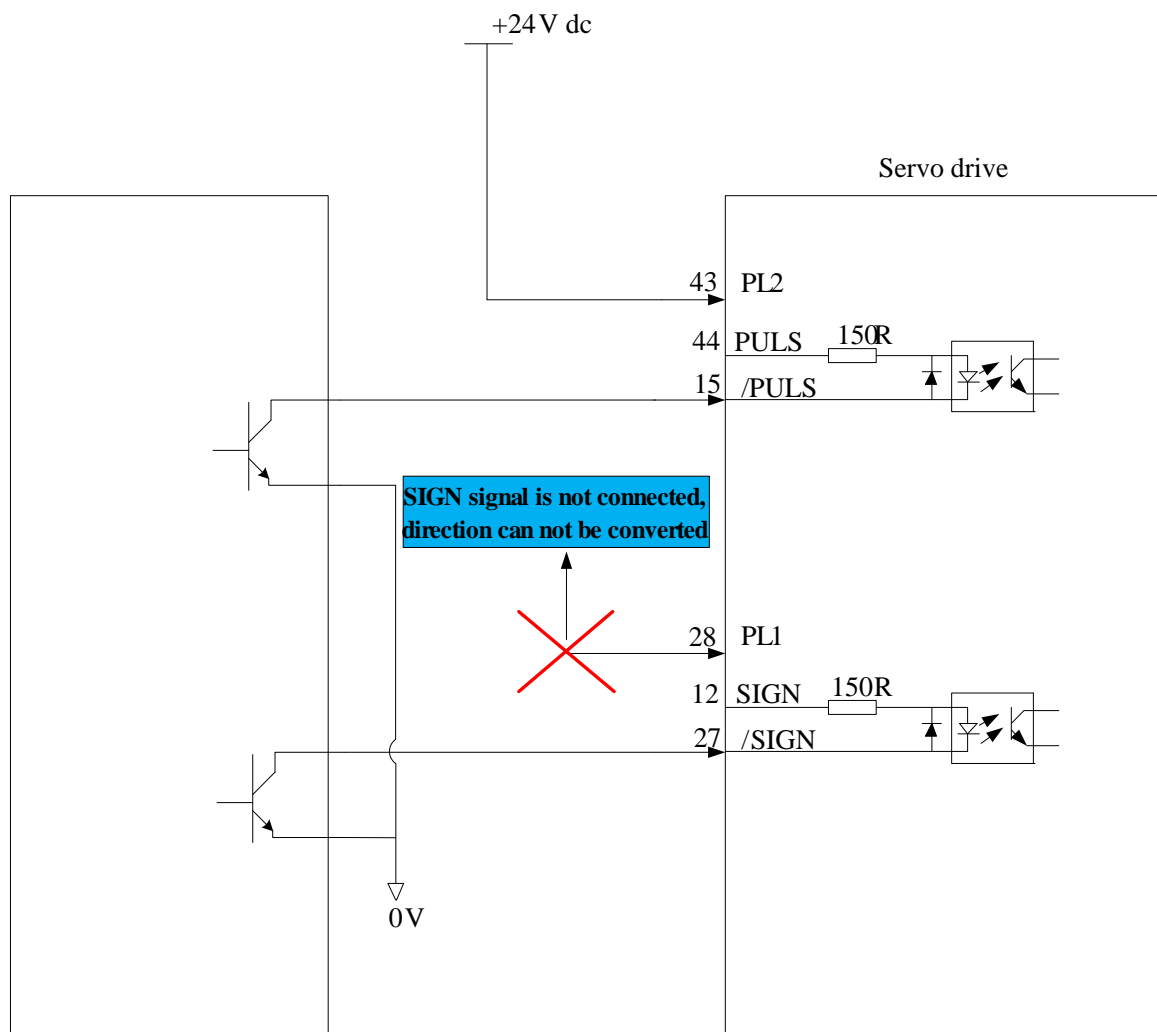

Error 3: there is no loop when 24V internal servo drive is used.

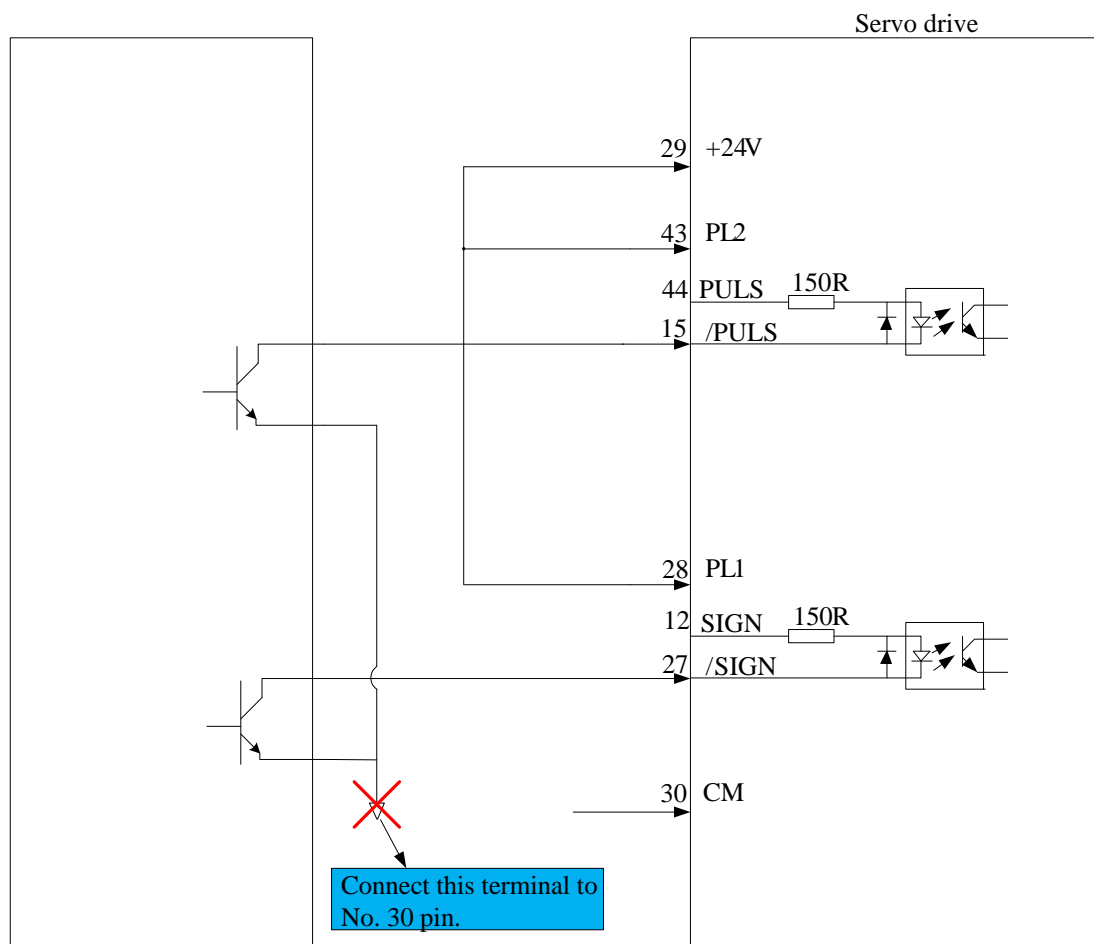

2) High-speed pulse command input

High-speed command pulse can be output to servo drive by differential drive.

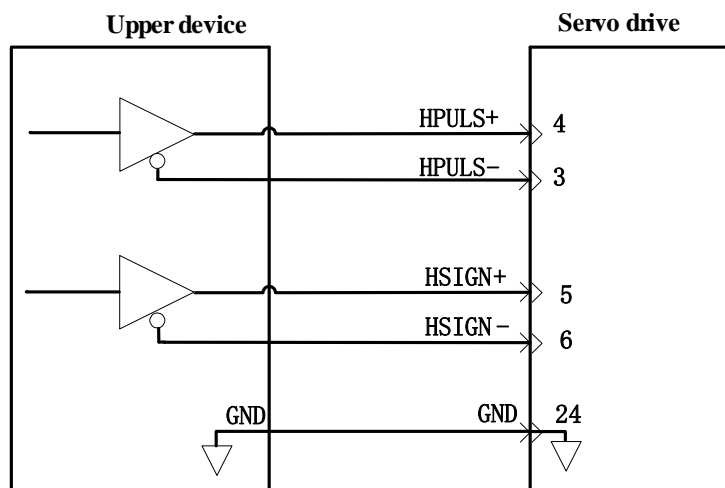


Fig 4.3.10 High-speed differential signal

- ★ Please make sure differential input voltage is 5V, otherwise servo drive receives pulse unsteadily or servo drive internal device will be damaged.
- ★ Please make sure the 5V power grounding is connected to GND, otherwise the following situation will

happen:

1. Some input pulse could be missed. ;
2. There will be large interference when servo drive receives pulse.

4.3.2 Analog command input signal and functions

| Signal name | | Pin No. | Function |
|-------------|------|---------|---|
| Analog | AS1+ | CN3-23 | Resolution of analog input signal is 12 bits, input voltage range is -10V~+10V. |
| | AS2+ | CN3-25 | |
| | GND | CN3-24 | Analog input signal reference terminal. |

Speed and torque signal input terminals are AS1+ and AS2+, resolution is 12 bits. The voltage value is set by Po400/Po401.

- ★ Input voltage range: -10V~+10V, resolution is 12 bits.
- ★ Max voltage is $\pm 12V$.
- ★ Input resistor is about $50K\Omega$.

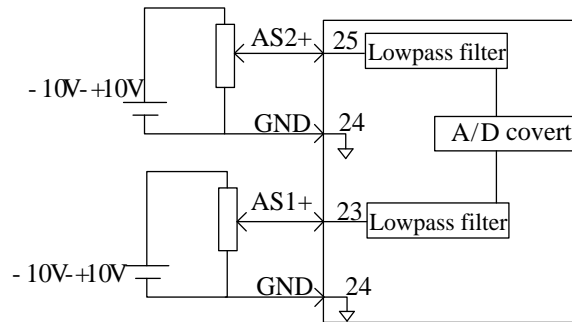


Fig 4.3.11 Analog input interface circuit

4.3.3 Analog output signal and functions

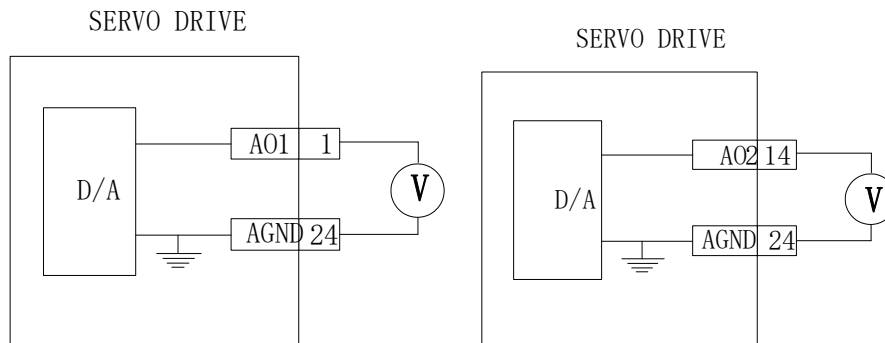


Fig 4.3.12 Analog monitor output interface

The voltage range of analog monitor is 0~10V, the range of output current is 0~10mA.

| Signal | Monitor content |
|----------|---|
| AO1, AO2 | Motor speed, bus voltage, and servo drive output current. |

4.3.4 Digital input signal and functions

| Signal name | | Pin No. | Function |
|--|------|---------|--|
| Program mable input terminal | DI1 | CN3-18 | DI1-DI8 are digital input terminals, input mode is ON/OFF signal. Please refer to 8.1.7 DI/DO for the detailed function. DI input pulse frequency range is 0~3KHz |
| | DI2 | CN3-19 | |
| | DI3 | CN3-20 | |
| | DI4 | CN3-21 | |
| | DI5 | CN3-22 | |
| | DI6 | CN3-38 | |
| | DI7 | CN3-39 | |
| | DI8 | CN3-13 | |
| Signal name | | Pin No. | Function |
| Program mable output terminal | DO1+ | CN3-9 | DO1-DO4 and ALM are DO output terminals, output mode is ON/OFF signal. Please refer to 8.1.7 DI/DO for the detailed function. |
| | DO1- | CN3-10 | |
| | DO2+ | CN3-26 | |
| | DO2- | CN3-11 | |
| | DO3+ | CN3-41 | |
| | DO3- | CN3-42 | |
| | DO4+ | CN3-32 | |
| | DO4- | CN3-31 | |
| | ALM+ | CN3-7 | |
| | ALM- | CN3-8 | |
| Signal name | | Pin No. | Function |
| Internal 24V | +24V | CN3-29 | 24V power supply, range is 20V-30V |
| | CM | CN3-30 | Reference terminal |

1) Digital input circuit

DI1~DI8 input terminals circuit is bidirectional photocoupler isolating circuit. The common terminal of photocoupler is GP terminal which is used to connect to power supply or grounding for power supply. Please refer to fig 4-4-1 and 4-4-2. Please select external DC power supply to supply the primary voltage of photocoupler in order to decrease the interference to internal circuit. DI8 is high-speed photoelectric channel, which is high-speed DI terminal. Input type of DI channel is as below:

(1) Passive contactor

Passive contacts include relay contactor, limit switch, general key, button and so on. The common contact circuit is as following figure:

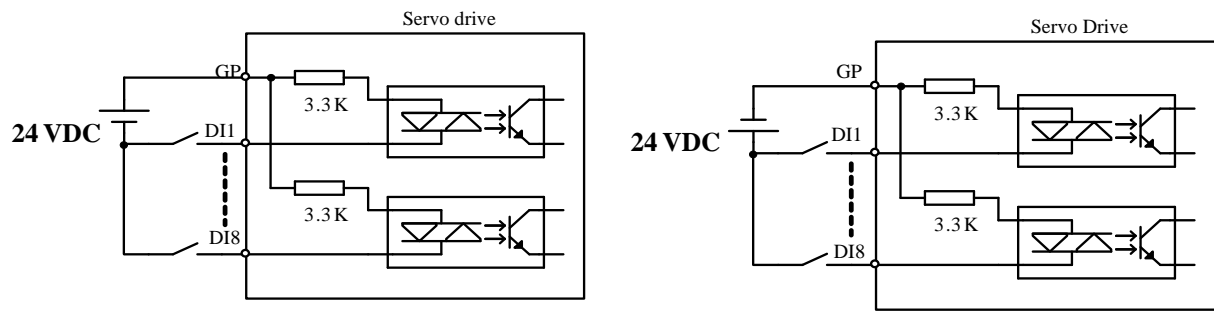


Fig 4-3-13 passive-contact interface circuit

(2) Active contactor

Active contactors include photoelectrical sensor, Hall sensor, transistor type PLC.

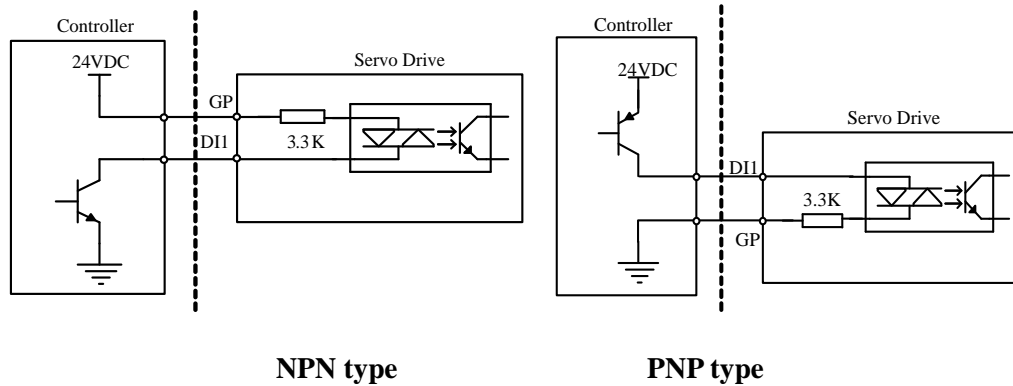


Fig 4-3-14 active contactor interface circuit

2) Digital output circuit

The output signal ALM and DO1~DO4 adopts photocoupler of Darlington output which has strong ability for drive and can drive small relay directly. It can drive heavier load by driving photocoupler. The max current should not be higher than 50mA.

(1) Relay output

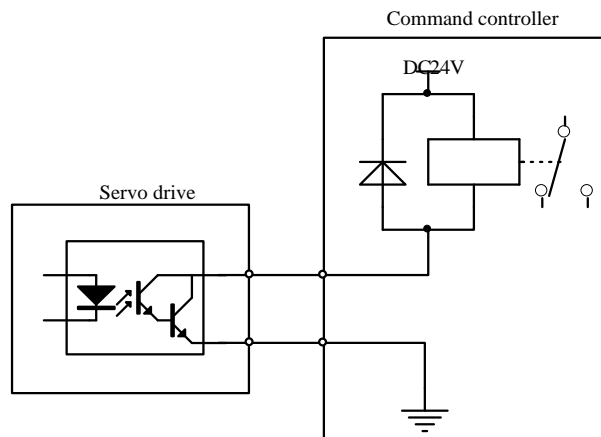


Fig 4-3-15 Relay output interface circuit

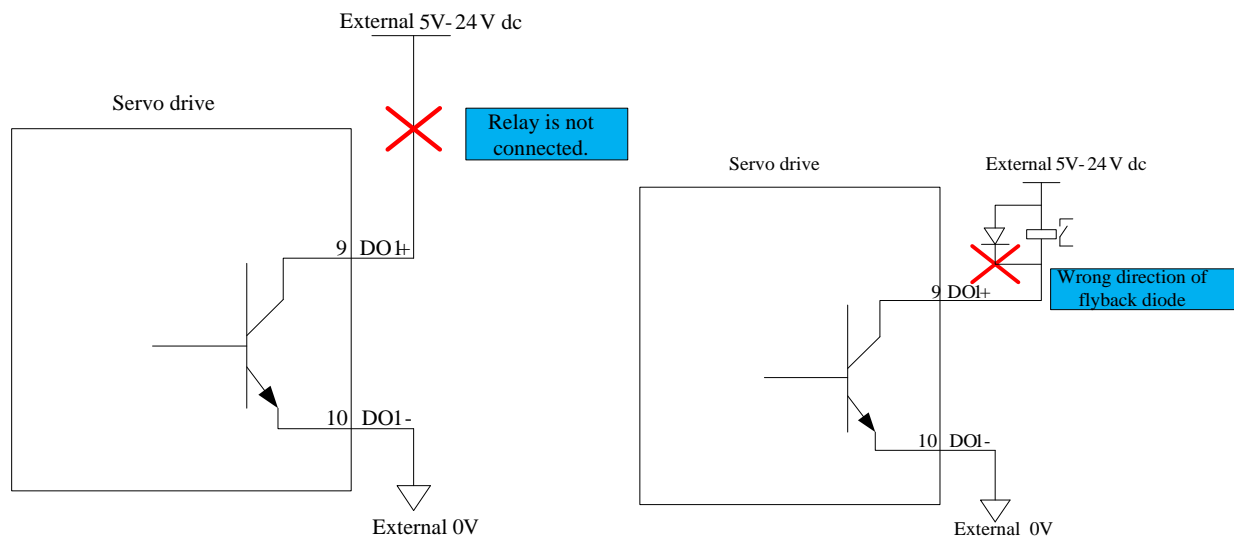


Fig 4-3-16 Wrong wiring of relay output interface circuit

⚠ Note : Relay is inductance load, please connect a freewheel diode in antiparallel between the load.
If the freewheel diode is connected inversely, servo drives will be damaged.

(2) Photocoupler isolating output

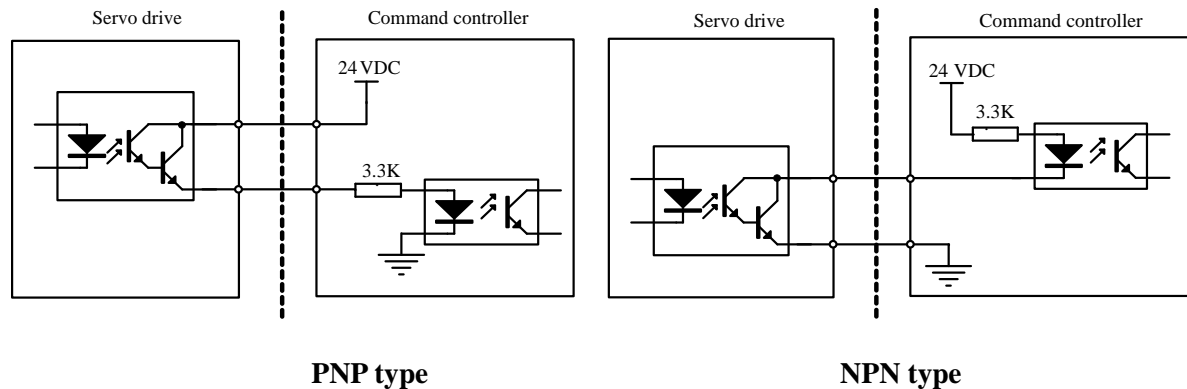


Fig 4-3-17 Photocoupler output interface circuit

⚠ Note:

1. Match usage of power supply and current-limiting resistor make external photocoupler on state.
2. Max allowable voltage and max current capacity of internal photocoupler output circuit is as below:
Voltage: DC 30V (Max)
Current: DC 50mA (Max)

4.3.5 Encoder frequency-division output signal and function

| Signal name | | Pin No. | Function |
|------------------------|------|---------|---|
| Common output terminal | PAO+ | CN3-36 | Encoder A phase pulse frequency-division output |
| | PAO- | CN3-35 | |
| | PBO+ | CN3-34 | Encoder B phase pulse frequency-division output |
| | PBO- | CN3-33 | |
| | PZO+ | CN3-16 | Encoder Z phase pulse frequency-division output |
| | PZO- | CN3-17 | |
| | OZ | CN3-37 | Encoder Z-phase pulse outputs open collector signal |
| | CM | CN3-30 | Reference terminal |

Frequency-division circuit in the servodrive processes encoder input signal by the mode of frequency-division, which is output by differential bus mode. Interface circuit includes high-speed photocoupler interface and differential chip interface. Take the example of encoder A phase pulse frequency-division output.

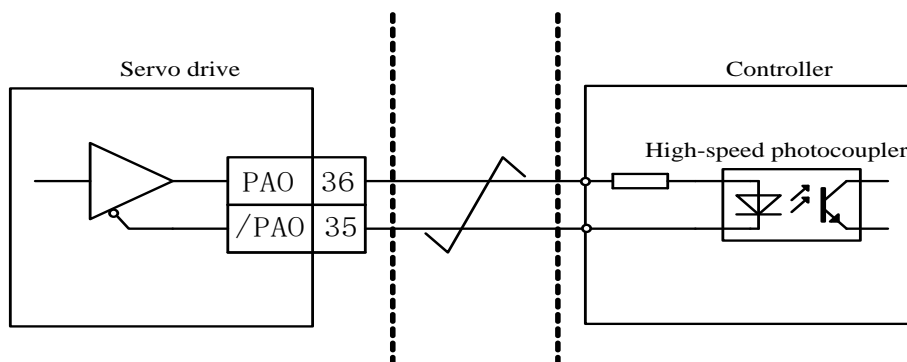


Fig 4-3-18 Photocoupler interface circuit

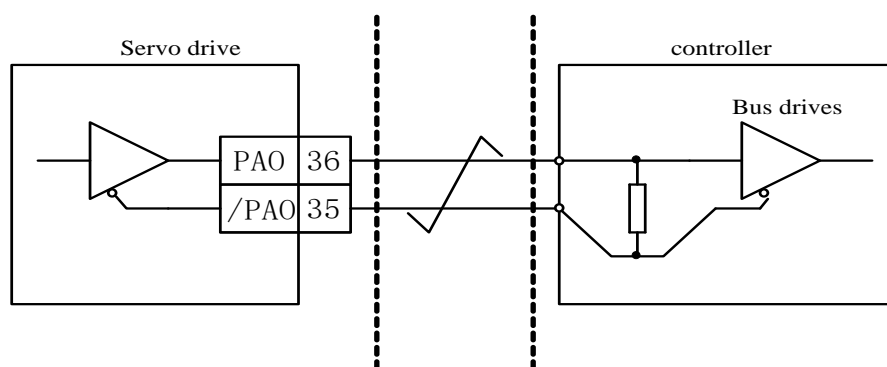


Fig 4-3-19 Differential chip interface circuit

Note: AM26LS32 is recommended as receiving chip, and 200Ω/1/4W match resistor is recommended.

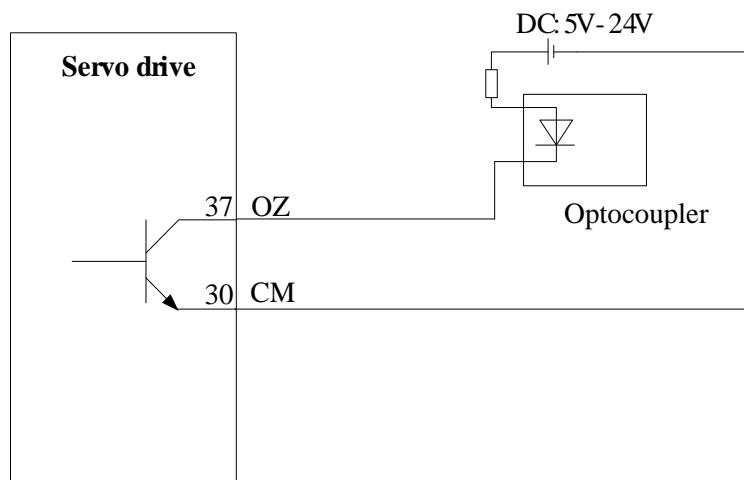


Fig 4-3-20 OZ signal interface circuit

4.3.6 Communication wiring

(1) Interface instruction

The RS485 communication interface is in the connector CN1.

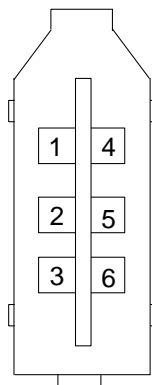


Fig 4-3-2 CN1 connector terminals

| Terminal | Name | Function |
|----------|-----------|--------------------------------|
| CN1-1 | VCC | 5V power |
| CN1-2 | RS232-RXD | Receiver terminal of RS232 |
| CN1-3 | B- | Differential output - |
| CN1-4 | GND | Reference terminal |
| CN1-5 | RS232-TXD | Transmission terminal of RS232 |
| CN1-6 | A+ | Differential output + |

4.3.7 Wiring when using more than one servos

Connect the alarm output (ALM) terminals for the three Servodrives in series to enable alarm detection relay RLY to operate. When the alarm occurs, the ALM output signal transistor is turned OFF.

1) Wiring diagram of more than one 220V servos

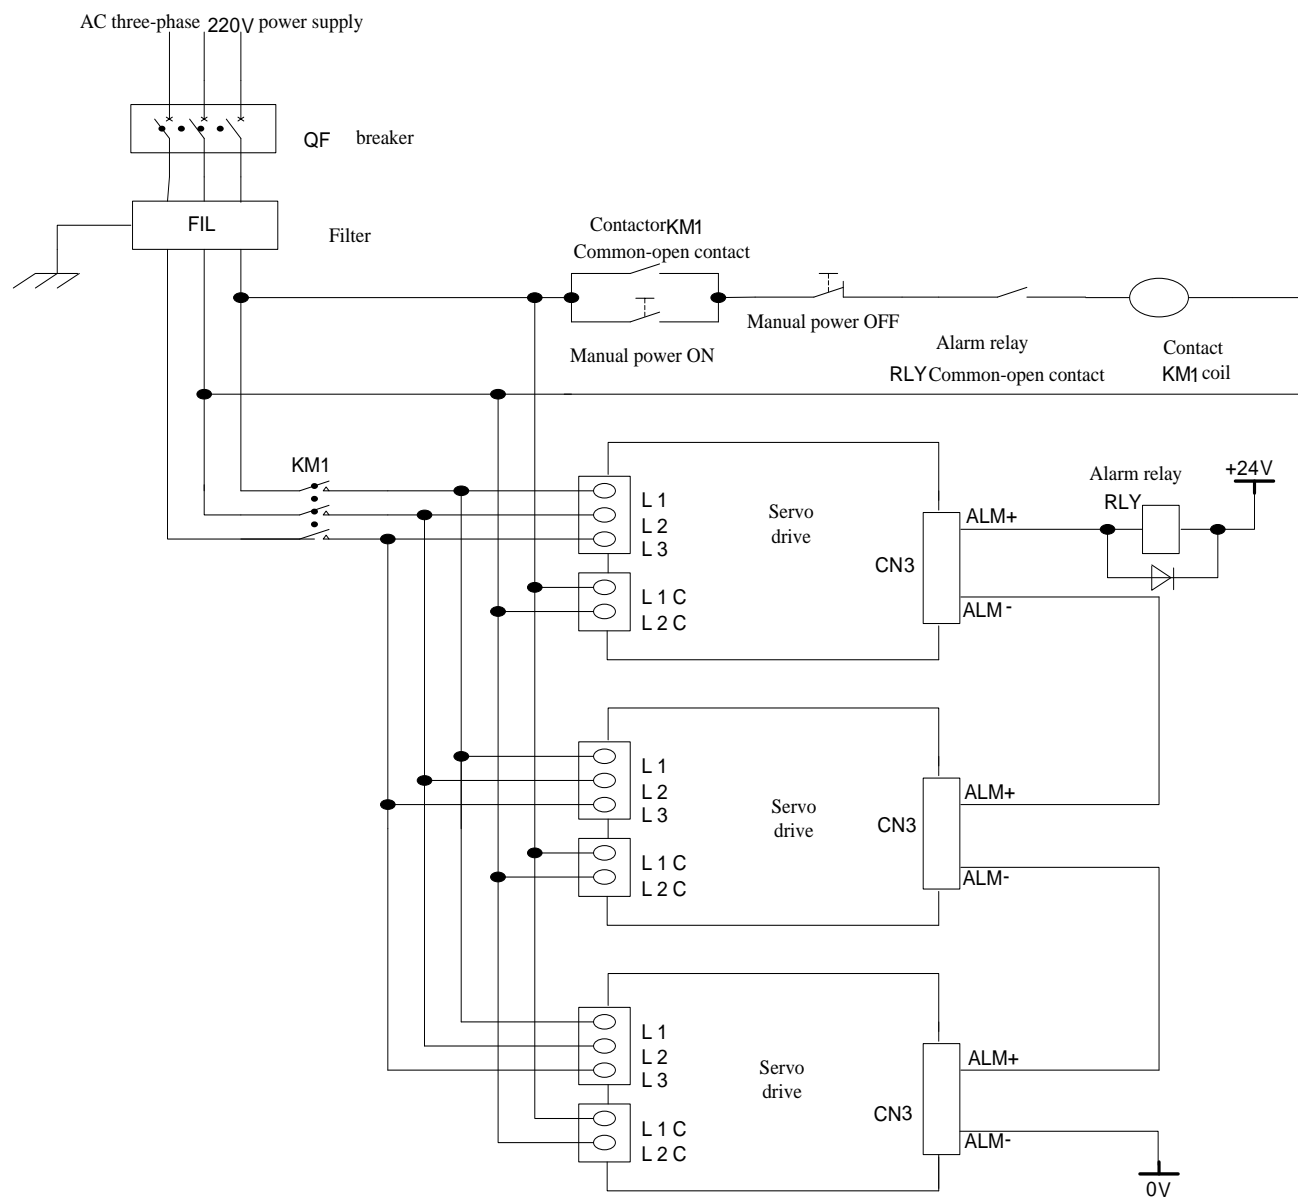


Fig 4.3.22 Wiring diagram of more than one 220V servos

2) Wiring diagram of more than one 380V servos

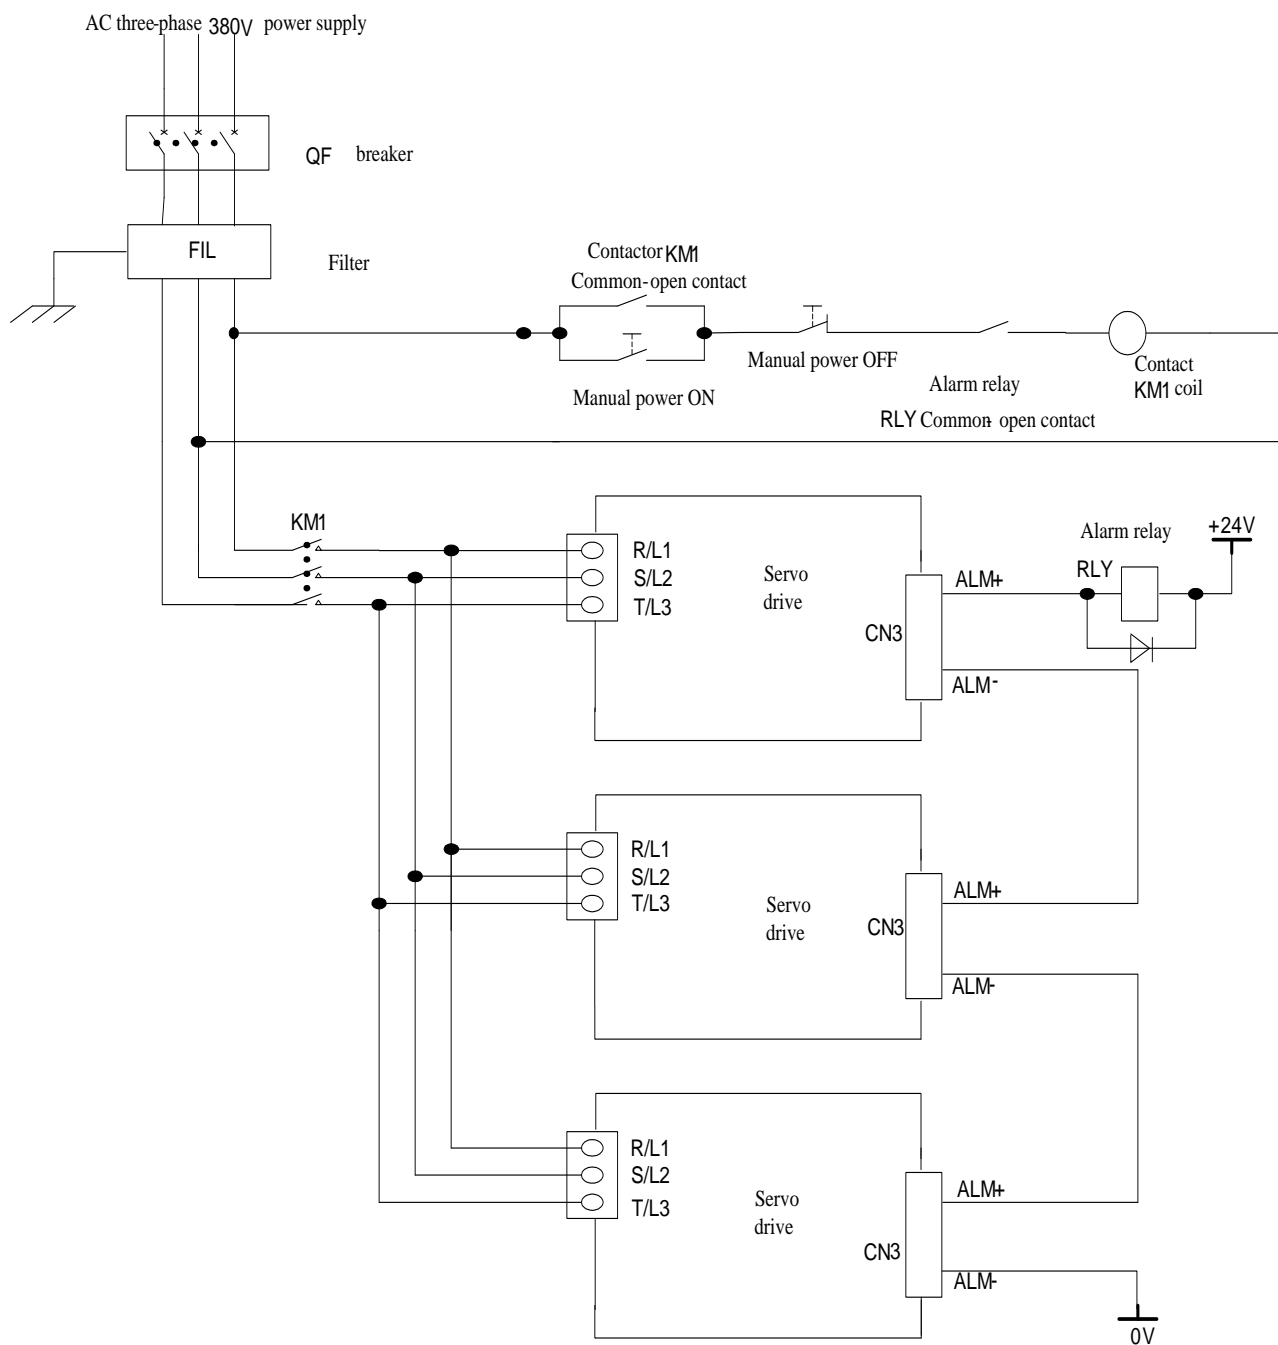


Fig 4.3.23 Wiring diagram of more than one 380V servos

4.3.8 Absolute value encoder

| Encoder type | Resolution ratio | Multi-turn data output range | Action when out of allowed range |
|-------------------------|---|------------------------------|--|
| 17 bit absolute encoder | 16-bit multi-turn 17-bit single-turn | 0 ~ +65535 | <ul style="list-style-type: none"> · Multi-turn data will turn to 0 when data exceeds upper limit (+65535) of forward direction. · Multi-turn data will turn to 0 when data exceeds lower limit (+65535) of reverse direction. |

User can read absolute position when motor is standstill by MODBUS (please refer to 10.1.3), then motor real-time position can be got by PG frequency-division output pulse count.

1. Battery usage


Please install battery cell in order to save position data of absolute value encoder.

Please purchase Parker special cable and battery box of manufacture.


Battery installations steps:

A: open cover of battery cover.

B: Install battery as below figure:

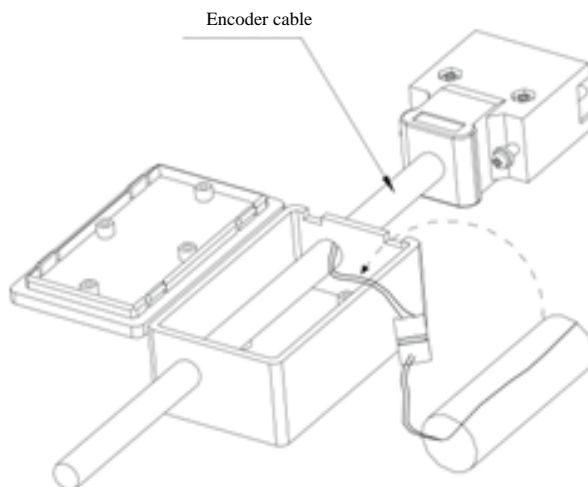

C: Close the cover of battery cell.

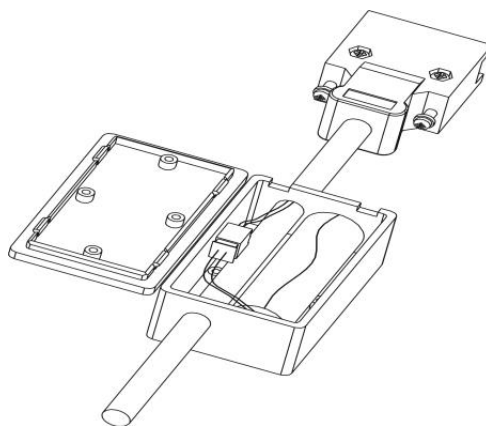

2. Battery replacement

When battery voltage drops to about 1.3V, servo drive will trip into “AL-19 (battery voltage is lower)”. Although multiturn data exists, user should change battery Immediate, otherwise multiturn data will be lost when battery voltage keeps dropping. Please change battery according to below steps:

- Please change battery when servo drive is POWER ON.
- After changing battery, reset servo drive by hold pressing “SET” key to clear “AL-19”.
- Repower on servo drive, if there is no abnormal situation, it means battery change succeeds.

Note: (1) When servo drive trips into AL-24(under voltage protection), servo drive can only be reset by setting HOME.

(2) If user wants to shield AL-24 alarm, please set So-38 to 0, reset encoder alarm by So-43, and reset servo drive by hold pressing “reset” key.

4.4 Servo drive and servo motor wiring

4.4.1 Encoder wiring

1) Absolute encoder layout

Table 4.4.1 Absolute encoder plug layout

| No. | Name | Function |
|-----|--------|--------------------------------|
| 1 | PE | Grounding |
| 2 | VCC | Encoder power |
| 3 | GND | Encoder power grounding |
| 4 | BAT(+) | Battery cathode |
| 5 | BAT(-) | Battery anode |
| 6 | PS | Absolute encoder serial signal |
| 7 | /PS | Absolute encoder serial signal |

2) Incremental encoder layout

Table 4.4.2 Incremental encoder DB15 plug layout

| No. | Name | Function |
|-----|------|------------------|
| 1 | A | Encoder A phase |
| 2 | B | Encoder B phase |
| 3 | Z | Encoder Z phase |
| 4 | U | Encoder U phase |
| 5 | V | Encoder V phase |
| 6 | /A | Encoder /A phase |
| 7 | /B | Encoder /B phase |
| 8 | /Z | Encoder /Z phase |
| 9 | /U | Encoder /U phase |

| | | |
|----|---------|-------------------|
| 10 | /V | Encoder /V phase |
| 11 | W | Encoder W phase |
| 12 | /W | Encoder /W phase |
| 13 | VCC | Encoder power |
| 14 | GND | Encoder grounding |
| 15 | — | No connection |
| | HOUSING | HOUSING |

Table 4.4.3 Incremental encoder aviation plug layout

| No. | Name | Function | Remarks |
|-----|------|-------------------------|---|
| 1 | PE | Grounding | |
| 2 | A | Encoder A phase | |
| 3 | /A | Encoder /A phase | |
| 4 | B | Encoder B phase | |
| 5 | /B | Encoder /B phase | |
| 6 | U | Encoder U phase | |
| 7 | /U | Encoder /U phase | |
| 8 | V | Encoder V phase | |
| 9 | /V | Encoder /V phase | |
| 10 | W | Encoder W phase | |
| 11 | /W | Encoder /W phase | |
| 12 | VCC | Encoder power | |
| 13 | GND | Encoder grounding | |
| 14 | Z | Encoder Z phase | |
| 15 | /Z | Encoder /Z phase | |
| 16 | KTY+ | Motor thermistor signal | 180 flange and above servo motor has 16/17 pin, other servomotor doesn't have the pin. Note: servodrive doesn't support the function. |
| 17 | KTY- | Motor thermistor signal | |

3) Resolver encoder layout

Table 4.4.4 15-core encoder aviation plug

| No. | Name | Function |
|-----|------|------------------------------|
| 1 | PE | Grounding |
| 2 | COS+ | Resolver differential signal |
| 3 | NC | No connection |


| | | |
|----|------|------------------------------|
| 4 | NC | No connection |
| 5 | COS- | Resolver differential signal |
| 6 | NC | No connection |
| 7 | NC | No connection |
| 8 | NC | No connection |
| 9 | NC | No connection |
| 10 | SIN+ | Resolver differential signal |
| 11 | NC | No connection |
| 12 | NC | No connection |
| 13 | SIN- | Resolver differential signal |
| 14 | RE1 | Resolver excitation signal |
| 15 | RE2 | Resolver excitation signal |

Table 4.4.5 10-core encoder aviation plug

| No. | Name | Function |
|-----|------|------------------------------|
| 1 | RE1 | Resolver excitation signal |
| 2 | RE2 | Resolver excitation signal |
| 3 | COS+ | Resolver differential signal |
| 4 | COS- | Resolver differential signal |
| 5 | SIN+ | Resolver differential signal |
| 6 | SIN- | Resolver differential signal |
| 7 | KTY+ | Motor thermistor signal |
| 8 | KTY- | Motor thermistor signal |
| 9 | PE | Grounding |
| 10 | NC | No connection |


4.4.2 Power cable of servo drive and servo motor

a) 4-core power AMP plug

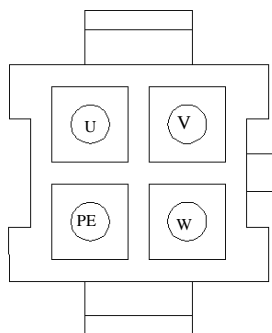


| Name | Cable color | Function |
|------|--------------------|-------------|
| U | Yellow | Drive input |
| V | Blue | Drive input |
| W | Red | Drive input |
| PE | Yellow-green/black | Grounding |

b) 4-core power aviation plug

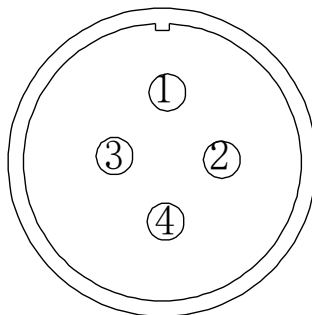


| No. | Name | Function |
|-----|------|-------------|
| 1 | PE | Grounding |
| 2 | U | Drive input |
| 3 | V | Drive input |
| 4 | W | Drive input |

c)Braking cable plug

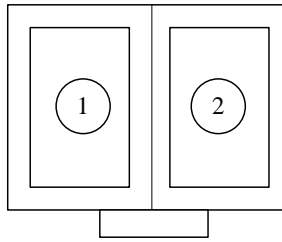

| No. | Name | Function |
|-----|------|----------|
| 1 | + | DC 24V + |
| 2 | | DC 24V - |

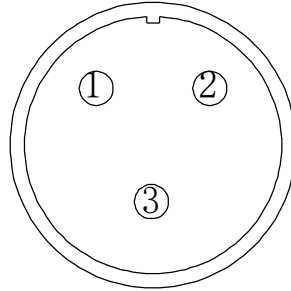

| Plug No. | Name | Function |
|----------|------|----------|
| 1 | + | DC 24V + |
| 2 | - | DC 24V - |
| 3 | — | None |

V. Operation and parameters

5.1 Keypad description

5.1.1 Instruction of keypad

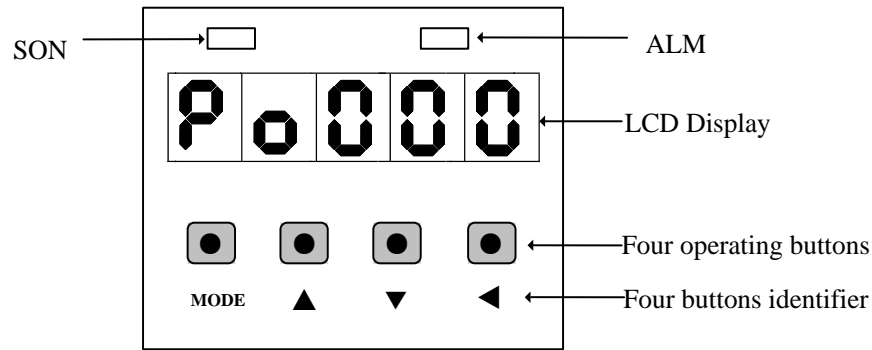


Fig 5-1-1 Digital keypad

| Identifier | Name | Function |
|-------------|--------------------|--|
| SON | Charge LED (green) | Indicating that Servo is on. |
| ALM | Charge LED (red) | Indicating that malfunction occurs. |
| PANAL | LCD Display | The LCD display (5-digit, 7-step display panel) shows the monitor codes, parameter settings and operation values of the AC servo drive. |
| MODE | Mode key | 1 Switching between function groups. 2 Displaying malfunction codes in turn. |
| ▲ (UP) | UP key | 1 Pressing UP key to increase the display value. 2 Continuously pressing UP key for 0.5s to increase setting value slowly. 3 Continuously pressing UP key for 1s to increase setting value rapidly. 4 Used to forward start in jogging run. |
| ▼ (DOWN) | DOWN key | 1 Pressing DOWN key to decrease the display value. 2 Continuously pressing UP key for 0.5s to decrease setting value slowly. 3 Continuously pressing UP key for 1s to decrease setting value rapidly. 4 Used to reverse start in jogging run. |
| ◀ (SET) | shift/set key | 1 Continuously pressing this key for 0.5s to enter into parameter setting mode 2 Pressing this key can move the cursor to the left and then change parameter settings (blinking digits) by using arrow keys. 3 Continuously pressing this key for 0.5s to confirm and set current value into the parameter. 4 Continuously pressing this key for 2s to reset the malfunction. |

5.2 Keypad operating procedure

5.2.1 Switchover between parameter section

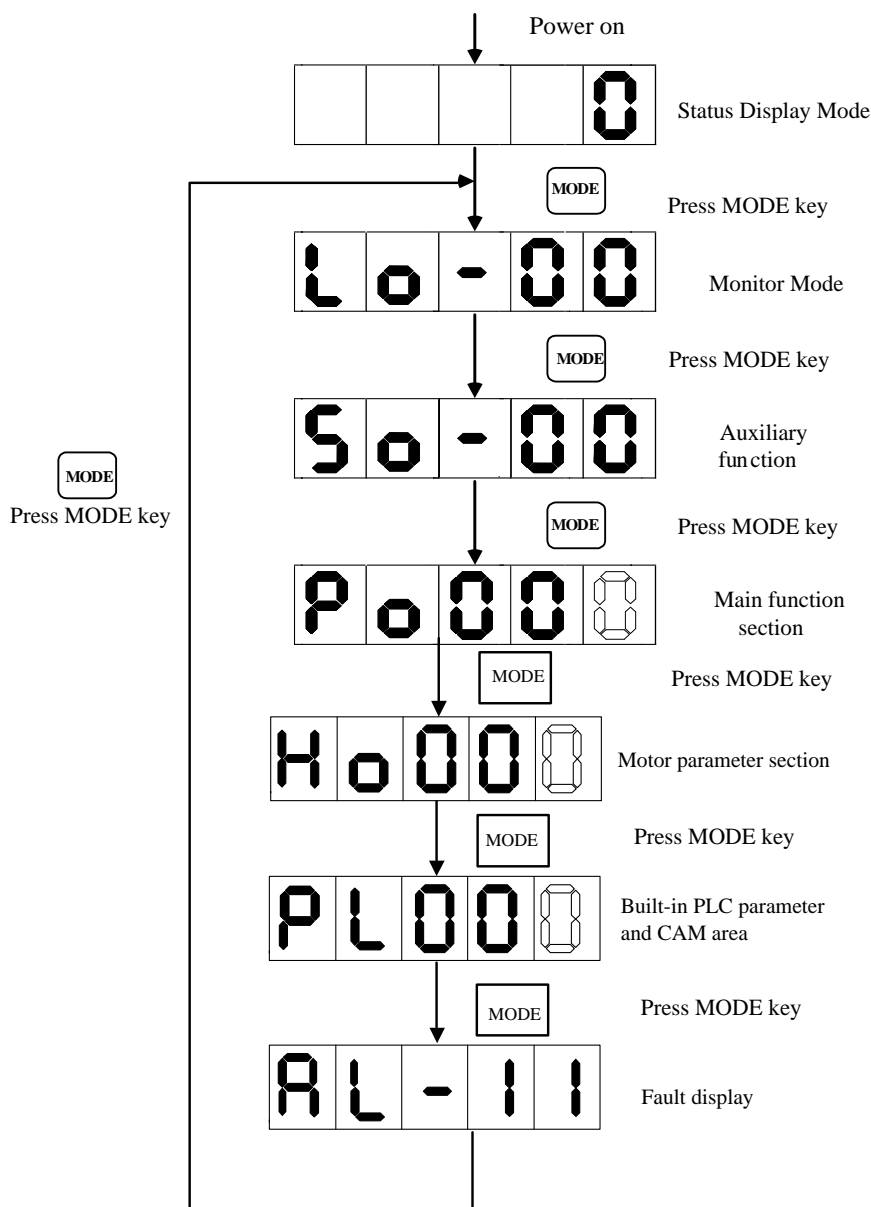



Fig 5-2-1 Switchover between parameter section

After main circuit is powered on, servo status display So-09 is displayed in the keypad, the Mfr's value of which is servo output speed. The display content will switch among monitor function section (Lo-□□), auxiliary function section (So-□□), main function section (Po□□), motor parameters section (Ho□□) and high-speed counting

section (PL□□□) by pressing MODE key.

If fault occurs, current fault code will be displayed circularly.

 5.2.2 Parameters instructions



The representation method in this manual is Po001.

The hollow digitron represents blinking operating digits, which is the adjustable digits.



In this manual, three parameters modes is adopted to introduce the parameters.



□□□□□ represents five operating digits in keypad.


■ one parameter mode (if no special instruction, the parameters belong to this mode)

□□□□□one parameter mode means that five digits represent one parameter.

Q

For example:

 Ex 1 : Po113 internal speed given 1 is 1000r/min, the display content is:



(The unit is 0.1 r/min) The quoting mode is Po113=1000.

Ex 2 : Po114 internal speed given 2 is -1000r/min, the display content is:



(The unit is 0.1 r/min) The quoting mode is Po114=-1000.

Note: if all decimal points are lit, the current value is negative value.

■ Two parameters mode

 
d □□□□Two parameters mode means every two digits except the first digit is an adjustable parameter digit.

Y X

X and Y represent an adjustable parameter digit separately.

For example:

Ex: Po407 CN3-5 terminal function is alarm-reset. The display content is:



The quoting mode is Po407.X=1.

■ Four parameters mode

 
b □□□□Four parameters mode means each digit except the first digit is an adjustable parameter digit.

D C B A

A, B, C and D represent an adjustable parameter digit separately.

Ex: at position mode, the pulse command type of pulse+pulse is selected, then the last digit of Po300 is set to 1.

The display content is:





The quoting mode is Po300.A=1.

■ Five parameters display

□□□□□ The first digit means current page, the other digits mens current value.

E D C B A

For example: set value of HOME, Po136=131072, the actual display content is as below:

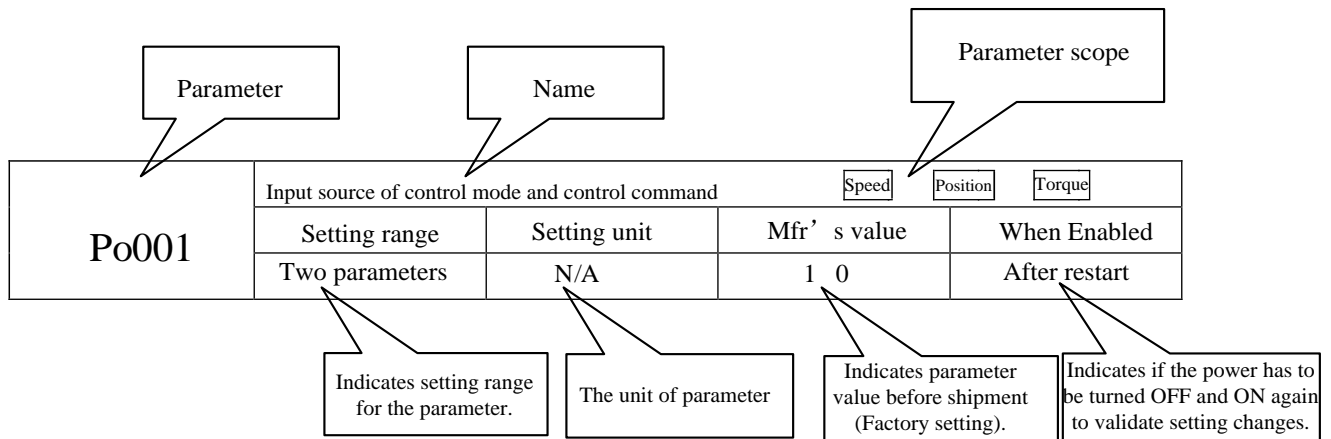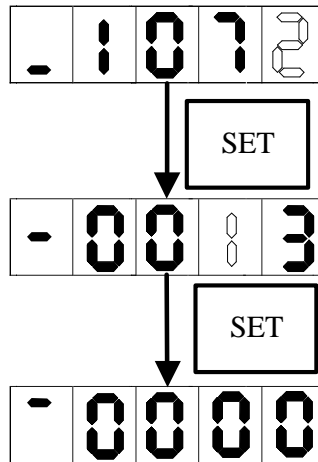

Note: parameter scope means control mode for which the parameter is available

Speed means speed mode; Position means position mode; Torque means torque mode.

5.3 keypad operating procedure

5.3.1 Example of monitor function parameter

Take usage of Lo-14(DI8~DI5 status display) as the example:

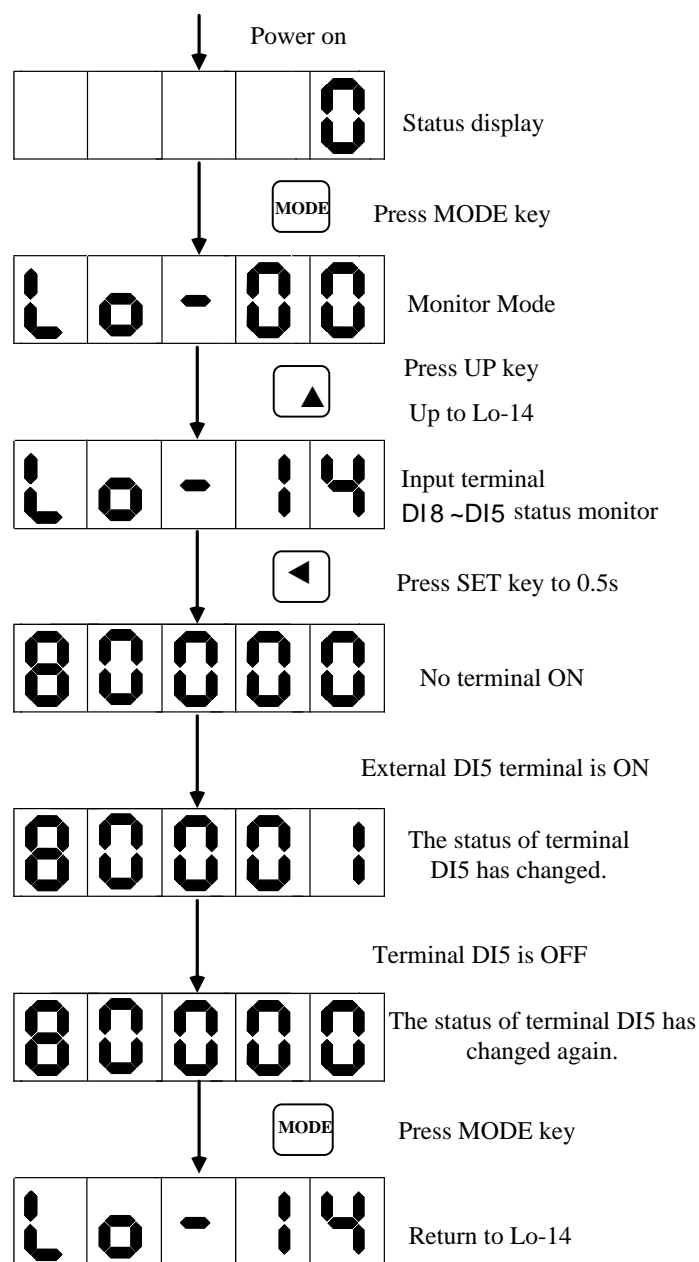


Fig 5-3-1 Monitor terminal status mode

5.3.2 Example of auxiliary parameters usage

Take usage of So-14 (JOG run) as the example:

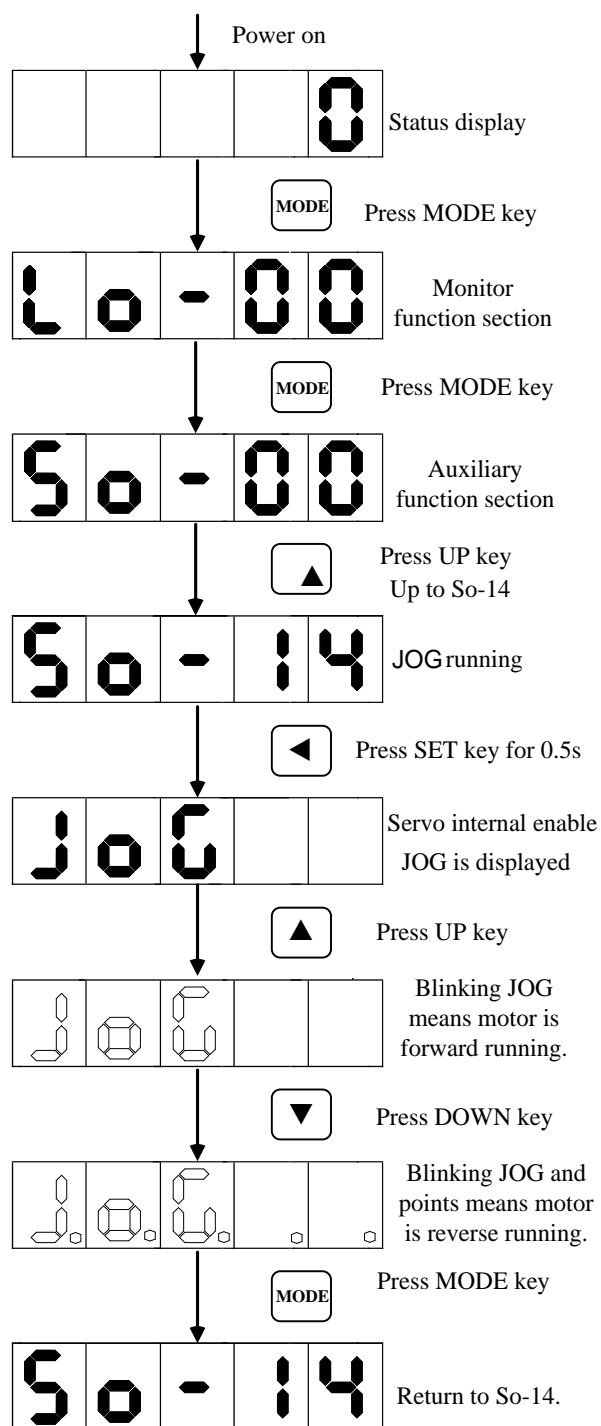


Fig 5-3-2 Jog run

5.3.3 Parameter setting

Take setting parameter Po001 as the example:

When Po001.Y=0, set motor rotating clockwise to forward direction. When Po001.X=3, analog speed mode is selected.

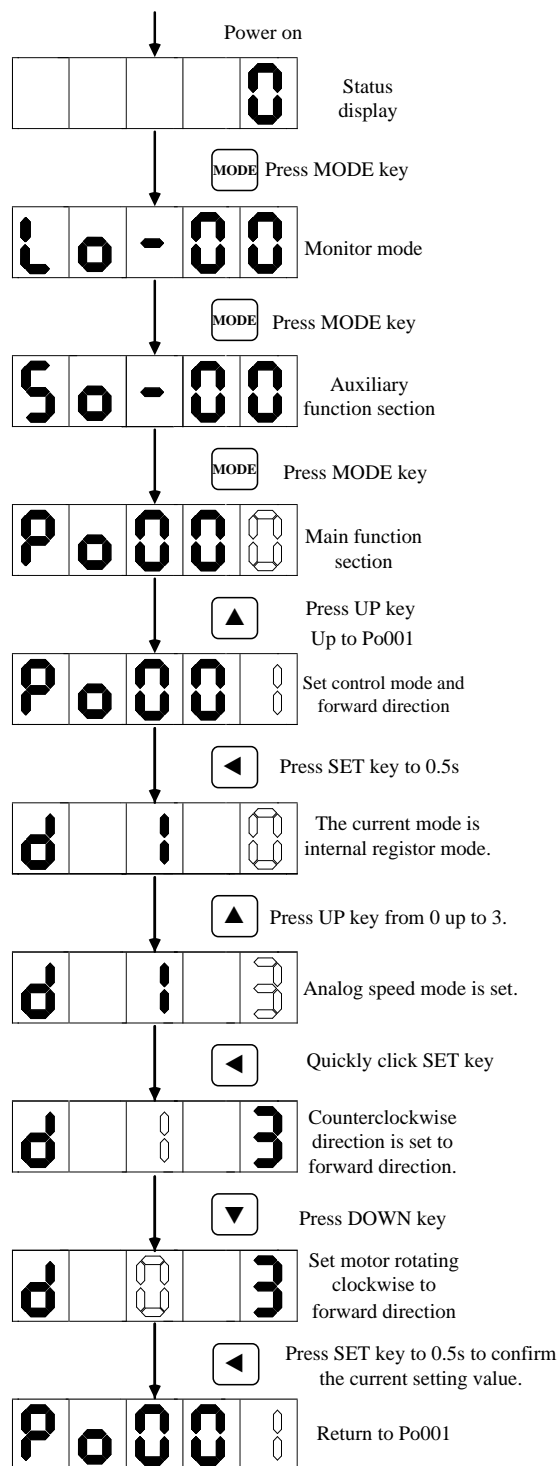


Fig 5-3-3 Parameter setting procedure

If function code digits are longer than 5 digits, the setting method is as below:

Take setting Po123 to 100000000 as example:


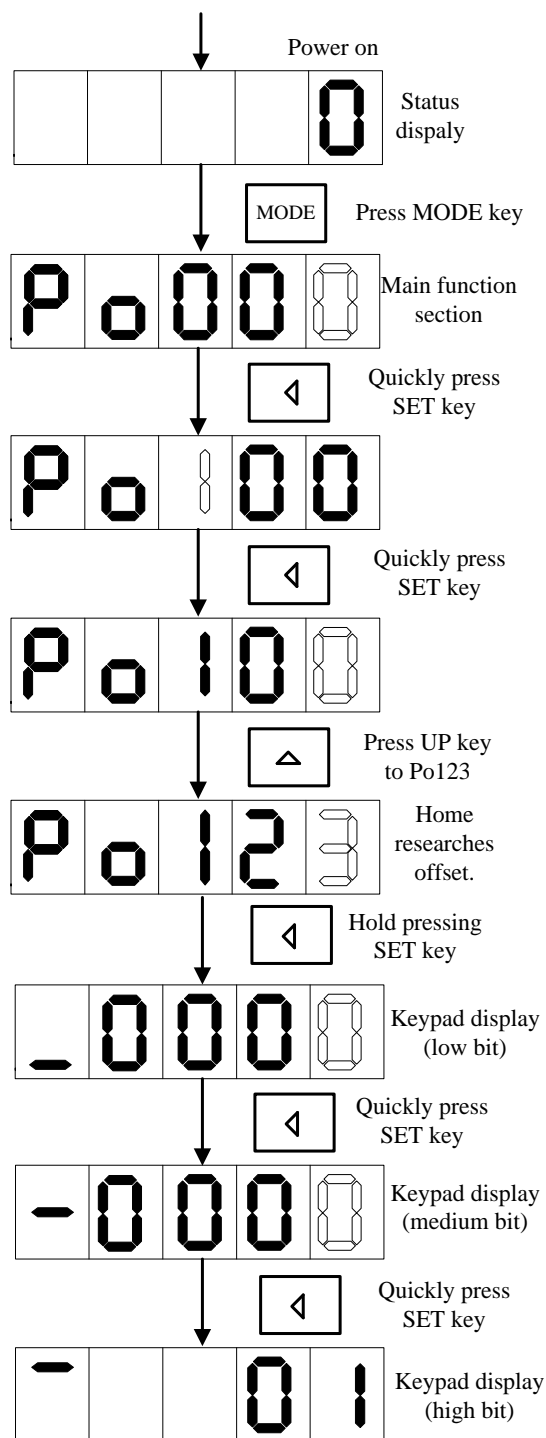


Fig 5-3-4 Parameter setting procedure

VI Run

Servo system includes servo drive, servo motor and encoder.

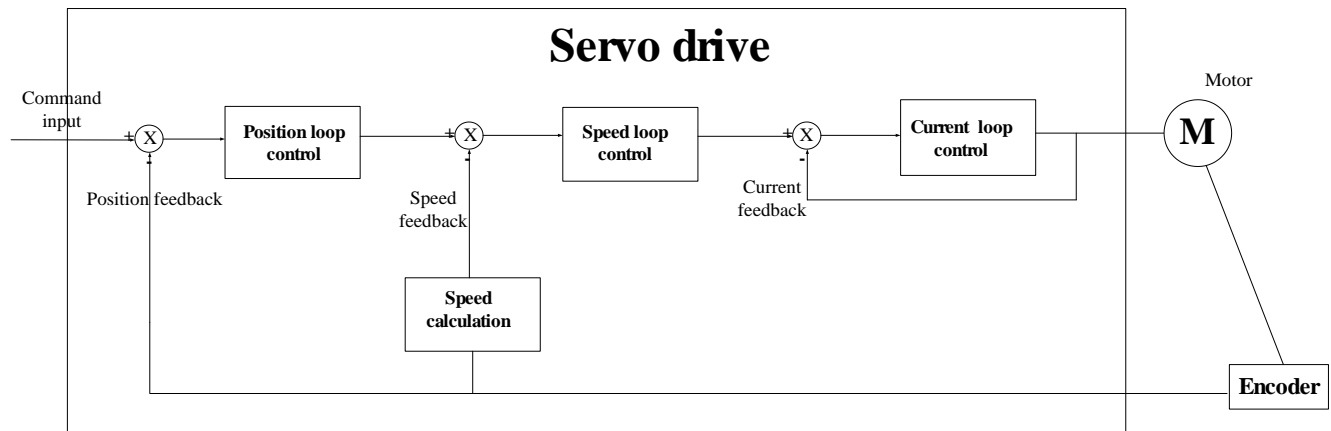


Based on the command modes and running characteristics, servo drives supports three running mode, position control, speed control and torque control.

In the position control mode, motor target position is confirmed by position command total numbers. The position control mode strictly controls the position and speed, and is often used in the positioning device. It is the most commonly used mode of the servo drive, applicable to the mechanical arm, mounter, engraving and milling machine, and computer numerical control (CNC) machine tool.

In the speed control mode, the speed is controlled by AI setting, DI setting, or communication setting. It is often used in scenarios with constant speed. For example, for the analog engraving and milling machine, the host controller uses the position mode, and the servo drive uses the speed control mode.

In the torque control mode, the torque is changed by changing the analog setting or the address value by means of communication. This mode is mainly applied to the winding and unwinding devices with strict tension requirements.

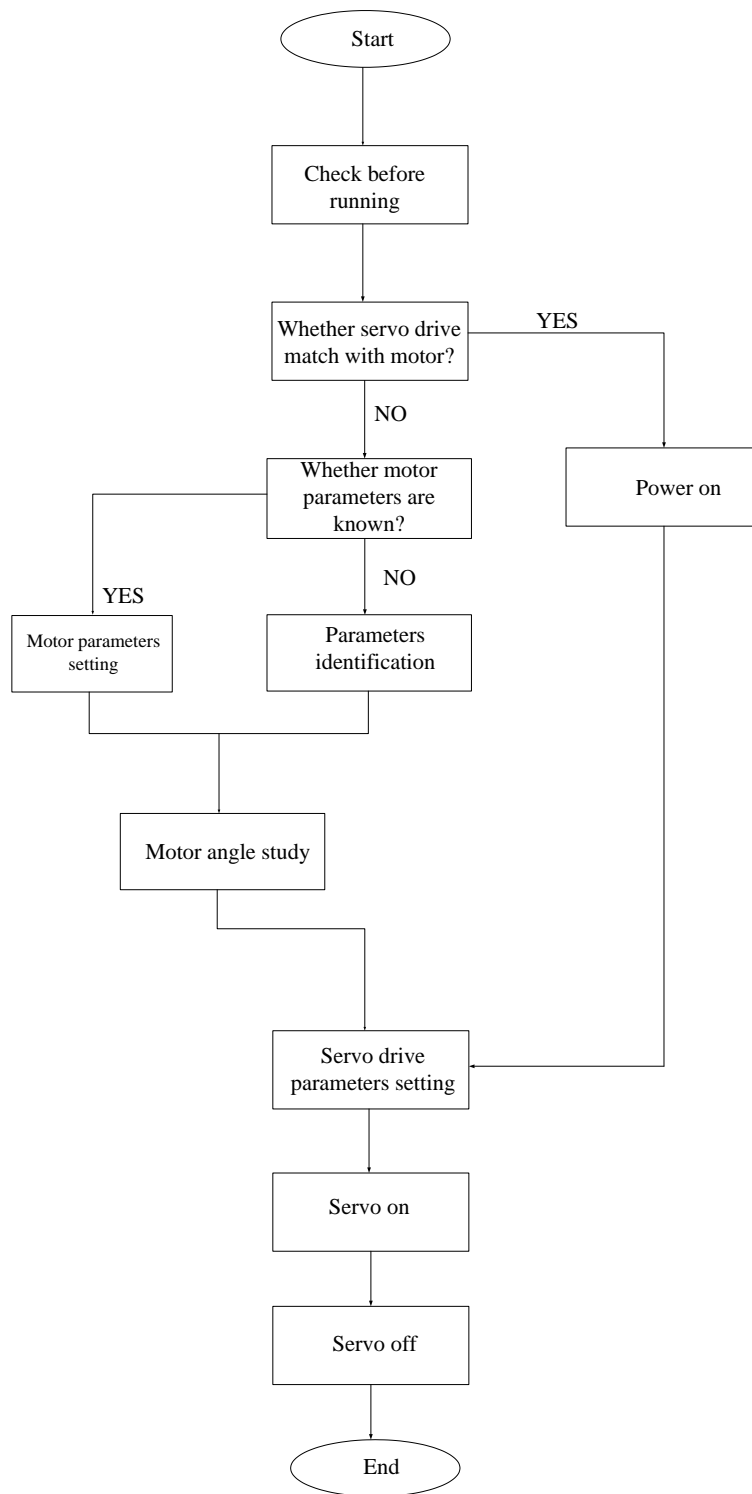

Note:

Please make sure servo motor runs normally without load, then connect load to motor.

After a servo motor is changed, if user does not know encoder electric angle and whether motor phase sequence is correct, user can make the servo motor operate normally by using electric angle indication function. Before electric angle indication, please make sure the following steps:


- (1) Motor actual power.
- (2) Make sure servomotor encoder cable is connected correctly.
- (3) Make sure servomotor is connected to zero.
- (4) Make sure servo is in the OFF status.

When So-25=3, please input motor actual power to servo drive, then indentify parameters.

| | | | | |
|-------|--|--------------|-------------|---------------------|
| Ho011 | Motor power Speed Position Torque | | | |
| | Setting range | Setting unit | Mfr's value | When enabled |
| | 1~30000 | 0.01KW | — | Effective Immediate |

| | | | | |
|-------|---|--------------|-------------|---------------------|
| So-25 | Electric angle identification Speed Position Torque | | | |
| | Setting range | Setting unit | Mfr's value | When enabled |
| | 0~4 | N/A | 0 | Effective Immediate |
| | 0: no motor parameter identification | | | |
| | 1: indentify motor resistor, inductance, pole pairs numbers and encoder installation angle | | | |
| | 2: lock motor shaft | | | |
| | 3:indentify motor resistor, inductance and estimate motor EMF | | | |
| | 4: indentify motor resistor, inductance, pole pairs numbers, motor EMF and encoder installation angle | | | |

When So-25 is set to 1, enter So-14 jogging control mode (refer to 6.1.5).System starts automatic testing , panel displays flashing “TEST”. After indentification is finished, panel will return to So-14 interface, and electrical angle is saved in Ho018. If line sequence error occurs, panel displays AL-05, please stop the motor and adjust the line sequence before next operation.

 Attention: When line sequence error occurs, reverse two phases, and then repeat the electrical angle identification.

6.1 Basic parameters setting

6.1.1 Before running

Make sure that all wiring has been completed.

| Wiring | | |
|---------------------------|--|--|
| 1 | Connect L1 (R)、L2 (S)、L3 (T) of servo drive to main circuit power. | |
| 2 | Connect U/V/W of servo drive to U/V/W of servo motor well. | |
| 3 | Check all control signal cables are connected correctly, and check the brake, overtravel and the other protective functions for correct operation. | |
| 4 | Servo drive and servo motor must be grounded reliably. | |
| 5 | When external resistor is used, please remove short wires between B2 and B3. | |
| Environment and machinery | | |
| 1 | There is no iron dust or foreign matter in the servo drive. | |
| 2 | There is no inflammable substance nearby servo drive and external braking resistor. | |
| 3 | Servo motor is reliably connected to mechanical equipment. | |

6.1.2 Power on

1) Power on control circuit and main circuit.

Please connect power to L1 (R)、L2 (S)、L3 (T) .

- Power on control circuit and main circuit, if bus voltage indicator shows no abnormal, and “0” is displayed in the keypad, it indicates servo drive is enabled.
- If “AL-xx” is displayed in the keypad, please refer to Chapter 9.

2) Set S-ON to OFF status.

Please set DI terminal of servo drive to FunIN. 1: S-ON, and make sure the DI terminal is valid. Then set DI terminal to invalid status by PC/PLC or external switch.

6.1.3 Parameters setting

1) Motor parameters

The parameters of the motor include: rated voltage, rated current, encoder lines, rated rotary speed , numbers of pole pairs ,phase resistance, inductance, Movement of inertia, back EMF, line voltage ,etc. Please confirm that the parameter's setting value is identical to the motor's parameter to ensure motor normal operation, in case of burning servo system out. When So-48 is set to 1,the motor's parameters can be changed .The parameter functions are as following:

| Motor paramet ers | Motor parameter setting | | | | |
|-------------------------|-------------------------|---|---------------------------------|---|------------------|
| | | | speed | position | torque |
| | Function Code | Function Definition (unit) | Setting range | Function | When enabled |
| | Ho000 | Rated voltage (V) | 0~30000 | rated voltage | Effect Immediate |
| | Ho001 | Rated current (0.1A) | 0~30000 | rated current | Effect Immediate |
| | Ho002 | Max rotary speed(r/min) | 0~32000 | Max rotary speed | Effect Immediate |
| | Ho003 | Rated rotary speed (r/min) | 0~32000 | rated rotary speed | Effect Immediate |
| | Ho004 | Pole-pairs (pair) | 1~30 | pole-pairs | Effect Immediate |
| | Ho005 | Phase resistance ($10^{-3}\Omega$) | 0~65535 | phase resistance | Effect Immediate |
| | Ho006 | D-axis inductance ($10^{-6}H$) | 0~65535 | D-axis inductance | Effect Immediate |
| | Ho007 | Q-axis inductance ($10^{-6}H$) | 0~65535 | Q-axis inductance | Effect Immediate |
| | Ho008 | Back EMF line voltage effective value (0.1V/1000 r/min) | 0~30000 | back EMF line voltage effective value | Effect Immediate |
| | Ho012 | Motor rotary inertia ($10^{-6}Kg\cdot m^2$) | 0 ~ 2147483647 | motor rotary inertia | Effect Immediate |
| | Ho016 | Encoder resolution (ppr) | 0 ~ 2147483647 | Encoder resolution | Effect Immediate |
| | Ho018 | Encoder installation angle(pulse numbers) | -2147483647 ~ +2147483647 | Encoder installation angle(pulse numbers) | Effect Immediate |
| | Ho121 | Over-load sensitivity | 1~30000 | over-load sensitivity | Effect Immediate |


Motor parameters can be set according to the table, in addition, pay attention to the following points in use:

- (1) When So-48=1, the H group parameters can be set. After electrical degree identification is finished, the installation angle of the encoder is saved in Ho011. Please refer to chapter 6 for operating method of electrical degree identification.
- (2) Different motor parameter corresponds to different servo motor, make sure the parameters are in accordance with the motor's before using.
- (3) Changing Ho121 can advance overload protection of servo motor or put it off. The larger the Ho121, the longer the overload protection time.
- (4) Motor parameters are set by manufacturer. Please do not change it by yourself. If system is damaged because user sets wrong motor parameter or changes non-standard motor, user should take the consequences.

2) Switching the Servo motor Rotation Direction

The default setting for “forward rotation” is counterclockwise as viewed from the servo motor shaft. The mfr's value of Po001.Y is 1. When Po001.Y is set to 0, the forward rotation is clockwise as viewed from the servo motor shaft.


| | |
|--|---|
| Po001.Y=1, forward rotation is counterclockwise. | Po001.Y=0, forward rotation is clockwise. |
|--|---|

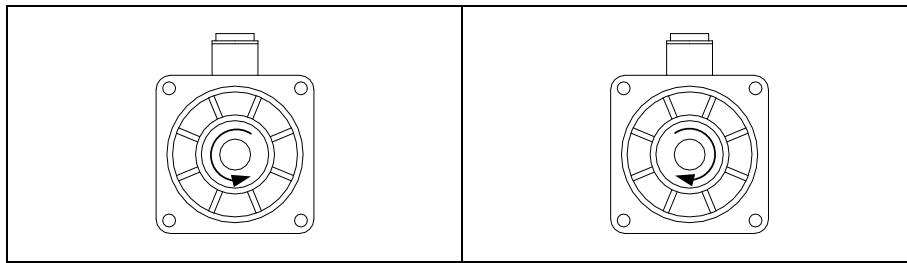

d. Holding brake setting

The holding brake is used when the servo motor controls a vertical shaft. The servo motor with brake prevents the movable part from shifting due to gravity when the power supply fails. The holding brake function is only suitable for servo motor with brake.

a)Wiring of holding brake

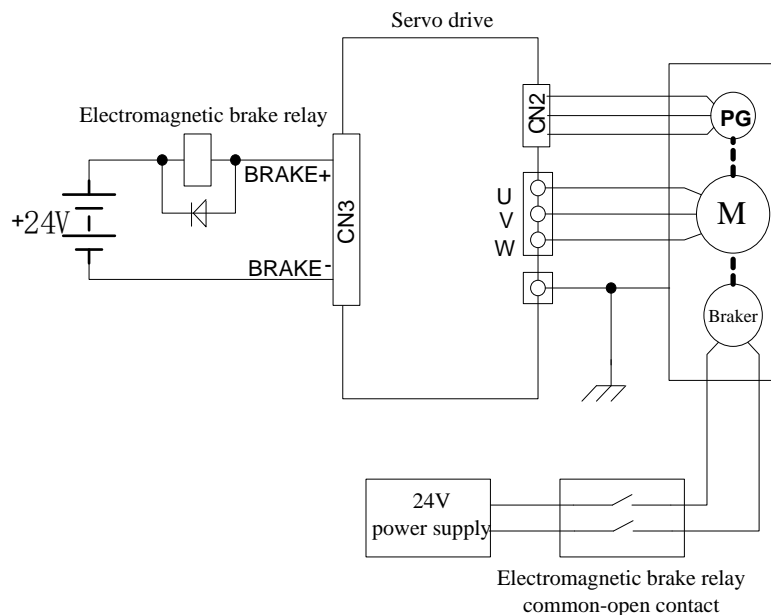

Note:

1. The internal electromagnetic is only valid when servo is in the stop status.
2. The coil of electromagnetic has polarity, please distinguish them when wiring.
3. The power supply of electromagnetic is supplied by users. The voltage is 24VDC ($\pm 10\%$) and the current should be selected according to nameplate of brake. And electromagnetic and control signal are forbidden using one power supply.

b)Braking parameters setting

| Signal name | Code | Terminals | Remarks |
|---------------------------------|-------|-------------------|---|
| Electromagnetic braking control | BRAKE | BRAKE+ BRAKE - | Electromagnetic braking control output. |

Braking work sequence is different for different drive status, which is divided into normal work status and power-off status.

1) Servo drive works in normal status.

Normal status includes servo motor static status and servo motor running status.

- Static status: motor actual speed is lower than 20r/min.
- Running status: motor actual speed is higher than 20r/min.

a) Braking when servo motor stops

| | | | | |
|-------|---|--------------|-------------|---------------------|
| So-02 | Delay time for SERVO OFF Speed Position Torque | | | |
| | Setting range | Setting unit | Mfr's value | When enabled |
| | 0~500 | 10ms | 0 | Effective Immediate |

| | | | | |
|-------|---|--------------|-------------|---------------------|
| So-16 | Speed threshold of electromagnetic braking Speed Position Torque | | | |
| | Setting range | Setting unit | Mfr's value | When enabled |
| | 0~30000 | 0.1r/min | 1000 | Effective Immediate |

Note: the value of So-16 should not be set too high, please use the Mfr's value.

When servo motor stops or the motor speed is lower than So-16, if enable signal is OFF and electromagnetic braking signal is invalid, after the time set by So-02, servo will be in the disable status.

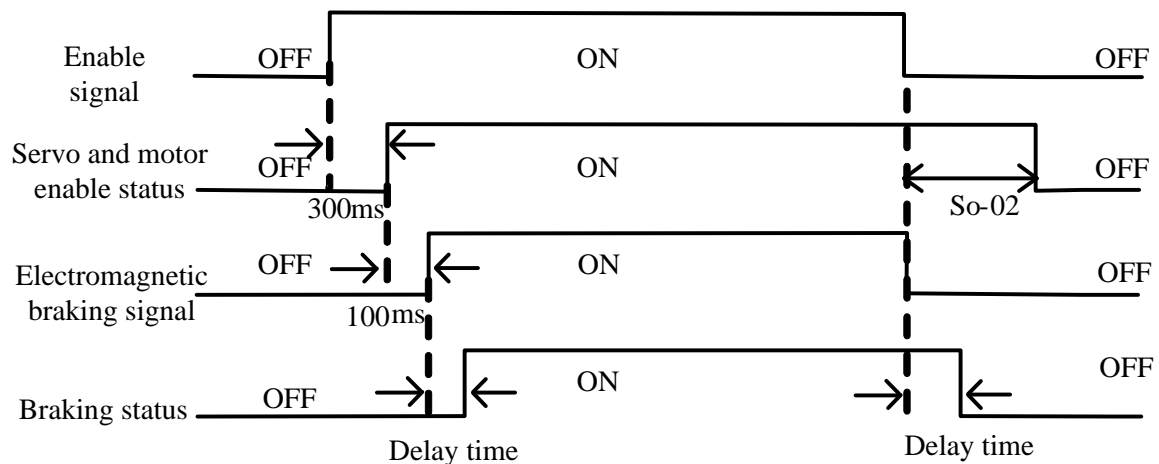


Fig 6-3-1 Electromagnetic brake sequence diagram

Note: if some alarms occur, servo will turn to disable status, So-02 will be invalid.

b) Braking when servo motor is rotating.

| | | | | |
|-------|--|--------------|-------------|---------------------|
| So-03 | Delay time for electromagnetic braking stop Speed Position Torque | | | |
| | Setting range | Setting unit | Mfr's value | When enabled |
| | 10~100 | 10ms | 50 | Effective Immediate |

When servo motor is rotating and speed is higher than So-16, after alarm occurs, servo drive will become disable status Immediate, servo motor will free stop. When any of below items occurs, braking signal will be closed:

1. Speed decreases to setting value of So-16.
2. Servo drive becomes disabled status, and after delay time of So-03.

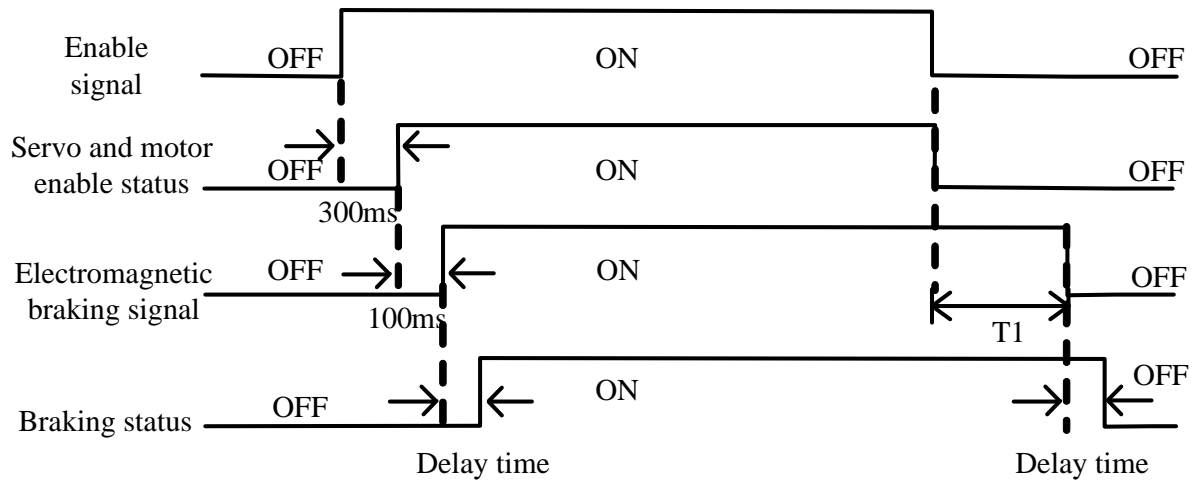


Fig 6-1-4 Electromagnetic brake sequence diagram

Note: after servo enabled is off, T1 is the lower value of So-03 and the time taken by speed arriving to setting value of So-16.

6.1.4 Setting the Overtravel Limit Function

Overtravel limit function prohibit movable machine parts from exceeding the allowable range of motion. A limit switch, a photoelectric switch or encoder multi-turn number should be adopted for detection.

1. Hardware overtravel protection function

As soon as the servo drive detects the on/off signal from the limit switch, it will force the speed in the present direction to turn to 0, but it does not work for the speed of opposite direction.

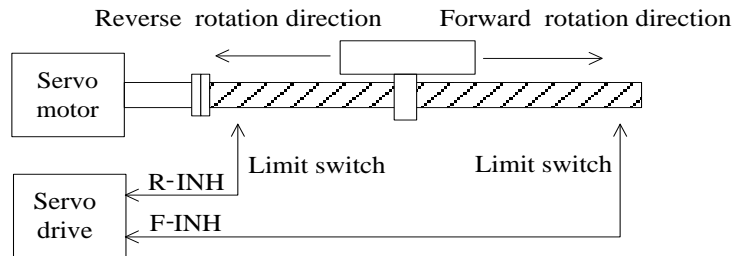


Fig 6-1-5 Overtravel Limit Function

(1) Input signal

| Signal name | Code | Default terminal | Remarks |
|------------------------|-------|------------------|------------------------------------|
| Forward run prohibited | F-INH | CN3-9 | Forbidden servo drive forward run. |
| Reverse run prohibited | R-INH | CN3-8 | Forbidden servo drive reverse run. |

(2) Setting related parameter

| | | | | |
|-------|---|--------------|-------------|---------------------|
| So-17 | Forward run prohibited Speed Position Torque | | | |
| | Setting range | Setting unit | Mfr's value | When enabled |
| | 0: Prohibited invalid 1: Prohibited valid | N/A | 1 | Effective Immediate |

| | | | | |
|-------|---|--------------|-------------|---------------------|
| So-18 | Reverse run prohibited Speed Position Torque | | | |
| | Setting range | Setting unit | Mfr's value | When enabled |
| | 0: Prohibited invalid 1: Prohibited valid | N/A | 1 | Effective Immediate |

(1) Enabled the overtravel signal

When So-17=1, So-18=0 and external control terminals with the function of F-INH and R-INH are allocated, the overtravel function is enabled. For security, the default setting of So-17 and So-18 are prohibited valid and the signal input type is common-close contact. So even malfunction occurs, the overtravel protection is still valid.

(2) Disable the overtravel signal

When So-17=0 and So-18=0, the overtravel function is disable. If the input terminals with the function of F-INH and R-INH are not allocated, the overtravel function is disabled.

(3) Setting the stop torque for overtravel

| | | | | |
|-------|---|--------------------|-------------|---------------------|
| Po207 | Forward/reverse run prohibited And emergency stop torque torque | | | |
| | Setting range | Setting unit | Mfr's value | When enabled |
| | 1~300 | 1% of rated torque | 100 | Effective Immediate |

When forward/reverse run prohibited signal or emergency stop signal is valid, the max value of instantaneous reverse stop torque of servo motor is limited within the range of this value, and this value is an absolute value, it works on both forward run and reverse run.

| | | | | |
|-------|---|--------------|-------------|---------------------|
| Po216 | Forward/reverse run prohibited torque setting torque | | | |
| | Setting range | Setting unit | Mfr's value | When enabled |
| | 0~1 | N/A | 1 | Effective Immediate |

When Po216=0, the actual reverse limit torque is the setting torque in Po207;

When Po216=1, torque limit value is 0.

2. Software overtravel protection function

Once encoder multiturn position is detected to exceed setting range, alarm will occur. Take “Home” as initial position, servo motor can move between movement range set by forward/reverse. If servo motor exceeds movement range, servo drive will trip into AL-27.

The related parameters are as below:

| | | | | |
|-------|---|--------------|-------------|---------------------|
| Po140 | Forward running range pulse when overtravel protection Speed Position Torque | | | |
| | Setting range | Setting unit | Mfr's value | When enabled |
| | 0~2147483647 | N/A | 0 | Effective Immediate |

| | | | | | | |
|-------|---|--------------|-------------|---------------------|----------|--------|
| Po142 | Forward running range multi-loop numbers when overtravel protection | | | Speed | Position | Torque |
| | Setting range | Setting unit | Mfr's value | When enabled | | |
| | 0~32000 | N/A | 1000 | Effective Immediate | | |
| Po143 | Reverse running range pulse when overtravel protection | | | Speed | Position | Torque |
| | Setting range | Setting unit | Mfr's value | When enabled | | |
| | 0~2147483647 | N/A | 0 | Effective Immediate | | |
| Po145 | Reverse running range multi-loop numbers when overtravel protection | | | Speed | Position | Torque |
| | Setting range | Setting unit | Mfr's value | When enabled | | |
| | 0~32000 | N/A | 1000 | Effective Immediate | | |
| So-39 | Overtravel limit function | | | Speed | Position | Torque |
| | Setting range | Setting unit | Mfr's value | When enabled | | |
| | 0: Invalid 1: Valid 2: stop but no alarm | N/A | 1 | Effective Immediate | | |

- (1) First, set mechanical origin referring to 6.4.9, take mechanical origin as initial position, set forward and reverse running range.
- (2) Set So-39=0, software overtravel limit is invalid.

6.1.5 Jog operation procedure

Servo is at a special speed mode while jogging operation.

1) Panel jog function

| Step | Content | Remarks |
|------|---|---|
| 1 | Check wiring of main circuit, check whether power supply of control circuit (L1C, L2C) and main circuit (R/L1, S/L2, T/L3) is powered on. | L1C and L2C should not be connected for 380 V servo drive |
| 2 | Press MODE key, to enter auxiliary function section So-□□ | Please refer to 5.2.1 |
| 3 | Press UP or DOWN key to find So-13 (Jog speed) | The Mfr's value is 100r/min |
| 4 | Press SET key for 0.5s to enter setting interface, to set safety value of jog speed by press UP or DOWN key. | Note: the unit of speed is 0.1r/min. |
| 5 | Press SET key for 0.5s to confirm the setting speed, and return to So-13. | |
| 6 | Press UP key to display So-14 (jog run) | |
| 7 | Press SET key for 0.5s to jog run. | JOG is displayed, servo is enabled. |
| 8 | Press UP key to jog forward run; press DOWN key to jog reverse run. | To confirm rotating direction. |
| 9 | Press MODE key, and servo is OFF, to quit JOG mode. | |

| | | | | |
|-------|--|--------------|-------------|---------------------|
| So-13 | Jog speed setting | | | |
| | <div>Speed</div> <div>Position</div> <div>Torque</div> | | | |
| | Setting range | Setting unit | Mfr's value | When enabled |
| | 0~30000 | 0.1r/min | 1000 | Effective Immediate |

Note: 1. Internal jog mode is a special speed mode, the jog speed is related to deceleration time Po109, Po110.

2: Internal jog mode is not limited by forward/reverse prohibited, please make sure it is safe.

3: Please refer to 5.3.3 about procedure of internal jog operation.

2) Terminal jog function

| Signal name | Name | Default terminal | Function |
|----------------------|------|------------------|---|
| Terminal forward jog | JOGU | None | Forward jog is realized by controlling terminals. |
| Terminal reverse jog | JOGD | None | Reverse jog is realized by controlling terminals. |

Note: The priority of jog mode is higher than the other modes.

1) When servo is OFF and terminal jog signal is valid, servo will run at jog mode.

2) If terminal jog signal is valid at any modes, servo will enter jog mode

6.1.6 Timing sequence control

(1) Timing sequence at power on

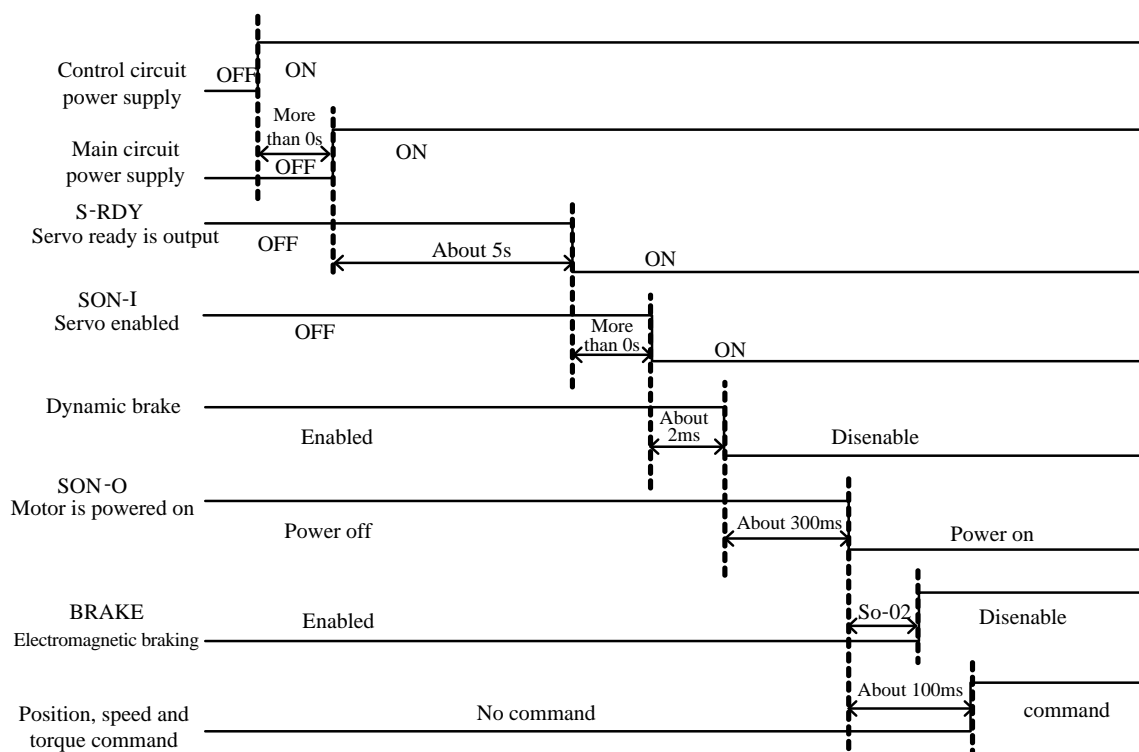
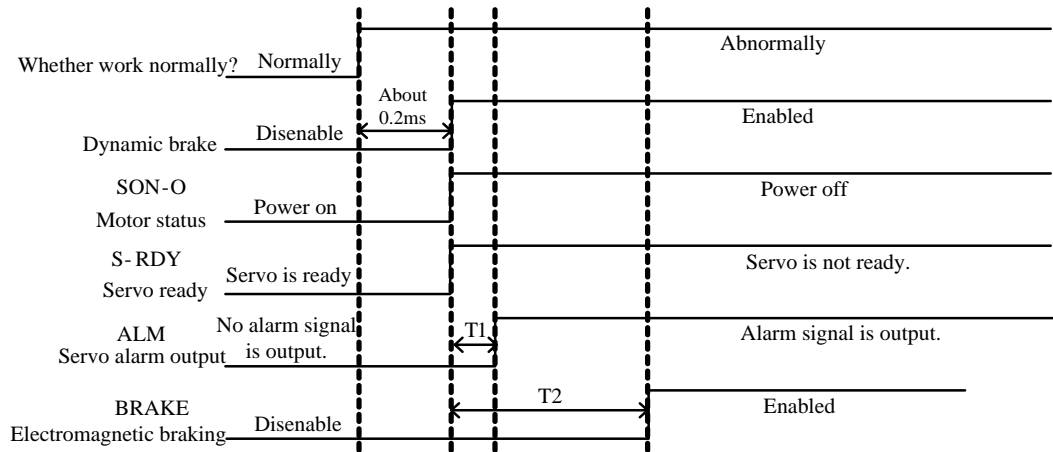


Fig 6-1-6 Sequence control after connecting the power supply

Note:


1. Above diagram is servo drive timing sequence from power-on to receiving command
2. Servo ready is trouble-free output after CPU is reset and main power is connected,.
3. Before servo drive is ready, main power should be connected and all control signal be ignored.
4. When So-07 =0 or 1, after servo on is ready, please wait for at least 100ms before sending control signal, otherwise control signal might be gnored.
5. When So-07= 2, after servo on is ready, please wait for at least 10ms before sending control signal, otherwise control signal might be gnored.

(2) Timing sequence when servo drive alarms

**Fig 6-1-7 Timing sequence after alarm**

- Note :
1. T_1 value range is 0.1ms~20ms, determined by alarm type.
 2. T_2 is electromagnetic braking time, taking the smaller value between So-03 and So-16.

(3) Timing sequence after alarm is reset

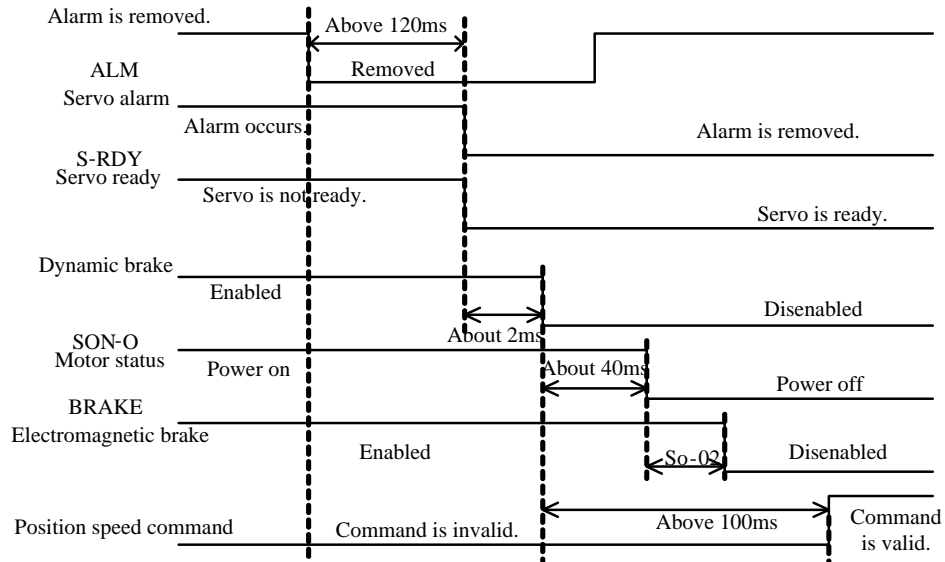**Fig 6-1-8 Timing sequence after alarm is reset**

Note: when alarm occurs, servo drive is reset and then continues running, timing sequence is as Fig 6-1-8.

6.1.7 Setting the braking

The braking types of servo drive include three kinds: 1.dynamic braking 2.energy-consumption braking
3. Electromagnetic braking.

! Caution

- ★ Energy-consumption braking is valid after main circuit is powered on.
- ★ Electromagnetic braking starts after servo OFF. If it is not, overload malfunction will occur.
- ★ Dynamic braking starts after servo OFF or main circuit is powered off. But if motor rotation speed is too high, dynamic braking resistor will be overheat.

(1) Dynamic braking

Dynamic braking is a common way to stop servo motor. It is a kind of special energy-consumption braking mode. The braking circuit includes dynamic braking resistor and diode. The method of dynamic braking is to short-connect drive line coil of servo motor, to shorten motor mechanical feed distance by modes of energy consumption braking finally.

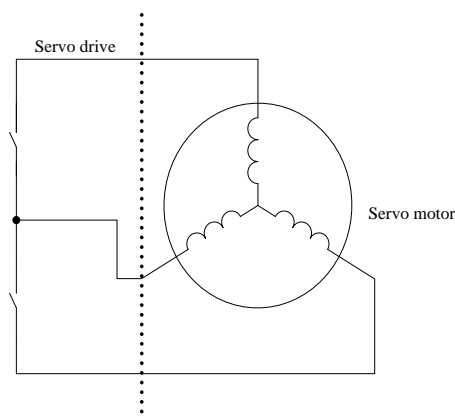


Fig 6-1-9 Dynamic braking

1) Setting function

| So-07 | Servo OFF stop mode Speed Position Torque | | | |
|-------|--|--------------|-------------|---------------------|
| | Setting range | Setting unit | Mfr's value | When enabled |
| | 0: Coast stop 1: Dynamic braking 2: Fast enable | N/A | 0 | Effective Immediate |

Fast enable: after servo is power on, relay is switched on. After enable signal is valid, servo will be ON after 10ms.

2) Related parameter

| So-08 | Dynamic braking delay time Speed Position Torque | | | |
|-------|---|--------------|-------------|---------------------|
| | Setting range | Setting unit | Mfr's value | When enabled |
| | 100~30000 | 0.1ms | 5000 | Effective Immediate |

(2) Energy consumption braking

Motor is in the state of energy regeneration during deceleration or stop process, which converts mechanical energy into electrical energy. The energy feedback works on bus line by inverting circuit, which leads to the voltage of bus line higher. When the voltage is too high, the components in the servodrive will be damaged. The method of energy consumption braking is to consume feedback energy into heat energy by braking resistor.

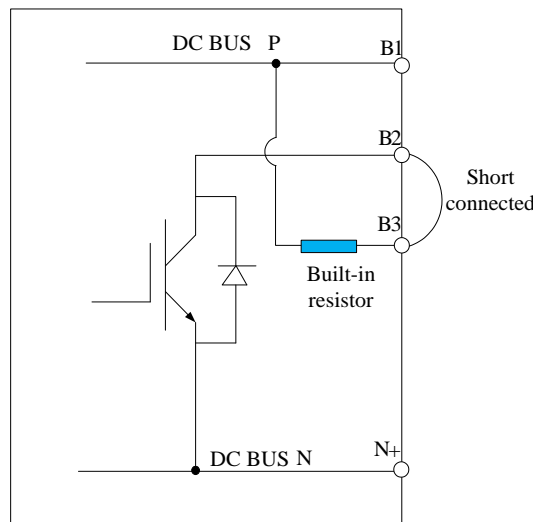


Fig 6-1-10 Wiring of energy consumption braking

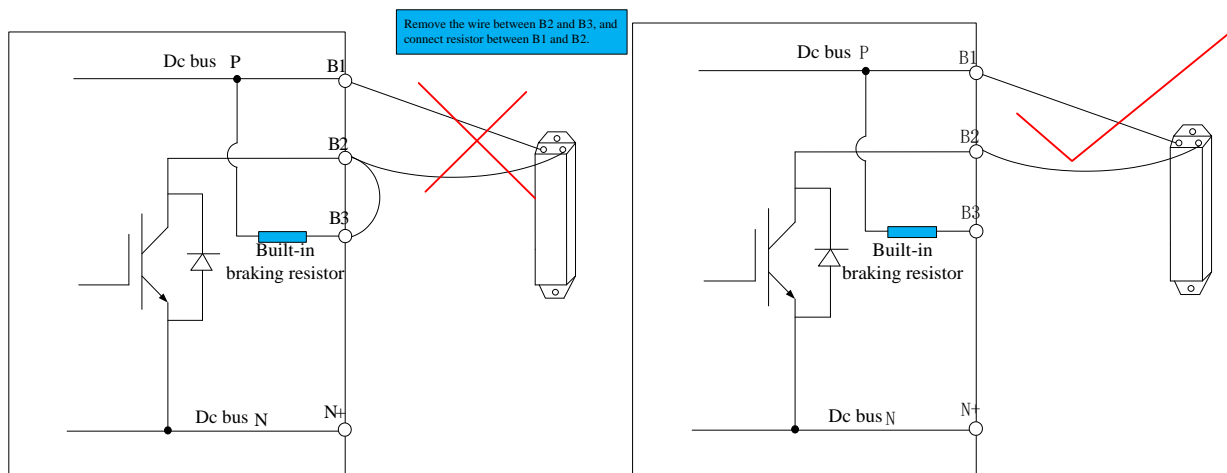


Fig 6-1-11 Wiring of braking resistor

Some servo drives have built-in braking resistor, if users need to use external braking resistor, please set the following both parameters:

| So-04 | Resistance value of braking resisto | | | |
|-------|--|--------------|-------------|---------------------|
| | <div>Speed</div> <div>Position</div> <div>Torque</div> | | | |
| | Setting range | Setting unit | Mfr's value | When enabled |
| | 8~1000 | Ω | — | Effective Immediate |

| | | | | | | | |
|-------|----------------------|--------------|-------------|---------------------|-------|----------|--------|
| So-05 | Discharge duty ratio | | | | Speed | Position | Torque |
| | Setting range | Setting unit | Mfr's value | When enabled | | | |
| | 0~100 | % | 50 | Effective Immediate | | | |

Please refer to next table for built-in braking resistor and min resistor value of external braking resistor for 220V servo.

| Servo drive structure code | Built-in resistor value and power | Min resistor value of external braking resistor | Specification of external braking resistor |
|----------------------------|-----------------------------------|---|--|
| M1 | None | 40Ω | 60Ω/200 W |
| M2 | 50W/50Ω | 25Ω | 40Ω/ 400 W |
| M3 | 100W/20Ω | 15Ω | 15Ω/ 1000 W |

Please refer to next table for built-in braking resistor and min resistor value of external braking resistor for 380V servo.

| Servo drive structure code | Built-in resistor value and power | Min resistor value of external braking resistor | Specification of external braking resistor |
|----------------------------|-----------------------------------|---|--|
| M2 | 50W/50Ω | 50Ω | 50Ω/1000W |
| M3 | 100W/60Ω | 50Ω | 50Ω/1000W |
| MM4/M4 | — | 40Ω | 40Ω/1000W |
| M5 | — | 20Ω | 20Ω/1000W |
| M6 | — | 20Ω | 20Ω/2200W |

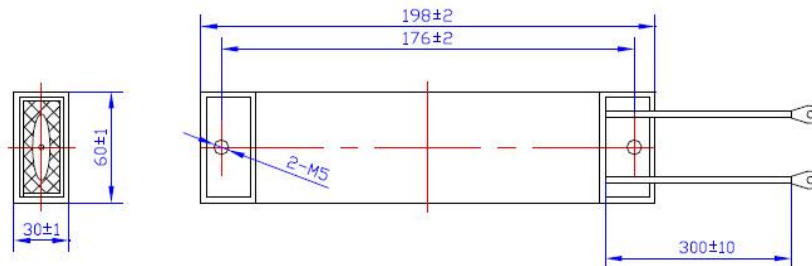


Fig 6-1-12 Wiring of braking resistor

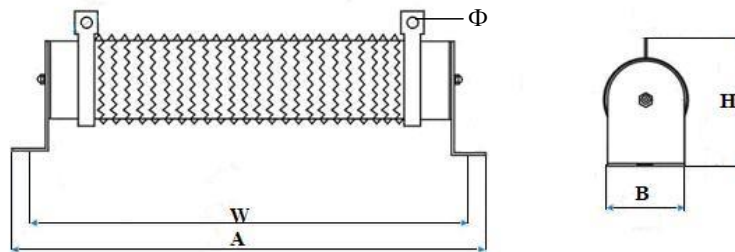


Fig 6-1-13 Wiring of braking resistor

| Resistor power | External dimension (mm) | | | Installation dimension (mm) | | Resistor type |
|----------------|-------------------------|---------------|---------------|-----------------------------|----------------------|---|
| | Length (A) | Width (B) | Height(H) | Length (W) | Aperture (Φ) | |
| 500W | 360 \pm 3.0 | 50 \pm 1.0 | 91 \pm 3.0 | 338 \pm 3.0 | Φ 6.5 \pm 0.3 | Non-sense ripple porcelain tube resistor |
| 1kW | 350 \pm 3.0 | 60 \pm 2.0 | 119 \pm 3.0 | 325 \pm 5.0 | Φ 6.5 \pm 0.3 | Non-sense ripple porcelain tube resistor |
| 1.5kW | 484 \pm 5.0 | 68 \pm 1.0 | 125 \pm 3.0 | 454 \pm 4.0 | Φ 6.5 \pm 0.3 | Non-sense ripple porcelain tube resistor |
| 2kW | 557 \pm 5.0 | 60 \pm 1.0 | 119 \pm 3.0 | 532 \pm 4.0 | Φ 6.5 \pm 0.3 | Non-sense ripple porcelain tube resistor |
| 4kW | 587 \pm 5.0 | 70 \pm 1.0 | 210 \pm 5.0 | 559 \pm 4.0 | Φ 6.5 \pm 0.3 | Double tube vertical non-sense ripple porcelain tube resistor |
| 6kW | 661 \pm 5.0 | 70 \pm 1.0 | 210 \pm 5.0 | 633 \pm 4.0 | Φ 6.5 \pm 0.3 | Three tube vertical non-sense ripple porcelain tube resistor |
| 9kW | 660 \pm 5.0 | 260 \pm 1.0 | 133 \pm 5.0 | 635 \pm 4.0 | Φ 6.5 \pm 0.3 | Three tube lateral non-sense ripple porcelain tube resistor |
| 4kW | 562 \pm 5.0 | 140 \pm 1.0 | 119 \pm 5.0 | 537 \pm 4.0*80 | Φ 6.5 \pm 0.3 | Double tube lateral non-sense ripple porcelain tube resistor |
| 6kW | 562 \pm 5.0 | 220 \pm 1.0 | 119 \pm 5.0 | 537 \pm 4.0*160 | Φ 6.5 \pm 0.3 | Three tube lateral non-sense ripple porcelain tube resistor |
| 9kW | 652 \pm 5.0 | 300 \pm 1.0 | 131 \pm 5.0 | 627 \pm 4.0*160 | Φ 6.5 \pm 0.3 | Four tube lateral non-sense ripple porcelain tube resistor |

(3) Electromagnetic braking

Electromagnetic braking is suitable for servo motor with brake, which can make sure machine not move because of self weight when servo is OFF.

6.2 Speed mode

6.2.1 Parameters setting

Speed mode is mostly used in CNC industry. FL20 series servo drive has two speed modes, analog speed mode and internal register speed mode. User can select it by Po001.

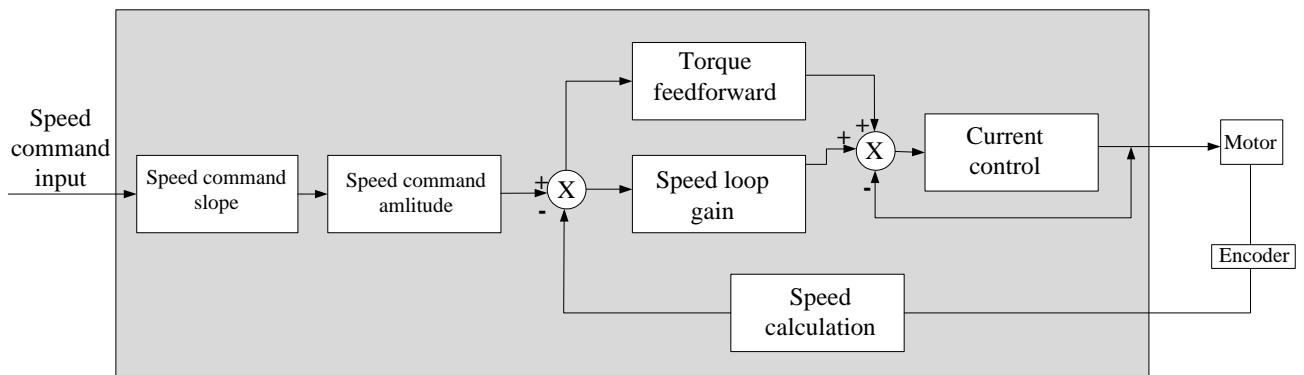


Fig 6.2.1 Speed mode control diagram

6.2.1 Parameters setting

Speed mode includes internal register speed and analog speed, user can set mode selection by Po001.

| Parameter | | Remarks |
|-----------|-------|--|
| Po001 | d □ 0 | Control mode selection: internal register speed mode |
| | d □ 3 | Control mode selection: analog speed mode |



- ★ Connect power supply of servo main circuit, power supply of control circuit, motor power cable and encoder cable correctly.
- ★ Jog trial operation by keypad.
- ★ Refer to Fig 6.2.2 and Fig 6.2.3 to connect DI/DO.
- ★ Set the related parameters of speed mode.
- ★ Operating servo drive and make sure the running direction of servo motor is correct, and set related parameters of gain adjustment, please refer to Chapter 7.3.

1) Internal register speed mode

Two setting types are as below:

- 1) To set speed value to function code, then switch speed by SD-S1 and SD-S2 of DI terminal in CN3.
- 2) To change the value of function code by communication.

a) Wiring diagram

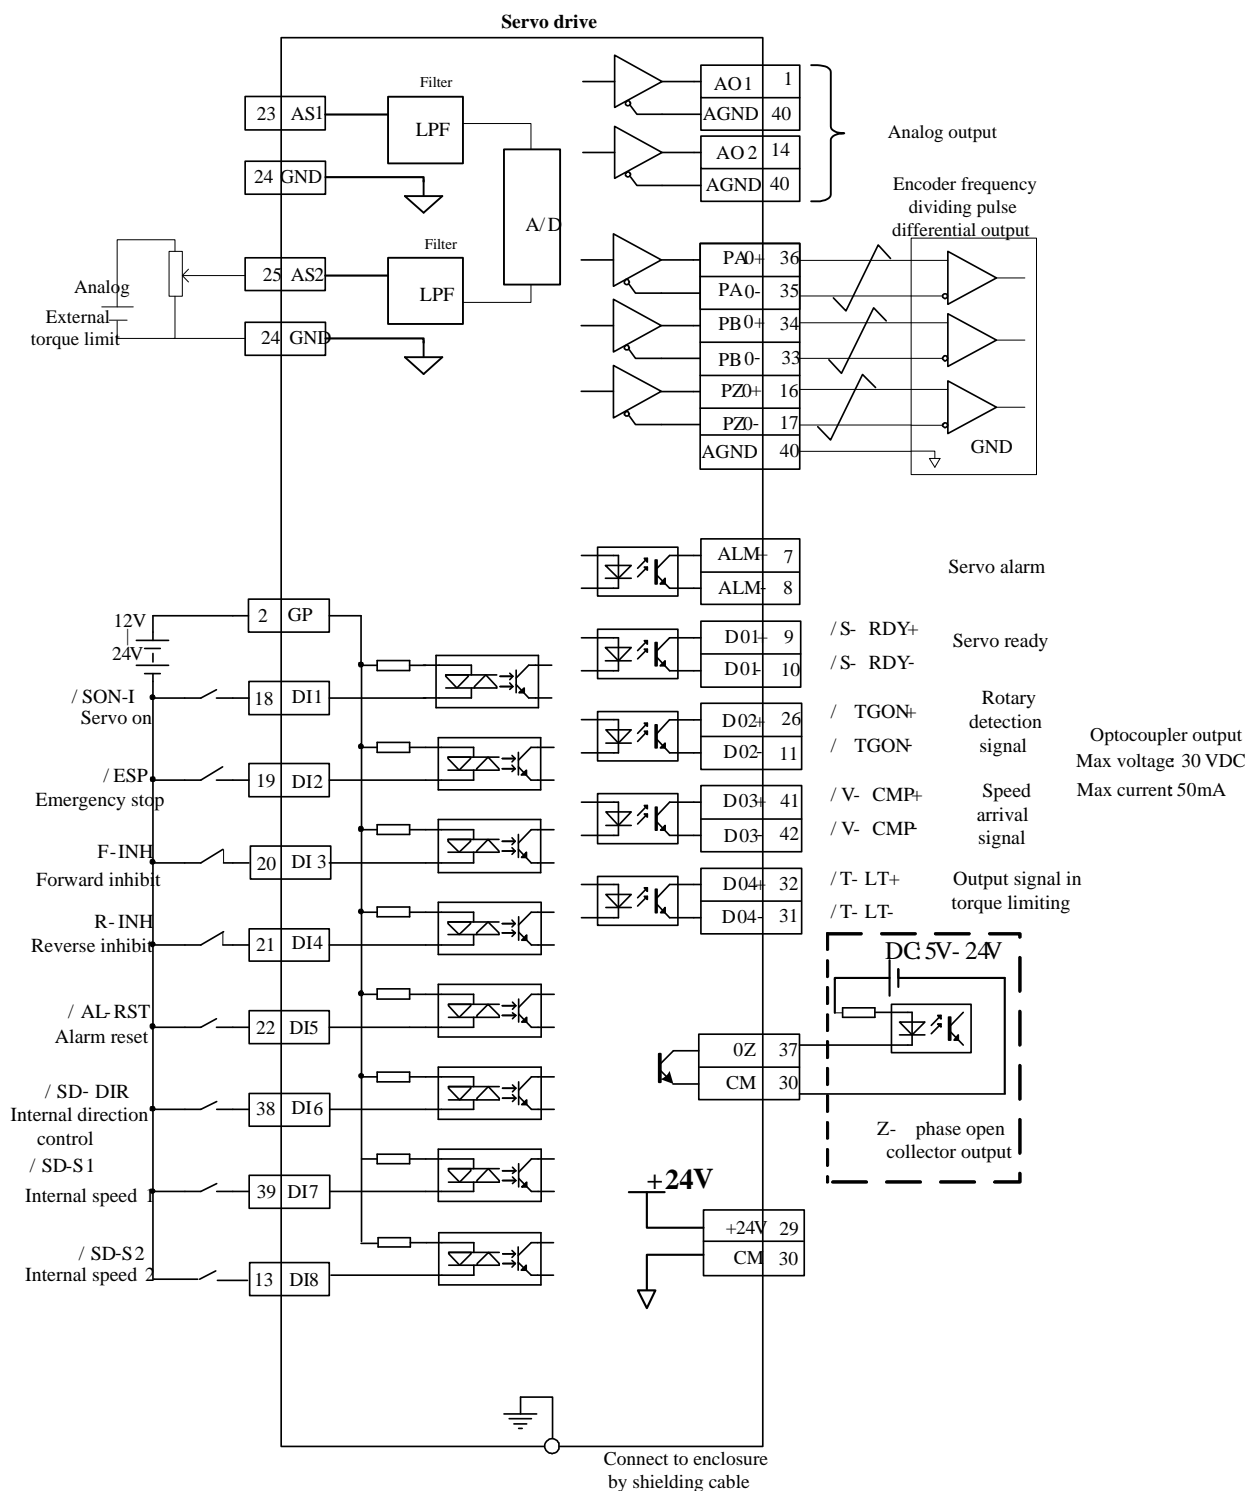



Fig6.2.2 Wiring of internal speed mode

Note:

1  represents twisted-pair wires.

2 Servodrive has internal 24 VDC power supply. But external 12~24VDC power supply is recommended.

3 DI1~DI8 are programmable input terminals, and DO1~DO4 are programmable output terminals. Users can redefine these terminals by parameters.

b) Related parameters

| Parameters | | Remarks | | |
|------------|------------------------|--|-------------|---------------------|
| Po001 | d □ 0 | Control mode selection: internal register speed mode | | |
| Po113 | Internal speed given 1 | | | Speed |
| | Setting range | Setting unit | Mfr's value | When enabled |
| | 0~±32000 | 0.1r/min | 1000 | Effective Immediate |
| Po114 | Internal speed given 2 | | | Speed |
| | Setting range | Setting unit | Mfr's value | When enabled |
| | 0~±32000 | 0.1r/min | 2000 | Effective Immediate |
| Po115 | Internal speed given 3 | | | Speed |
| | Setting range | Setting unit | Mfr's value | When enabled |
| | 0~±32000 | 0.1r/min | 3000 | Effective Immediate |

Note: when Po113, Po114, Po115 value exceed motor maximum speed, actual speed is motor maximum speed

c) Input signal setting

| Signal name | Abbreviation | Default terminal | Remarks |
|----------------------------------|--------------|------------------|----------------------------------|
| Internal speed selection 1 | SD-S1 | CN3-39 | Internal speed selection |
| Internal speed selection 2 | SD-S2 | CN3-13 | |
| Internal speed direction control | SD-DIR | CN3-38 | Internal speed direction control |

d) Internal speed setting

| Input signal | | | Motor rotation direction | Running speed |
|--------------|-------|-------|--------------------------|-------------------------------|
| SD-DIR | SD-S1 | SD-S2 | | |
| OFF | OFF | OFF | Forward | 0: zero |
| | OFF | ON | | Po113: internal speed given 1 |
| | ON | OFF | | Po114: internal speed given 2 |
| | ON | ON | | Po115: internal speed given 3 |
| ON | OFF | OFF | Reverse | 0: zero |
| | OFF | ON | | Po113: internal speed given 1 |
| | ON | OFF | | Po114: internal speed given 2 |
| | ON | ON | | Po115: internal speed given 3 |

2) Analog speed mode

a) Wiring diagram

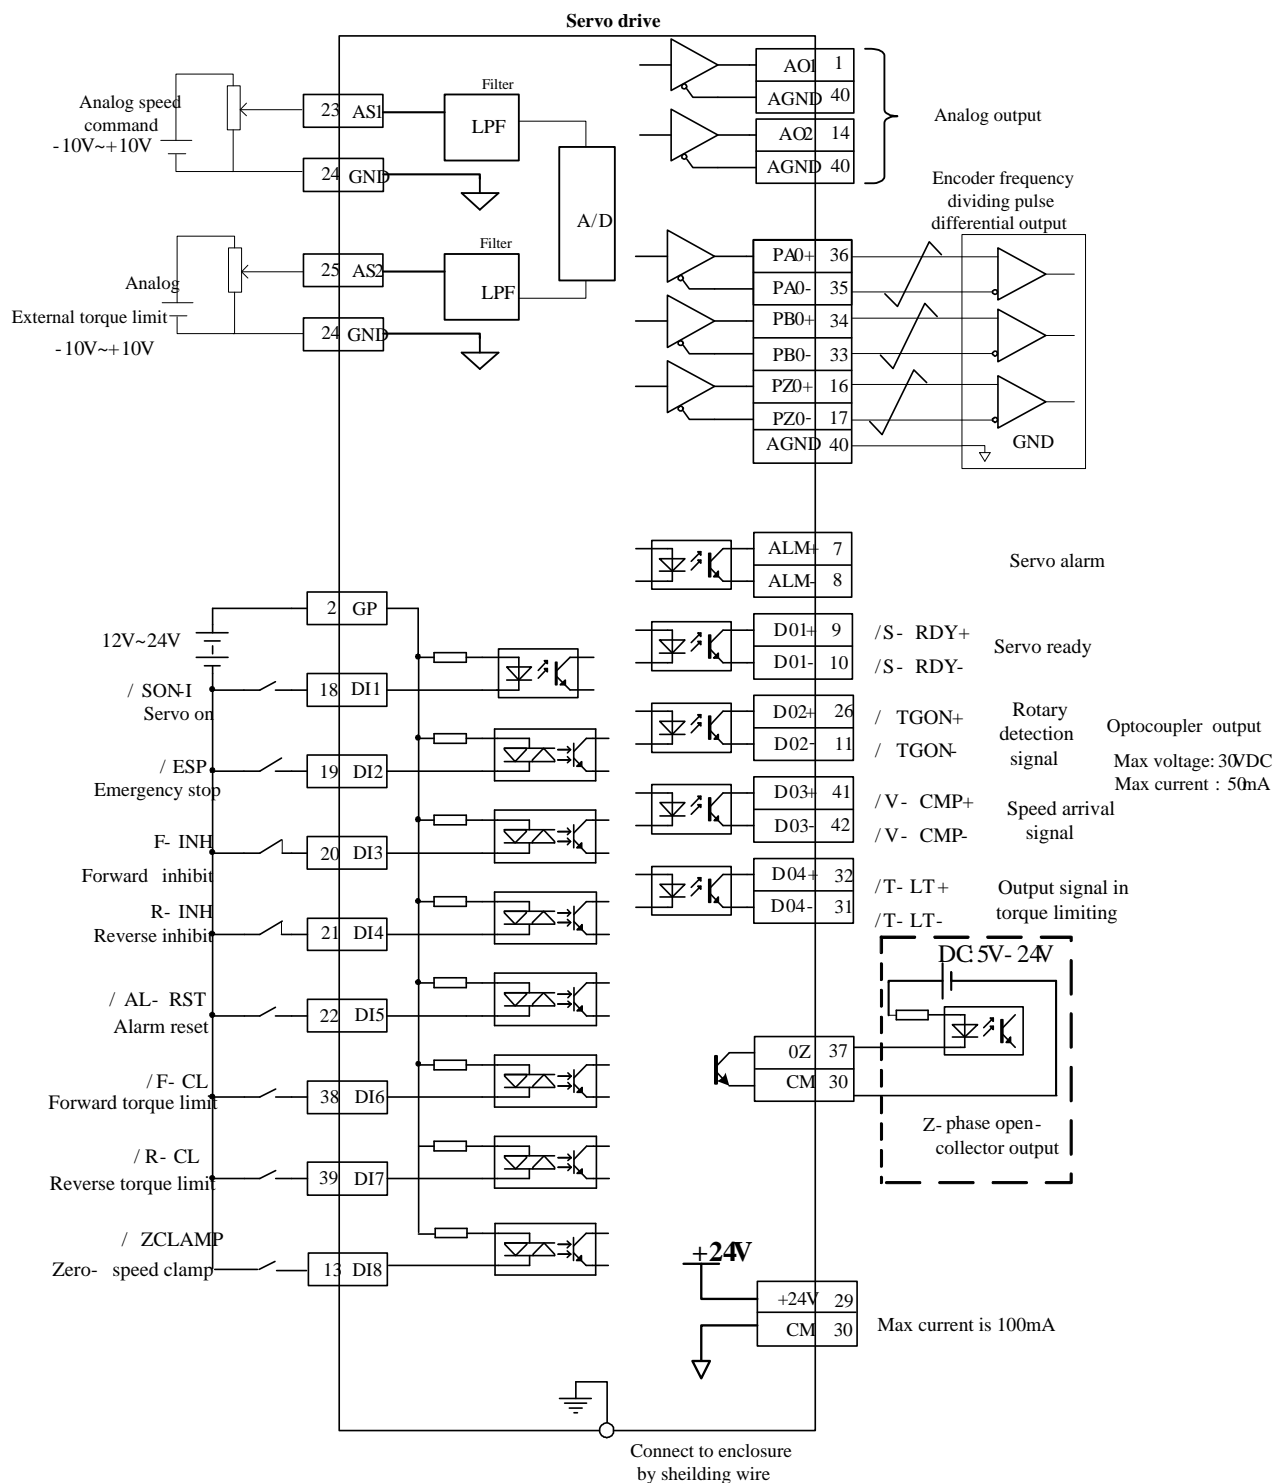



Fig 6.2.3 Connection of internal speed mode

Note:

1  represents twisted-pair wires.

2 Servodrive has internal 24 VDC power supply. But external 12~24VDC power supply is recommended.


3 DI1~DI8 are programmable input terminals, and DO1~DO4 are programmable output terminals. Users can redefine these terminals by parameter.

★Zero drift: when analog input voltage is 0, zero drift is relative value between servo drive sampling voltage and reference terminal.

Command source is acquired from servo drive terminal.

Automatic zero set: servo drive can compensate zero drift according to sample value.

★Take AI1 as example, following instruction is step to set analog voltage speed.

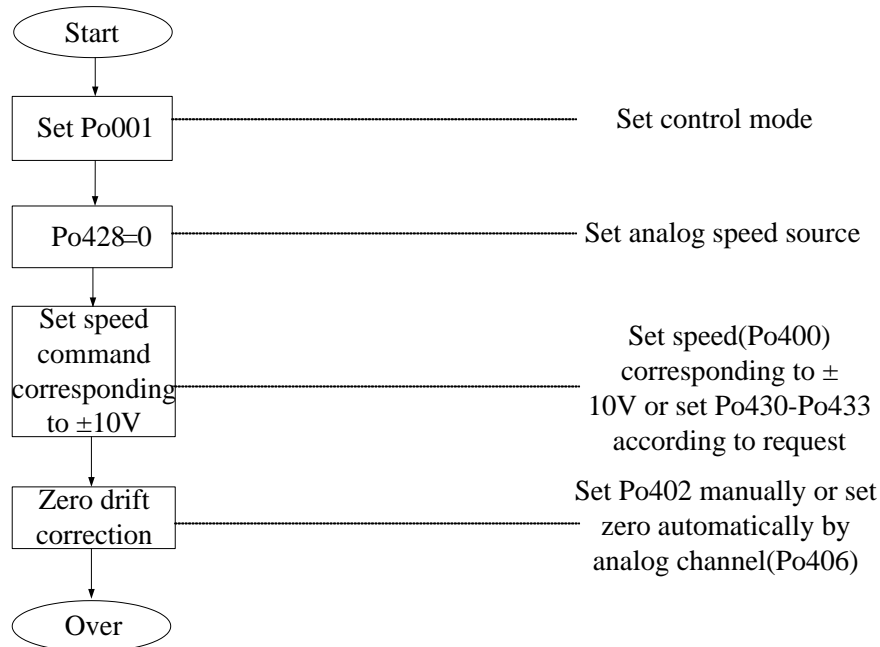

b)Related parameter

| Parameter | | Remarks |
|-----------|-------|--|
| Po001 | d □ 3 | Control mode seletion: analog speed mode |


(1) Analog speed mode setting

| Po428 | Analog speed mode setting | | | |
|-------|------------------------------------|--------------|-------------|---------------------|
| | <div>Speed</div> <div>Torque</div> | | | |
| | Setting range | Setting unit | Mfr's value | When enabled |
| | 0~1 | N/A | 0 | Effective Immediate |

| Setting value | Content |
|---------------|---------|
|---------------|---------|

| | |
|---|-------------------------------|
| 0 | Analog command is set by AI1. |
| 1 | Analog command is set by AI2 |

(2) Setting relation between analog and speed
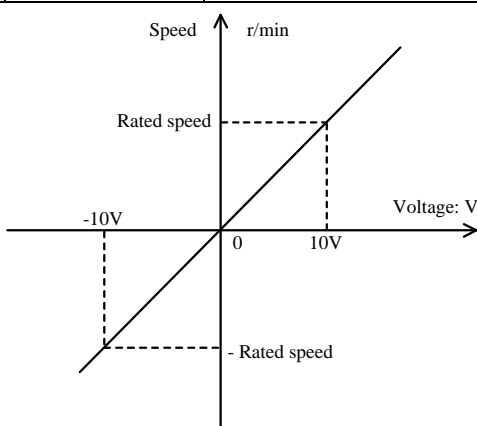
| Po400 | Max speed corresponding to analog voltage speed | | | |
|---|---|--|-------------|---------------------|
| | Setting range | Setting unit | Mfr's value | When enabled |
| | 1~10000 | r/min | — | Effective Immediate |
| <p>Set the speed value when analog voltage is 10V. The slope equals to the ratio of 10V/setting value of Po400. Please refer to the right figure about the mfr's setting:</p> | |  | | |

Attention : Mfr's value of Po400 is related with servomotor, default mfr's value is rated rotation of matching motor.

(3) Analog speed command zero drift compensation


| | | | | | | |
|--|-------------------------------------|--------------|-------------|---------------------|-------------------|---------------------|
| Po402 | AI1 command zero drift compensation | | | <div>Speed</div> | <div>Torque</div> | <div>Position</div> |
| | Setting range | Setting unit | Mfr's value | When enabled | | |
| | 0~±5000 | 1mv | 0 | Effective Immediate | | |
| AI1command zero drift compensation is to eliminate analog speed command zero drift. The setting method is as following: (1) Short-connect AI1 to AGND. (2) At the mode of analog speed, adjust Po402 to make Lo-27 to 0. Please refer to right figure: | | | | | | |
| Po406 | AI automatic zero set | | | <div>Speed</div> | <div>Torque</div> | |
| | Setting range | Setting unit | Mfr's value | When enabled | | |
| | 0~1 | N/A | 0 | Effective Immediate | | |
| When AI automatic zero set function is used, please make sure analog input is 0V. If zero drift is too big, servo drive will trip into AL-21. | | | | | | |

When using auto zero set function, make sure analog input is 0V, and set Po406 to 1, after about 3s, zero drift will auto compensate.

| | | | | |
|-------|--|--------------|-------------|---------------------|
| Po426 | AI zero drift alarm Speed Torque Position | | | |
| | Setting range | Setting unit | Mfr's value | When enabled |
| | 100~5000 | mv | 2000 | Effective Immediate |

(4) Analog speed command of rotation upper and lower limit setting

The function is to set external input analog at analog speed mode. Users can set a pair of voltage in the range of -10V~+10V by parameters Po433, Po431 as upper and lower limit of the analog input voltage. After analog input is determined, analog speed can be set via parameter Po432, Po430, lower bound corresponds to the voltage on the analog control speed.

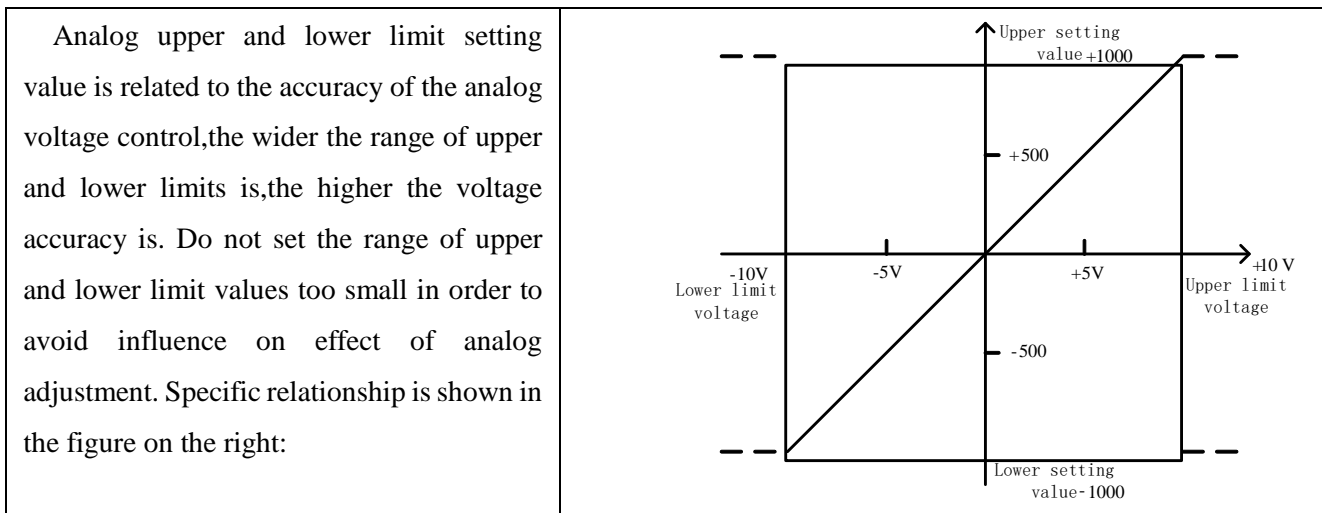

| | | | | |
|-------|---|--------------|-------------|---------------------|
| Po430 | Corresponding speed of lower limit voltage Speed Torque Position | | | |
| | Setting range | Setting unit | Mfr's value | When enabled |
| | -1000~1000 | 0.1% | -1000 | Effective Immediate |
| Po431 | Lower limit voltage in speed analog mode Speed Torque Position | | | |
| | Setting range | Setting unit | Mfr's value | When enabled |
| | -1000~1000 | 0.01V | -1000 | Effective Immediate |
| Po432 | Corresponding speed of upper limit voltage Speed Torque Position | | | |
| | Setting range | Setting unit | Mfr's value | When enabled |
| | -1000~1000 | 0.1% | 1000 | Effective Immediate |
| Po433 | Upper limit voltage in speed analog mode Speed Torque Position | | | |
| | Setting range | Setting unit | Mfr's value | When enabled |
| | -1000~1000 | 0.01V | 1000 | Effective Immediate |

Note: in analog speed mode, the motor speed calculation formula is as below:

Corresponding speed of lower limit voltage=value of Po400 X value of Po430

Corresponding speed of upper limit voltage=value of Po400 X value of Po432

(5) Analog command filter

| | | | | |
|-------|--|--------------|-------------|---------------------|
| Po404 | Analog speed command filter time constant Speed Torque Position | | | |
| | Setting range | Setting unit | Mfr's value | When enabled |
| | 1~30000 | 0.01ms | 200 | Effective Immediate |

This smoothens the speed command by applying a 1st-order filter to the analog speed command input. A value that is too large, however, will slow down response.

(6) Analog terminal control

At the mode of analog speed, and when Po427=1, speed is set by analog, motor start/stop is controlled by terminal. Servo drive will stop at deceleration time by pressing start/stop button or not at the same time. When forward running command is received, servo motor will run to analog speed at the acceleration time, when reverse running command is received, servo motor will run to 0 first then runs reverse to analog speed at the deceleration time.

| | | | | |
|-------|--|--------------|-------------|---------------------|
| Po427 | Analog terminal control Speed Torque Position | | | |
| | Setting range | Setting unit | Mfr's value | When enabled |
| | 0~1 | N/A | 0 | Effective Immediate |

c) Input signal setting

| Signal name | Terminal | Remarks |
|--|----------|----------------------------|
| AS1 | CN3-23 | Analog speed command input |
| AGND | CN3-24 | |
| Input voltage range is from -10Vto10V. | | |

6.2.2 Soft start

The soft start function converts the stepwise speed reference inside the servodrive to a consistent rate of acceleration and deceleration.

(1) Setting parameters

| | | | | |
|-------|--------------------------------------|--------------|-------------|---------------------|
| Po109 | Acceleration time speed | | | |
| | Setting range | Setting unit | Mfr's value | When enabled |
| | 1~30000 | ms | 200 | Effective Immediate |

| | | | | |
|-------|--------------------------------------|--------------|-------------|---------------------|
| Po110 | Deceleration time speed | | | |
| | Setting range | Setting unit | Mfr's value | When enabled |
| | 1~30000 | ms | 200 | Effective Immediate |

(2) Instructions of acceleration/deceleration time

The acceleration/deceleration time means the time that speed increases from 0 to rated rotation speed or decreases from rated speed to 0. Please refer to Fig 6-2-5.

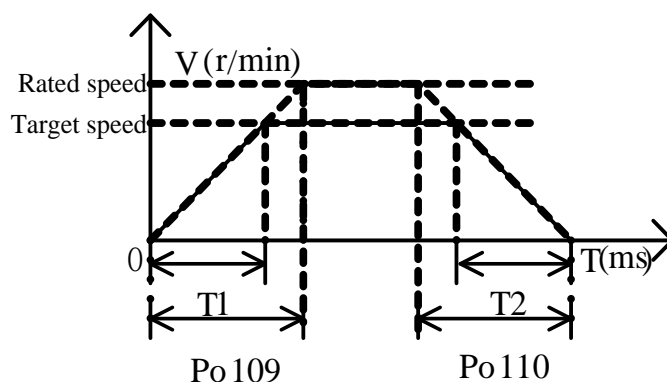


Fig 6-2-5 Soft start function

T1 and T2 are actual acceleration/deceleration time, the unit is ms.

Actual acceleration time $T1 = Po109 \times \text{target speed} / \text{rated speed}$

Actual deceleration time $T2 = Po110 \times \text{target speed} / \text{rated speed}$

6.2.3 S curve smoothness function

During the process of acceleration/deceleration, the rotation speed is unsteady. So add S curve acceleration/deceleration command into speed command to make rotation speed of motor more smooth.

(1) Setting parameters

| | | | | |
|-------|--|--------------|-------------|---------------------|
| Po111 | S curve acceleration/deceleration time speed | | | |
| | Setting range | Setting unit | Mfr's value | When enabled |
| | 0~15000 | ms | 100 | Effective Immediate |

| | | | | |
|-------|---|--------------|-------------|---------------------|
| Po112 | S curve starting indication speed | | | |
| | Setting range | Setting unit | Mfr's value | When enabled |
| | 0: Invalid 1: Valid | N/A | 0 | Effective Immediate |

(2) Instruction of S curve smoothness function

Please refer to following figure about S curve function, and T1 and T2 are actual acceleration/deceleration time.

(Please refer to soft start function)

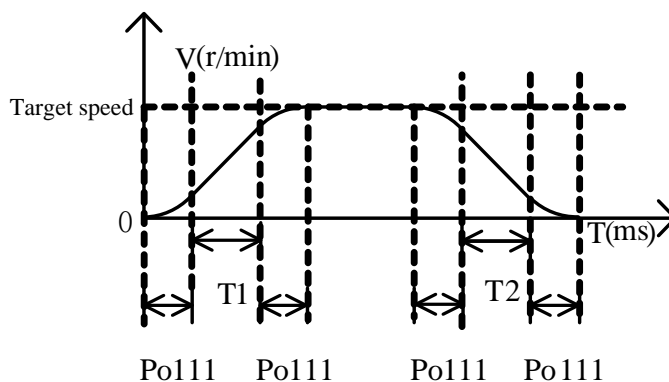


Fig 6-2-6 S curve smoothness function**6.2.4 Zero clamp function**


When the zero clamp signal (ZCLAMP) is ON, servo enters into the locking status as soon as the absolute value of command speed drops below the motor speed level in the zero clamp level. The servo motor ignores the speed command and quickly stops and locks the servo motor.

(1) Input signal

| Signal name | Default terminal | Remarks |
|-------------|------------------|--|
| ZCLAMP | CN3-13 | Servo motor enters into the locking status when the absolute value of command speed drops below the setting value in the zero clamp level. |

(2) Setting parameters

| | | | | |
|-------|--|--------------|-------------|---------------------|
| Po127 | Zero clamp enabled Speed | | | |
| | Setting range | Setting unit | Mfr's value | When enabled |
| | 0: Zero clamp function OFF 1: Zero clamp function ON | N/A | 0 | Effective Immediate |
| Po126 | Speed value in the zero clamp Speed | | | |
| | Setting range | Setting unit | Mfr's value | When enabled |
| | 0 ~30000 | 0.1r/min | 50 | Effective Immediate |

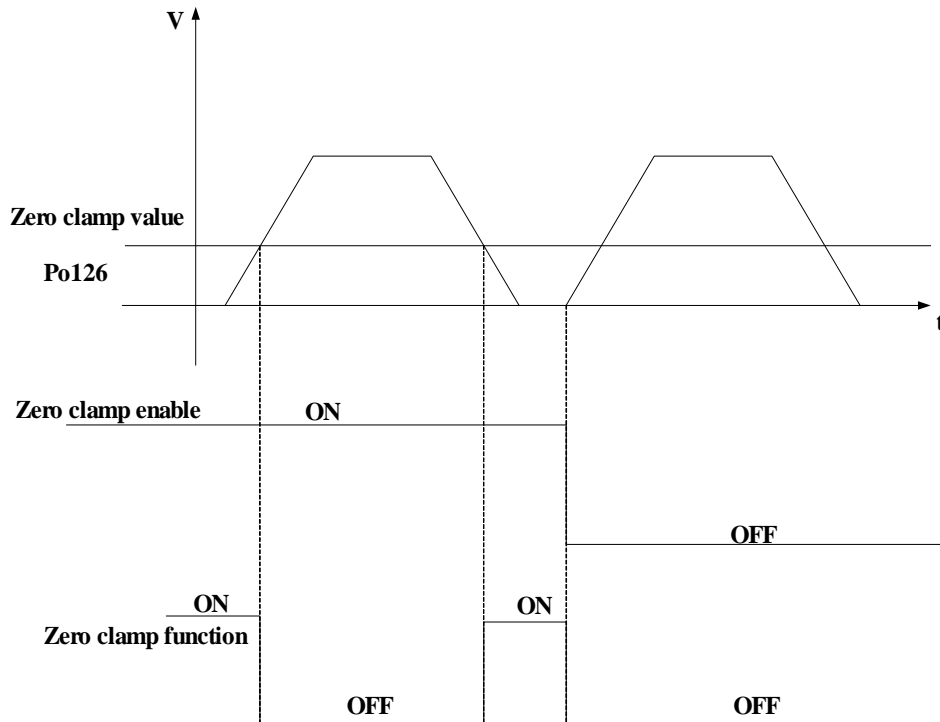**6.2.5 Speed output signal****1) Speed arrival signal output**

When the absolute difference between actual rotation speed and command speed is lower than range of target

speed (Po117), speed arrival signal is output. This function is not limited by motor rotation direction.

(1) Output signal

| Signal name | Default terminals | Remarks |
|-------------|-------------------|---|
| V-CMP | V-CMP+ V-CMP- | Motor rotation speed is close to command speed. |

(2) Parameters setting

| Po117 | Range of target speed Speed | | | |
|-------|--|--------------|-------------|---------------------|
| | Setting range | Setting unit | Mfr's value | When enabled |
| | 0 ~ 30000 | 0.1r/min | 300 | Effective Immediate |

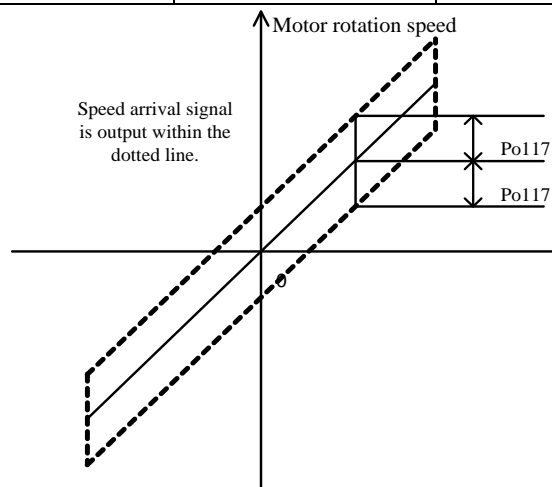


Fig 6-2-8 Speed arrival signal output

Note: solid line represents given speed, speed arrival signal is output within the dotted line.

2) Rotation detection signal output

This signal is output to indicate that the servo motor is currently operating above the setting in parameter Po118.

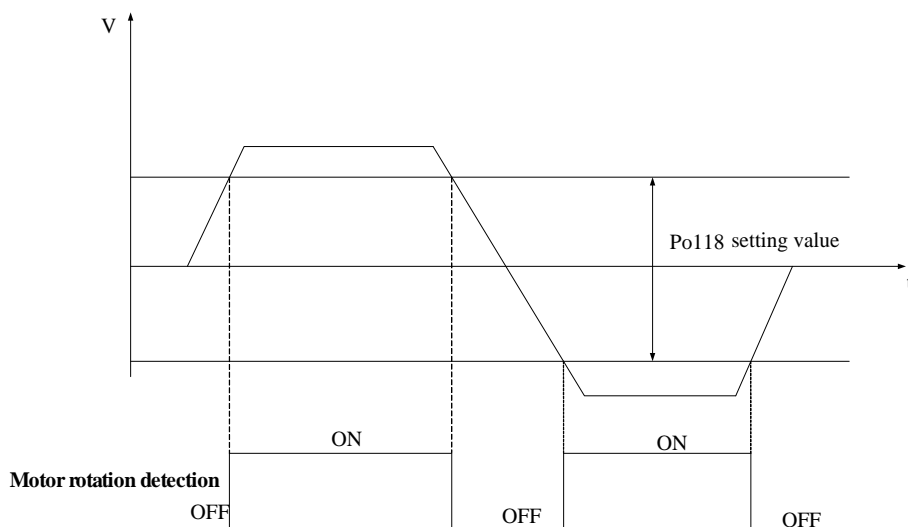


Fig 6-2-9 Rotation detection signal output

(1) Setting output signal

| Signal name | Default terminal | Remarks |
|-------------|------------------|--|
| TGON | TGON+ TGON- | When the absolute value of speed is higher than the value of Po118, TGON signal is output. |

(2) Parameters setting

| | | | | |
|-------|---|--------------|-------------|---------------------|
| Po118 | Rotation detection value Speed | | | |
| | Setting range | Setting unit | Mfr's value | When enabled |
| | 0 ~30000 | 0.1r/min | 300 | Effective Immediate |

3) Analog monitor output

(1) Output signal

| Signal name | Code | Terminal | Remarks |
|----------------------------------|------|----------|-----------------------|
| Analog monitor output | AO1 | CN3-1 | Analog monitor output |
| Analog monitor output | AO2 | CN3-14 | |
| Grounding of analog power supply | AGND | CN3-24 | |

(2) Setting analog monitor signal

| | | | | |
|-------|---|--------------|-------------|---------------------|
| So-19 | Analog monitor channel 1 speed position torque | | | |
| | Setting range | Setting unit | Mfr's value | When enabled |
| | 0~3 | N/A | 0 | Effective Immediate |
| So-61 | Analog monitor channel 2 speed position torque | | | |
| | Setting range | Setting unit | Mfr's value | When enabled |
| | 0~3 | N/A | 0 | Effective Immediate |

| Parameter setting | Output analog contents | Remarks |
|-------------------|----------------------------|--|
| So-19=0 | Servo drive output current | Servodrive output current corresponding to 10V is controlled by So-20. |
| So-19=1 | Servo drive bus voltage | Servodrive max bus line voltage corresponding to 10V is controlled by So-21. |
| So-19=2 | Servo motor rotation speed | Servo motor rotation speed corresponding to 10V is controlled by So-22. |
| So-19=3 | Output voltage 0V + offset | Offset voltage is determined by So-24. |
| So-61=0 | Servo drive output current | Servodrive output current corresponding to 10V is controlled by So-20. |
| So-61=1 | Servo drive bus voltage | Servodrive max bus line voltage corresponding to 10V is controlled by So-21. |
| So-61=2 | Servo motor speed | Servo motor rotation speed corresponding to 10V is controlled by So-22. |

| | | |
|---------|----------------------------|--|
| So-61=3 | Output voltage 0V + offset | Offset voltage is determined by So-62. |
|---------|----------------------------|--|

(3) Related parameter

| | | | | |
|-------|---|--------------|-------------|---------------------|
| So-20 | Servodrive output current corresponding to 10V speed position torque | | | |
| | Setting range | Setting unit | Mfr's value | When enabled |
| | 1~1000 | 0.1A | 200 | Effective Immediate |

| | | | | |
|-------|---|--------------|-------------|---------------------|
| So-21 | Servodrive max bus line voltage corresponding to 10V speed position torque | | | |
| | Setting range | Setting unit | Mfr's value | When enabled |
| | 1~500 | 1V | 500 | Effective Immediate |
| So-22 | Max rotation speed corresponding to 10V speed position torque | | | |
| | Setting range | Setting unit | Mfr's value | When enabled |
| | 1~32000 | 0.1r/min | 30000 | Effective Immediate |

(4) Analog monitor voltage compensation

Actual analog voltage is compensated by So-24 and So-62.

| | | | | |
|-------|--|--------------|-------------|---------------------|
| So-24 | Analog monitor voltage compensation 1 speed position torque | | | |
| | Setting range | Setting unit | Mfr's value | When enabled |
| | -10000~+1000 | mv | 0 | Effective Immediate |
| So-62 | Analog monitor voltage compensation 2 speed position torque | | | |
| | Setting range | Setting unit | Mfr's value | When enabled |
| | -10000~+10000 | mv | 0 | Effective Immediate |

Analog monitor voltage compensation updates in real time, users can confirm and adjust the signal at the same time. After adjustment is finished, please press SET key for 0.5s, save it and quit.

Note : So-24 or So-62 plus analog input voltage equals analog output AO.

6.3 Torque mode

Torque mode includes analog torque mode and internal register torque mode, user can select it by Po001.

The diagramme is as below:

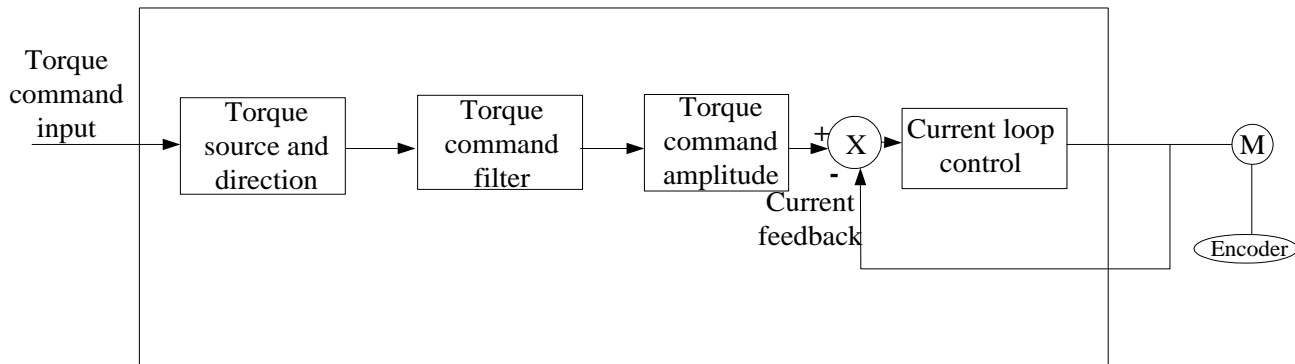


Fig 6.3.1 Torque control diagram

6.3.1 Parameters setting

| Parameters | | Remarks |
|------------|-------|--|
| Po001 | d □ 2 | Control mode selection: internal register torque mode. |
| | d □ 4 | Control mode selection: analog torque mode. |



- ★ Connect power supply of servo main circuit, power supply of control circuit, motor power cable and encoder cable correctly.
- ★ Jog trial operation by keypad.
- ★ Refer to Fig 6.3.2 and Fig 6.3.3 to connect DI/DO.
- ★ Set the related parameters of torque mode.
- ★ Operating servo drive and make sure the running direction of servo motor is correct, and set related parameters of gain adjustment, please refer to Chapter 7.3.

1) Internal register torque mode

a) Wiring diagram

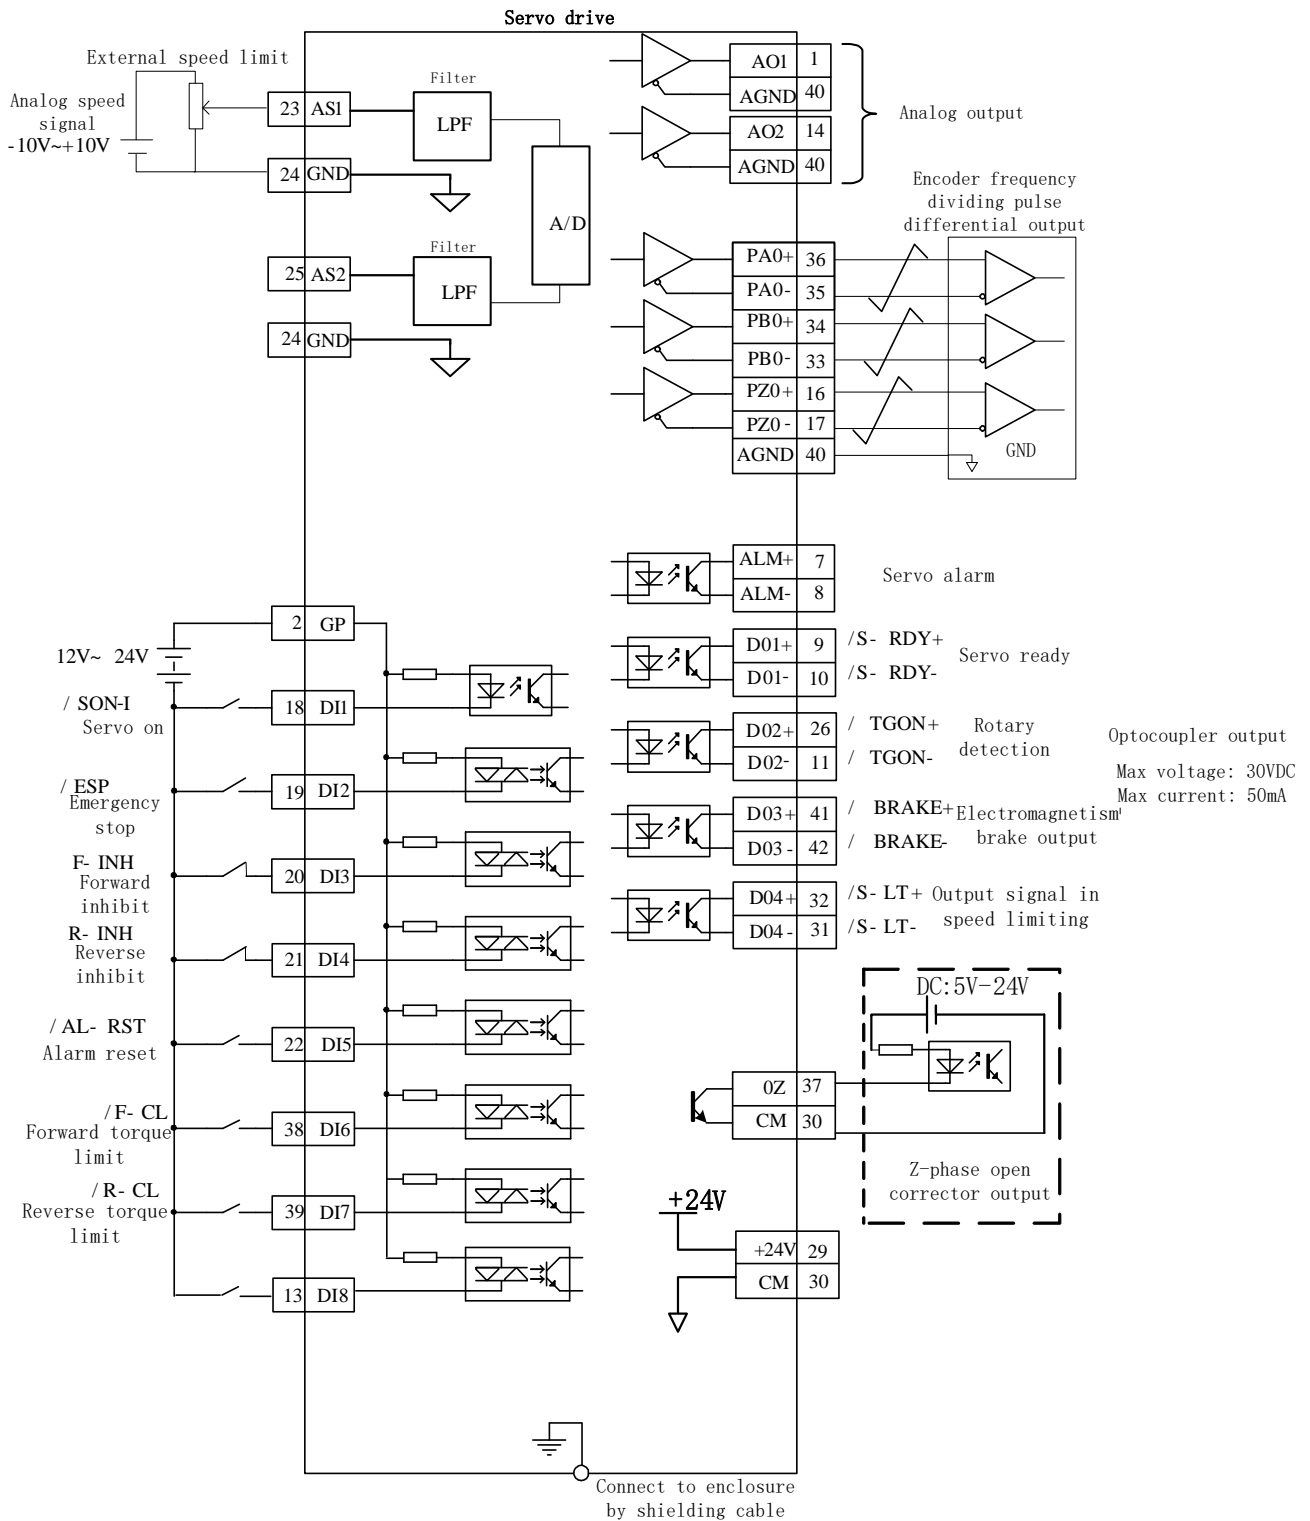



Fig 6.3.2 Diagram of internal register torque mode

Note:


1  represents twisted-pair wires.

2 Servodrive has internal 24 VDC power supply. But external 12~24VDC power supply is recommended.

3 DI1~DI8 are programmable input terminals, and DO1~DO4 are programmable output terminals. Users can redefine these terminals by parameter.

b) Related parameters

| Parameter | | Remarks | | |
|-----------|-----------------------|---|---------------------------------|---------------------|
| Po001 | d □ 2 | Control mode selection: internal register torque mode | | |
| Po204 | Internal given torque | | <u>Internal register torque</u> | |
| | Setting range | Setting unit | Mfr's value | When enabled |
| | -800~800 | 1% of rated torque | 10 | Effective Immediate |

 Note: once internal register torque mode is enabled, servo drive will start running Immediate. Please be careful!

2) Analog torque mode

a) Wiring diagram

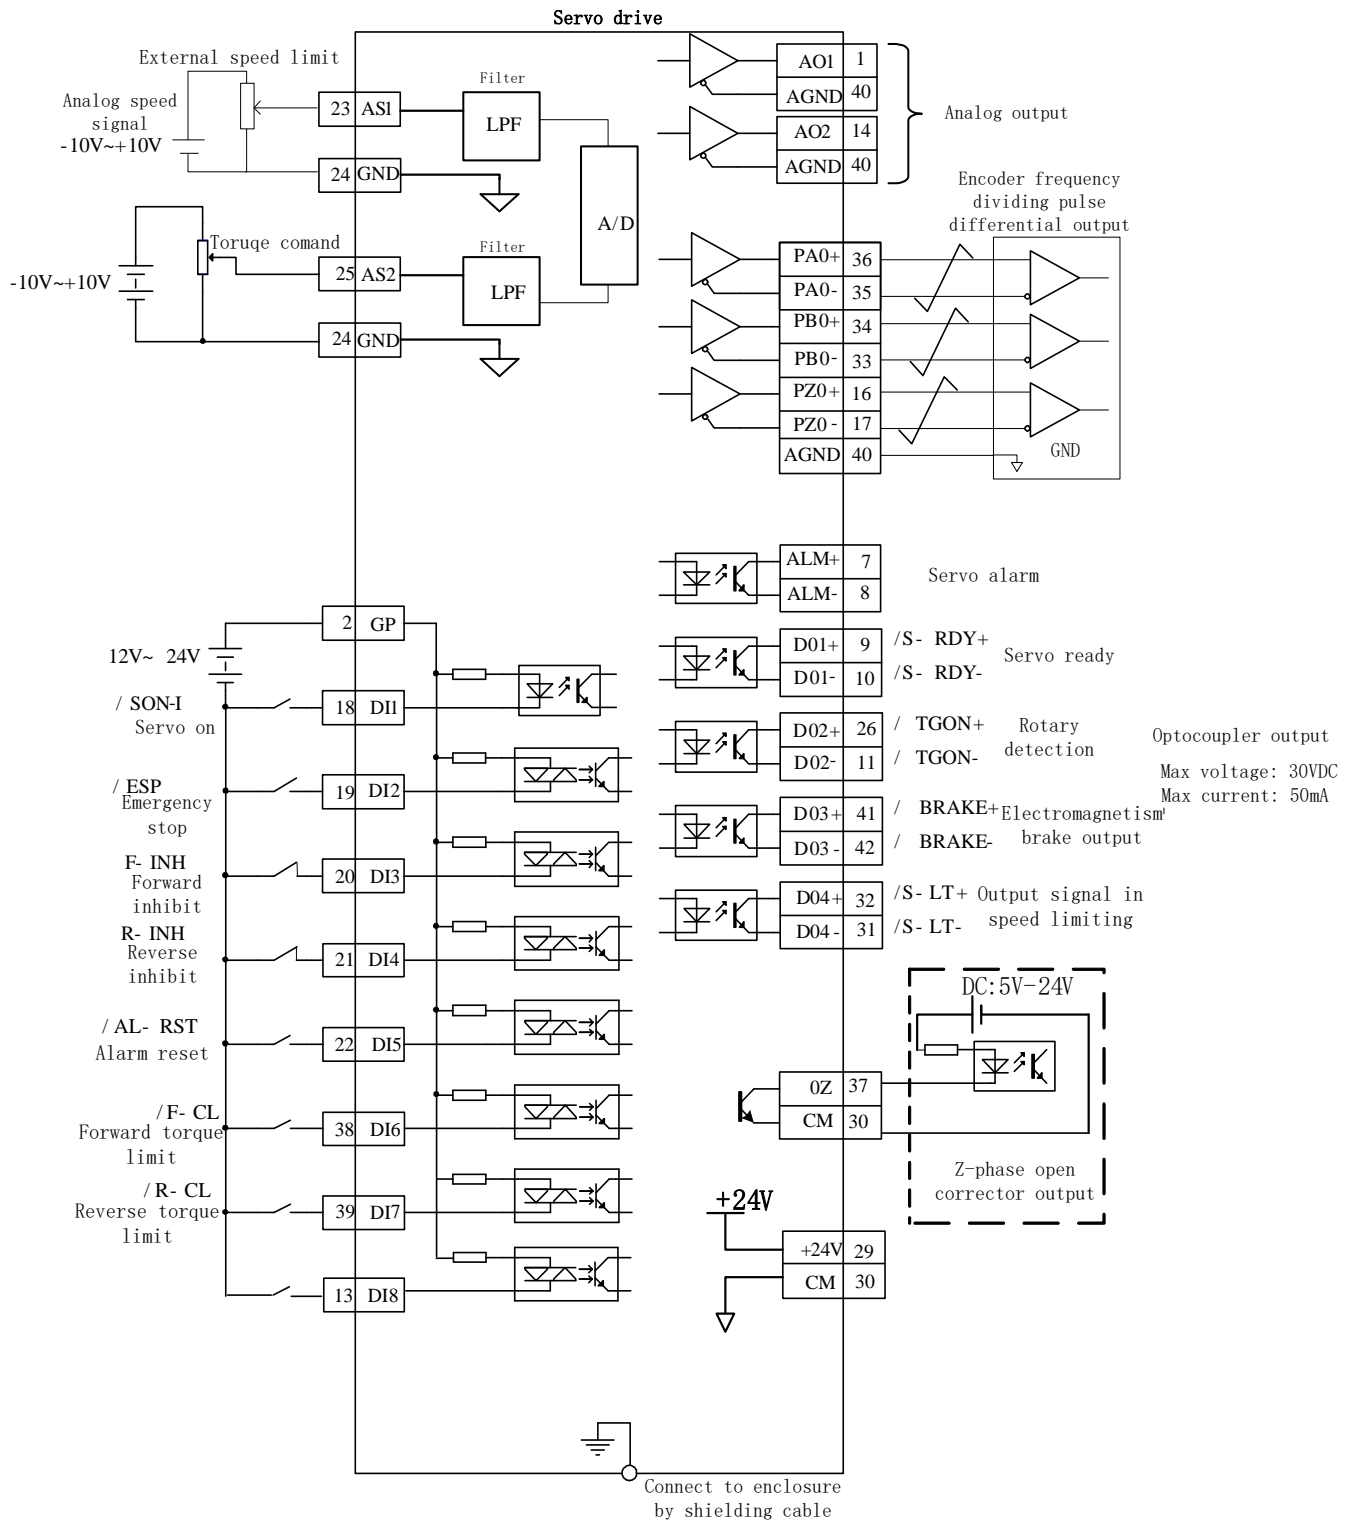



Fig 6.3.3 Diagram of analog torque mode

Note:

1  represents twisted-pair wires.

2 Servo drive has internal 24 VDC power supply. But external 12~24VDC power supply is recommended.

3 DI1~DI8 are programmable input terminals, and DO1~DO4 are programmable output terminals. Users can redefine these terminals by parameter.

b) Related parameters

| Parameter | | Remarks |
|-----------|-------|---|
| Po001 | d □ 4 | Control mode selection: analog torque mode. |

(1) Analog torque command source


| | | | | |
|-------|---|--------------|-------------|---------------------|
| Po429 | Analog torque command source Speed Torque Position | | | |
| | Setting range | Setting unit | Mfr's value | When enabled |
| | 0~1 | N/A | 1 | Effective Immediate |

| Setting value | Constant |
|---------------|-------------------------------|
| 0 | Analog command is set by AI1. |
| 1 | Analog command is set by AI2. |

(2) Relationship between analog and torque


| | | | | |
|-------|---|--------------------|-------------|---------------------|
| Po401 | Max torque corresponding to Analog torque Torque | | | |
| | Setting range | Setting unit | Mfr's value | When enabled |
| | 1~800 | 1% of rated torque | 100 | Effective Immediate |

Set the torque value when analog voltage is 10V.
 The slope equals to the ratio of 10V/setting value of Po401.
 Please refer to the right figure about the mfr's setting:

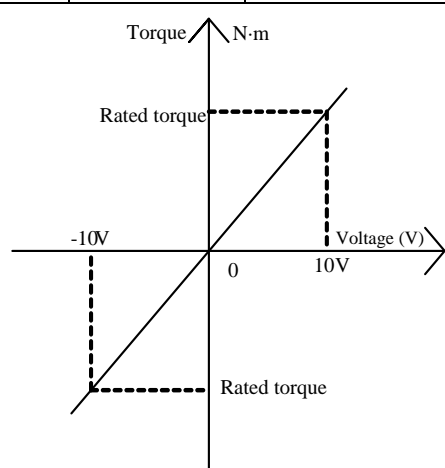

(3) AI2 channel zero drift compensation

| | | | | |
|-------|---|--------------|-------------|--------------|
| Po403 | AI2 torque command zero drift compensation Speed Torque Position | | | |
| | Setting range | Setting unit | Mfr's value | When enabled |
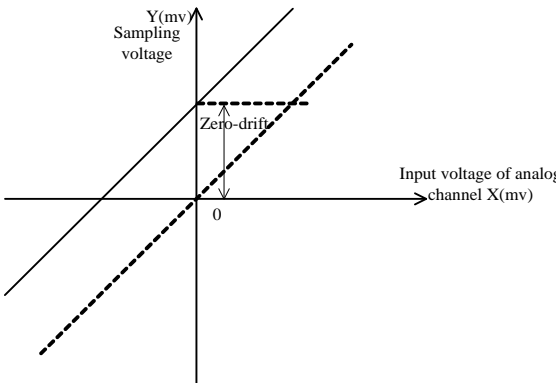
| | | | | |
|---|---------|--|---|---------------------|
| | 0~±5000 | 1mv | 0 | Effective Immediate |
| Analog torque command zero drift compensation is to eliminate analog torque command zero drift. The setting method is as following: (1) Short-connect AI2 to AGND. (2) At the mode of analog torque, adjust Po403 to make Lo-28 to 0. Please refer to right figure: | |  | | |

| | | | | |
|-------|-----------------------|--------------|-------------|---------------------|
| Po406 | AI automatic zero set | | | Speed Torque |
| | Setting range | Setting unit | Mfr's value | When enabled |
| | 0~1 | N/A | 0 | Effective Immediate |

When AI automatic zero set function is used, please make sure analog input is 0V. If zero drift is too big, servo drive will trip into AL-21.

When using auto zero set function, make sure analog input is 0V, and set Po406 to 1, after about 3s, zero drift will auto compensate.

(4) Analog torque command filter

| | | | | |
|-------|--|--------------|-------------|---------------------|
| Po405 | Analog torque command filter time constant | | | Torque |
| | Setting range | Setting unit | Mfr's value | When enabled |
| | 1~30000 | 0.01ms | 200 | Effective Immediate |

This smoothens the speed command by applying a 1st-order filter to the analog speed command input. A value that is too large, however, will slow down response.

(5) Upper and lower limit setting of analog torque

The upper and lower limit setting of analog torque is the same with the setting method of analog speed mode, the setting parameters are different.

| | | | | |
|-------|---|--------------|-------------|-----------------------|
| Po434 | Torque corresponding to lower limit voltage in torque analog mode | | | Speed Torque Position |
| | Setting range | Setting unit | Mfr's value | When enabled |
| | -1000~1000 | 0.1% | -1000 | Effective Immediate |
| Po435 | Lower limit voltage in torque analog mode | | | Speed Torque Position |
| | Setting range | Setting unit | Mfr's value | When enabled |
| | -1000~1000 | 0.01V | -1000 | Effective Immediate |
| Po436 | Torque corresponding to upper limit voltage in torque analog mode | | | Speed Torque Position |
| | Setting range | Setting unit | Mfr's value | When enabled |

| | | | | |
|-------|---|--------------|-------------|--|
| | -1000~1000 | 0.1% | 1000 | Effective Immediate |
| Po437 | Upper limit voltage in torque analog mode | | | <input type="checkbox"/> Speed <input type="checkbox"/> Torque <input type="checkbox"/> Position |
| | Setting range | Setting unit | Mfr's value | When enabled |
| | -1000~1000 | 0.01V | 1000 | Effective Immediate |

Note: in analog torque mode, the formula of motor torque is:

Torque corresponding to lower limit voltage=Po401 value× Po434 value

Torque corresponding to upper limit voltage=Po401 value× Po436 value\

c) Input signal

| Signal name | Name | Terminals | Remarks |
|------------------------------------|------|-----------|-----------------------------|
| Analog torque command input | AS2 | CN3-25 | Analog torque command input |
| Grounding for analog | AGND | CN3-24 | |
| Range of input voltage: -10V~ +10V | | | |

6.3.2 Soft start


This function is used to converter step torque command to constant acceleration slope mode at torque mode.

1) Parameters setting

| | | | | |
|-------|------------------------|--------------|-------------|---------------------------------|
| Po212 | Torque increasing time | | | <input type="checkbox"/> Torque |
| | Setting range | Setting unit | Mfr's value | When enabled |
| | 0~30000 | 0.1ms | 0 | Effective Immediate |

| | | | | |
|-------|------------------------|--------------|-------------|---------------------------------|
| Po213 | Torque decreasing time | | | <input type="checkbox"/> Torque |
| | Setting range | Setting unit | Mfr's value | When enabled |
| | 0~30000 | 0.1ms | 0 | Effective Immediate |

2) Instructions of increasing/decreasing time

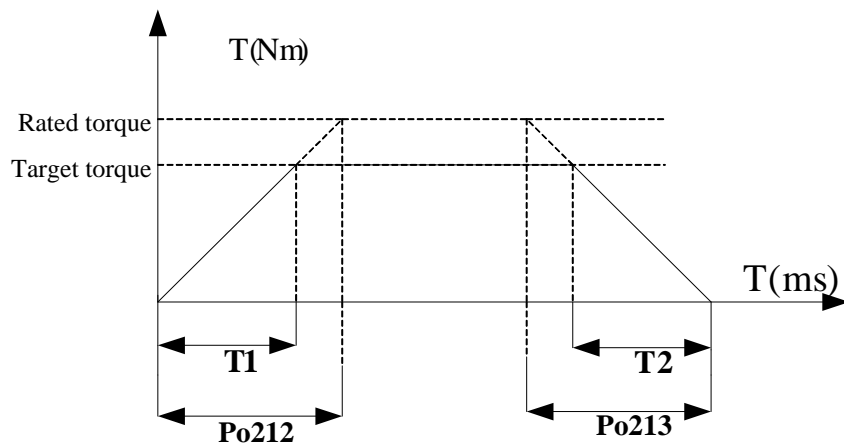


$T1$ and $T2$ are actual torque increasing and decreasing time, the unit is ms.

Actual increasing time $T1 = Po212 \times \text{target torque/rated torque}$

Actual decreasing time $T2 = Po213 \times \text{target torque} / \text{rated torque}$

6.3.3 Speed limiting at torque mode

This function serves to limit the servo motor speed during torque control to protect the machine.

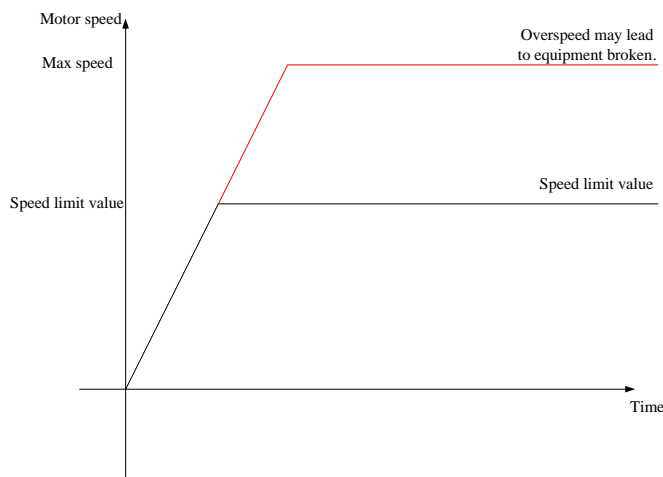

In torque mode, speed limit includes:

1. Internal speed limit
 2. Analog speed limit
 3. Speed limited by max rotation speed and actual motor max speed.
- The third limit method is constantly enabled, and the rest of methods are limited by some conditions.

(1) Speed limit during torque control

| Po210 | Speed Limit During Torque Control | | | | Torque |
|-------|-----------------------------------|--------------|-------------|---------------------|--------|
| | Setting range | Setting unit | Mfr's value | When enabled | |
| | 0~2 | N/A | 2 | Effective Immediate | |

| Parameter | Remarks |
|-----------|--|
| Po210=0 | Use the value set in Po211 as the speed limit. |
| Po210=1 | Inputs an analog voltage command as the servo motor speed limit value, this is valid for forward/reverse rotation. |
| Po210=2 | Use the lower value between max rotation speed Po002 and actual motor max rotation speed as the speed limit. |

(2) Related parameter

| Po211 | Internal speed limit | | | | Torque |
|-------|----------------------|--------------|-------------|---------------------|--------|
| | Setting range | Setting unit | Mfr's value | When enabled | |
| | 0~32000 | 0.1r/min | 20000 | Effective Immediate | |

6.3.4 Limiting Torque

The servodrive provides the following three methods for limiting output torque to protect the machine.

1. Internal max torque limit
2. Torque limiting by internal register controlled by terminals
3. Torque limiting by analog.

Internal max torque limit is constantly enabled, and the rest of methods are limited by some conditions. When three methods are all valid, the actual torque limit value is the smallest value of them.

(1) Internal max torque limit

| | | | | |
|-------|---------------------------------|--------------------|-------------|--|
| Po202 | Internal max torque limit value | | | <input type="checkbox"/> speed <input type="checkbox"/> position <input type="checkbox"/> torque |
| | Setting range | Setting unit | Mfr's value | When enabled |
| | 0~800 | 1% of rated torque | 200 | Effective Immediate |

Note: Too small a torque limit setting will result in insufficient torque.

(2) Torque limiting controlled by terminals

| Signal | Abbreviation | Remarks |
|----------------------|--------------|--------------------------------------|
| Forward torque limit | F-CL | To limit servo motor forward torque. |
| Reverse torque limit | R-CL | To limit servo motor reverse torque. |

When using forward torque limit function, a programmable terminal must be set to forward torque limit (F-CL).

When using reverse torque limit function, a programmable terminal must be set to reverse torque limit(R-CL).

| | | | | |
|-------|--------------------------|--------------------|-------------|--|
| Po208 | Forward max torque limit | | | <input type="checkbox"/> speed <input type="checkbox"/> position <input type="checkbox"/> torque |
| | Setting range | Setting unit | Mfr's value | When enabled |
| | 0~800 | 1% of rated torque | 100 | Effective Immediate |

| | | | | |
|-------|--------------------------|--------------|-------------|--|
| Po209 | Reverse max torque limit | | | <input type="checkbox"/> speed <input type="checkbox"/> position <input type="checkbox"/> torque |
| | Setting range | Setting unit | Mfr's value | When enabled |
| | 0~800 | 1% of torque | 100 | Effective Immediate |

When the signal F-CL is valid, forward max torque limit value should be lower than Po208.

When the signal F-CL is valid, reverse max torque limit value should be lower than Po209.

Note: Too small a torque limit setting of Po208 and Po209 will result in insufficient torque.

(3) Torque limiting by analog

Torque limiting by analog is that torque is limited by the input voltage of analog torque terminal. Please refer to Po401 about the relationship between analog voltage and torque limiting value.

| | | | | |
|-------|---------------------------|--------------|-------------|--|
| Po203 | Torque limiting by analog | | | <input type="checkbox"/> speed <input type="checkbox"/> position <input type="checkbox"/> torque |
| | Setting range | Setting unit | Mfr's value | When enabled |
| | 0~1 | N/A | 0 | Effective Immediate |


When Po203=0, torque limiting by analog is invalid, when Po203=1, torque limiting by analog is valid.

There is no polarity in the input voltage of the analog voltage for torque limiting. The absolute values of both + and - voltages are input, and a torque limit value corresponding to that absolute value is applied in the forward or reverse direction.

6.3.5 Related output

1) Output signal in torque limiting

When torque is limited, DO terminal will output signal, and it is valid for forward/reverse running.

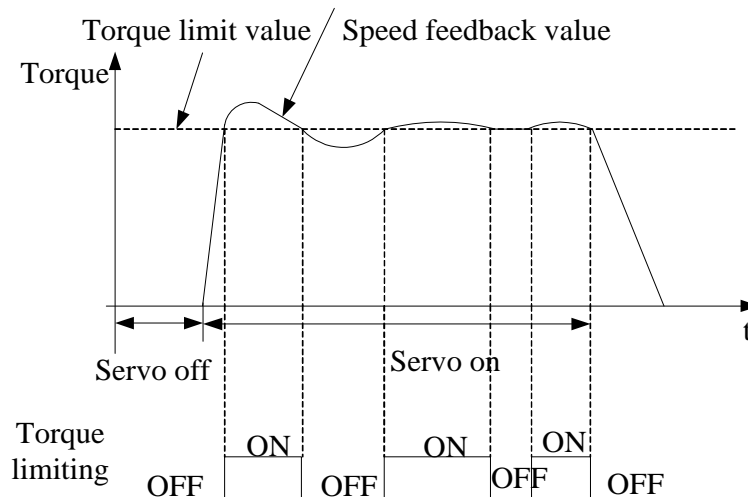

(1) Output signal

| Signal | Default terminal | Remarks |
|--------|------------------|--|
| T-LT | T-LT+ T-LT- | The signal is output when torque is limited. |

(2) Parameters setting

| | | | | |
|--------------|---|--------------|-------------|---------------------|
| Po237 | Target torque range Torque | | | |
| | Setting range | Setting unit | Mfr's value | When enabled |
| | 1 ~ 50 | 1% | 2 | Effective Immediate |
| Po238 | Torque filter frequency Torque | | | |
| | Setting range | Setting unit | Mfr's value | When enabled |
| | 1 ~ 1000 | 0.1Hz | 10 | Effective Immediate |

6.4 Position pulse mode

Command unit: distinguishable minimum command, from the command PC/PLC gives to servo drive

Encoder unit: input command, treated by electric gear ratio

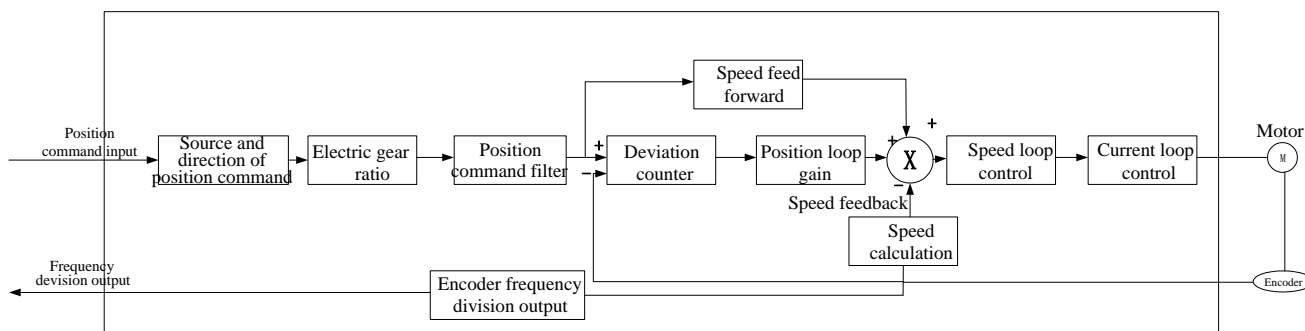


Fig 6.4.1 Position pulse mode block diagram

6.4.1 Parameters setting

Position pulse mode includes internal register position mode and external position mode, user can select it by Po001.

| Parameters | | Remarks |
|------------|-------|--|
| Po001 | d □ 1 | Control mode selection: position pulse mode. |
| | d □ 5 | Control mode selection: internal register position mode. |



- ★ Connect power supply of servo main circuit, power supply of control circuit, motor power cable and encoder cable correctly.
- ★ Jog trial operation by keypad.
- ★ Refer to Fig 6.4.2 and Fig 6.4.6 to connect DI/DO.
- ★ Set the related parameters of position mode.
- ★ Operating servo drive and make sure the running direction of servo motor is correct, and set related parameters of gain adjustment, please refer to Chapter 7.3.

1) External position pulse mode

a) Wiring diagram

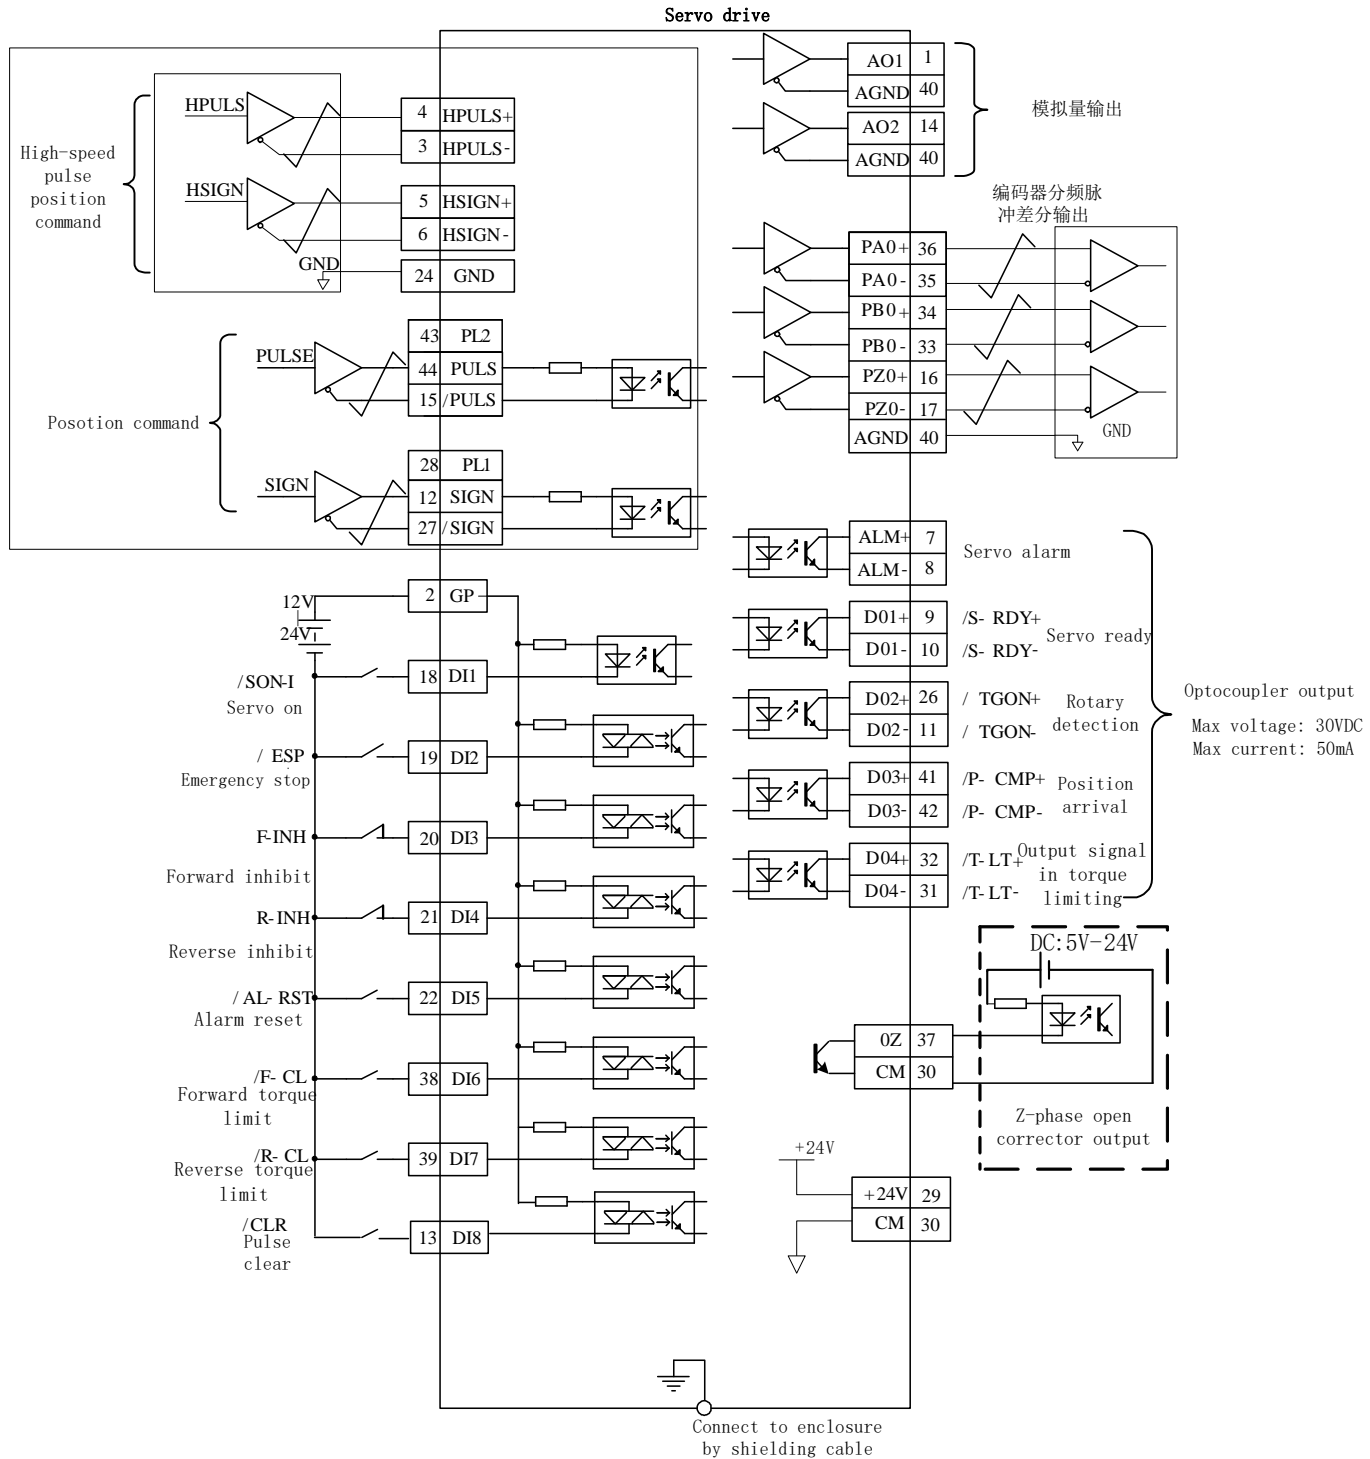



Fig 6.4.2 Wiring diagram of position pulse mode

Note:

- 1  represents twisted-pair wires.
- 2 Servo drive has internal 24 VDC power supply. But external 12~24VDC power supply is recommended.
- 3 DI1~DI8 are programmable input terminals, and DO1~DO4 are programmable output terminals. Users can redefine these terminals by parameter.
- 4 The status of position command is set by the parameter Po300, differential signal is shown in this example.
- 5 The position command is 5V differential signal, if user adopts other interface, please refer to 4.3.1

b) Related parameters


(1) control mode selection

| Parameters | | Remarks |
|------------|-------|--|
| Po001 | d □ 1 | Control mode selection: position pulse command mode. |

(2) Input pulse command source


| Parameters | | Remarks |
|------------|----------------|---|
| Po374 | Four-parameter | <div><div><div><div><div><div></div></div><div><div></div></div><div><div></div></div><div><div></div></div><div><div></div></div></div><div><div><div></div></div><div><div></div></div><div><div></div></div><div><div></div></div><div><div></div></div></div><div><div><div></div></div><div><div></div></div><div><div></div></div><div><div></div></div><div><div></div></div></div><div><div><div></div></div><div><div></div></div><div><div></div></div><div><div></div></div><div><div></div></div></div><div><div><div></div></div><div><div></div></div><div><div></div></div><div><div></div></div><div><div></div></div></div></div><div><div><div><div><div>A</div><div>Low-speed pulse source</div></div><div><div>0</div><div>off</div></div><div><div>1</div><div>on</div></div></div><div><div><div>B</div><div>High-speed pulse source</div></div><div><div>0</div><div>off</div></div><div><div>1</div><div>on</div></div></div><div><div><div>C</div><div>Internal position pulse source</div></div><div><div>0</div><div>off</div></div><div><div>1</div><div>on</div></div></div><div><div><div>D</div><div>Pulse source of electronic cam</div></div><div><div>0</div><div>off</div></div><div><div>1</div><div>on</div></div></div></div></div></div></div> |

Note: when setting Po374, user can set 1 to needed pulse source. If Po374.A=1, Po374.C=1, actual pulse command=low speed pulse command + internal position pulse command.

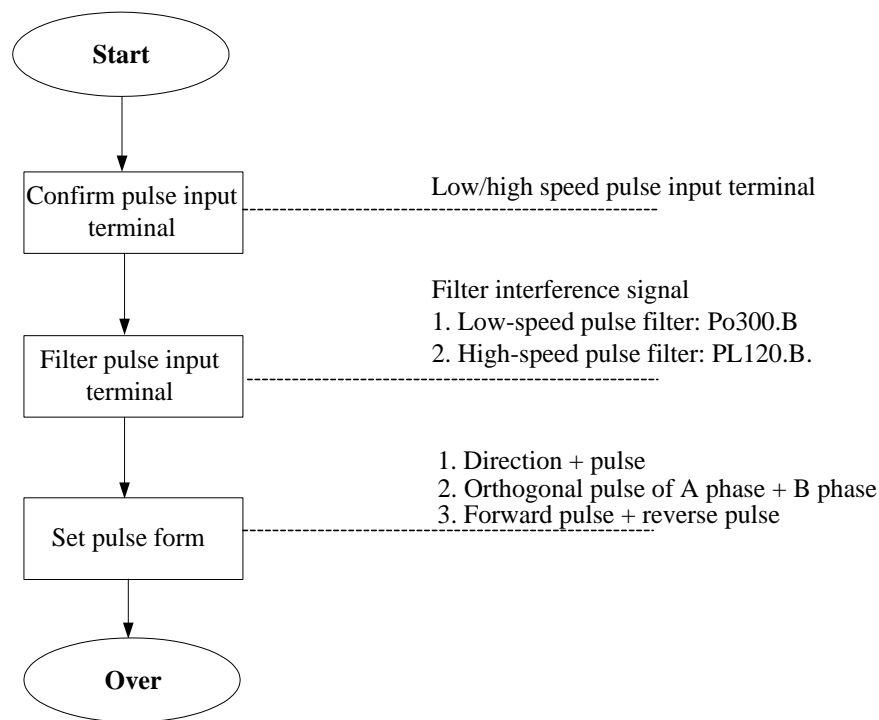

① Pulse command input terminal

Servo drive has 2 groups of pulse command input terminals.

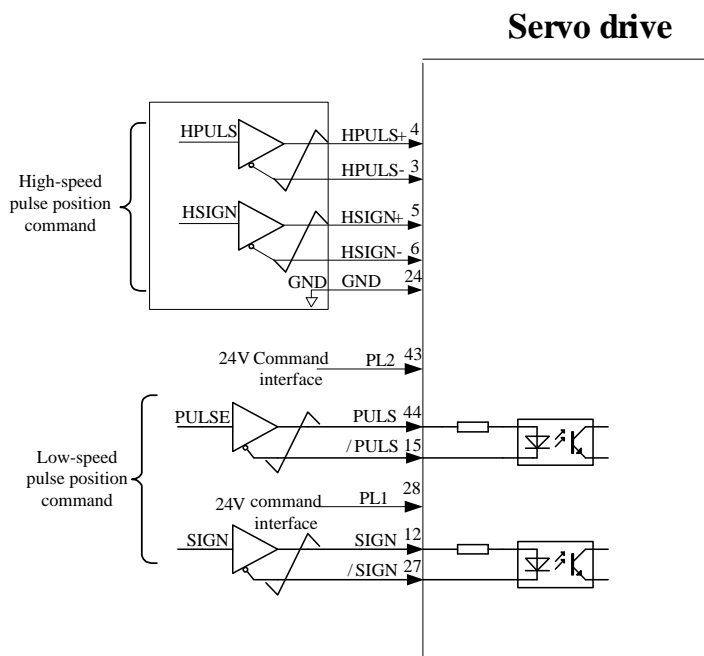

- Low-speed pulse input terminals (PL2, PULS+, PL1, SIGN+, SIGN-) can accept differential input signal (input pulse max frequency is 500Khz) and open collector input signal(input pulse max frequency is 200Khz).

- High-speed pulse input terminals (HPULS+, HPULS-,HSIGN+,HSIGN-) can accept 5V differential input signal(input pulse max frequency is 4Mhz).

② Pulse input pin filter

For low-speed pulse or high-speed pulse input terminal, filter time need to be set to filter input pulse command, in order to prevent interference signal.


| Parameter | | Remarks |
|-----------|--------|--|
| Po300 | b □□0□ | Pulse input filter frequency is 4MHz |
| | b □□1□ | Pulse input filter frequency is 2MHz |
| | b □□2□ | Pulse input filter frequency is 1MHz |
| | b □□3□ | Pulse input filter frequency is 500KHz |
| | b □□4□ | Pulse input filter frequency is 200KHz |
| | b □□5□ | Pulse input filter frequency is 150KHz |
| | b □□6□ | Pulse input filter frequency is 80kHz |

PL120

| | | | | | | |
|---|--------------|-------------|---------------------|-------|----------|--------|
| High-speed pulse control | | | | speed | position | torque |
| Setting range | Setting unit | Mfr's value | When enabled | | | |
| Four-parameter | N/A | 0000 | Effective Immediate | | | |
| <div><div><div><div><div>b</div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div></div></div><div><div><div><div>A</div><div>High - speed pulse type</div></div><div><div>0</div><div>Direction + Pulse</div></div><div><div>1</div><div>Dipulse</div></div><div><div>2</div><div>Orthogonal pulse</div></div></div><div><div><div>B</div><div>High-speed pulse filtering</div></div><div><div>0</div><div>8MHz</div></div><div><div>1</div><div>4MHz</div></div><div><div>2</div><div>2MHz</div></div><div><div>3</div><div>1MHz</div></div><div><div>4</div><div>500KHz</div></div><div><div>5</div><div>200KHz</div></div><div><div>6</div><div>150KHz</div></div></div><div><div><div>C</div><div>High-speed pulse direction</div></div><div><div>0</div><div>HPULS anti-logic, HSIGN anti-logic</div></div><div><div>1</div><div>HPULS positive logic, HSIGN positive logic</div></div><div><div>2</div><div>HPULS anti-logic, HSIGN positive logic</div></div><div><div>3</div><div>HPULS positive logic, HSIGN anti- logic</div></div><div><div>4</div><div>Exchange HPULS and HSIGN</div></div></div><div><div><div>D</div><div>DI7/DI8 filter time</div></div><div><div>0</div><div>800KHz</div></div><div><div>1</div><div>400KHz</div></div><div><div>2</div><div>200KHz</div></div><div><div>3</div><div>100KHz</div></div><div><div>4</div><div>40KHz</div></div><div><div>5</div><div>30KHz</div></div><div><div>6</div><div>16KHz</div></div><div><div>7</div><div>8 KHz</div></div><div><div>8</div><div>4 KHz</div></div></div></div></div></div> | | | | | | |

Pulse command filter frequency is 100K, and the time is 0.01ms. If there is clutter which time is shorter than

0.005ms, then clutter will be eliminated.

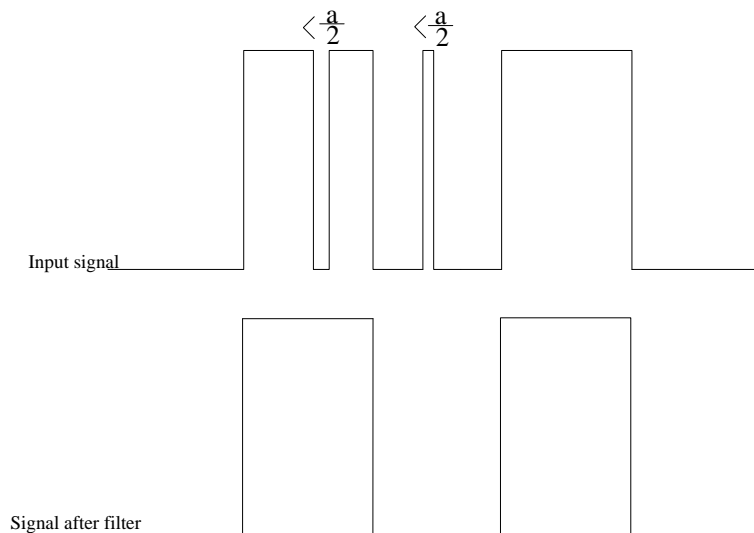

When pulse filter time is set to a , and there are clutter which time is shorter than $a/2$, then clutter will be eliminated.

③ Pulse command form

Pulse command has 3 kinds of forms: direction+pulse, A phase+B phase orthogonal pulse, and forward pulse/reverse pulse.

Take the example of positive logic of pulse command.

| Parameter | | Command pulse form | Forward rotation command | Reverse rotation command |
|-----------|---------|--|--------------------------|--------------------------|
| Po300 | b □□□0 | Signal +pulse | | |
| | b □□□1 | CW pulse+CCW pulse | | |
| | b □□□2 | Two-phase pulse train with 90° phase differential (A phase, B phase) | | |
| | Remarks | | | |
| | b □0□□ | PULS negative logic, SIGN negative logic | | |
| | b □1□□ | PULS positive logic, SIGN positive logic | | |
| | b □2□□ | PULS negative logic, SIGN positive logic | | |
| | b □3□□ | PULS positive logic, SIGN negative logic | | |
| | b □4□□ | PULS exchanges with SIGN. | | |

Modifying positive/negative logic will change motor rotation direction, please be carefully before modifying the

value

c) Input terminal

| Signal name | | Terminal | Remarks |
|-------------|--------|----------|---|
| PULS | PULS | CN3-44 | Low speed 5V pulse command input. |
| | / PULS | CN3-15 | |
| | HPULS+ | CN3-4 | High speed differential 5V pulse command input. |
| | HPULS- | CN3-3 | |
| SIGN | SIGN | CN3-12 | Low speed 5V pulse direction input. |
| | / SIGN | CN3-27 | |
| | HSIGN+ | CN3-5 | High speed differential 5V direction command input. |
| | HSIGN- | CN3-6 | |
| PL1 | PL1 | CN3-28 | 24V power pulse direction input. |
| | / SIGN | CN3-27 | |
| PL2 | PL2 | CN3-43 | 24Vpower pulse command input. |
| | / PULS | CN3-15 | |

2) Internal register position pulse mode

a) Wiring diagram



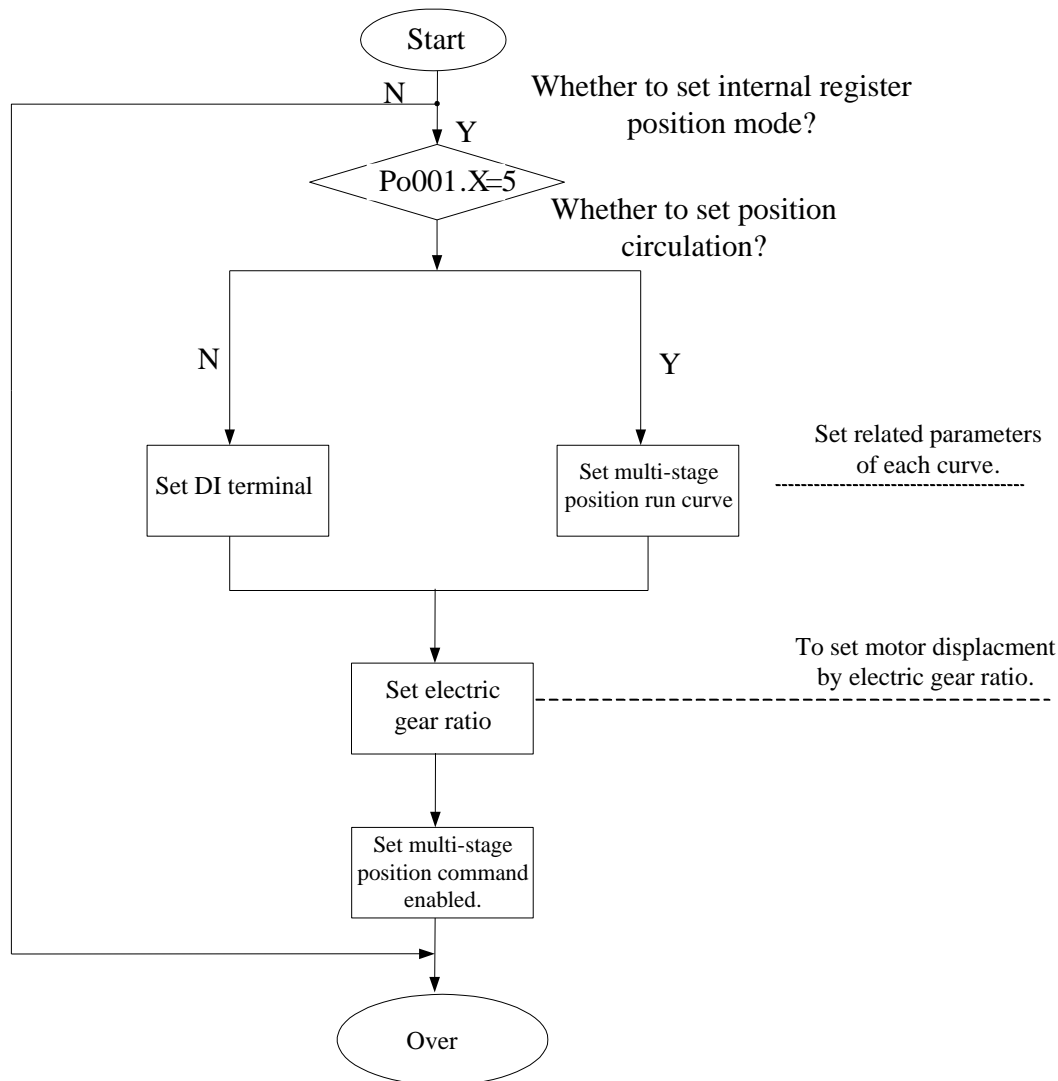


Fig 6.4.6 Wiring of internal position pulse mode

Note:

1.  represents twisted-pair wires.
2. Servo drive has internal 24 VDC power supply. But external 12~24VDC power supply is recommended.
3. DI1~DI8 are programmable input terminals, and DO1~DO4 are programmable output terminals. Users can redefine these terminals by parameter.

At internal position command mode, 8 preset position commands can be set by parameters (Po350-Po364), and can be activated by use of input contacts SD0~SD2. Multistage position means 8-stage position commands are saved in the servo drive, displacement, max running speed and acceleration/deceleration time can be set.

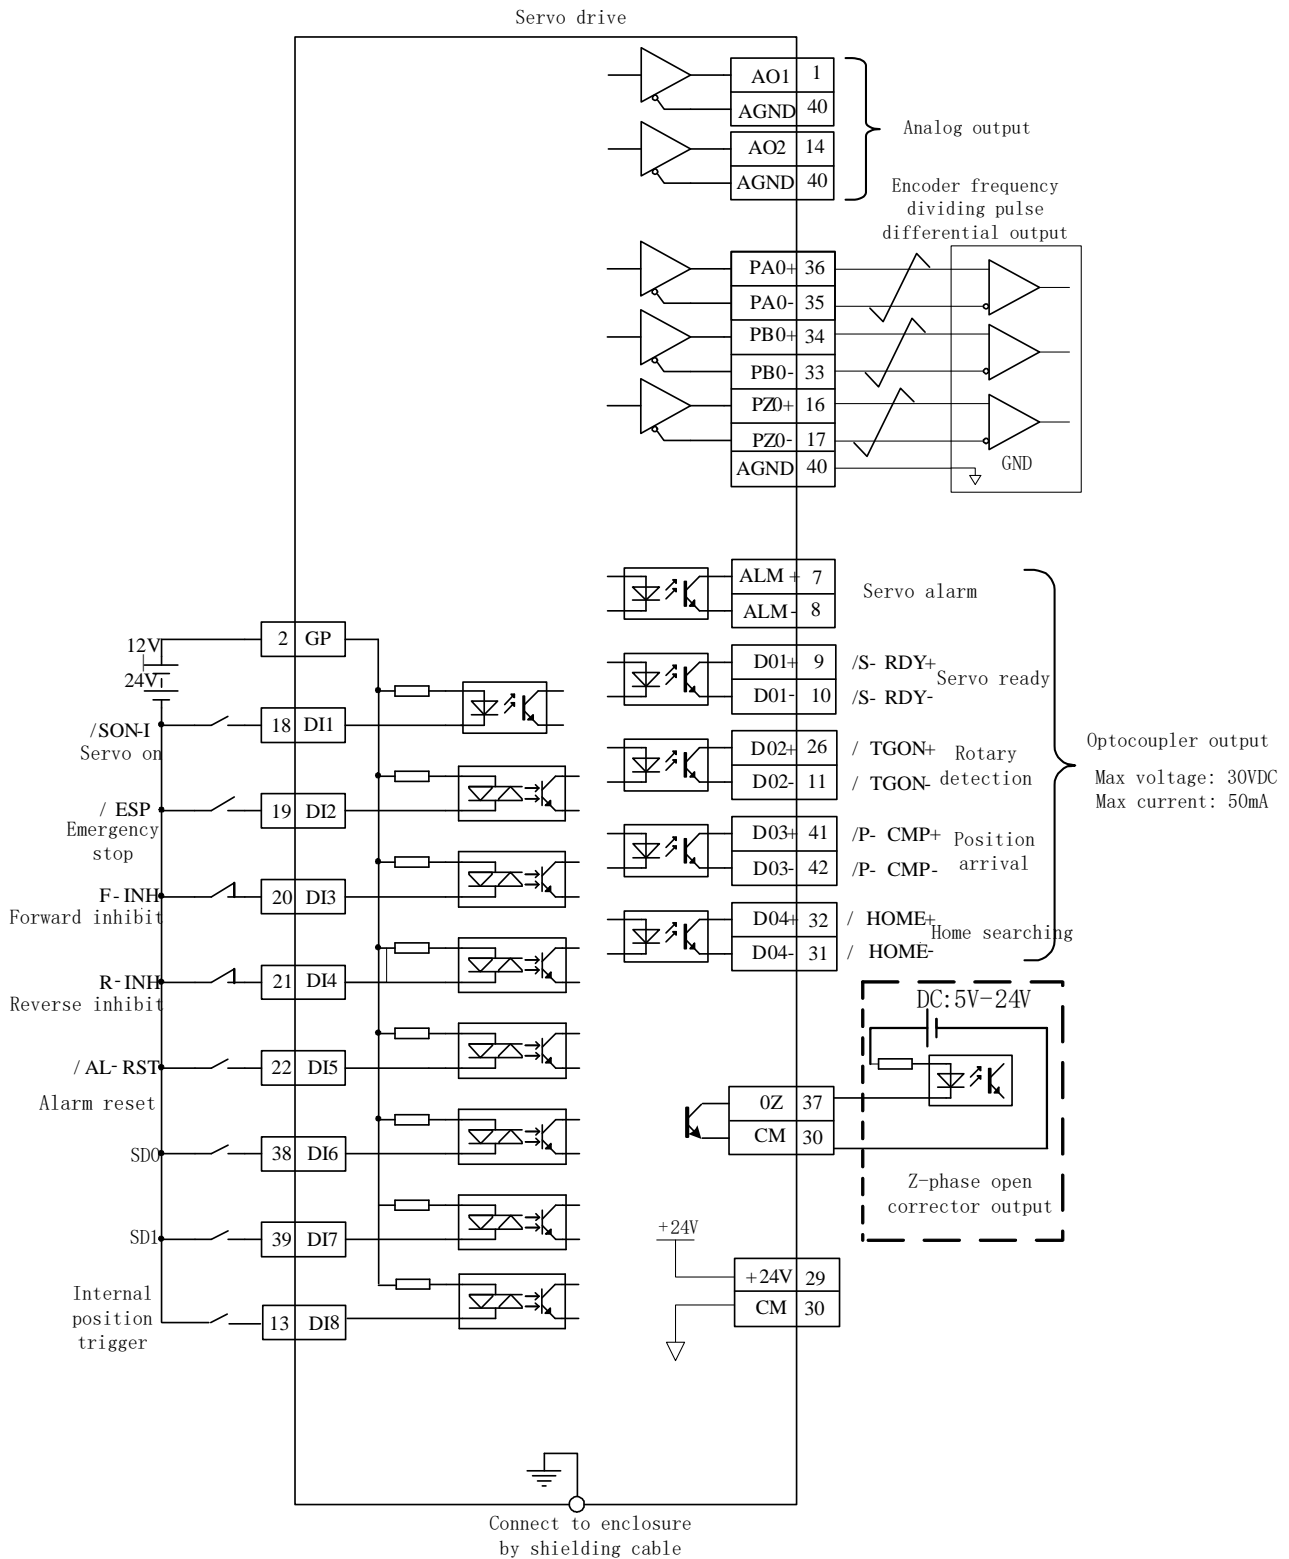

Preset positions are programmable and can be selected according to the table below:

| Position command | SD2 | SD1 | SD0 | Position command parameter | | Speed parameter |
|------------------|-----|-----|-----|------------------------------|-------|-----------------|
| 1 | 0 | 0 | 0 | Given position of position 1 | Po350 | Po330 |
| 2 | 0 | 0 | 1 | Given position of position 2 | Po352 | Po331 |

| | | | | | | |
|---|---|---|---|------------------------------|-------|-------|
| 3 | 0 | 1 | 0 | Given position of position 3 | Po354 | Po332 |
| 4 | 0 | 1 | 1 | Given position of position 4 | Po356 | Po333 |
| 5 | 1 | 0 | 0 | Given position of position 5 | Po358 | Po334 |
| 6 | 1 | 0 | 1 | Given position of position 6 | Po360 | Po335 |
| 7 | 1 | 1 | 0 | Given position of position 7 | Po362 | Po336 |
| 8 | 1 | 1 | 1 | Given position of position 8 | Po364 | Po337 |

Note: the default status of SD2, SD1 and SD0 is 000, 0 represents terminal open, 1 represents terminal closed.

When Po348.X=0, multi-stage position function is invalid. When Po348.X=1, multi-stage position function is valid according to setting position. The interval time between each position is set by Po366-Po373, cycle times is control by Po349. If interval time is 0, then it will switch to next group at max speed, when Po349=0, cycle continues.

b) Related parameters


| Parameters | | Remarks |
|--------------|-------|--|
| Po001 | d □ 5 | Control mode selection: internal register position mode. |

Internal register position mode includes incremental mode and absolute mode.


| Parameter | | Remarks |
|--------------|---|------------------|
| Po341 | 0 | Incremental mode |
| | 1 | Absolute mode |

Example below shows the difference between absolute and incremental moves.

For two pulse commands of 10 pulses position pulse command and followed with another 20 pulses, the travelled positions will be different.

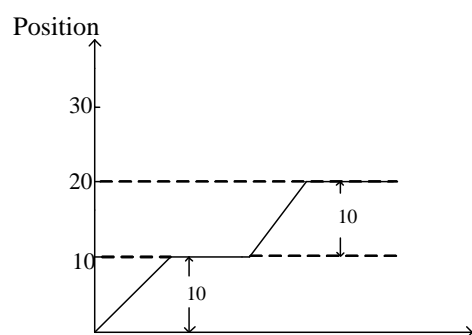

Absolute move

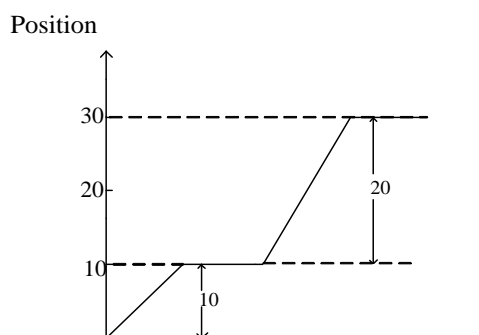

Incremental move

When So-30=1 (incremental move), battery protection will be automatically blocked, internal register position absolute move does not adopt encoder feedback absolute value position. When So-30=0 (absolute move), internal register position absolute move will adopt encoder feedback absolute position.

Note: The above function of So-30 is only valid for absolute value type servo drive.

Po348

| | | | | | | | | | | | | | | | | | |
|---|--------------------------------------|-------------|----------------------------|---|--------------------------------------|---|---------|---|-------|---|-----------------------|---|--------------|---|--------------|-----|-------|
| Setting of multistage internal position | | | Internal register position | | | | | | | | | | | | | | |
| Setting range | Setting unit | Mfr's value | When enabled | | | | | | | | | | | | | | |
| Two-parameter | N/A | 2 0 | Effective Immediate | | | | | | | | | | | | | | |
| <div><div><div>d</div><div>2</div><div>0</div></div><div><table><tr><td>X</td><td>Multistage position function setting</td></tr><tr><td>0</td><td>Invalid</td></tr><tr><td>1</td><td>Valid</td></tr></table><table><tr><td>Y</td><td>Stage numbers setting</td></tr><tr><td>2</td><td>2ed position</td></tr><tr><td>3</td><td>3th position</td></tr><tr><td>...</td><td>.....</td></tr></table></div></div> | | | | X | Multistage position function setting | 0 | Invalid | 1 | Valid | Y | Stage numbers setting | 2 | 2ed position | 3 | 3th position | ... | |
| X | Multistage position function setting | | | | | | | | | | | | | | | | |
| 0 | Invalid | | | | | | | | | | | | | | | | |
| 1 | Valid | | | | | | | | | | | | | | | | |
| Y | Stage numbers setting | | | | | | | | | | | | | | | | |
| 2 | 2ed position | | | | | | | | | | | | | | | | |
| 3 | 3th position | | | | | | | | | | | | | | | | |
| ... | | | | | | | | | | | | | | | | | |

| | | | | |
|--------------|--|--------------|-------------|----------------------------|
| Po342 | Internal position trigger | | | Internal register position |
| | Setting range | Setting unit | Mfr's value | When enabled |
| | 0: no trigger 1: trigger | N/A | 0 | Effective Immediate |
| | When Po342=1, internal position mode is triggered, after triggering, value of Po342 returns to 0 automatically. It is usually used for communication mode. | | | |

| | | | | |
|--------------|--|--------------|-------------|----------------------------|
| Po310 | Acceleration time of internal position 1 | | | Internal register position |
| | Setting range | Setting unit | Mfr's value | When enabled |
| | 0~32000 | ms | 100 | Effective Immediate |
| Po311 | Deceleration time of internal position 1 | | | Internal register position |
| | Setting range | Setting unit | Mfr's value | When enabled |
| | 0~32000 | ms | 100 | Effective Immediate |
| Po312 | Acceleration time of internal position 2 | | | Internal register position |
| | Setting range | Setting unit | Mfr's value | When enabled |
| | 0~32000 | ms | 100 | Effective Immediate |
| Po313 | Deceleration time of internal position 2 | | | Internal register position |
| | Setting range | Setting unit | Mfr's value | When enabled |
| | 0~32000 | ms | 100 | Effective Immediate |
| Po314 | Acceleration time of internal position 3 | | | Internal register position |
| | Setting range | Setting unit | Mfr's value | When enabled |
| | 0~32000 | ms | 100 | Effective Immediate |

| | | | | |
|--------------|--|--------------|-------------|---------------------|
| Po315 | Deceleration time of internal position 3 Internal register position | | | |
| | Setting range | Setting unit | Mfr's value | When enabled |
| | 0~32000 | ms | 100 | Effective Immediate |
| Po316 | Acceleration time of internal position 4 Internal register position | | | |
| | Setting range | Setting unit | Mfr's value | When enabled |
| | 0~32000 | ms | 100 | Effective Immediate |
| Po317 | Deceleration time of internal position 4 Internal register position | | | |
| | Setting range | Setting unit | Mfr's value | When enabled |
| | 0~32000 | ms | 100 | Effective Immediate |
| Po318 | Acceleration time of internal position 5 Internal register position | | | |
| | Setting range | Setting unit | Mfr's value | When enabled |
| | 0~32000 | ms | 100 | Effective Immediate |
| Po319 | Deceleration time of internal position 5 Internal register position | | | |
| | Setting range | Setting unit | Mfr's value | When enabled |
| | 0~32000 | ms | 100 | Effective Immediate |
| Po320 | Acceleration time of internal position 6 Internal register position | | | |
| | Setting range | Setting unit | Mfr's value | When enabled |
| | 0~32000 | ms | 100 | Effective Immediate |
| Po321 | Deceleration time of internal position 6 Internal register position | | | |
| | Setting range | Setting unit | Mfr's value | When enabled |
| | 0~32000 | ms | 100 | Effective Immediate |
| Po322 | Acceleration time of internal position 7 Internal register position | | | |
| | Setting range | Setting unit | Mfr's value | When enabled |
| | 0~32000 | ms | 100 | Effective Immediate |
| Po323 | Deceleration time of internal position 7 Internal register position | | | |
| | Setting range | Setting unit | Mfr's value | When enabled |
| | 0~32000 | ms | 100 | Effective Immediate |
| Po324 | Acceleration time of internal position 8 Internal register position | | | |
| | Setting range | Setting unit | Mfr's value | When enabled |
| | 0~32000 | ms | 100 | Effective Immediate |
| Po325 | Deceleration time of internal position 8 Internal register position | | | |
| | Setting range | Setting unit | Mfr's value | When enabled |
| | 0~32000 | ms | 100 | Effective Immediate |


The setting of position, accel/decel time and interval time for 8-stage position is as below:

| | | | | |
|--------------|---|--------------|-------------|---------------------|
| Po349 | Circulation times of multistage internal position Internal register position | | | |
| | Setting range | Setting unit | Mfr's value | When enabled |
| | 0~30000 | N/A | 0 | Effective Immediate |
| Po366 | Interval time 1 Internal register position | | | |
| | Setting range | Setting unit | Mfr's value | When enabled |
| | 0~32000 | ms | 0 | Effective Immediate |
| Po367 | Interval time 2 Internal register position | | | |
| | Setting range | Setting unit | Mfr's value | When enabled |
| | 0~32000 | ms | 0 | Effective Immediate |
| Po368 | Interval time 3 Internal register position | | | |
| | Setting range | Setting unit | Mfr's value | When enabled |
| | 0~32000 | ms | 0 | Effective Immediate |
| Po369 | Interval time 4 Internal register position | | | |
| | Setting range | Setting unit | Mfr's value | When enabled |
| | 0~32000 | ms | 0 | Effective Immediate |
| Po370 | Interval time 5 Internal register position | | | |
| | Setting range | Setting unit | Mfr's value | When enabled |
| | 0~32000 | ms | 0 | Effective Immediate |
| Po371 | Interval time 6 Internal register position | | | |
| | Setting range | Setting unit | Mfr's value | When enabled |
| | 0~32000 | ms | 0 | Effective Immediate |
| Po372 | Interval time 7 Internal register position | | | |
| | Setting range | Setting unit | Mfr's value | When enabled |
| | 0~32000 | ms | 0 | Effective Immediate |
| Po373 | Interval time 8 Internal register position | | | |
| | Setting range | Setting unit | Mfr's value | When enabled |
| | 0~32000 | ms | 0 | Effective Immediate |

c) Internal position sequence diagram


Once any preset position is selected by input contacts SD0~SD2 then require a trigger signal from the input contact CTRG, enabled trigger signal to start operation.

Diagram below shows an example for absolute move.

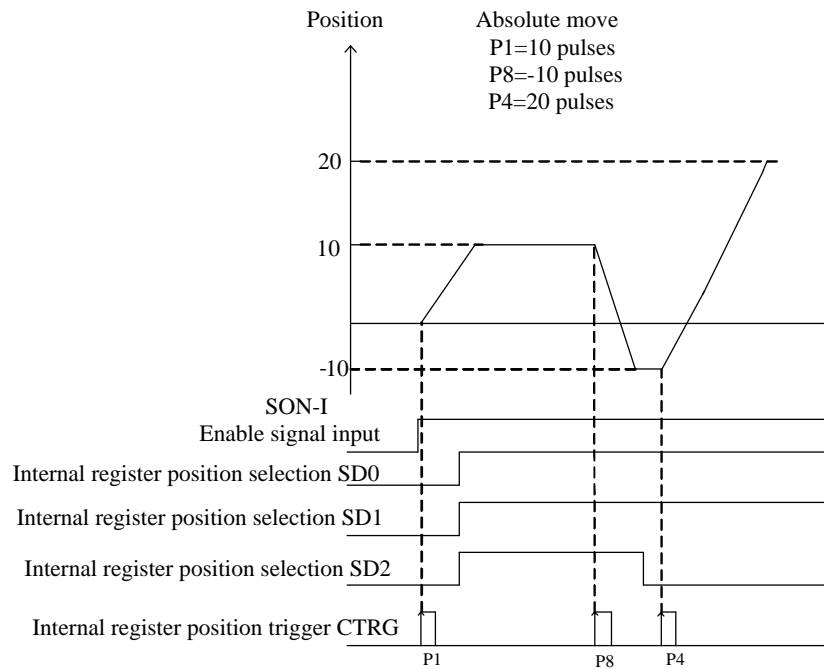


The Position command can be inhibited at any time by input contact signal **HOLD**.

Once **HOLD** is initiated the motor will decelerate and stop. As soon as the input contact **CTRG** is triggered again the original position command will be completed. Diagram below shows **HOLD** function with incremental move.

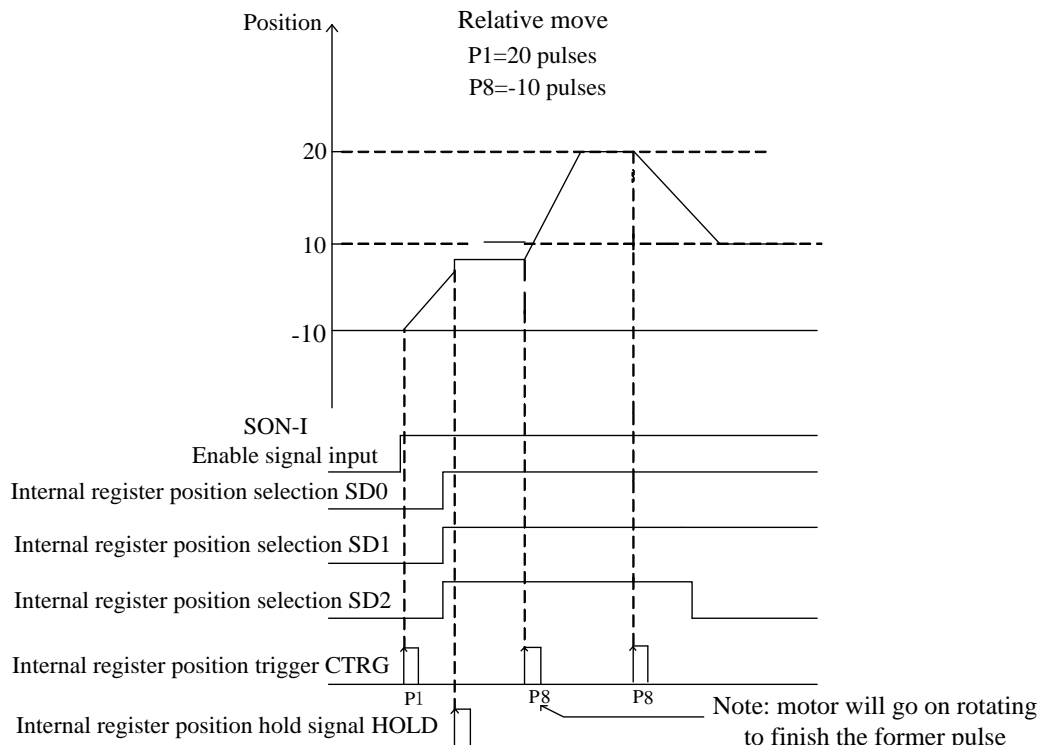


If the clear signal input is activated when a position command is in process then the motor will stop

Immediate and the remaining positioning pulses will be cleared. Once the CTRG input contact is activated again then a new position command will be started according to the selection of input contacts SD0~SD2. Diagram below shows clear function with incremental encoder.

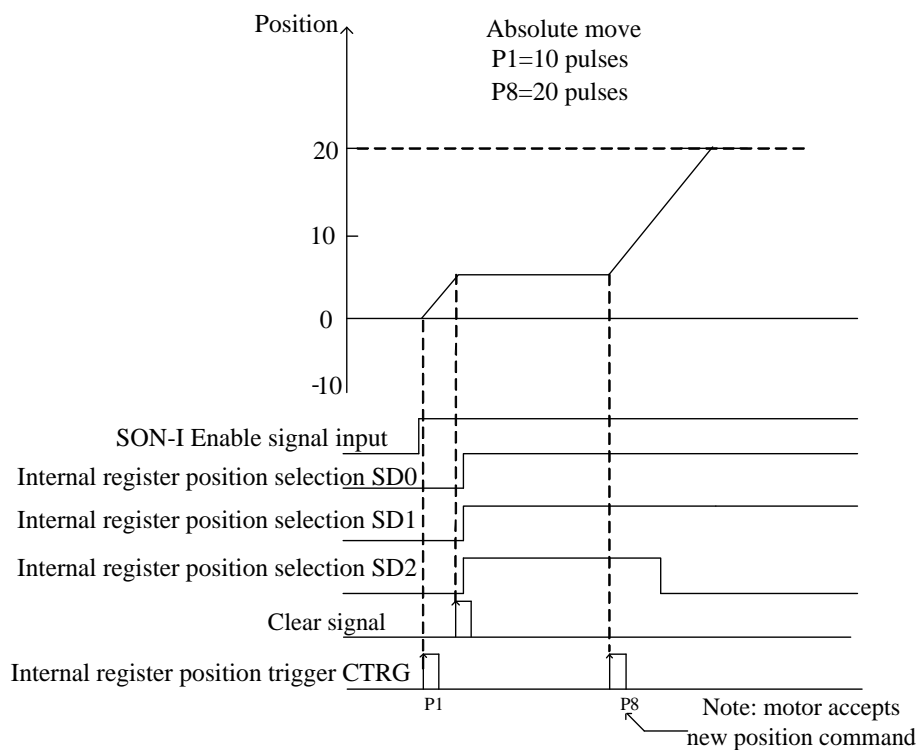


d) Multi-stage position circulation diagram


The diagram after setting interval time:

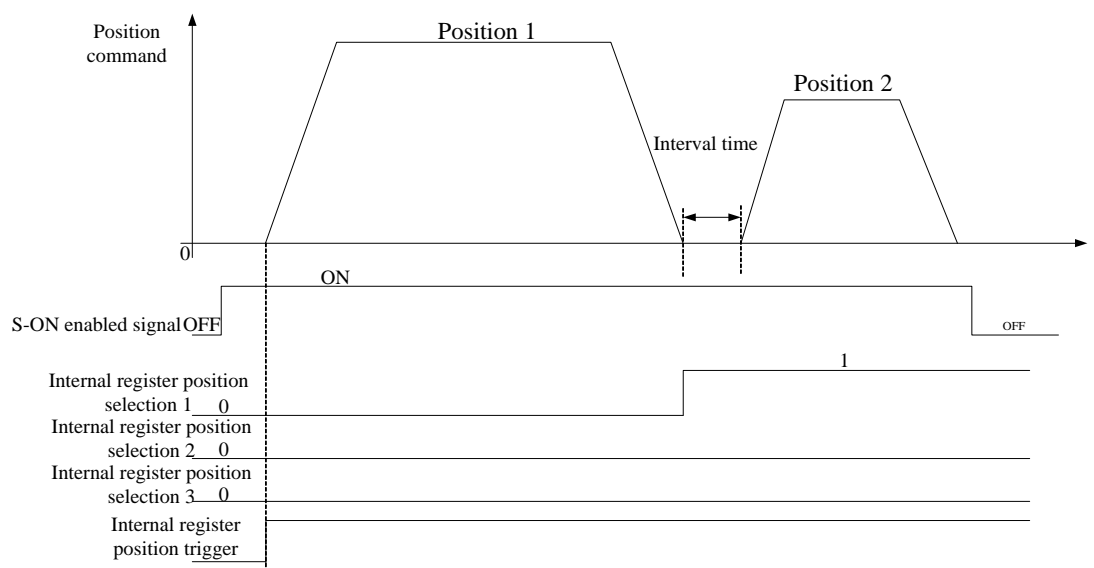


When interval time is 0, multi-stage position circulate diagram is as below:

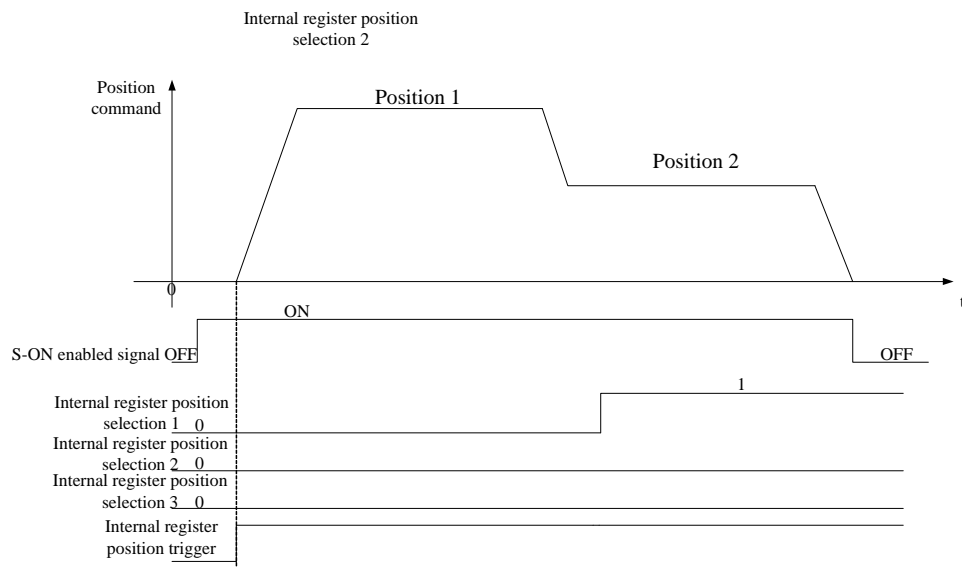


When termination signal is shown, the diagram is as below:

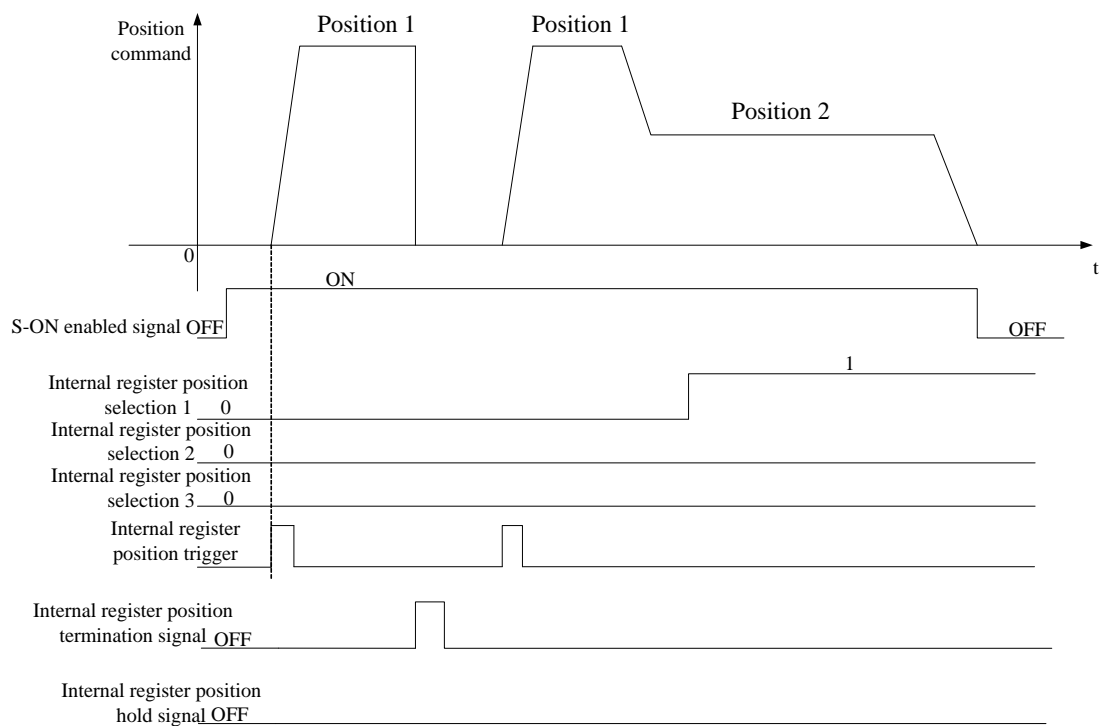

When Hold signal is shown, the diagram is as below:

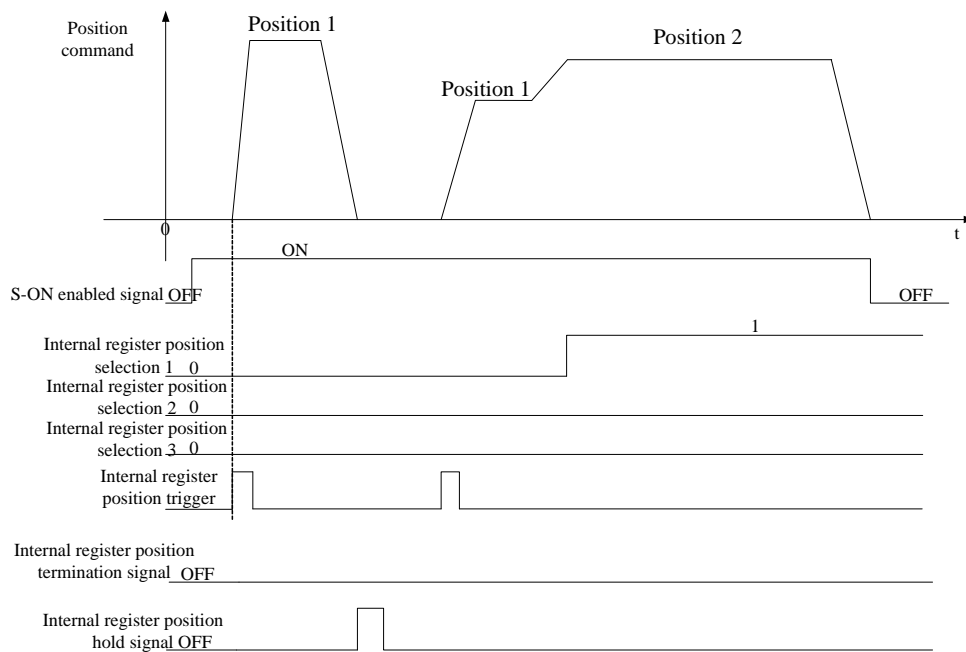

When enabled signal is OFF, the diagram is as below:

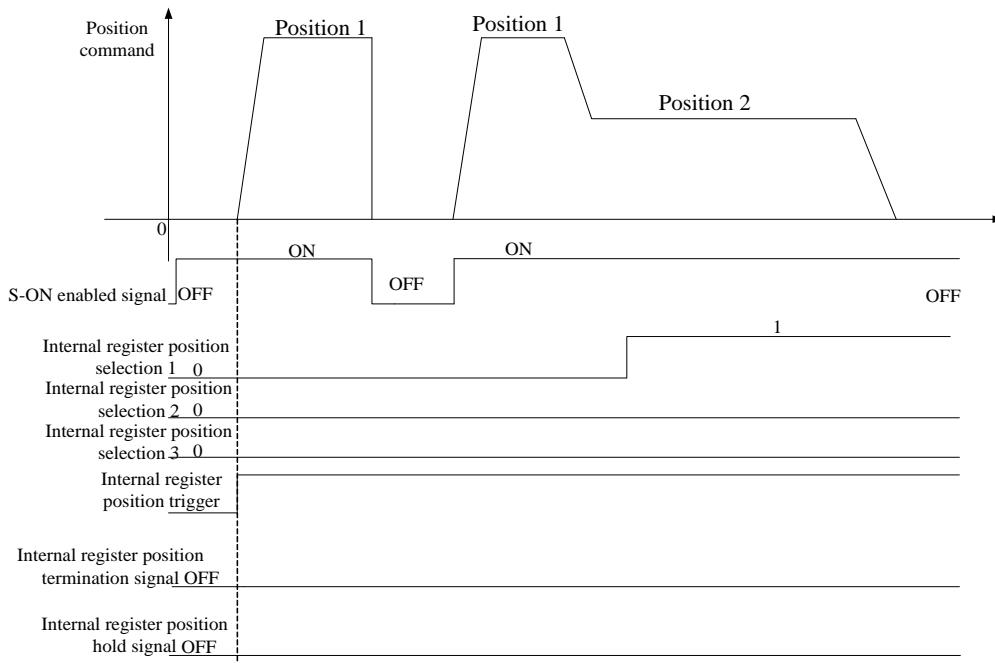

6.4.2 Setting electronic gear


1) Electronic gear

At the position control mode, input position command (command unit) is used to set load travel, motor position command (Encoder unit) is used to set motor travel. Electronic gear ratio is used to set proportional relation between motor position command and input position command.

2) Procedure for setting the electronic gear ratio

| Step | Operation | Description |
|------|---|--|
| 1 | Check machine specifications. | Check the reduction ratio, ball screw lead, and pulley diameter. |
| 2 | Check the encoder resolution of servo motor. | Check the number of encoder pulse for one revolution. |
| 3 | Travel per command pulse | Determine the travel per command pulse from the command controller |
| 4 | Calculate the number of command pulse per load shaft revolution | Calculate the number of command pulse for turning load shaft one revolution based on the previously determined command unit. |
| 5 | Calculate the electronic gear ratio. | Use the electronic gear ratio equation to calculate the ratio |
| 6 | Set parameters. | Set parameters using the calculated values. |

Setting parameters procedure is as below:

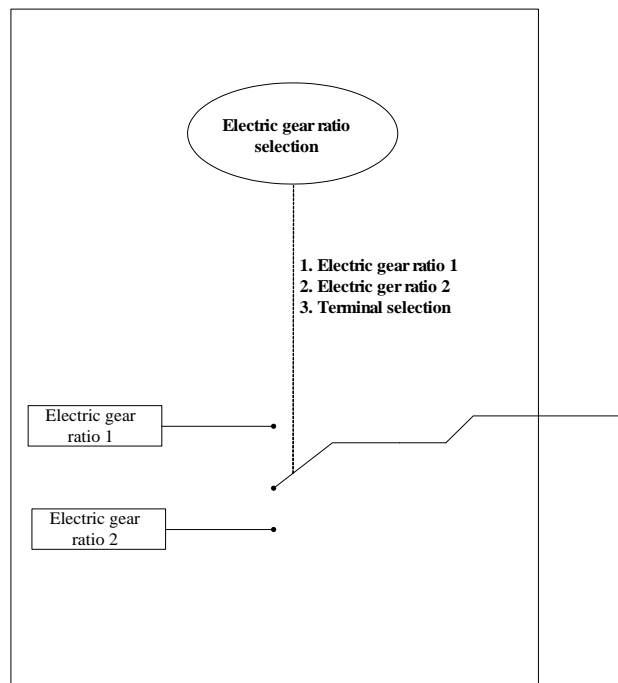

When Po304 and Po346 are not 0, electronic gear ratio equals to Po304/Po305 (Po344/Po346). If Po304 (Po344)=0, pulse numbers of motor rotating a rotation is controlled by Po305 (Po304).

3) Related parameters

It needs 131072 pulses from servo drive to make a 17bit encoder rotate a rotation (when electronic gear is 1).

① Function code

| Po304 | 1 st group electronic gear numerator | | | | Position |
|-------|---|--------------|-------------|---------------------|----------|
| | Setting range | Setting unit | Mfr's value | When enabled | |
| | 0~65535 | N/A | 0 | Effective Immediate | |

| | | | | |
|--------------|---|--------------|-------------|---------------------|
| Po305 | 1 st electronic gear denominator Position | | | |
| | Setting range | Setting unit | Mfr's value | When enabled |
| | 1~65535 | N/A | 10000 | Effective Immediate |
| Po344 | 2 ^{ed} group electronic gear numerator Position | | | |
| | Setting range | Setting unit | Mfr's value | When enabled |
| | 0~2147483647 | N/A | 0 | Effective Immediate |
| Po346 | 2 ^{ed} electronic gear denominator Position | | | |
| | Setting range | Setting unit | Mfr's value | When enabled |
| | 1~2147483647 | N/A | 10000 | Effective Immediate |

② Electronic gear ratio switchover

If two groups of electronic gear ratio have large difference, motor speed fluctuates wildly when electronic gear ratio switchover. Po306 position command filter can smooth position switchover.

| | | | | |
|--------------|---|--------------|-------------|---------------------|
| Po339 | Electronic gear ratio selection Position | | | |
| | Setting range | Setting unit | Mfr's value | When enabled |
| | 0~2 | N/A | 0 | Effective Immediate |
| | 0: First electronic gear ratio | | | |
| | 1: Second electronic gear ratio | | | |
| | 2: Two groups of electronic gear ratio switchover | | | |

4) Instruction

The deceleration ratio is n/m, electronic gear numerator is B, and electronic gear denominator is A, so the setting value of electronic gear ratio is:

Note: The deceleration ratio is n/m where m is the rotation of the servo motor and n is the rotation of the load shaft.

$$B/A = \text{Po304} / \text{Po305} = (\text{No. of encoder pulses} \times 4 / \text{travel distance per load shaft rotation}) \times (m/n)$$

The actual meaning of electronic gear is:


$$\begin{array}{c} \text{Command pulse input} \\ \text{Pulses numbers are } X \end{array} \rightarrow \boxed{\frac{B}{A}} \xrightarrow{\text{Position command}} Y = X \times \frac{B}{A}$$

* If the ratio is outside the setting range, reduce the fraction (both numerator and denominator) until you obtain integers within the range. Be careful not to change the electronic gear ratio (B/A).

Electronic gear ratio setting range: $0.01 \leq \text{Electronic gear ratio } (B/A) \leq 100$

If the electronic gear ratio is outside this range, the control precision will decrease.

Ex : The following example shows electronic gear ratio settings for ball screw which pitch is 6mm.

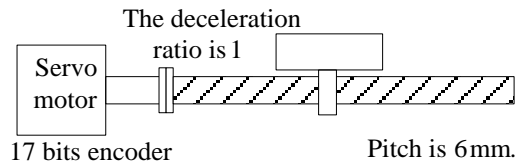**Fig 6-4-18 Setting electronic gear**

| Step | Operation | Calculation |
|------|---|---|
| 1 | Check machine specifications. | The deceleration ratio is 1:1 and the ball screw lead is 6mm. |
| 2 | Check the number of encoder pulses. | 17 bits encoder |
| 3 | Determine travel per command pulse | The command unit is 1 μ m. |
| 4 | Calculate the number of command pulse per load revolution | 6000 μ m/1 μ m=6000 |
| 5 | Calculate the electronic gear ratio. | $B/A=(131072/6000) \times 1/1$ |
| 6 | Set parameters. | Po304=8192 Po305=375 |

6.4.3 Position command filter

For the below situation, position command filter should be selected:

1. Position command of PC/PLC output is not dealt with by acceleration/deceleration.
2. The frequency of pulse command is high.
3. The electronic gear ratio is higher than 10 times.

| Po306 | Position loop filter time constant | | | | Position |
|--------------|------------------------------------|--------------|-------------|---------------------|----------|
| | Setting range | Setting unit | Mfr's value | When enabled | |
| | 1~10000 | ms | 1 | Effective Immediate | |

Setting position loop filter time constant correctly can make motor rotate smoothly. The parameter does not affect pulse numbers.

Filter frequency is used to inhibit high-frequency of disturbance pulses. Please do not set this value too low, avoid inhibiting effective high-frequency pulse command.


6.4.4 Soft start of position command

| Po343 | Acceleration/deceleration time in position mode | | | | Position |
|--------------|---|--------------|-------------|---------------------|----------|
| | Setting range | Setting unit | Mfr's value | When enabled | |
| | 0~10000 | ms | 0 | Effective Immediate | |

Increasing the value of Po343 can make motor accelerate or decelerate stability, but response time will be increased. Otherwise, decreasing the value of Po343 will reduce motor stability.


Actual acceleration time=Po343 X target speed/rated speed

Actual deceleration time=Po345 X target speed/rated speed

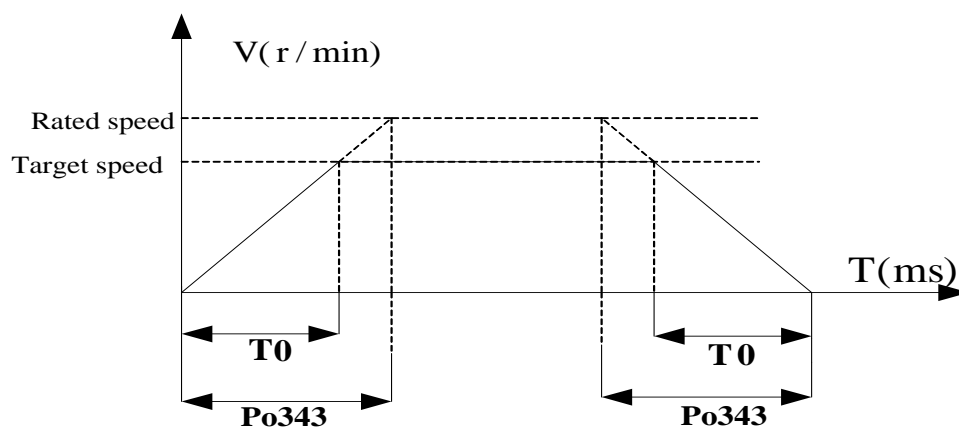

6.4.5 Position command inhibit function

This function inhibits the servodrive from counting input pulses during position control.

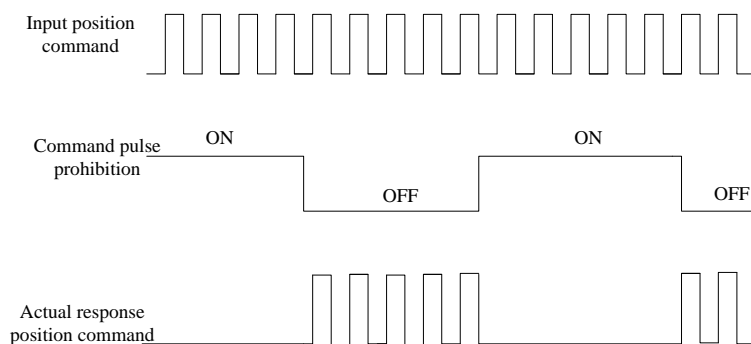

(1) Input signal

| Signal name | Code | Default terminal | Remarks |
|-----------------------|-------|-------------------|--|
| Command pulse inhibit | INH-P | Must be allocated | Inhibiting the servodrive from counting input pulses, position pulse command is invalid. |

(2) Setting parameters

| Parameters | | Remarks |
|--------------|--------|--|
| Po308 | b □□□0 | Terminal of inhibiting command pulse is invalid. |
| | b □□□1 | Terminal of inhibiting command pulse is valid. |

6.4.6 Command pulse clear function

This function clears position deviation register during position control.

(1) Input signal

| Signal name | Code | Default terminal | Remarks |
|-------------|------|--|--|
| Pulse clear | CLR | CN3-37 (at the mode of position pulse) | Clearing position deviation register during position control |

(2) Setting parameters

| Parameters | | Remarks |
|------------|--------|--------------------------------------|
| Po308 | b □□0□ | Command pulse clear function is OFF. |
| | b □□1□ | Command pulse clear function is ON. |

6.4.7 Frequency-division output function

Encoder pulse is frequency-division processed by servo drive internal circuit, and orthogonal differential signal will output. The frequency-division signal setting is as below:

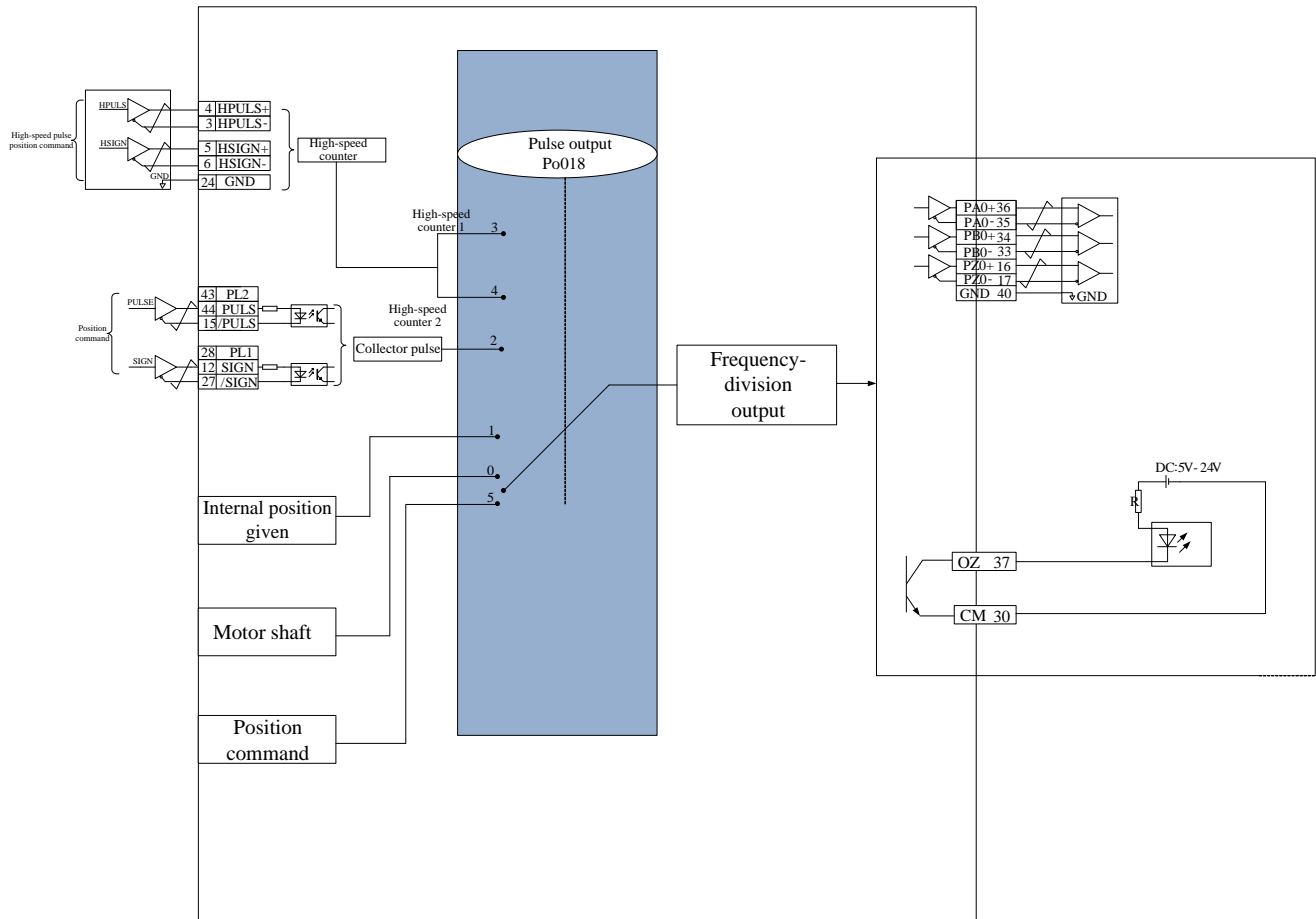


Fig 6.4.21 Frequency-division output diagram

(1) Output signal


Encoder pulse frequency-division signal has two output modes, one kind outputs PAO, PBO, PZO differential signal.

| Signal name | | Terminal code | Remarks |
|-------------|------|---------------|---|
| PA phase | PAO- | CN3 – 36 | Encoder A phase pulse frequency-division output |
| | PAO+ | CN3 – 35 | |
| PB phase | PBO- | CN3 – 34 | Encoder B phase pulse frequency-division output |

| | | | |
|----------|------|----------|---|
| | PBO+ | CN3 – 33 | |
| PZ phase | PZO- | CN3 – 16 | Encoder Z phase home pulse output (no frequency-division) |
| | PZO+ | CN3 – 17 | |
| | OZ | CN3-37 | Z phase open collector output |

When output signal is frequency-division, output pulse source (Po018) and phase (Po300) should be set by actual requirement. When output source is motor shaft, and motor rotates one revolution, A/B phase output pulse numbers is controlled by Po003 (Molecule of encoder frequency-division numbers), width is controlled by motor speed.

When output signal is Z phase open collector output, pulse output setting (Po018) should be set by actual requirement. At high-speed, Z pulse is narrow, and it can be adjusted by Po017.

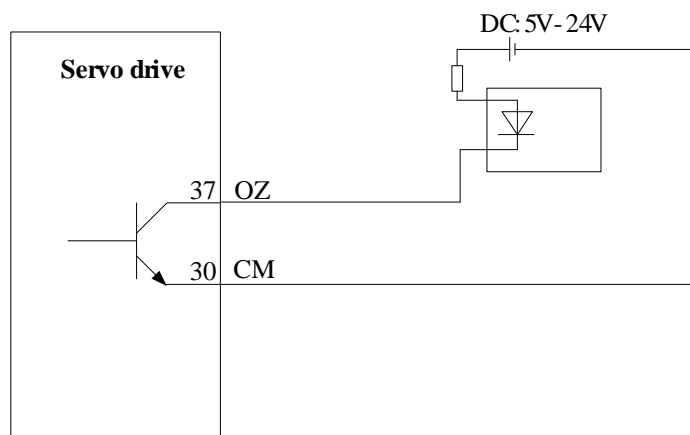

(2) Related parameters



| | | | | |
|-------|---|--------------|-------------|-----------------------|
| Po003 | Molecule of encoder frequency-division numbers | | | speed position torque |
| | Setting range | Setting unit | Mfr's value | When enabled |
| | 1~65535 | N/A | — | Effective Immediate |
| Po005 | Denominator of encoder frequency-division numbers | | | speed position torque |
| | Setting range | Setting unit | Mfr's value | When enabled |
| | 1~2147483647 | N/A | — | Effective Immediate |
| Po017 | Z pulse output width | | | speed position torque |
| | Setting range | Setting unit | Mfr's value | When enabled |
| | 50~30000 | N/A | — | Effective Immediate |
| Po018 | Pulse output setting | | | speed position torque |
| | Setting range | Setting unit | Mfr's value | When enabled |
| | Four-parameter | N/A | 0001 | Effective Immediate |

| | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
|-------|---|------------------|---|-------------------------|---|--------------------------|---|--------------------------|---|------------------------|---|-------------|---|---------------|---|---|---|-------------|---|-------------------------|---|-----------------------|---|----------------------|---|----------------------|---|------------------|
| | <div><div><div>b</div><div></div><div></div><div></div><div></div></div><div><table><tr><td>A</td><td>Z pulse output polarity</td></tr><tr><td>0</td><td>Negative polarity output</td></tr><tr><td>1</td><td>Positive polarity output</td></tr></table><table><tr><td>B</td><td>Z pulse command source</td></tr><tr><td>0</td><td>Motor shaft</td></tr><tr><td>1</td><td>Virtual shaft</td></tr></table><table><tr><td>C</td><td>Pulse frequency-division command source</td></tr><tr><td>0</td><td>Motor shaft</td></tr><tr><td>1</td><td>Internal position given</td></tr><tr><td>2</td><td>Collector pulse input</td></tr><tr><td>3</td><td>High-speed counter 1</td></tr><tr><td>4</td><td>High-speed counter 2</td></tr><tr><td>5</td><td>Position command</td></tr></table></div></div> | | A | Z pulse output polarity | 0 | Negative polarity output | 1 | Positive polarity output | B | Z pulse command source | 0 | Motor shaft | 1 | Virtual shaft | C | Pulse frequency-division command source | 0 | Motor shaft | 1 | Internal position given | 2 | Collector pulse input | 3 | High-speed counter 1 | 4 | High-speed counter 2 | 5 | Position command |
| A | Z pulse output polarity | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 0 | Negative polarity output | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 1 | Positive polarity output | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| B | Z pulse command source | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 0 | Motor shaft | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 1 | Virtual shaft | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| C | Pulse frequency-division command source | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 0 | Motor shaft | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 1 | Internal position given | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 2 | Collector pulse input | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 3 | High-speed counter 1 | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 4 | High-speed counter 2 | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 5 | Position command | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Po300 | b 0□□□ | CCW phase output | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | b 1□□□ | CW phase output | | | | | | | | | | | | | | | | | | | | | | | | | | |

Table 6.4.1 Encoder frequency-division output pulse

| Po300.D (output pulse phase) | Forward rotation Pulse output | Reverse rotation Pulse output |
|---------------------------------|--|--|
| 0 | <p>A phase is 90 degrees ahead of B phase.</p> | <p>B phase is 90 degrees ahead of A phase.</p> |
| 1 | <p>B phase is 90 degrees ahead of A phase.</p> | <p>A phase is 90 degrees ahead of B phase.</p> |

Table 6.4.2 Z phase open collector output

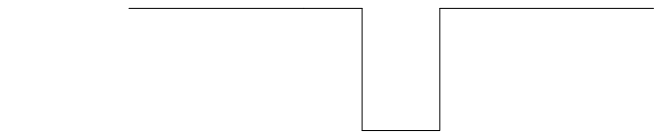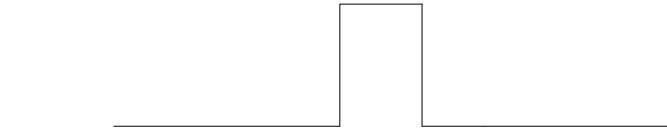
| Po018.A (output pulse phase) | Po017 (Z phase expansion) | Forward rotation Pulse output | Reverse rotation Pulse output |
|---------------------------------|------------------------------|--|----------------------------------|
| 0 | 500 |  | |
| 1 | 500 |  | |

(3) Wiring terminals

| Signal name | | Terminal code | Remarks |
|-------------|------|---------------|---|
| PA phase | PAO- | CN3-35 | Encoder A phase pulse frequency-division output |
| | PAO+ | CN3-36 | |
| PB phase | PBO- | CN3-33 | Encoder B phase pulse frequency-division output |
| | PBO+ | CN3-34 | |
| PZ phase | PZO- | CN3-17 | Encoder Z phase home pulse output (no frequency-division) |
| | PZO+ | CN3-16 | |
| | OZ | CN3-37 | Z phase open collector output |
| | CM | CN3-30 | |

(4) Example of pulse frequency-division signal

Example: when Po003=16, Po005=32768, the each circle and each phase output pulse numbers of encoder is 16.

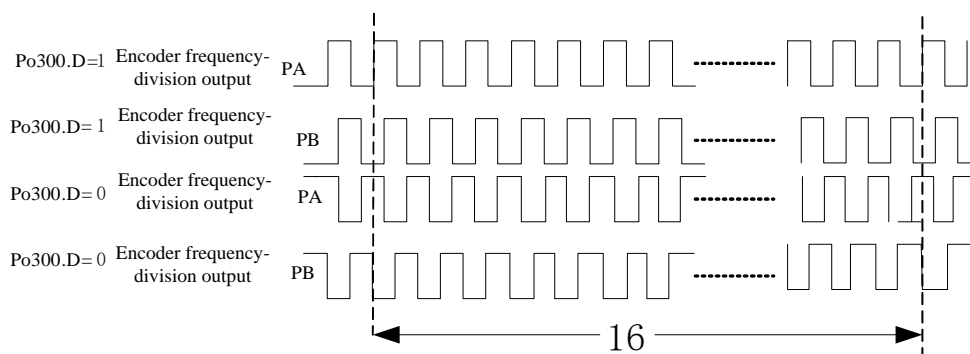**Fig 6-4-22 Encoder frequency-division output**

When output signal is open collector output, frequency must not be higher than 100KHZ, Po003 should not be set too high.

6.4.8 HomeSearchMode

1) Introduction

Homesearch is the function of location and stop action (clamping) in the home pulse (Z-phase) position of encoder. In homesearch function, input contact ORGP(external detector input terminal) or Z-pulse can be used as home reference point, forward search or reversal search is adopted.

Instructions: 1. Using this function when setting position of motor shaft and machinery;

2. In the state that motor shaft is connected with machinery;

3. Ensure that the drive is enabled when using this function.

2) Parameters instructions

| Po125 | Selection of home search function | | | | Position |
|-------|---|------|-------------|------------------|----------|
| | Setting Range | Unit | Mfr's value | Effect | |
| | 0: No home searching 1:Auto when power-on 2:I/O port trigger 3:Start Immediate | N/A | 0 | Immediate effect | |
| | | | | | |
| | | | | | |
| | | | | | |

| Name | Explanation | Remark |
|--------------|--|--------|
| Po119= b□□□0 | Reversal home searching | |
| Po119= b□□□1 | Forward home searching | |
| Po119= b□□0□ | Left-right position limitation as home reference | |
| Po119= b□□1□ | Input terminal ORGP as home reference | |
| Po119= b□□2□ | Nearest Z-phase pulse as home reference | |
| Po119= b□□3□ | Searching mechanical origin | |
| Po119= b□0□□ | Deceleration to stop after arriving at home reference | |
| Po119= b□1□□ | Searching Z signal at second speed with opposite direction after arriving at home reference | |
| Po119= b□2□□ | Searching Z signal at second speed with same direction after arriving at home reference | |
| Po119= b□3□□ | Searching the rising edge of input terminal ORGP as the Mechanical origin at the second speed with opposite direction after arriving at the input terminal ORGP. | |
| Po119= b0□□□ | Deceleration to stop after searching Z signal | |
| Po119= b1□□□ | Turn back to Z signal after searching Z signal | |

Note: Po119.C and Po119.D can only be set as 0 when using Left-right position limitation as origin reference.

| | | | | |
|--------------|--|--------------|-------------|------------------|
| Po120 | Home/Mechanical origin searching at first speed Position | | | |
| | Setting range | Setting unit | Mfr's value | Effect |
| | 0~20000 | 0.1r /min | 500 | Immediate effect |
| Po121 | Home/Mechanical origin searching at second speed Position | | | |
| | Setting range | Setting unit | Mfr's value | Effect |
| | 0~10000 | 0.1r /min | 200 | Immediate effect |
| Po122 | Home/Mechanical origin searching acceleration/deceleration time Position | | | |
| | Setting range | Setting unit | Mfr's value | Effect |
| | 0~1000 | ms | 0 | Immediate effect |
| Po123 | Home searching offset pulse Position | | | |
| | Setting range | Setting unit | Mfr's value | Effect |
| | -2147483647~+2147483647 | N/A | 0 | Immediate effect |
| Po128 | Home searching signal duration time Speed Position Torque | | | |
| | Setting range | Setting unit | Mfr's value | Effect |
| | 1~30000 | ms | 100 | Immediate effect |
| Po129 | Home searching timeout Speed Position Torque | | | |
| | Setting range | Setting unit | Mfr's value | Effect |
| | 10~65535 | ms | 10000 | Immediate effect |

3) Home Search Mode Start Sequence Chart

1. When servo drive is power-on, home search mode executes automatically (Po125=1)

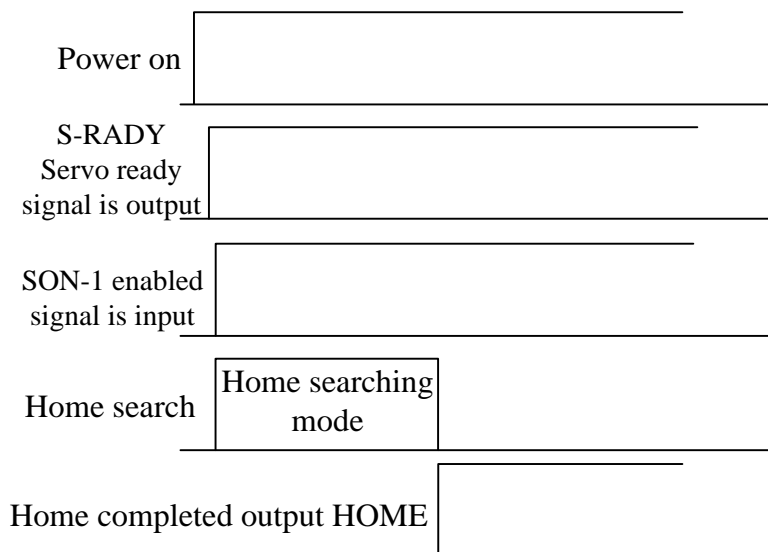


Fig 6.4.23 Home Search Mode Start Sequence Chart

2. Sequence Chart when inputting entry point (Po125=2)

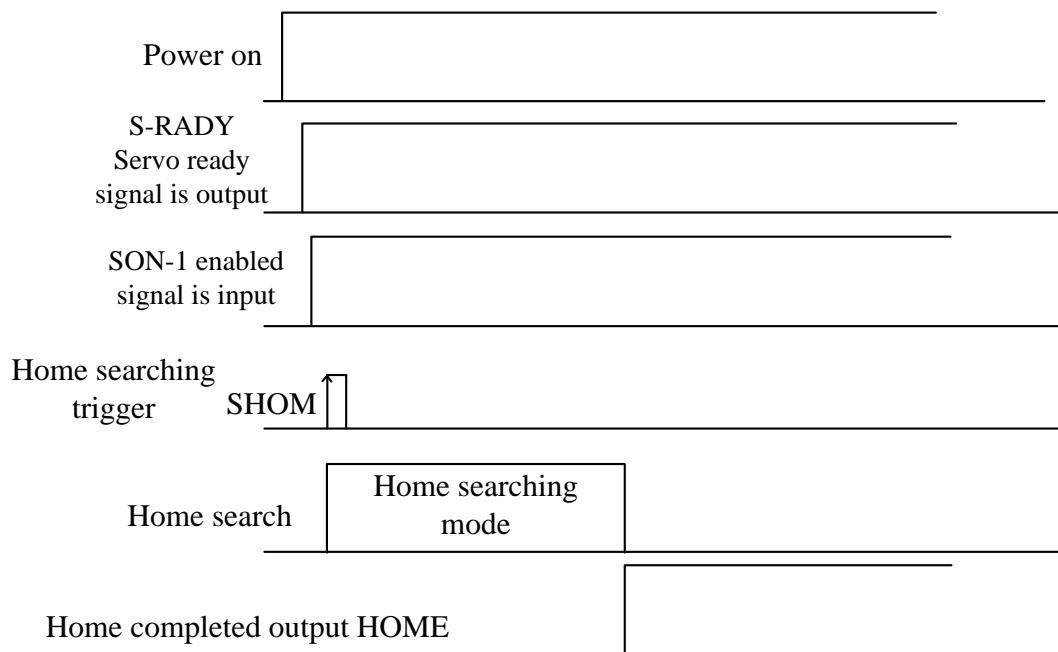


Fig 6.4.24 Sequence Chart when inputting entry point

4) Home Search Mode speed/position Sequence Chart

1. Po119.A= b□□□1 (Forward searching home reference at first speed after starting home search)

Po119.C= b□1□□1 (Return back to search the nearest Z-phase pulse as Mechanical origin at the second speed with opposite direction after searching home reference)

Po125.A= b□□□2 (Input I/O port to trigger home search)

Po119.D= b1□□□ (Return back to Mechanical origin)

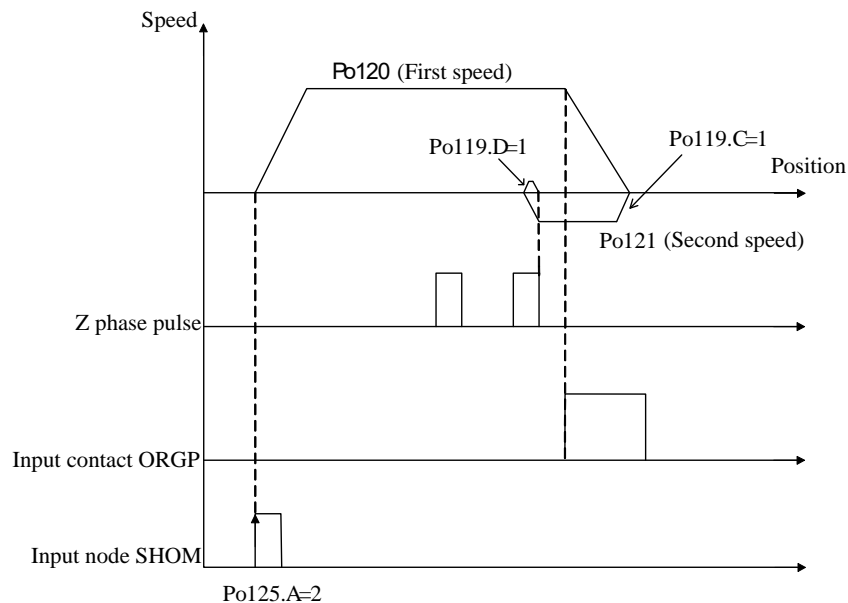


Fig 6.4.25 Forward home search at first speed

2. Po119.A= b□□□0 (Reversal searching home reference at first speed after starting home search)

Po119.C= b1□□□(Return back to search the nearest Z-phase pulse as Mechanical origin at the second speed with opposite direction after searching home reference)

Po125.A= b□□□2(Input I/O port to trigger home search)

Po119.D= b1□□□(Return back to Mechanical origin)

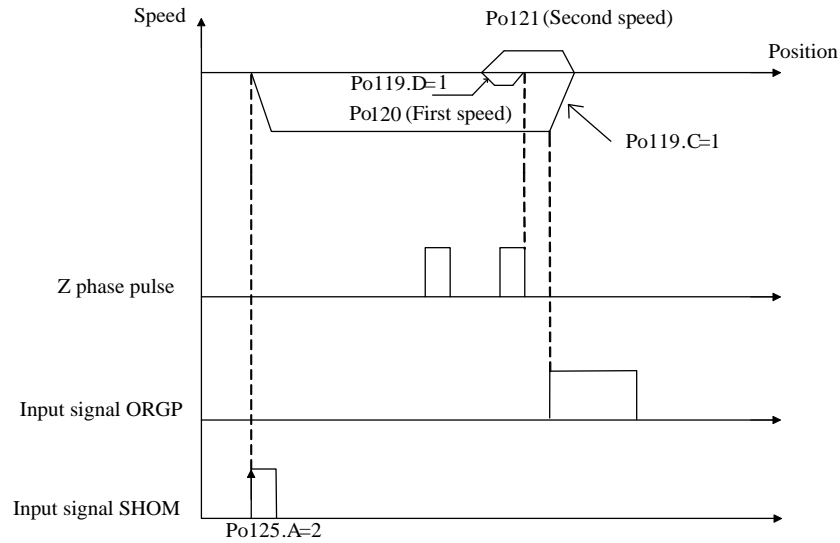


Fig 6.4.26 Reversal searching home at first speed

3. Po119.A= b□□□1(Forward searching home reference at first speed after starting home search)

Po119.C= b□2□□(Return back to search the nearest Z-phase pulse as Mechanical origin at the second speed with same direction after searching home reference)

Po125.A= b□□□2(Input I/O port to trigger home search)

Po119.D= b1□□□(Return back to Mechanical origin)

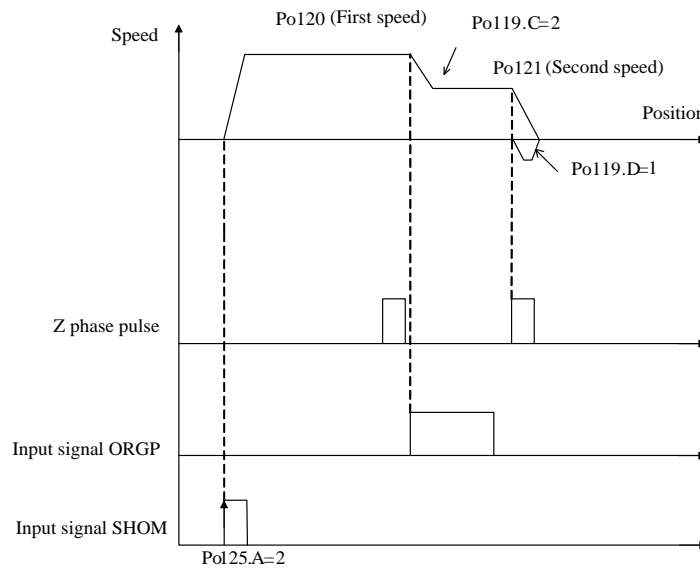


Fig 6.4.27 Forward home search at first speed

4. Po119.A= b□□□0 (Reversal searching home reference at first speed after starting home search)

Po119.C= b□2□□(Return back to search the nearest Z-phase pulse as Mechanical origin at second speed with same direction after searching home reference)

Po125.A= b□□□2(Input I/O port to trigger home search)

Po119.D= b1□□□(Return back to Mechanical origin)

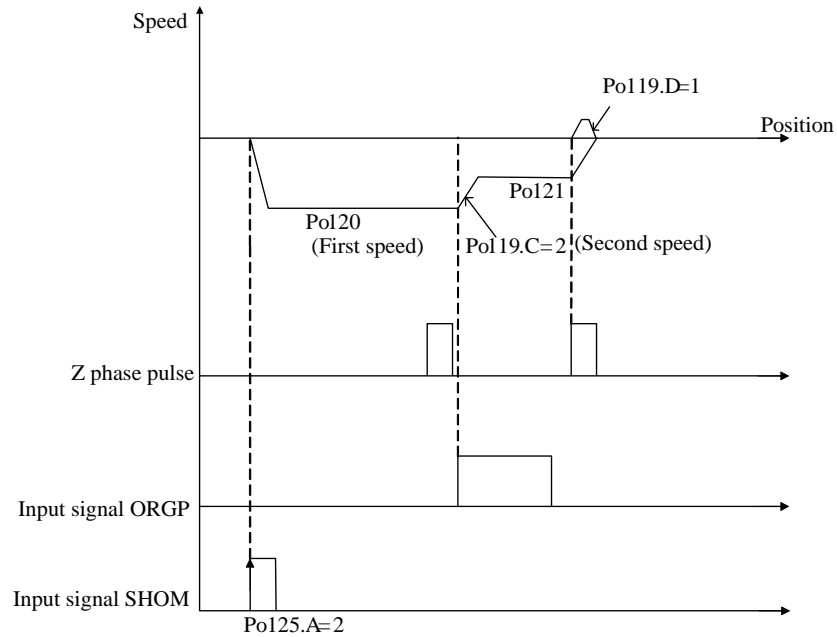


Fig 6.4.28 Reversal home searching at first speed

5. Po119.A= b□□□1 (Forward searching home reference at first speed after starting home search)

Po119.B= b□□2□(Searching Z-phase pulse as Mechanical origin)

Po125.A= b□□□2(Input I/O port to trigger home search mode)

Po119.D= b1□□□(Return back to Mechanical origin)

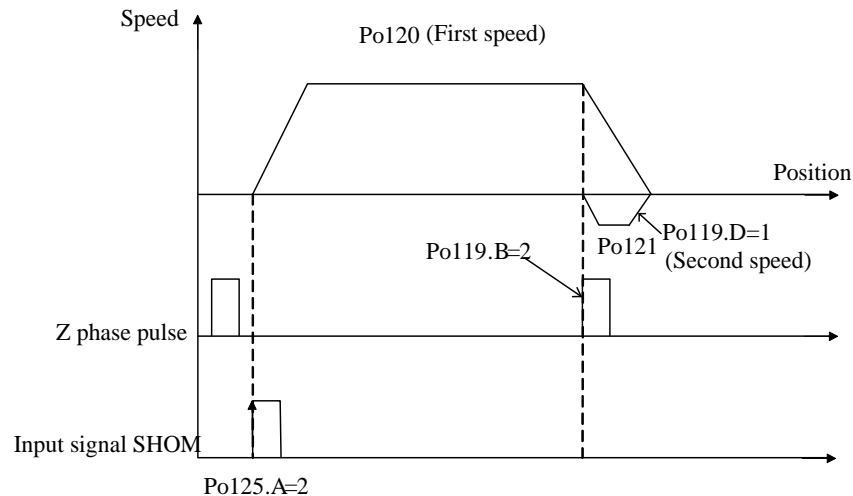


Fig 6.4.29 Forward home search at first speed

6. Po119.A= b□□□0(Reversal searching home reference at first speed after starting home search)

Po119.B= b□□2□(Search Z-phase pulse as Mechanical origin)

Po125.A= b□□□2(Input I/O port to trigger home search mode)

Po119.D= b1□□□(Return back to Mechanical origin)

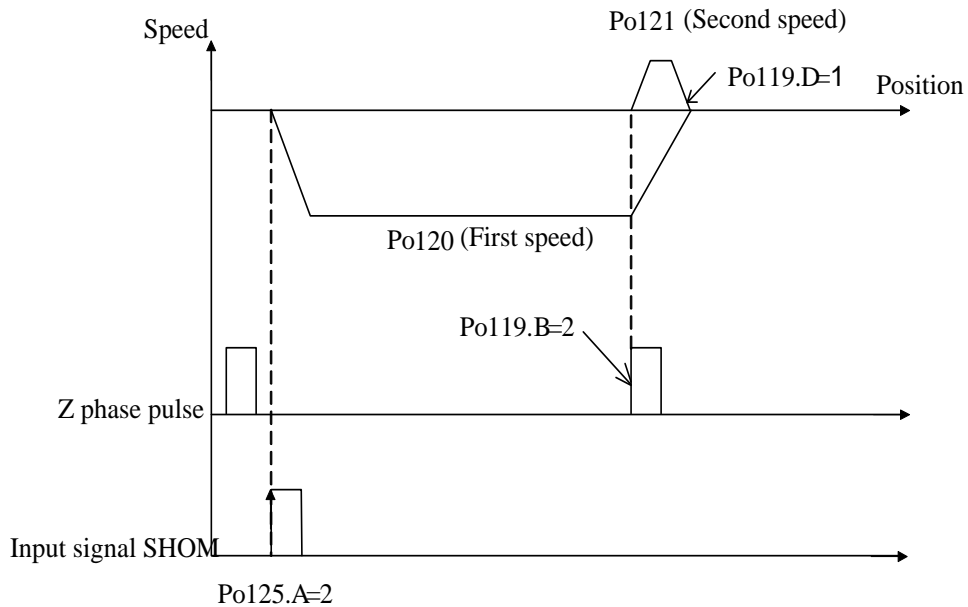


Fig 6.4.30 Reversal home searching at first speed

7. Po119.A= b□□□1(Forward home searching at first speed after starting home search)

Po119.C= b□3□□(Search the rising edge of home reference ORGP as Mechanical origin)

Po125.A= b□□□2(Input I/O port to trigger home search mode)

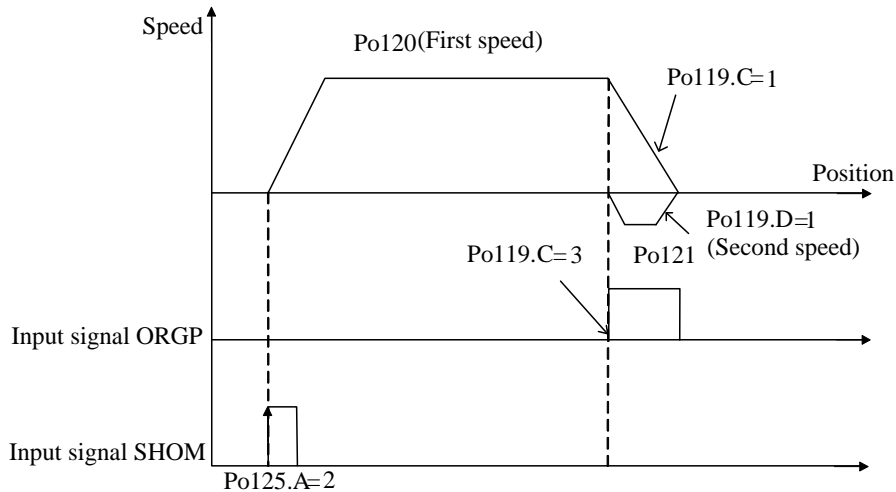


Fig 6.4.31 Forward home searching at first speed

8. Po119.A= b□□□0(Reversal home searching at first speed after starting home search)

Po119.C= b□3□□(Search the rising edge of home reference ORGP as mechanical origin)

Po125.A= b□□□2(Input I/O port to trigger home search mode)

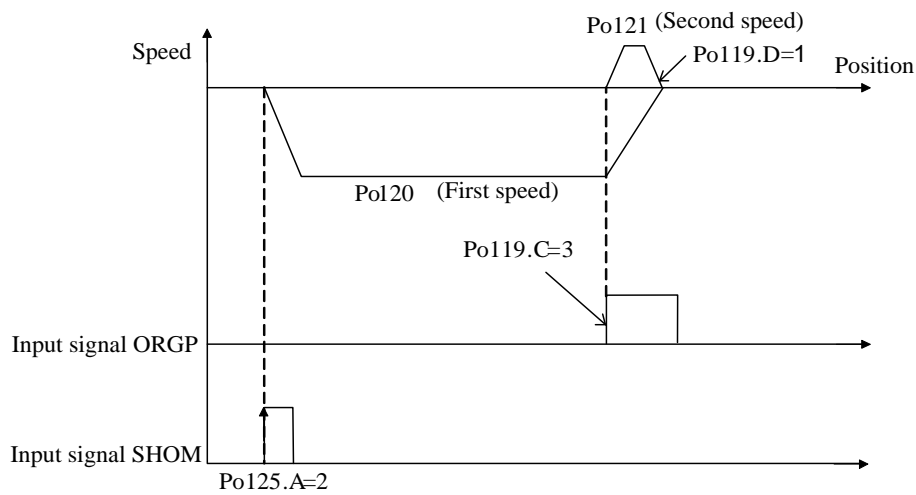


Fig 6.4.32 Forward home searching at first speed

6.4.9 Mechanical Origin Search Function

1) Introduction

Mechanical origin search is the function of location and stop action (clamping) through the absolute position memorized by absolute encoder.

Instructions:

1. After installing machine, set the mechanical origin firstly before servo drive is enabled ;
2. Using this function when workpieces need to return to initial position (mechanical origin) ;
3. In the state that motor shaft is connected with machinery;
4. Make sure servo drive is enabled and the battery is installed in the drive;

Set “mechanical origin” as initial position, the “mechanical origin” can be found in any position of forward/reverse motion range set by servo motor. AL-27 alarm will alert if exceeding the setting motion range.

See details in chapter 6.1.4.

2) Setting

Mechanical origin means that the physical origin position of machinery, which is also called initial position.

(1) Setting mode

- a. Set current position as mechanical origin: After setting to the initial position of machinery, set So-48=1, So-41=1, then

Current position is mechanical origin, the data of current position inputs Po136, Po138 automatically.

- b. Set arbitrary point as mechanical origin: Set single-turn, multi-turn positions of encoder by Po136, Po138, confirm mechanical origin.

【Note】 If using the mode of setting arbitrary point as mechanical origin to reset alarm when AL-24 alarm alerts, set Po136, Po138 firstly, then set So-48=1, So-41=1, the alarm can be reset.

(2) Parameters

| | | | | |
|--------------|--|--------------|-------------|------------------|
| So-41 | Setting mechanical origin Speed Position Torque | | | |
| | Setting Range | Setting Unit | Mfr's Value | Effect |
| | 0~1 | N/A | 0 | Immediate effect |
| | 0 : Not set mechanical origin; 1 : Set current position as mechanical origin; | | | |

| | | | | |
|--------------|--|--------------|-------------|------------------|
| Po136 | Mechanical origin single-turn value Speed Position Torque | | | |
| | Setting Range | Setting Unit | Mfr's Value | Effect |
| | 0~214748364 | N/A | 0 | Immediate effect |
| Po138 | Mechanical origin multi-turn value Speed Position Torque | | | |
| | Setting Range | Setting Unit | Mfr's Value | Effect |
| | 0~214748364 | N/A | 0 | Immediate effect |

3) Mechanical Origin Search

(1) User Parameters

See chapter 6.4.8 for details;

(2) Sequence Chart

1. When servo drive is power-on, mechanical origin search mode executes automatically (Po125=1)

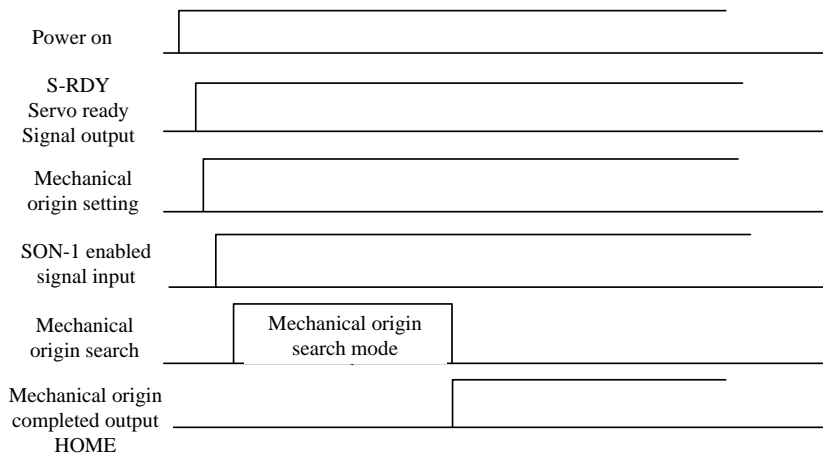


Fig 6.4.33 Mechanical origin search mode start sequence chart

2. Sequence chart when inputting entry point (Po125=2)

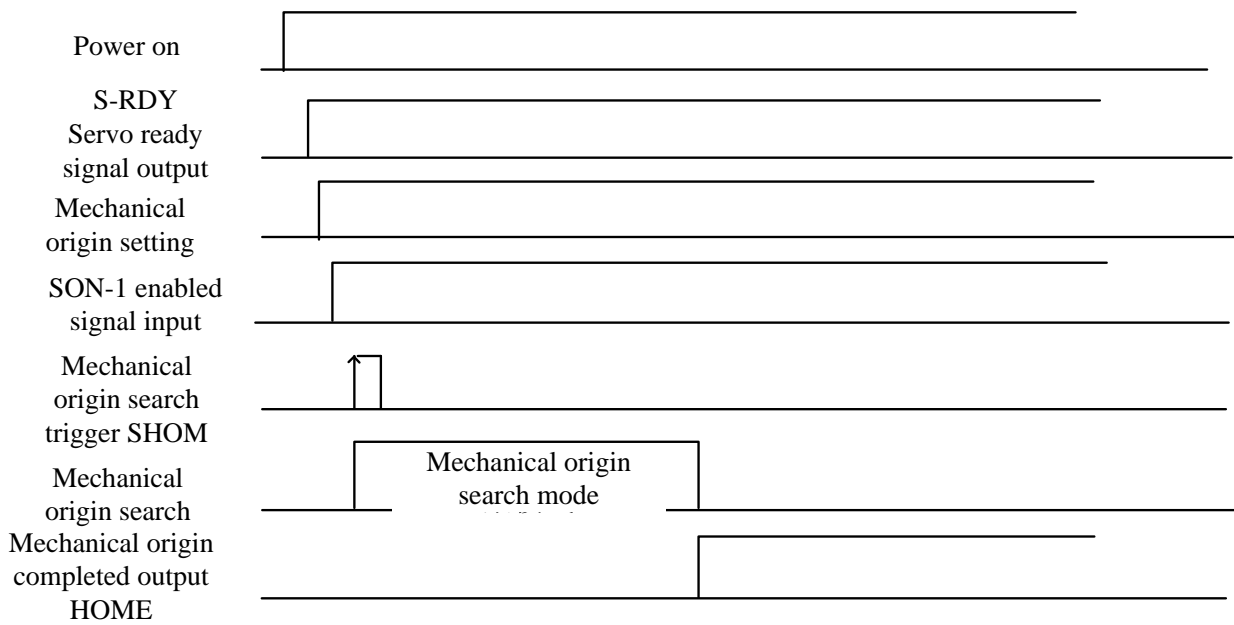


Fig 6.4.34Sequence chart when inputting entry point

Note: Do not trigger mechanical origin search function in the running process of servo drive.

6.4.10 Fixed Length Interrupt Function

Fixed length interrupt: In external position pulse mode, interrupt current running status of servo, and execute preset fixed length instruction. In external position pulse mode, when interrupt terminal enabled, system receives interrupt trigger signal and motor cannot stop rotating instantly, but run for a while setting in internal position mode.

During the operation period of fixed length interrupt, drive shields any other internal/external position instructions(including the instruction of re-trigger interrupt of fixed length position), when interrupt enabled terminal is valid, motor will run the setting length according to internal position mode after system receives interrupt trigger signal. When the interrupt terminal is valid, each interrupt rising edge triggers an internal position mode. After entering interrupt, interrupt indication is valid; position pulse and new interrupt will not be answered. After completing internal position mode, interrupt indication terminal is invalid and then interrupt terminal resets, when there is a rising edge, position pulse and new interrupt will be answered.

Fixed length interrupt operates as follow:

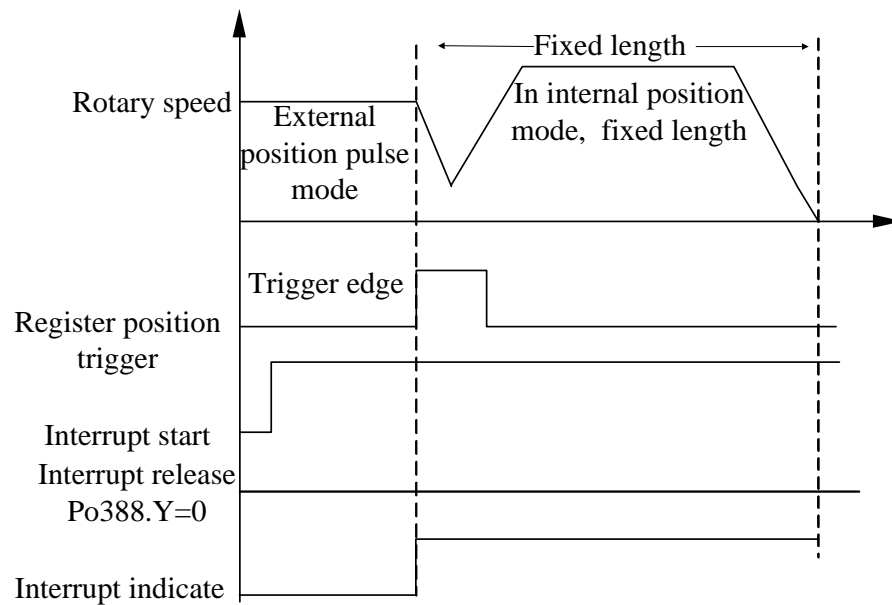


Fig 6.4.35 Running mode of fixed length interrupts

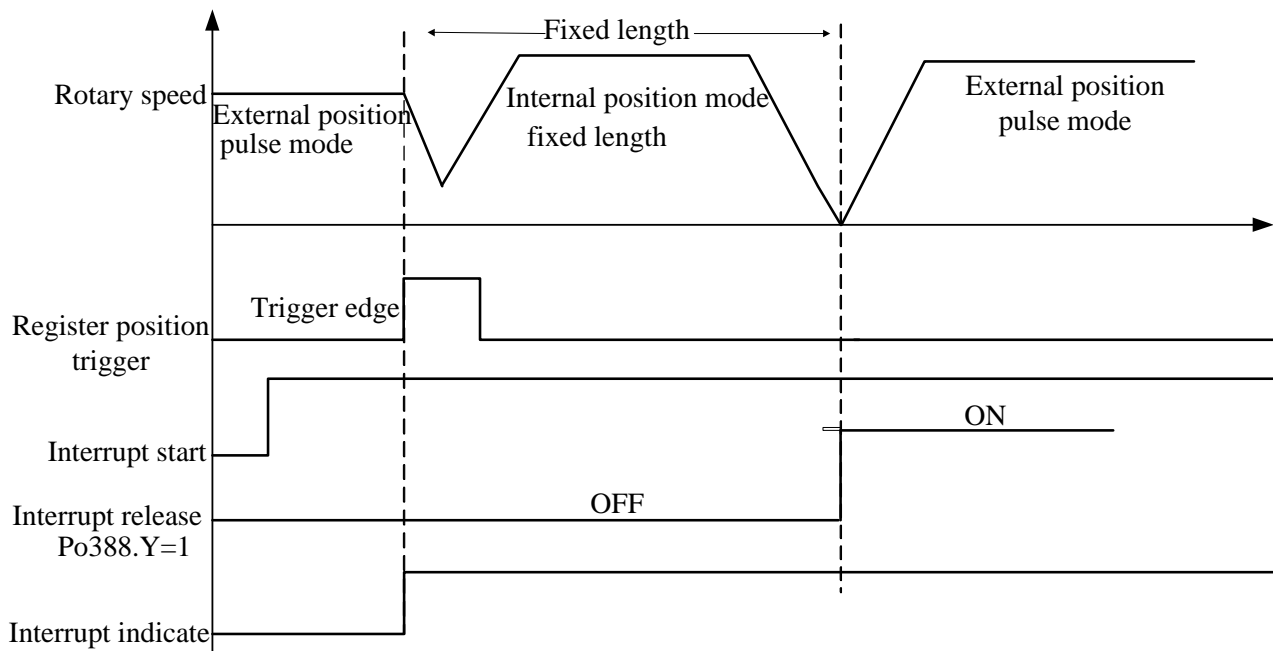


Fig 6.4.36 Sequence chart when controlling by fixed length interrupt

In the control of fixed length interrupt, if start fixed length interrupt release function and the interrupt release terminal keeps disabled, system will stay in the function of fixed length interrupt until the release terminal enabled, then servo can switch to external position pulse mode.

(1) Related parameter

Po388

| | | | |
|--|--------------|-------------|------------------|
| Fixed length interrupt | | | Position |
| Setting Range | Setting Unit | Mfr's Value | Effect |
| Two parameters | N/A | 00 | Immediate Effect |
| <div><div><div>d</div><div></div><div></div></div><div><div><div>A</div><div>Interrupt fixed length function</div></div><div><div>0</div><div>Invalid</div></div><div><div>1</div><div>Valid</div></div></div><div><div><div>B</div><div>Interrupt fixed length release terminal</div></div><div><div>0</div><div>Invalid</div></div><div><div>1</div><div>Valid</div></div></div></div> | | | |

6.4.11 DO output related to position pulse

Setting position reach pulse range: In the mode of position pulse, this parameter provides the basis that drive can complete positioning or not. The drive identifies the positioning completed when afterpulses in positional deviation register is not larger than the range of position reach pulse. This parameter does not affect the final positional accuracy.

(1) Output signal

| Signal | Abbr. | Default terminal | Purport |
|----------------|-------|--|-----------------------|
| Position reach | P-CMP | P-CMP- (In position pulse mode) P-CMP+ (In position pulse mode) | Positioning completed |

(2) Parameter Setting

| | | | | |
|--------------|--|--------------|-------------|------------------|
| Po307 | Position reach pulses range Position | | | |
| | Setting Range | Setting Unit | Mfr's Value | Effect |
| | 1~32000 | N/A | — | Immediate effect |

Alarm of position loop tracking excessive error is a kind of malfunction for servo drive. In position pulse mode, when the value of positional deviation register is higher than (Po309*Rate Unit of position loop tracking error alarm), the alarm signal of excessive error will output.

| | | | | |
|--------------|--|-------------------|-------------|------------------|
| Po309 | Position error alarm pulses Position | | | |
| | Setting Range | Setting Unit | Mfr's Value | Effect |
| | 1~32000 | See Po308 setting | — | Immediate effect |

| Parameter | | Purport |
|--------------|---------|--|
| Po308 | b 0 0 0 | Position loop tracking error alarm rate unit is 1 pulse |
| | b 0 1 0 | Position loop tracking error alarm rate unit is 100 pulses |

6.4.12 Full closed loop function

Full closed loop control: Install position detection device (grating scale, encoder etc.) on moving part, and real-time feedback to the position of moving part, without the influence of environmental factors such as mechanical error, shape change caused by temperature, make final working parts reach integral excellent high-accuracy positioning system.

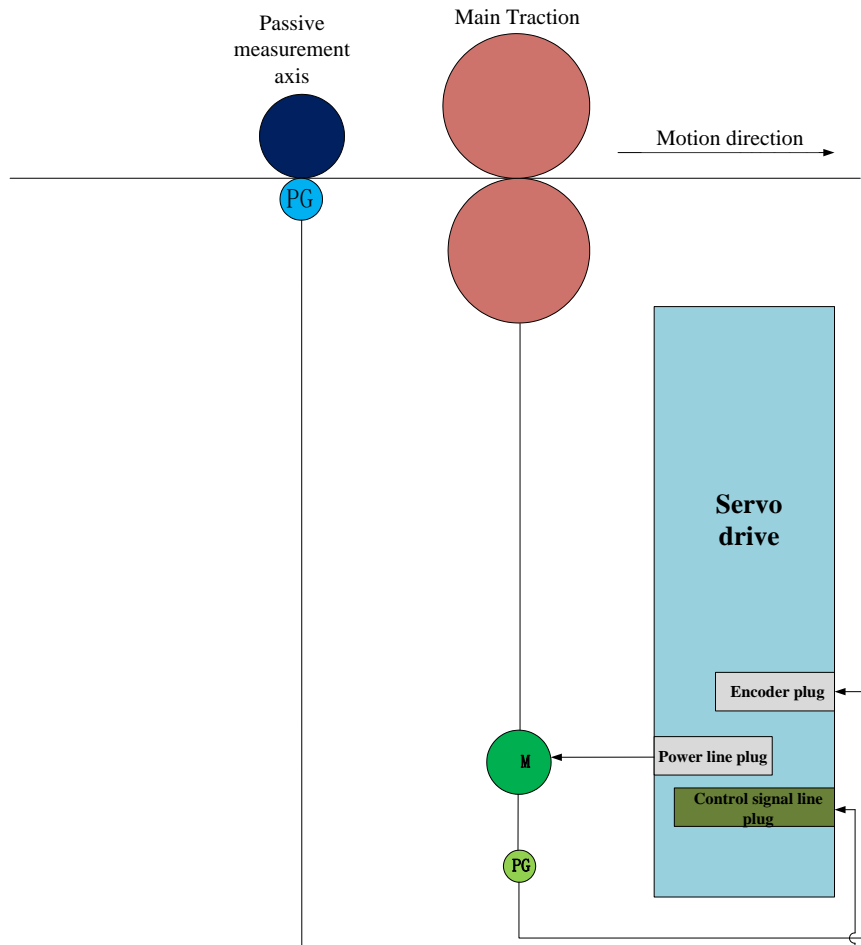


Fig 6.4.37 Full closed loop typical application sketch map

⚠ CAUTION

- ★ Connect power supply of servo and control circuit correctly, and also motor power line and encoder line;
- ★ JOG test run the servo drive by keypad to confirm the normal operation of motor;
- ★ Refer to the wiring instruction of Fig 6.4.37 or Fig 6.4.39, connect DI/DO ;
- ★ Make the related settings for position mode;
- ★ Run servo drive, make sure the rotation direction of motor is normal firstly, then make gain adjustment, and please refer to 7.4 for gain adjustment.

**CAUTION**

Note: The servo only supports the encoder of differential type or open collector type for feedback of moving parts. One of the feedback encoder or pulse input signal must be differential signal.

Setting procedure of full closed loop shows as below:

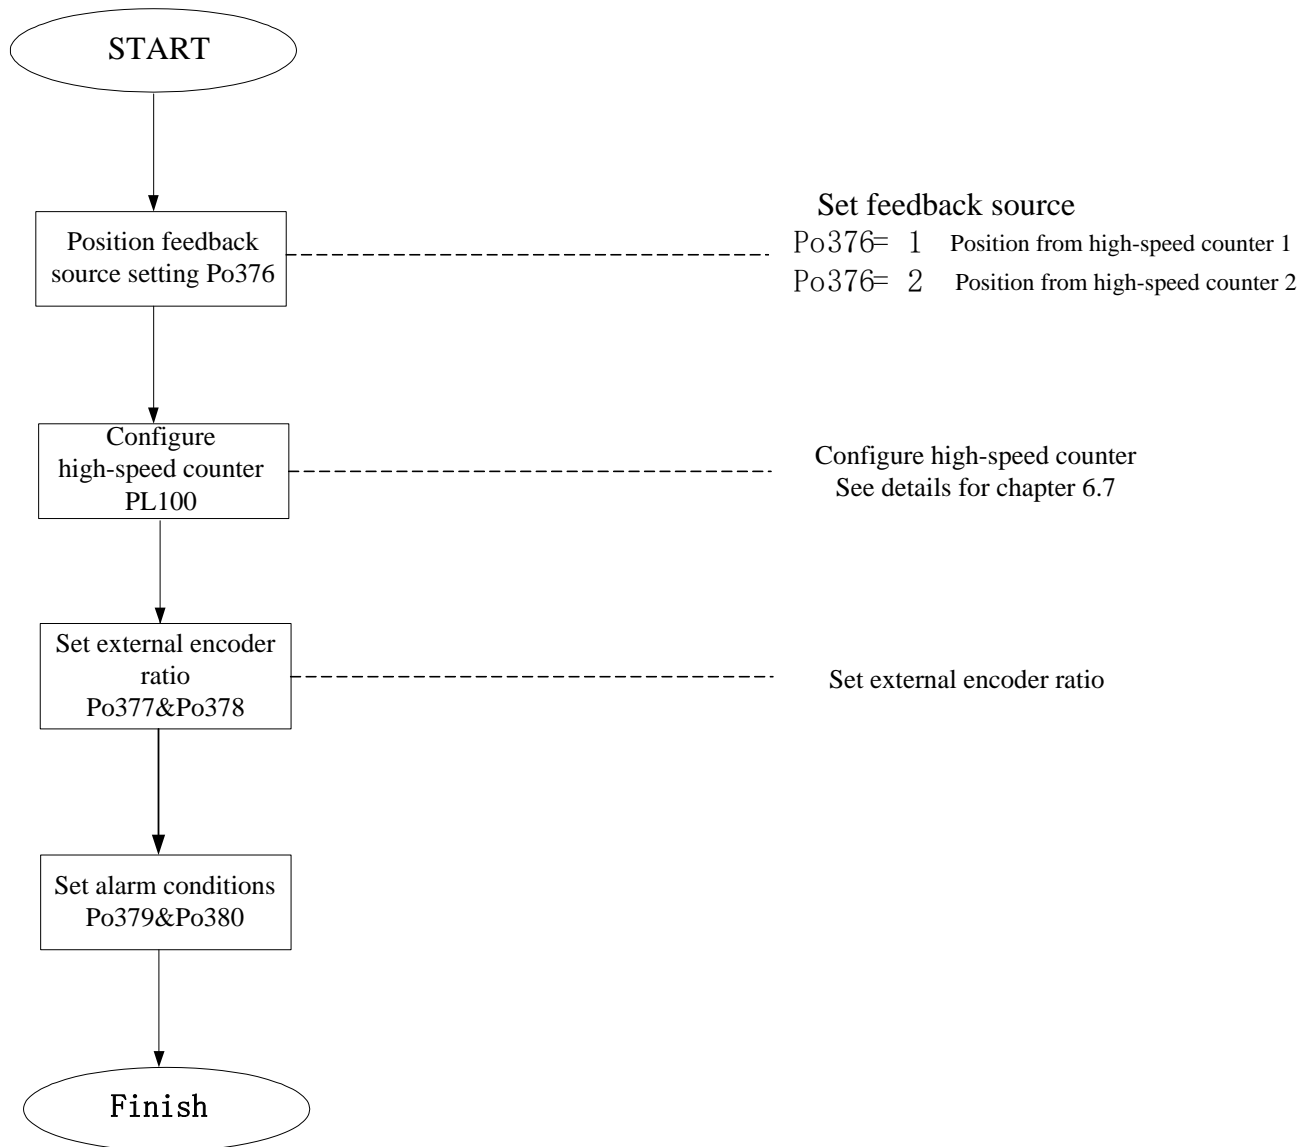


Fig 6.4.38 Full closed loop setting flow chart

(1) Parameter setting**1) Set position feedback source**

| | | | | |
|--------------|---|--------------|-------------|------------------|
| Po376 | Position feedback source Position | | | |
| | Setting Range | Setting Unit | Mfr's Value | Effect |
| | 0~2 | N/A | 0 | Immediate effect |

| Name | Purport | Remark |
|----------------|--|--------|
| Po376=0 | Position feedback root in motor motor shaft | |
| Po376=1 | Position feedback root in high-speed counter 1 | |
| Po376=2 | Position feedback root in high-speed counter 2 | |

2) External encoder electronic gear ratio setting

| | | | | |
|--------------|---|--------------|-------------|------------------|
| Po377 | Position feedback pulse proportion numerator Position | | | |
| | Setting Range | Setting Unit | Mfr's Value | Effect |
| | 1~65535 | N/A | 1 | Immediate effect |
| Po378 | Position feedback pulse proportion denominator Position | | | |
| | Setting Range | Setting Unit | Mfr's Value | Effect |
| | 1~65535 | N/A | 1 | Immediate effect |

The specific value of Po377 and Po378 is equal to the value that the encoder line number of servo motor divide by pulses of external encoder running if motor takes a turn.

3) Set alarm output

| | | | | |
|--------------|---|--------------|-------------|------------------|
| Po379 | Mixed error remove turns Position | | | |
| | Setting Range | Setting Unit | Mfr's Value | Effect |
| | 0~32000 | N/A | 0 | Immediate effect |
| Po380 | Mixed error alarm pulses Position | | | |
| | Setting Range | Setting Unit | Mfr's Value | Effect |
| | 1~65535 | N/A | 1000 | Immediate effect |

If the error turns within Po379 exceed pulses set by Po380, the drive will jump to AL-31 alarm, error will be removed every turn of Po379.

(2) Wiring Instruction

FL20 series servo drive has 2 group of pulse receiving circuits, one is for receiving the pulses of open collector type, and the other one is for receiving the pulses of differential type. When using the function of full closed loop, user should confirm the connections of servo based on PC/PLC and the output form of related encoder, do not wiring randomly. See below for details:

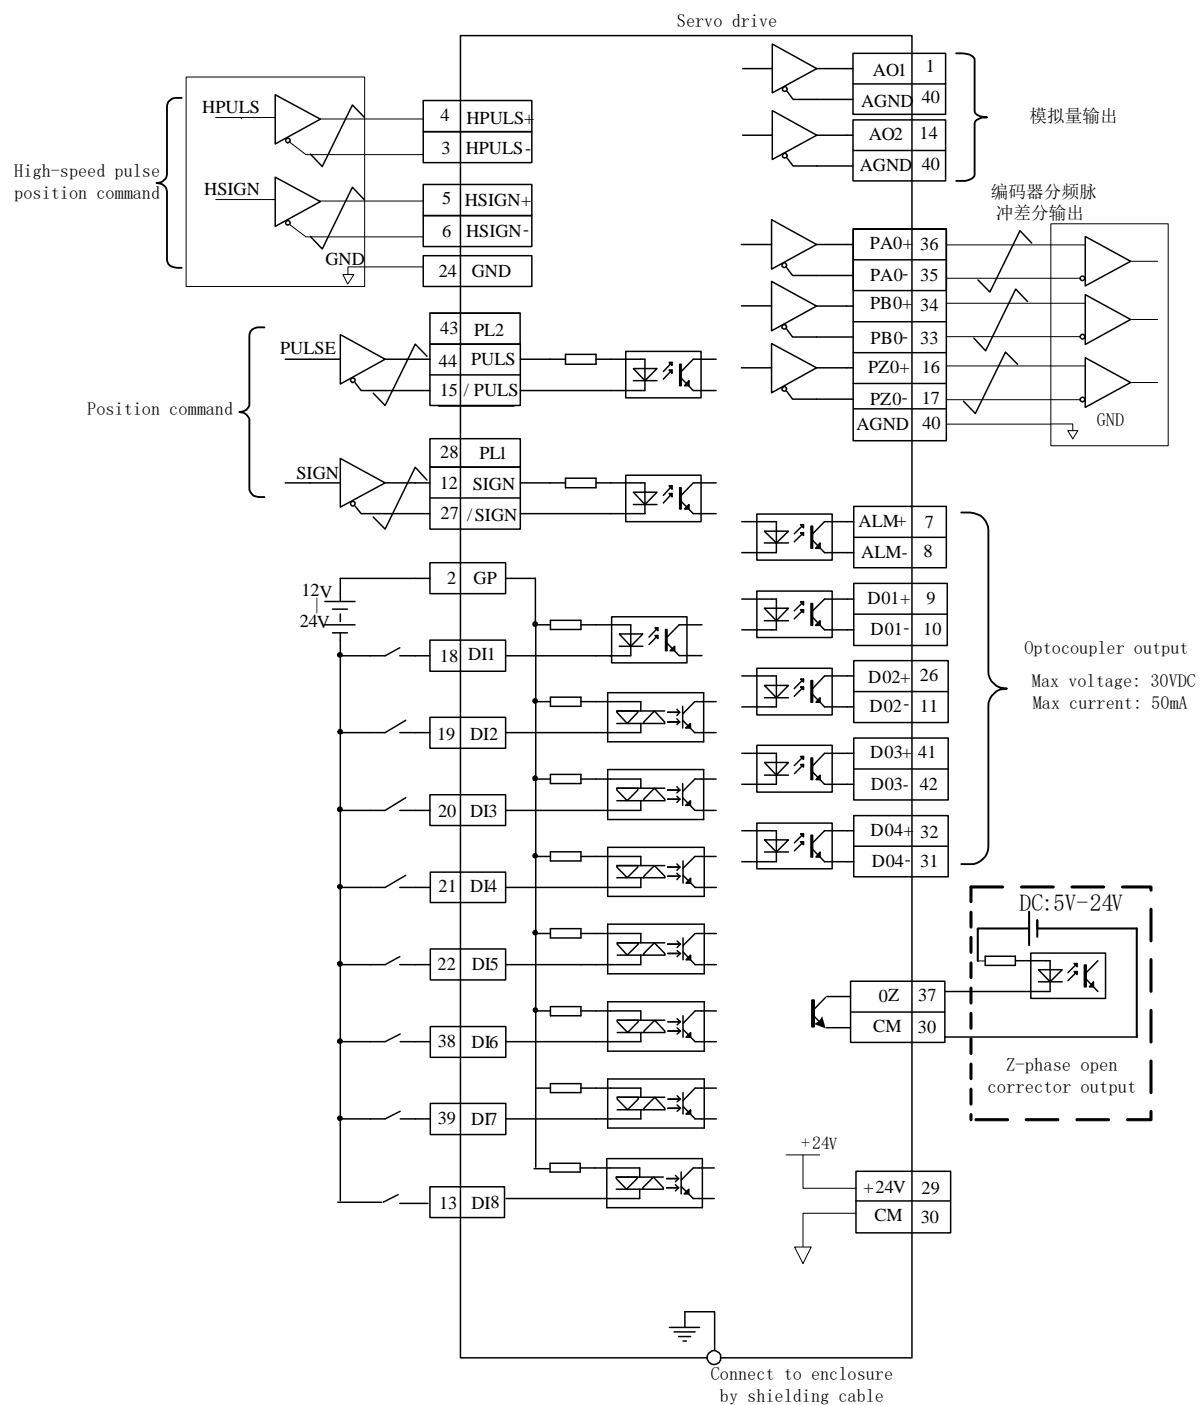


Fig 6.4.39 Full closed loop mode typical wiring diagram



- (1) One of the feedback encoder or pulse input signal must be differential signal ;
- (2) DI1~DI8 terminals are programmable input terminals, and DO1~DO4 terminals are programmable output terminals. Users can redefine them by the situations.

6.4.13 Gantry Synchron Function

Gantry Synchron: PC/PLC sends pulse commands to two drives at the same time, make the feedback position pulse signals interact and sampling cross coupling through the encoders of two motors, to realize the adjustment for speed of the motor.

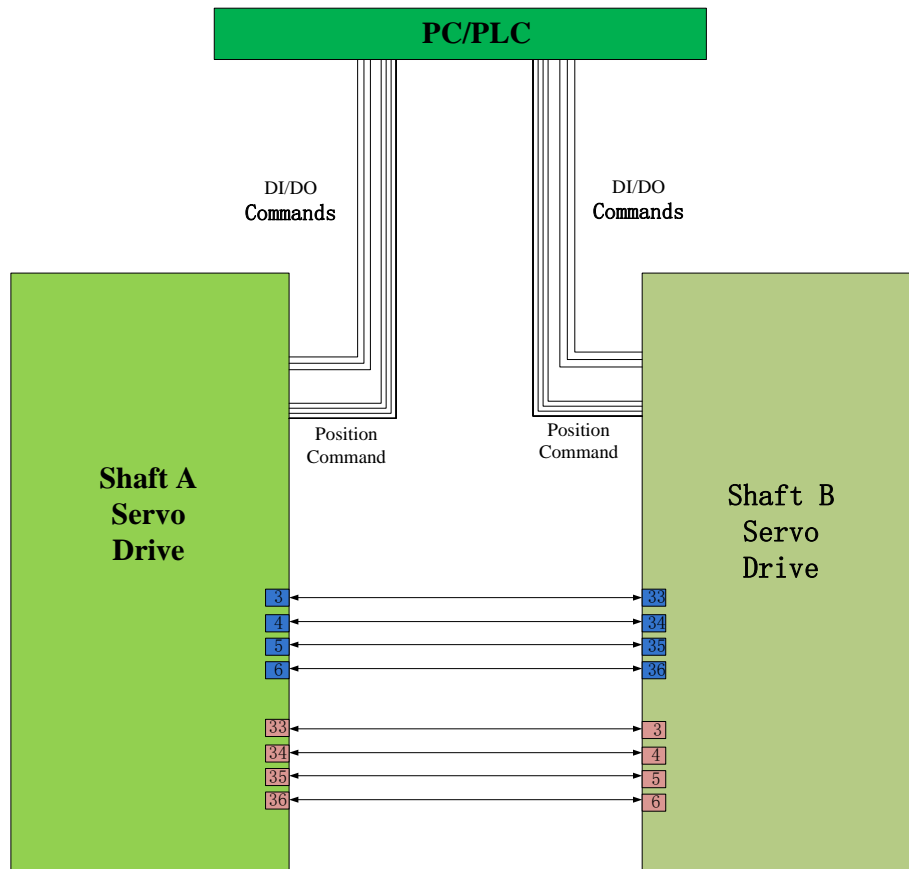


Fig 6.4.40 Gantry Synchron typical application wiring diagram



Caution

- ★ Connect power supply of servo main circuit and control circuit correctly, and also motor power line and encoder line;
- ★ JOG test run the servo drive by keypad to confirm the normal operation of motor;
- ★ Refer to the wiring instruction of Fig 6.4.40, connect DI/DO;
- ★ Make the related settings for position mode;
- ★ Run servo drive, make sure the rotation direction of motor is normal firstly, then make gain adjustment, and please refer to 7.4 for gain adjustment.

Gantry Synchron internal frame diagram shows as below:

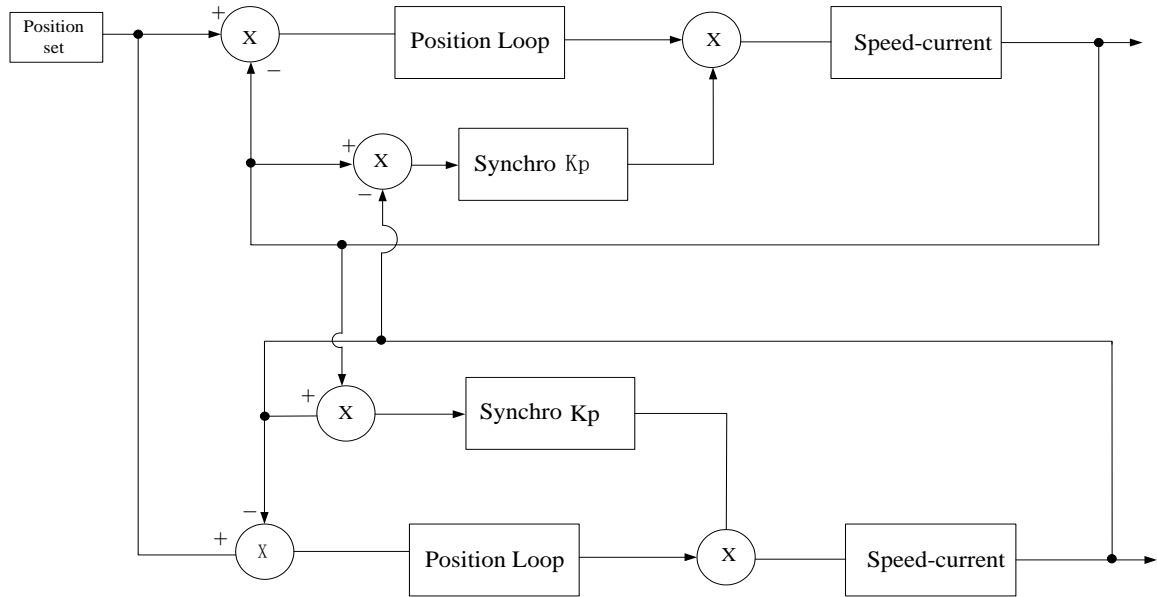


Fig 6.4.41 Gantry Synchron typical application wiring diagram

⚠ The setting value of gantry synchron gain(Po381) must not exceed position-loop gain(Po301);

The setting procedure of gantry synchron is:

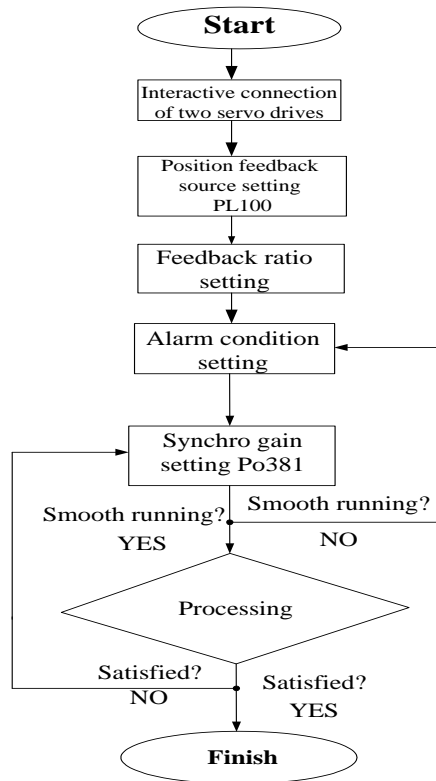


Fig 6.4.42 Gantry synchron setting flow chart

(1) User parameter setting**1) Position feedback source setting**

| | | | | |
|--------------|--|--------------|-------------|------------------|
| Po382 | Gantry position feedback source Position | | | |
| | Setting Range | Setting Unit | Mfr's value | Effect |
| | 0~1 | N/A | 0 | Immediate effect |
| | 0 : high-speed counter 1; 1 : high-speed counter 2; | | | |

2) Feedback ratio setting

| | | | | |
|--------------|--|--------------|-------------|------------------|
| Po384 | Gantry synchron feedback proportion numerator Position | | | |
| | Setting Range | Setting Unit | Mfr's value | Effect |
| | 1~2147483647 | N/A | 10 | Immediate effect |
| Po386 | Gantry synchron feedback proportion denominator Position | | | |
| | Setting Range | Setting Unit | Mfr's value | Effect |
| | 1~2147483647 | N/A | 10 | Immediate effect |

3) Gain setting

| | | | | |
|--------------|---|--------------|-------------|------------------|
| Po381 | Gantry synchron gain Position | | | |
| | Setting Range | Setting Unit | Mfr's value | Effect |
| | 1~30000 | N/A | 1 | Immediate effect |

The value of Po381 cannot be higher than the value of position-loop gain Po301.

4) Alarm output setting

| | | | | |
|--------------|--|--------------|-------------|------------------|
| Po383 | Gantry synchron alarm pulse Position | | | |
| | Setting Range | Setting Unit | Mfr's value | Effect |
| | 10~65535 | N/A | 1000 | Immediate effect |

Alarm AL-32 given when synchro error is higher than Po383.

(3) Wiring Instruction

Gantry synchron needs interactive connection of two servo drives, which means that frequency dividing output of shaft A is connected to pulse input of shaft B, and frequency dividing output of shaft B is connected to the pulse input of shaft A. Typical wiring diagram shows as below:

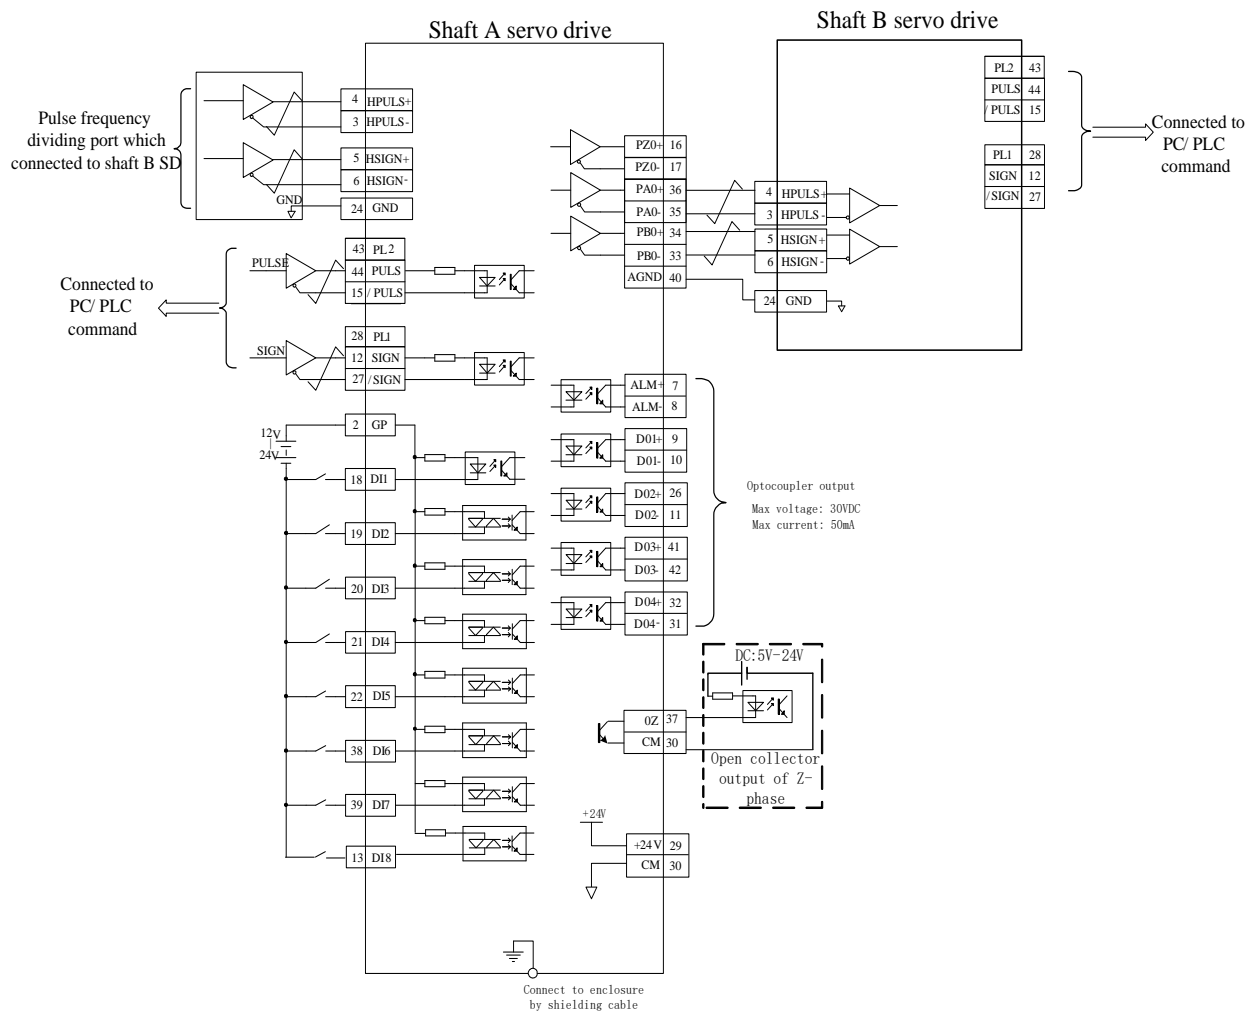


Fig 6.4.43 Gantry synchron typical wiring diagram



DI1~DI8 terminals are programmable input terminals, and DO1~DO4 terminals are programmable output terminals. Users can redefine them by the situations. The figure above only describes DI/DO of shaft A, which is similar with Shaft B

6.4.14 Electronic Cam (E-Cam) Function

Electronic cam (E-CAM): Servo drive programmes the positional relations of Master axis and Slave axis by its software, just as virtual cam exists between both axis. It uses electrical way to simulate the work of mechanical cam, so that it can realize the change of cam curve, and reduce mechanical cost, mechanical loss and maintenance.

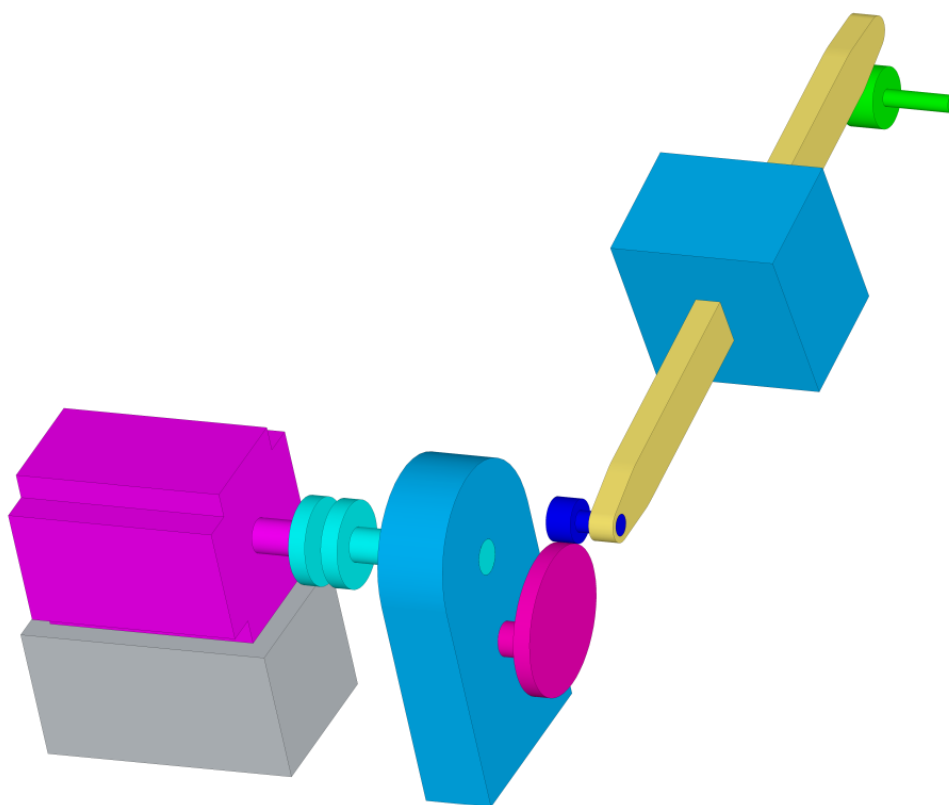
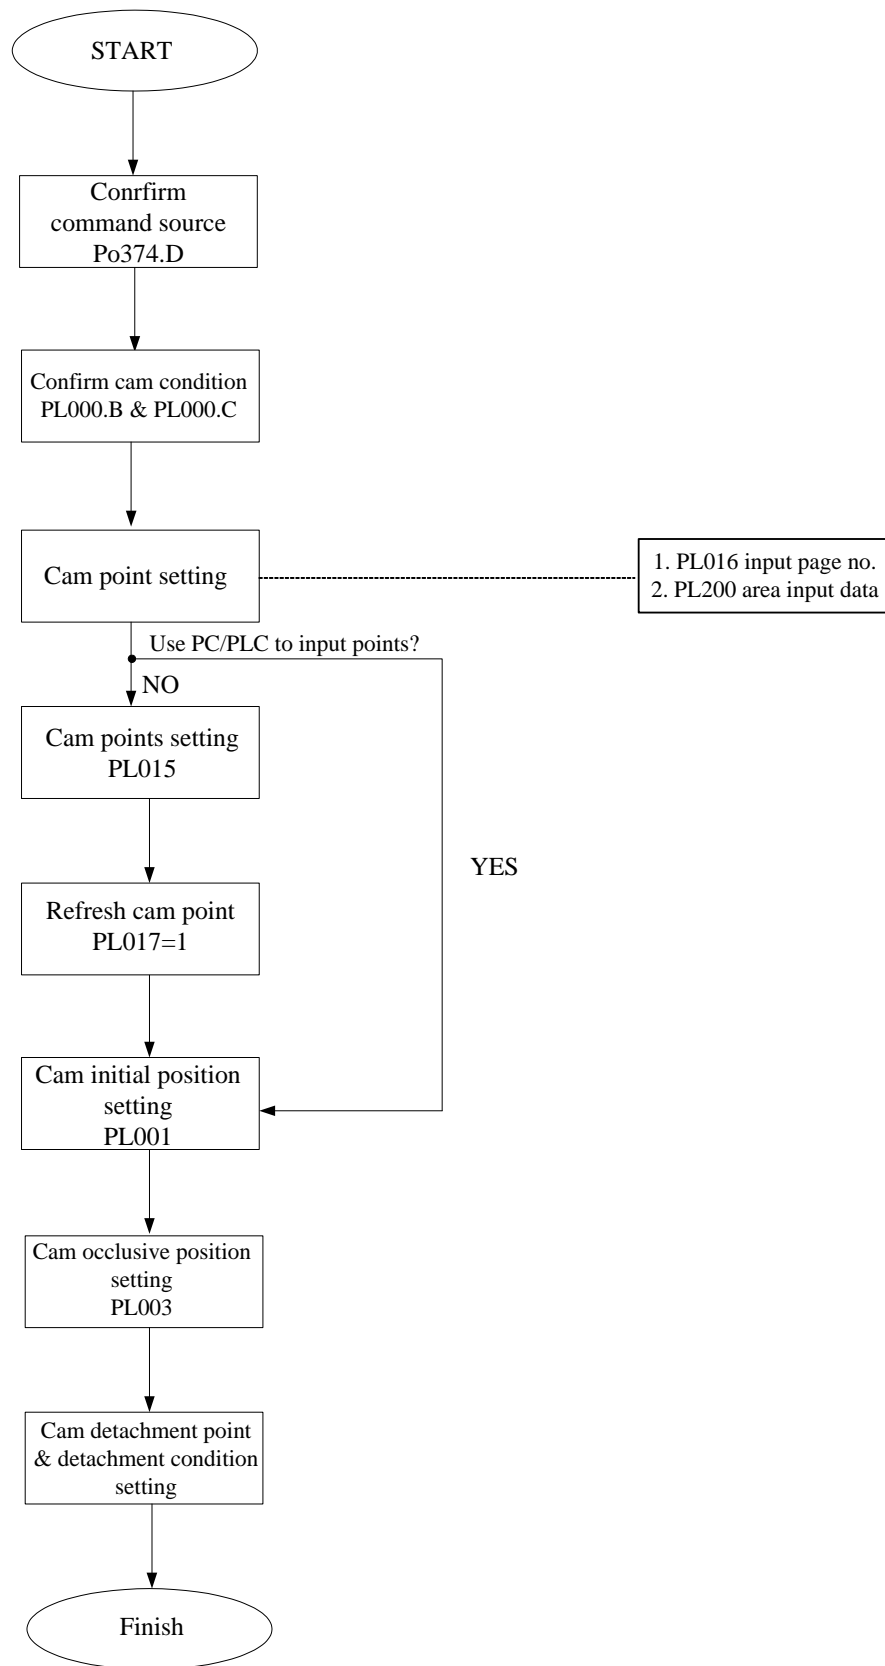



Fig 6.4.44FL20E-Cam internal frameworkdiagram

**Fig 6.4.45 FL20 servo E-Cam setting flow chart**

Electronic cam which is provided by FL20 series servo drive, main feature of E-Cam is as the followings:

| Features of E-CAM | | | | | | | | | | | | | | | | | | | | | | | | |
|------------------------------------|---|--------|--------|---------|-----|--|-----------------|------|------|------|------|-----|--------------|--------|--------|--------|---------|-----|--|--------|--------|--------|--------|--|
| Operation | Operate the E-cam in P mode only. | | | | | | | | | | | | | | | | | | | | | | | |
| Active E-CamFunction PL000.A | PL000.A=0：disable E-cam function; PL000.A=1：enable E-cam function and starts to judge the engaged condition; | | | | | | | | | | | | | | | | | | | | | | | |
| E-Cam Status | Engage/Stop/Pre-engage； | | | | | | | | | | | | | | | | | | | | | | | |
| Driving shaft source | <ul style="list-style-type: none">● High-speed counter 1● High-speed counter 2● Internal position● Timer axis (add 1 every 0.1ms) | | | | | | | | | | | | | | | | | | | | | | | |
| MotionCommand | Actual drive command=E-Cam command+position command | | | | | | | | | | | | | | | | | | | | | | | |
| Data Storage Address | Data array, start from PL200 area;The data of driving shaft ahead, driven shaft behind. In communication mode, for instance cam data is X, Y (both X and Y are 32 bits, value within the range of 32-bit directed number, X input is constant positive) The address starts from 1200: <table><tr><td>Storage address</td><td>1200</td><td>1201</td><td>1202</td><td>1203</td><td>...</td></tr><tr><td>Storage data</td><td>X1-low</td><td>X-high</td><td>Y1-low</td><td>Y1-high</td><td>...</td></tr><tr><td></td><td>16-bit</td><td>16-bit</td><td>16-bit</td><td>16-bit</td><td></td></tr></table> | | | | | | Storage address | 1200 | 1201 | 1202 | 1203 | ... | Storage data | X1-low | X-high | Y1-low | Y1-high | ... | | 16-bit | 16-bit | 16-bit | 16-bit | |
| Storage address | 1200 | 1201 | 1202 | 1203 | ... | | | | | | | | | | | | | | | | | | | |
| Storage data | X1-low | X-high | Y1-low | Y1-high | ... | | | | | | | | | | | | | | | | | | | |
| | 16-bit | 16-bit | 16-bit | 16-bit | | | | | | | | | | | | | | | | | | | | |
| Data Size | Decide by PL015, max 300 points, min 5 points; 6 pages in total, 50 for each page; | | | | | | | | | | | | | | | | | | | | | | | |
| Data Format | 32-bit signed value(+/-) | | | | | | | | | | | | | | | | | | | | | | | |
| E-Cam Output | Digital Output(DO)：E-CAM action output; If this DO is ON, it means that the E-Cam axis is in the setting range; | | | | | | | | | | | | | | | | | | | | | | | |

Flow Chart:

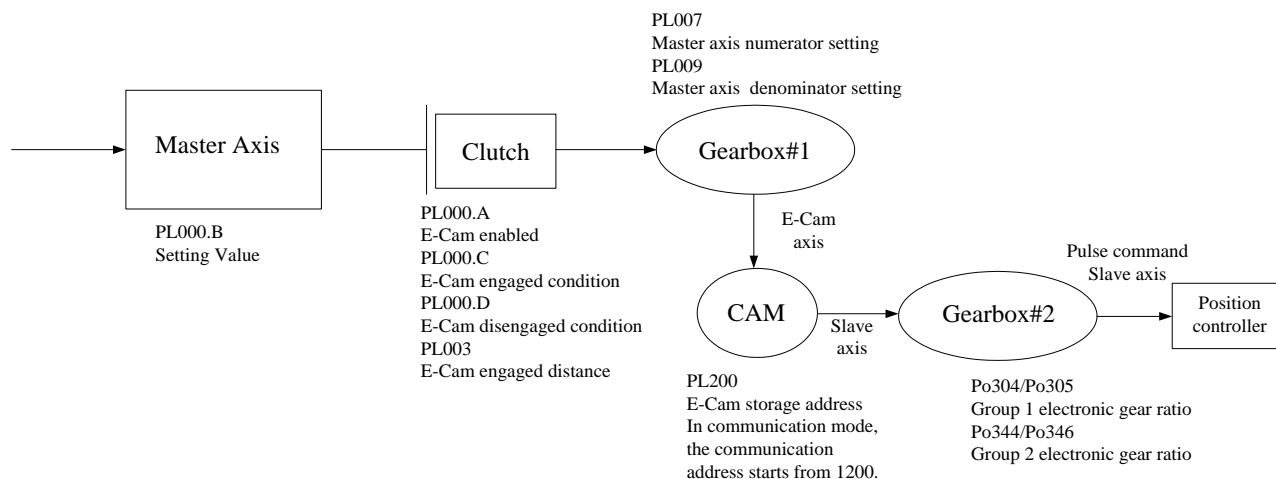

Master Axis:

Description:

- ★ Master Axis: main axis running by E-Cam of servo drive;


| | |
|-----------------------|---|
| Function | The moving distance of the master axis is the signal source, which can drive E-cam running. |
| Source of Master Axis | Source of Master Axis is selected by PL000.B: |
| PL000.B | If PL000.B=0; command comes from high-speed counter 1; If PL000.B=1; command comes from high-speed counter 2; If PL000.B=2; command comes from internal position; If PL000.B=3; command comes from time; |

● Clutch

Description:

- ★ Clutch: It is used to determine the status of engaged/ disengaged between the master axis and gearbox;

| | |
|-------------------------|--|
| Function | To determine the status of engaged/ disengaged between master axis and gearbox #1. |
| Activate E-cam function | The start of driving shaft is decided by PL000.A: If PL000.A=0: disable E-cam. If the cam is engaged, it will be forced to disengage; |
| PL000.A | If PL000.A=1: enable E-cam and starts to judge the engaged condition; |
| E-Cam Status | When PL000.A=1, activate E-Cam function, E-cam is engaged after executing the instructions of PL003, only when cam is engaged, the moving distance of master axis can drive the cam running. The relationship of Engaged, Stop and Pre-engaged of E-cam as below: |

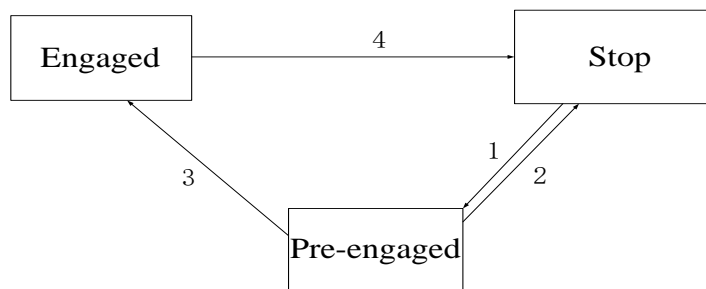

Statements:

●**Stop:** Initial status of the cam.The cam will not run with master axis pulse.
When PL000.A=0, cam will return to this state;

●**Pre-engaged:** when engagedcondition (path 1) is satisfied, it enters this status.The cam still will not run with master axis pulse, but it will execute the pulse value of PL003, then out of the state when executed.

Pay attention to the pulse actual given direction !

●**Engaged:** After pre-engaged (path 3)executed, it enters this status, the cam starts to run with master axis pules.

Pay attention to the pulse actual given direction !

Path Description:

Path 1: When the engaged condition is established, the status is from STOP to Pre-engaged. The lead pulse is determined by PL003;

Path 2: When the E-cam function is disabled (PL000A=0), it returns to STOP status.

Path 3: When lead pulse is executed, the status is from Pre-engaged to Engaged;

Path 4: When disengaged condition is established(PL000.D), it returns to STOP status;

| | |
|---|---|
| ●When the E-cam is in STOP status, the method of determing engaged(path1) is as the followings: | |
| EngagedCondition | 1.PL000.C=0, Engaged Immediate; |
| PL000.C | 2.DI : FunIN.32when CAM-AC is ON, E-cam is engaged; |
| | 3.CAP to engaged: E-cam is engaged when the CAP position is captured by hardware; |
| Disengaged | When the E-cam is in Engaged status, the method of determine disengaged is as |
| Condition | the followings: |
| PL000.D | 1. Never disengaged; It will be forced to disengage until PL000.A=0; |

2. DI setting: FunIN.32 When CAM-AC is off, the engaged status disabled;
 3. Out of range: If master axis exceeds the setting moving distance PL005, the engaged status disabled;

● Gear #1


Description:

- ★ Gear #1: the module which is used to set the relation of master axis and E-cam axis;


| | |
|--------------|--|
| | Set the relativity of master axis and E-cam axis |
| Function | E.g.: Master axis operates one cycle; the E-cam axis is no need to operate one cycle, which can be set by users. |
| | <ul style="list-style-type: none"> ● E-cam axis is a virtual axis ● The E-cam axis operates one cycle(360 degrees) means the cam operates one cycle and the slave axis operates one cycle ● The pulse number is the unit of moving distance of the master axis. Its resolution is determined by the source. |
| Description | |
| Setting Mode | If the pulse number of master axis is P, the E-cam axis operates M cycle. Then the setting of gear ratio: PL007=M, PL008=P |

● CAM

| | |
|-------------------------------------|--|
| Function | Set the relation between E-cam axis & slave axis and defined in the E-cam table E-cam axis operates one cycle and slave axis operates one cycle |
| Data Storage Address of E-Cam Table | Data array, the start address is set by PL200 |
| | <ul style="list-style-type: none"> ● 32-bit (positive and negative). ● If input manually, start to input from PL200 area, which is master axis (PL202) and slave axis (PL203) respectively, and so on; ● If using communication, the address starts from 1200, the position of master axis ahead, the position of slave axis behind. When data storage, low byte is ahead, high byte is behind; ● The position data of slave axis is saved in E-cam table. ● If E-cam is divided into N areas, the position of each area must be included in the table. The position of the first point (0 degree) and the final point(360 degree) might not be the same. |
| Data Format of E-Cam Table | |
| Data Content of E-Cam Table | <ol style="list-style-type: none"> 1. The data of 0° and 360° is the same; |

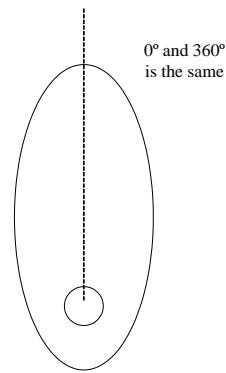

2. The data of 0° and 360° is different;

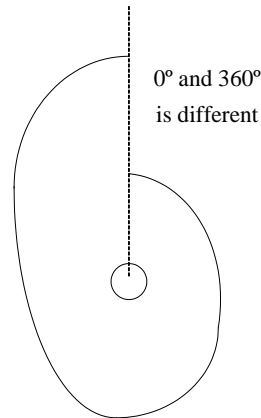

● Gear #2

Description:

★ Gear #2 : the module which is used to set the relation of slave axis and pulse command;

Set the relation between slave axis and pulse command

Function The slave axis operates a cycle, but the pulse command might not operate a cycle, which can be set by users

- The slave axis is a virtual axis and the unit of slave position is the unit of user

Description ● The pulse command is the encoder unit; the resolution is 131072pulse/rev.

- Rotating for one cycle of chart, the slave axis operates a cycle
- If the pulse number of slave axis is L, the motor axis operates R cycle,

Setting Mode then the setting of gear ratio is:

$$Po304/Po305=131072*R/L ;$$

$$Po344/Po346=131072*R/L ;$$

【Note】

For the drives with different encoder, the value of electronic gear ratio is different, please pay attentions when using;

- 1、 The value of incremental encoder is 10000; The value of rotation transformer type encoder is 4096;

● Digital Output of E-cam

DO Name FunOUT.14CAM_AREA

Function DO : If it is ON, it means the position of E-cam axis is in the setting range

(1) User Parameter

1) Pulse Source Setting

Po374

| | | | |
|---|--------------|-------------|------------------|
| Position Pulse Command Source | | | Position |
| Setting Range | Setting Unit | Mfr's Value | Effect |
| Four parameters | N/A | 0001 | Immediate effect |
| <div><div><div>b</div><div></div><div></div><div></div><div></div></div><div><div><div>A</div><div>Low-speed pulse setting</div><div>0</div><div>Pulse is not from low-speed pulse.</div><div>1</div><div>Pulse is from low-speed pulse.</div></div><div><div>B</div><div>High-speed counter setting</div><div>0</div><div>Pulse is not from high-speed counter.</div><div>1</div><div>Pulse is from high-speed counter.</div></div><div><div>C</div><div>Internal position pulse setting</div><div>0</div><div>Pulse is not from internal position.</div><div>1</div><div>Pulse is from internal position.</div></div><div><div>D</div><div>Electronic cam</div><div>0</div><div>Pulse is not from electronic cam.</div><div>1</div><div>Pulse is from electronic cam.</div></div></div></div> | | | |

2) Cam Control Setting

| | | | | |
|--------------|-----------------|--------------|-------------|------------------|
| PL000 | E-Cam Control | | | Position |
| | Setting Range | Setting Unit | Mfr's Value | Effect |
| | Four parameters | N/A | 0000 | Immediate effect |

| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
|-------|--|--------------|-------------|------------------|---|----------------|---|----------------------|---|---------------------|---|------------------|---|----------------|---|----------------|---|-------------------|---|------|---|------------------|---|---------------------|---|-------------|---|--------------|---|--------------|---|----------------------|---|---------------|---|------------|---|--------------|
| | <div><div><div><div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div></div></div><div><table><tr><td>A</td><td>Electronic cam</td></tr><tr><td>0</td><td>Close electronic cam</td></tr><tr><td>1</td><td>Open electronic cam</td></tr><tr><td>B</td><td>Command resource</td></tr><tr><td>0</td><td>High counter 1</td></tr><tr><td>1</td><td>High counter 2</td></tr><tr><td>2</td><td>Internal position</td></tr><tr><td>3</td><td>Time</td></tr><tr><td>C</td><td>Trigger resource</td></tr><tr><td>0</td><td>Trigger immediately</td></tr><tr><td>1</td><td>DI2 trigger</td></tr><tr><td>2</td><td>CAP0 Trigger</td></tr><tr><td>3</td><td>CAP1 Trigger</td></tr><tr><td>D</td><td>Detachment condition</td></tr><tr><td>0</td><td>No detachment</td></tr><tr><td>1</td><td>DI control</td></tr><tr><td>2</td><td>Out of range</td></tr></table></div></div></div> | | | | A | Electronic cam | 0 | Close electronic cam | 1 | Open electronic cam | B | Command resource | 0 | High counter 1 | 1 | High counter 2 | 2 | Internal position | 3 | Time | C | Trigger resource | 0 | Trigger immediately | 1 | DI2 trigger | 2 | CAP0 Trigger | 3 | CAP1 Trigger | D | Detachment condition | 0 | No detachment | 1 | DI control | 2 | Out of range |
| A | Electronic cam | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 0 | Close electronic cam | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 1 | Open electronic cam | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| B | Command resource | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 0 | High counter 1 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 1 | High counter 2 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 2 | Internal position | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 3 | Time | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| C | Trigger resource | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 0 | Trigger immediately | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 1 | DI2 trigger | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 2 | CAP0 Trigger | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 3 | CAP1 Trigger | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| D | Detachment condition | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 0 | No detachment | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 1 | DI control | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 2 | Out of range | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| PL001 | E-cam Initial Position <div>Position</div> | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | Setting Range | Setting Unit | Mfr's Value | Effect | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | -2147483647~+2147483647 | N/A | 0 | Immediate effect | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| PL003 | E-cam Occlusion Contact <div>Position</div> | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | Setting Range | Setting Unit | Mfr's Value | Effect | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | -2147483647~+2147483647 | N/A | 0 | Immediate effect | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| PL005 | E-cam Occlusion Release Point <div>Position</div> | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | Setting Range | Setting Unit | Mfr's Value | Effect | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | -2147483647~+2147483647 | N/A | 0 | Immediate effect | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| PL015 | E-cam Points <div>Position</div> | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | Setting Range | Setting Unit | Mfr's Value | Effect | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | 5~720 | N/A | 5 | Immediate effect | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| PL016 | E-cam Pages <div>Position</div> | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | Setting Range | Setting Unit | Mfr's Value | Effect | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | 0~14 | N/A | 0 | Immediate effect | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| PL017 | E-cam Table Refresh <div>Position</div> | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | Setting Range | Setting Unit | Mfr's Value | Effect | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | 0~1 | N/A | 0 | Immediate effect | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | 0 : Cam Table no refresh; 1 : Cam Table refresh; | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |

| | | | | |
|--------------|--|--------------|-------------|----------|
| PL018 | E-cam Table Status | | | Position |
| | Setting Range | Setting Unit | Mfr's Value | Effect |
| | 0~3 | N/A | 0 | Check |
| | 0 : Ready to start ; 1 : Waiting for engaged trigger; 2 : Pre-engaged Status; 3 : Running Status; | | | |

| | | | | |
|--------------|---|--------------|-------------|------------------|
| PL021 | E-cam disengaged is captured again or not | | | Position |
| | Setting Range | Setting Unit | Mfr's Value | Effect |
| | 0~1 | N/A | 0 | Immediate effect |

PL021=1, capture again. When selecting CAP trigger, the CAP and reset of high-speed counter are need to set as same source.

E.g.: Set PL012=1 for waiting for new CAP to engage after disengaged, if not, disengaged status happens even if getting new CAP signal before disengaged

| | | | | |
|--------------|-------------------------------------|--------------|-------------|------------------|
| PL022 | Initial address of E-cam adjustment | | | Position |
| | Setting Range | Setting Unit | Mfr's Value | Effect |
| | 0~300 | N/A | 0 | Immediate effect |
| PL023 | Master axis variation | | | Position |
| | Setting Range | Setting Unit | Mfr's Value | Effect |
| | -2147483647~+2147483647 | N/A | 0 | Immediate effect |
| PL025 | Slave axis variation | | | Position |
| | Setting Range | Setting Unit | Mfr's Value | Effect |
| | -2147483647~+2147483647 | N/A | 0 | Immediate effect |

After re-adjusting the initial address of cam, when refreshing cam table, the cam will start from PL022 address to add the setting value of PL023, PL025 for each point.

3) Master Axis Setting

| | | | | |
|--------------|-------------------------------|--------------|-------------|------------------|
| PL007 | E-cam master axis numerator | | | Position |
| | Setting Range | Setting Unit | Mfr's Value | Effect |
| | 1~+2147483647 | N/A | 1 | Immediate effect |
| PL009 | E-cam master axis denominator | | | Position |
| | Setting Range | Setting Unit | Mfr's Value | Effect |
| | 1~+2147483647 | N/A | 1 | Immediate effect |

| | | | | |
|--------------|----------------------|--------------|-------------|----------|
| PL019 | Master Axis Position | | | Position |
| | Setting Range | Setting Unit | Mfr's Value | Effect |
| | 0~2147483647 | N/A | 0 | Check |

4) Digital output setting

| | | | | |
|--------------|---------------------------|--------------|-------------|------------------|
| PL011 | DO valid initial position | | | Position |
| | Setting Range | Setting Unit | Mfr's Value | Effect |
| | 0~2147483647 | N/A | 0 | Immediate effect |
| PL013 | DO valid ending position | | | Position |
| | Setting Range | Setting Unit | Mfr's Value | Effect |
| | 0~2147483647 | N/A | 0 | Immediate effect |

6.5 Dual Mode

6.5.1 User Parameter Setting

Po001 is two-parameter mode, which is selected by Po001.X.

| Parameter | Significance | Remark |
|---------------|--|--------|
| Po001= d □ 6 | Speed and position pulse command of internal register | |
| Po001= d □ 7 | Speed and torque of internal register | |
| Po001= d □ 8 | Speed of internal register and speed of external analog | |
| Po001= d □ 9 | Speed of internal register and torque of external analog | |
| Po001= d □ 10 | Speed and position of internal register | |
| Po001= d □ 11 | Torque and position pulse command of internal register | |
| Po001= d □ 12 | External analog speed and position pulse command | |
| Po001= d □ 13 | External analog torque and position pulse command | |
| Po001= d □ 14 | Position pulse command and position of internal register | |
| Po001= d □ 15 | External analog speed and torque of internal register | |
| Po001= d □ 16 | External analog torque and torque of internal register | |
| Po001= d □ 17 | Torque and position of internal register | |
| Po001= d □ 18 | External analog speed and torque | |
| Po001= d □ 19 | External analog speed and internal register position | |
| Po001= d □ 20 | External analog torque and internal register position | |
| Po001= d □ 21 | Bus control mode | |
| Po001= d □ 22 | Built-in PLC control mode | |

6.5.2 Internal Speed And Position Pulse Dual Mode

Internal register speed and position pulse command switching mode shows as fig 6.5.1, after servo is enabled, servo runs as speed mode when internal speed selection signal is enabled; Servo runs as position mode when internal speed selection signal is disabled.

In the running process of speed mode, servo slows down to zero according to deceleration time when speed selection signal is disabled; Servo cannot receive position pulse until switching to position mode after position arrive signal output is enabled.

In the running process of position mode, when speed selection signal is enabled, servo switches to speed mode Immediate and run to target speed according to acceleration/deceleration time.

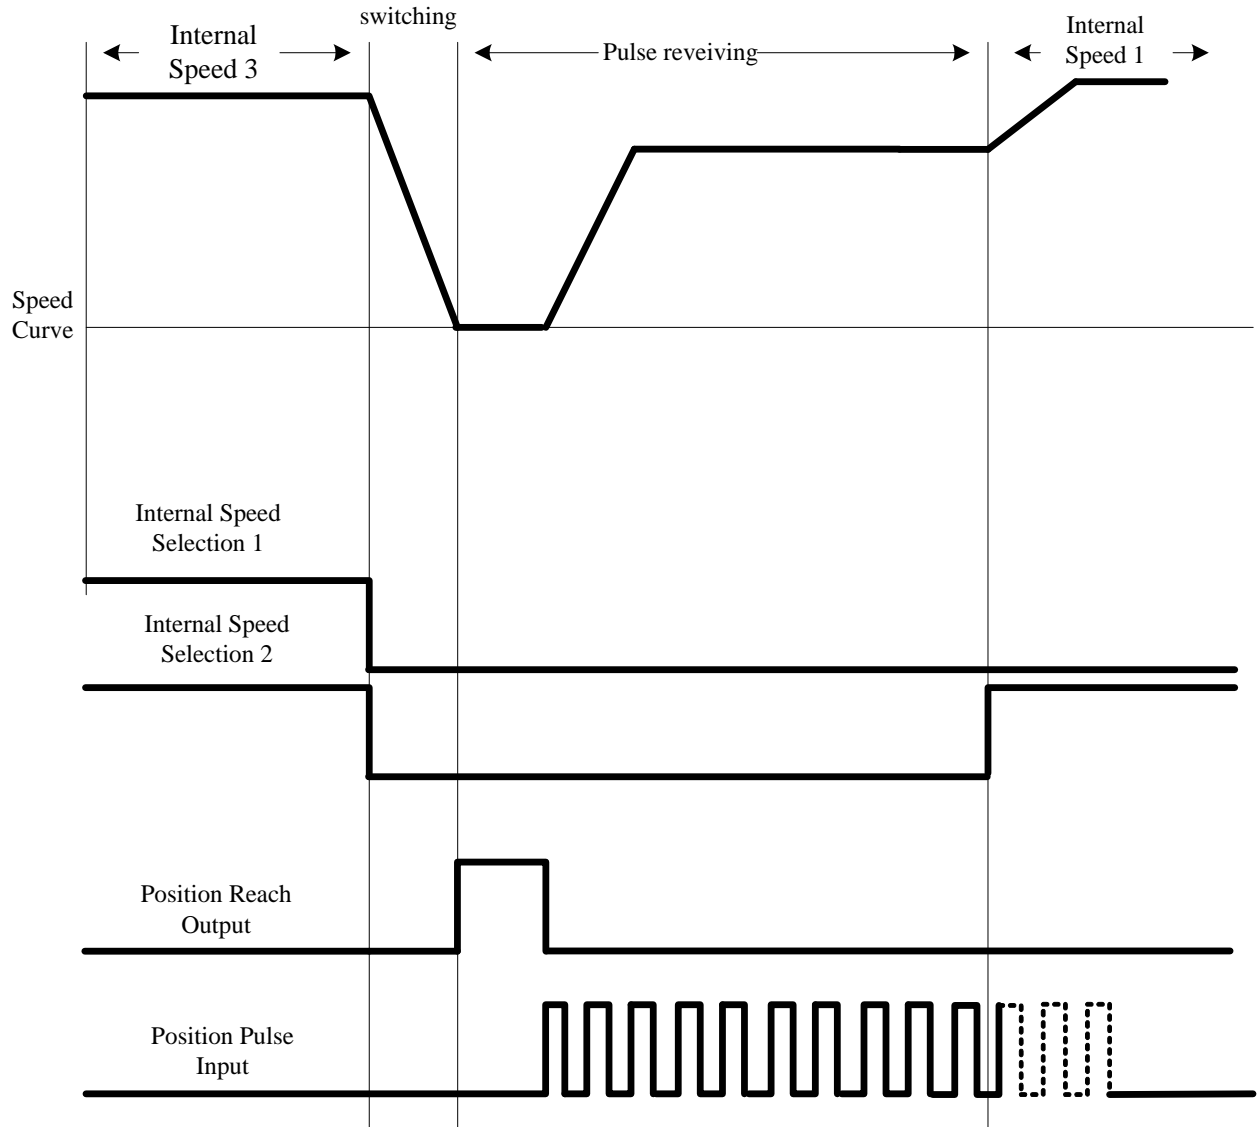


Fig 6.5.1 Speed and Position Pulse Switching Mode Sequence

6.5.3 Analog Speed and Position Pulse Dual Mode

External analog speed and position pulse command switching mode shows the figure 6.5.2, after servo is enabled, servo runs as position pulse mode when mode switching signal is enabled; Servo runs as analog speed when mode switching signal is disabled.

In the running process of analog speed mode, servo slows down to zero according to deceleration time when mode switching signal is enabled, servo cannot receive position pulse until switching to position mode after position reach signal output is enabled.

In the running process of position pulse mode, when mode switching signal is disabled, servo switches to analog speed mode Immediate, and run to target speed according to acceleration/deceleration time.

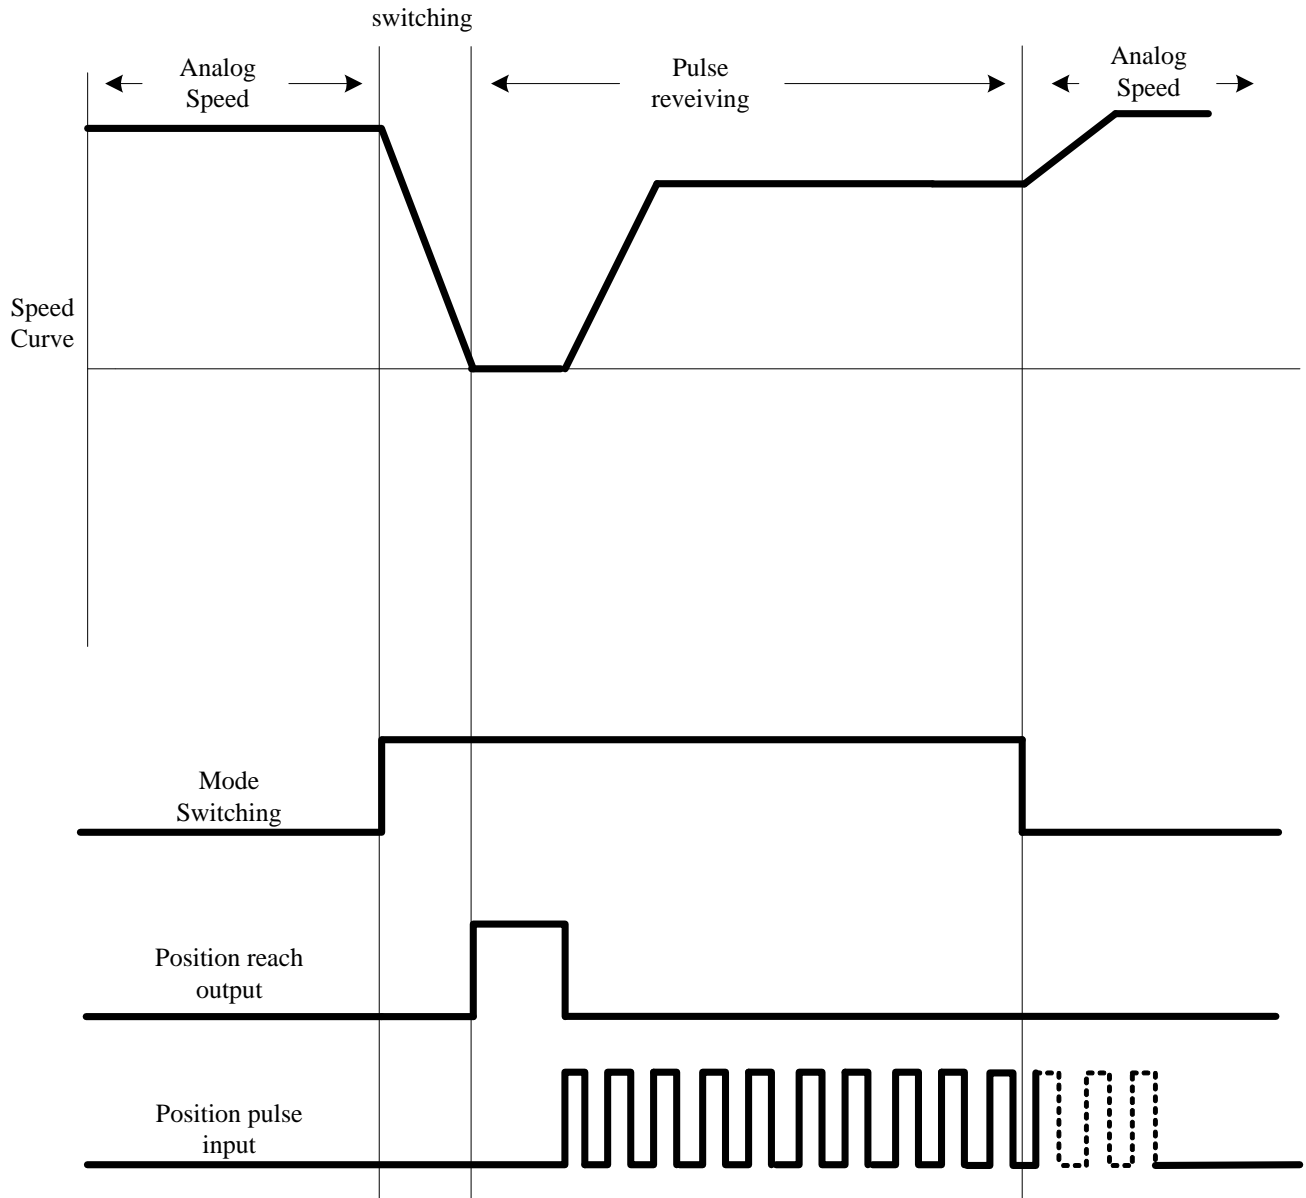


Fig 6.5.2 Analog speed and position pulse sequence diagram

6.5.4 Analog speed and internal register position dual mode

External analog speed and internal register position switching mode shows as figure 6.5.3, after servo is enabled, servo runs as internal register position mode when mode switching signal is enabled; servo runs as analog speed when mode switching signal is disabled.

In the running process of analog speed mode, servo slows down to zero according to deceleration time when mode switching signal is enabled; servo cannot receive internal register position trigger signal until switching to internal register position mode after position reach signal output is enabled.

In the running process of internal register position mode, when mode switching signal is disabled, servo switches to analog speed mode Immediate and run to target speed according to acceleration/deceleration time.

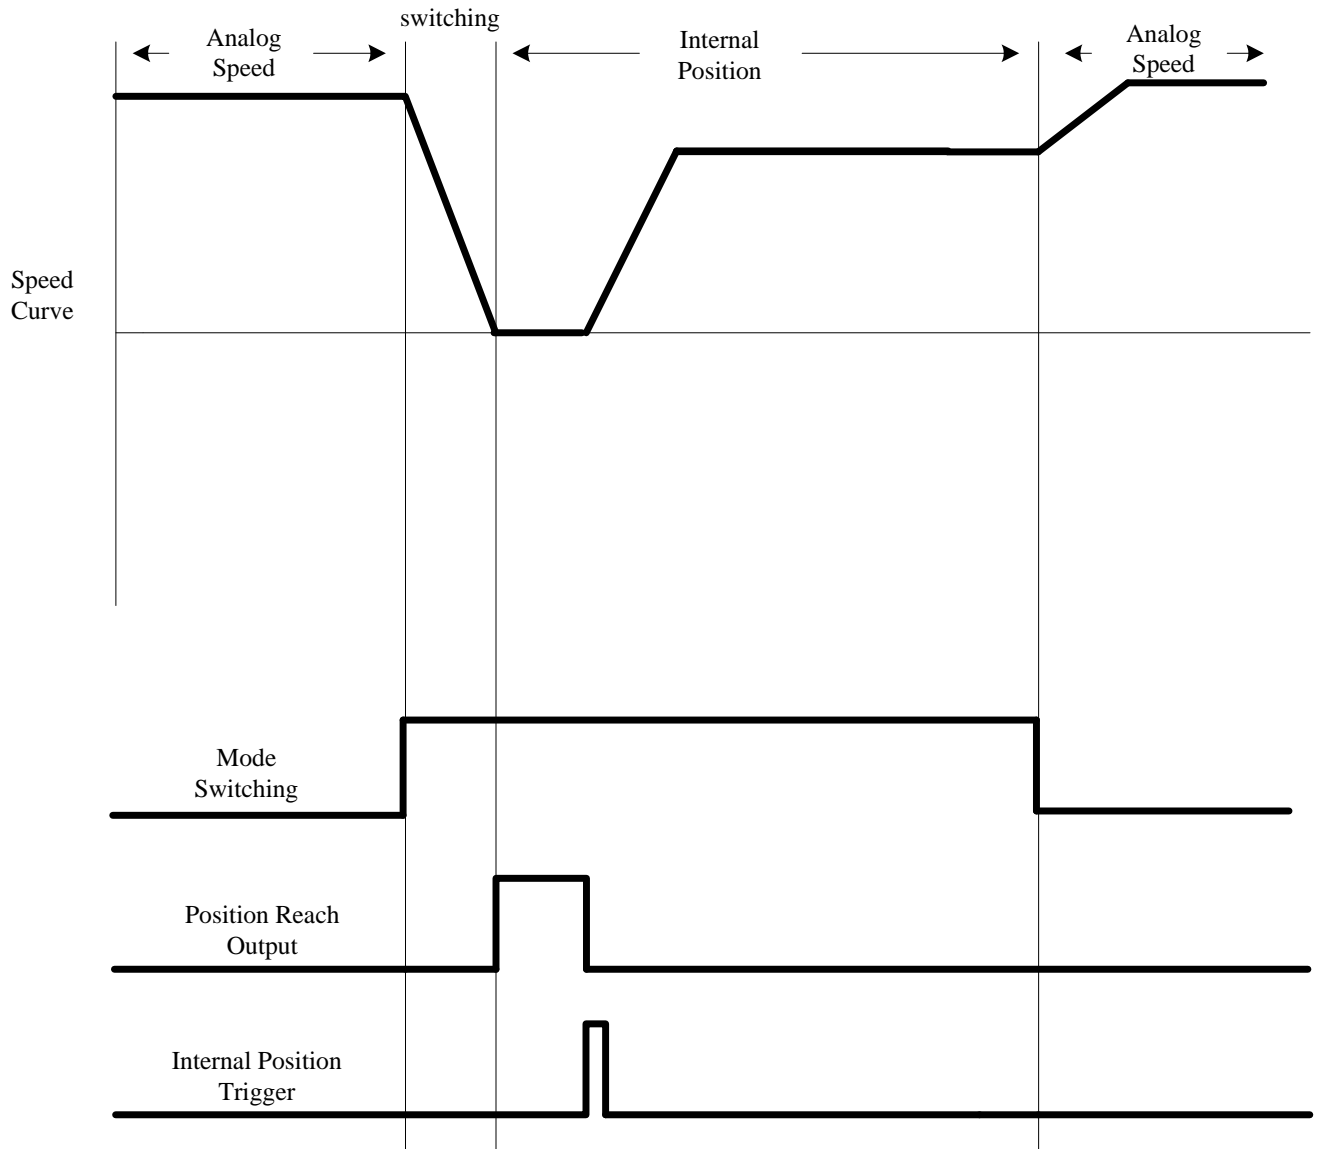


Fig 6.5.3 Analog speed and internal position pulse mode sequence diagram

6.5.5 Internal speed and internal register position dual mode

Internal register speed and position switching mode shows as figure 6.5.4, after servo is enabled, servo runs as speed mode when internal speed selection signal is enabled; Servo runs as internal register position mode when internal speed selection signal is disabled.

In the running process of speed mode, servo slows down to zero according to deceleration time when speed selection signal is disabled; servo cannot receive internal register position trigger signal until switching to position mode after position reach signal output is enabled.

In the running process of internal register position mode, when speed selection signal is enabled, servo switches to speed mode Immediate and run to target speed according to acceleration/deceleration time.

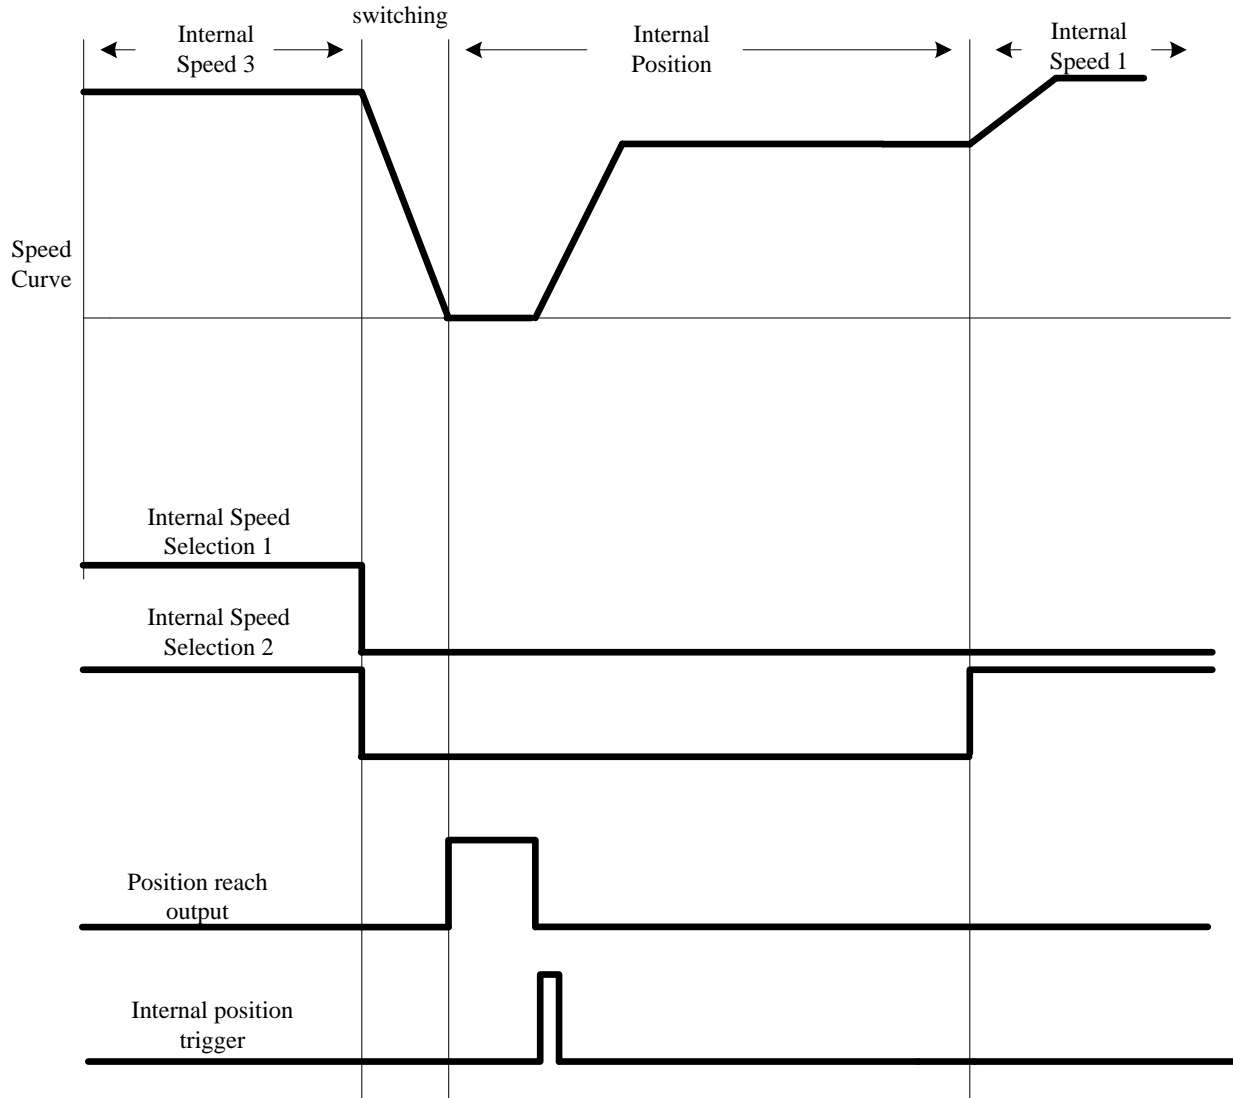


Fig 6.5.4 Internal speed and internal register position mode sequence diagram

6.5.6 Torque Mode and Position Pulse Dual Mode

Internal register torque and position pulse command switching mode , external analog torque and

position pulse command switching mode shows as figure 6.5.5, after servo is enabled, servo runs as position mode when mode switching signal is enabled; Servo runs as torque mode when mode switching signal is disabled.

In the running process of torque mode, servo slows down to zero according to deceleration time when mode switching signal is enabled; servo cannot receive position pulse signal until switching to position pulse mode after position reach signal output is enabled.

In the running process of position pulse mode, when mode switching signal is disabled, servo switches to torque mode Immediate and run to target torque according to acceleration/deceleration time.

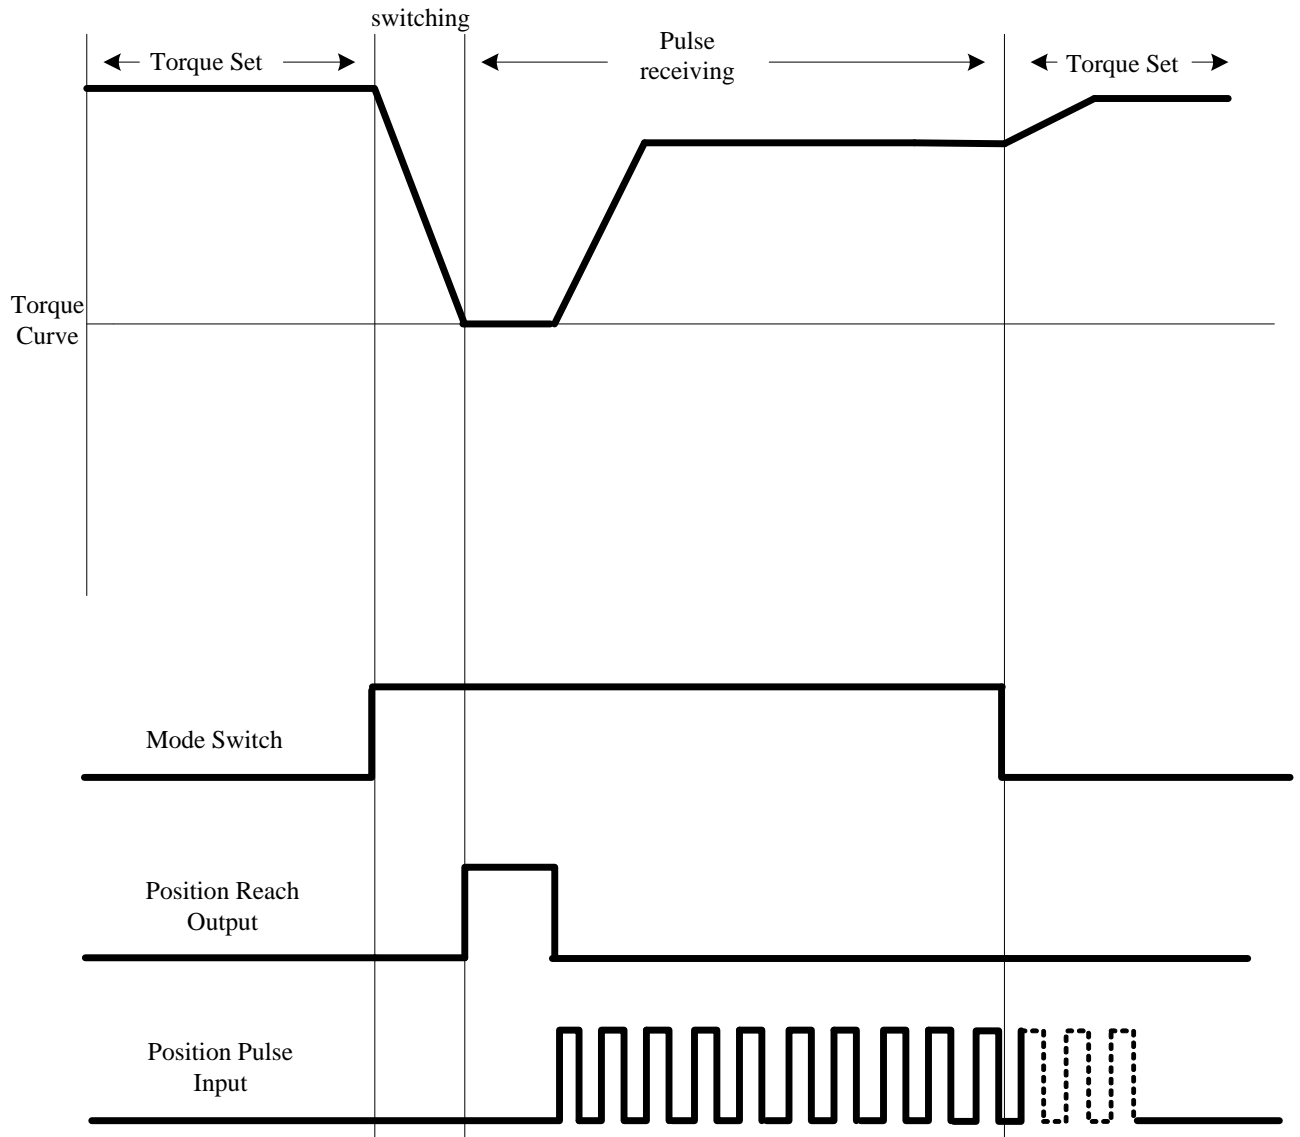


Fig 6.5.5 Torque mode and position pulse mode sequence diagram

6.5.7 Torque Mode and Internal Register Position Dual Mode

Internal register torque and position switching mode, external analog torque and internal register position

switching mode show as figure 6.56, after servo is enabled, servo runs as internal register position mode when mode switching signal is enabled; servo runs as torque mode when mode switching signal is disabled.

In the running process of torque mode, servo slows down to zero according to deceleration time when mode switching signal is enabled; Servo cannot receive internal register position trigger signal until switching to internal register position mode after position reach signal output is enabled.

In the running process of internal register position mode, when mode switching signal is disabled, servo switches to torque mode Immediate and run to target torque according to acceleration and deceleration time.

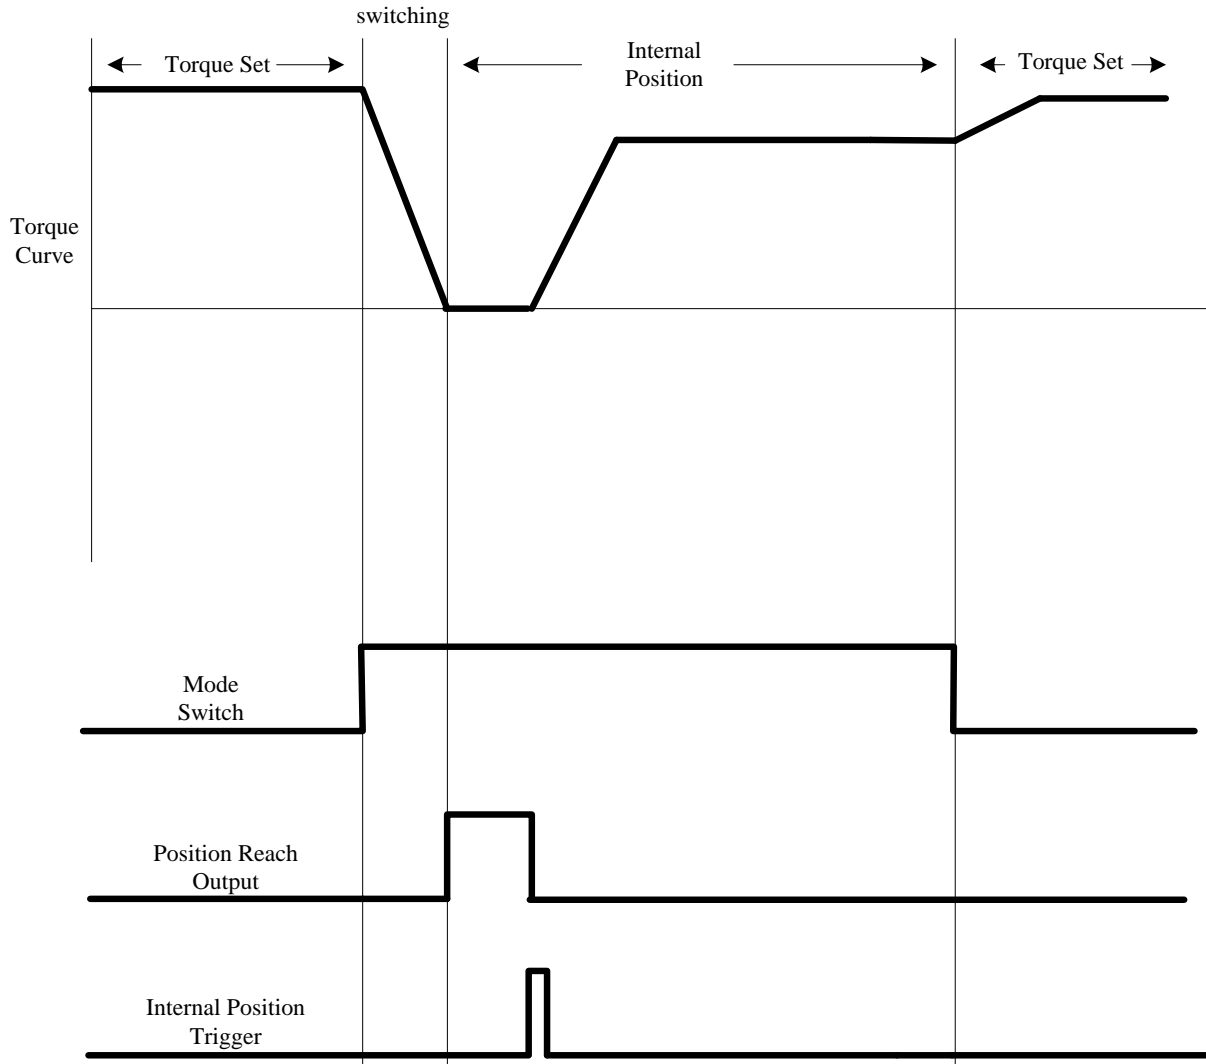


Fig 6.5.6 Torque mode and internal register position mode sequence diagram

6.5.8 Position Pulse and Internal Register Position Dual Mode

Position pulse command and internal register position switching mode shows as figure 6.5.7, after servo

is enabled, servo runs as internal register mode when mode switching signal is enabled; Servo runs as position pulse mode when mode switching signal is disabled.

In the running process of position pulse mode, when mode switching signal is enabled, servo can receive internal position trigger only when position reach output signal is enabled.

In the running process of internal register position mode, when mode switching signal is disabled, servo can receive position pulse signal only when position reach output is enabled.

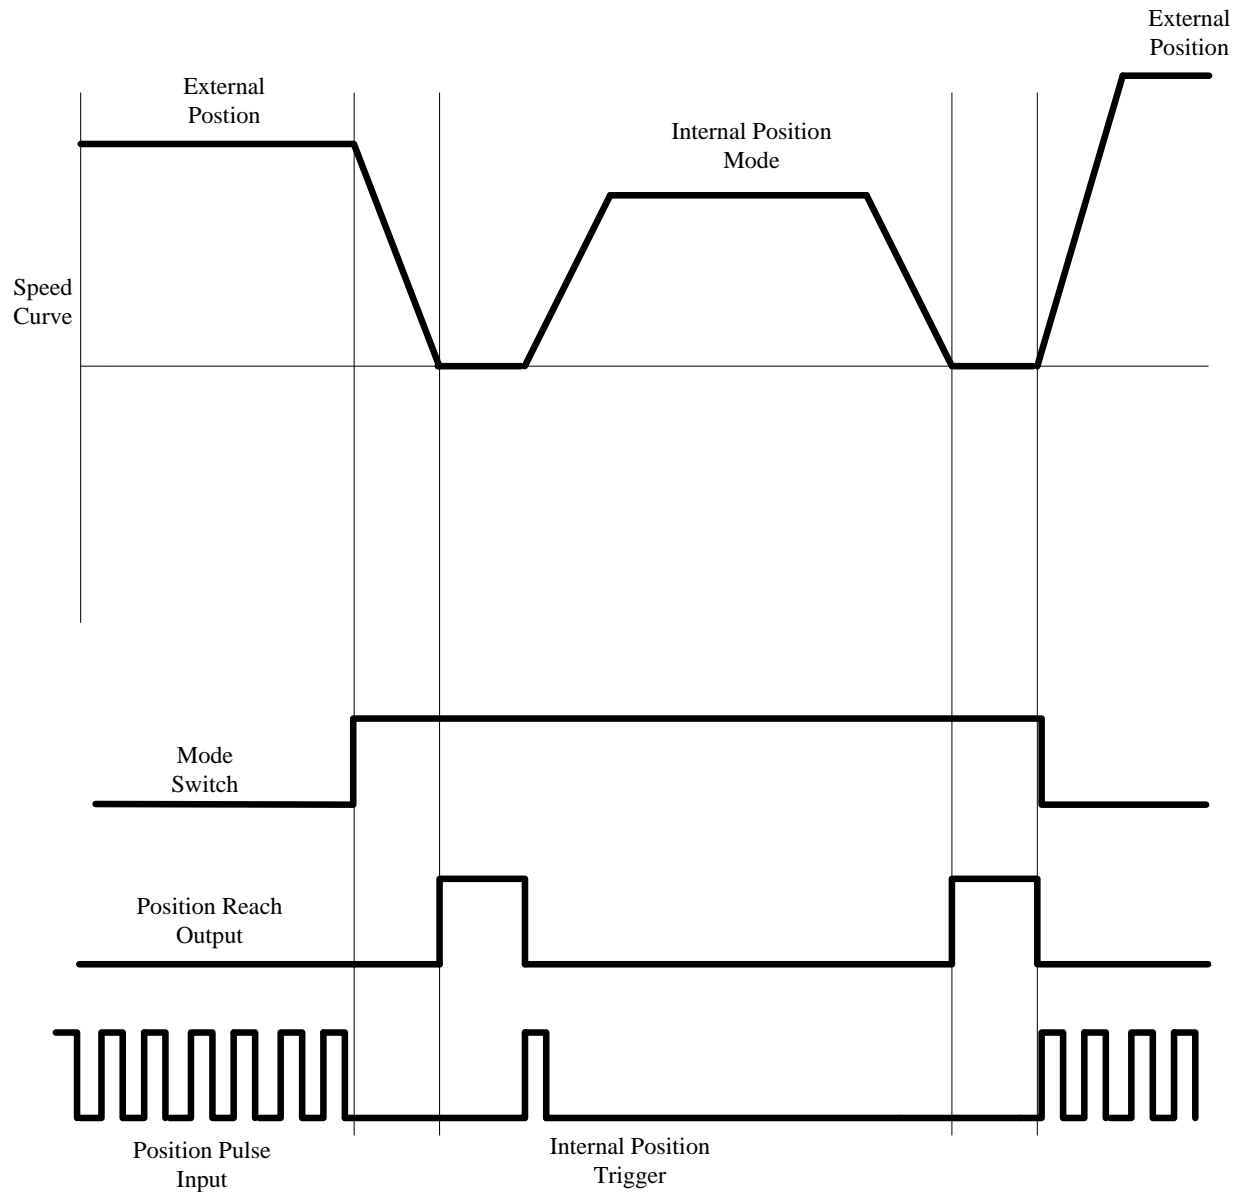


Fig 6.5.7 External position and internal position mode sequence diagram

6.5.9 Internal Speed and Analog Speed Dual Mode

Internal register speed and external analog speed switching mode shows as figure 6.5.8, after servo is enabled, servo runs as internal speed mode when internal speed selection signal is enabled; Servo runs as

analog speed mode when internal speed selection signal is disabled.

In the running process of analog speed mode, when internal speed selection signal is enabled, servo switches to internal speed mode and run to internal setting speed according to acceleration/deceleration time.

In the running process of internal speed mode, when speed selection signal is disabled, servo switches to analog speed mode and run to analog setting speed according to acceleration/deceleration time.

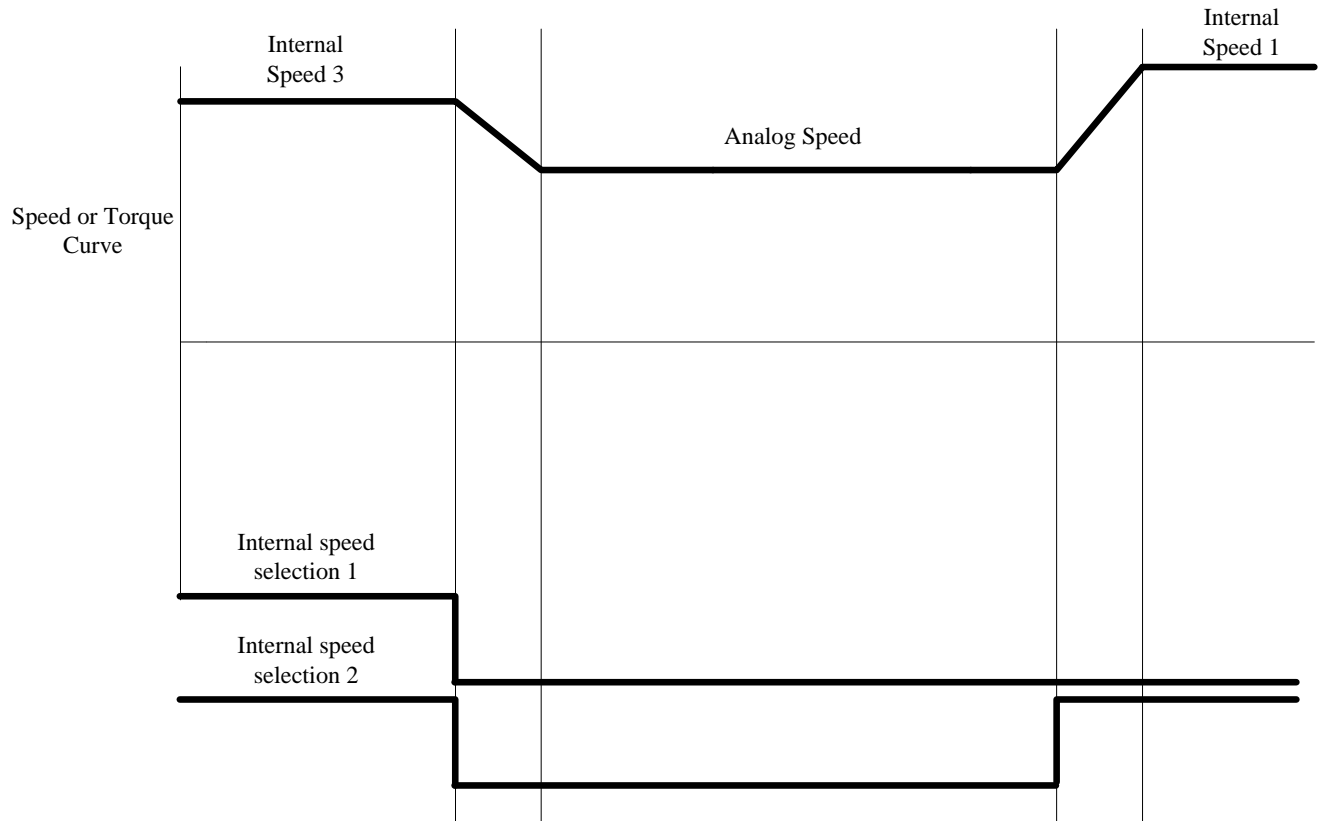


Fig 6.5.8 Analog speed and internal speed mode sequence diagram

6.5.10 Speed and Torque Dual Mode

(1) Internal register speed and torque switching mode, internal register speed and external analog torque switching mode show as figure 6.5.9, after servo is enabled, servo runs as speed mode when internal speed selection signal is enabled; servo runs as torque mode when internal speed selection signal is disabled.

In the running process of speed mode, servo switches to torque mode when speed selection signal is disabled, and runs to setting torque according to deceleration time.

In the running process of torque mode, servo switches to speed mode when speed selection signal is enabled, and run to target speed according to acceleration/deceleration time.

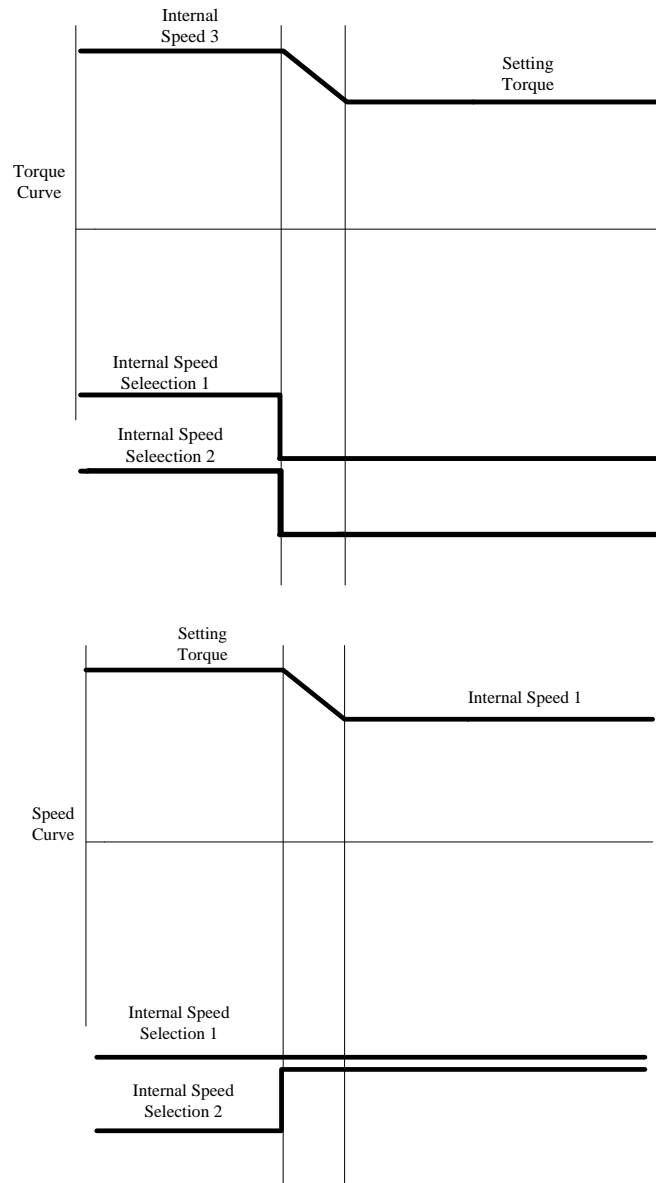


Fig 6.5.9 Speed mode and torque mode switching sequence diagram

(2) External analog speed and internal register torque switching mode, external analog speed and torque switching mode show as figure 6.5.10, after servo is enabled, servo runs as torque mode when mode switching signal is enabled; Servo runs as speed mode when mode switching signal is disabled.

In the running process of speed mode, servo switches to torque mode when mode selection signal is enabled, and run to setting torque according to deceleration time.

In the running process of torque mode, servo switches to speed mode when mode selection signal is

disabled, and run to target speed according to acceleration/deceleration time.

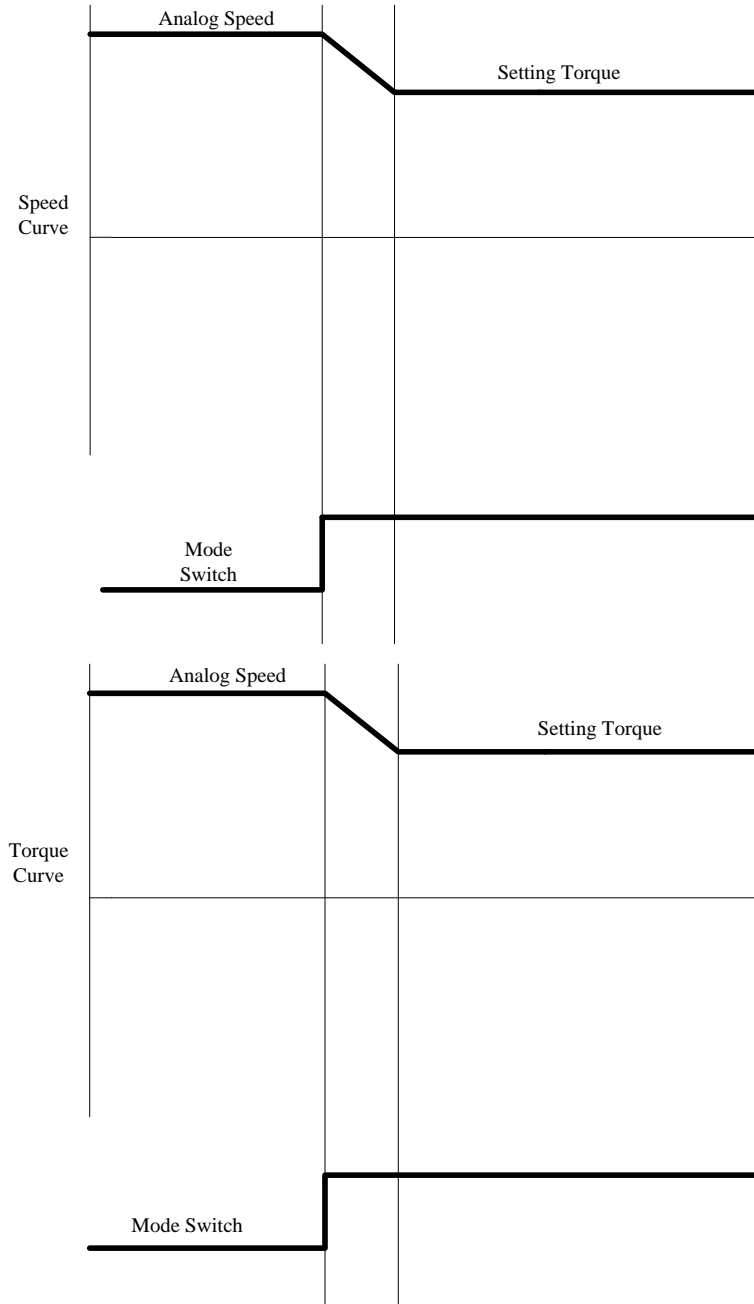


Fig 6.5.10 Speed mode and torque mode switching sequenc diagram

6.5.11 Analog Torque and Internal Register Torque Dual Mode

Internal register torque and external analog torque switching mode shows as figure 6.5.11, after servo is enabled, servo runs as internal register torque mode when mode switching signal is enabled; Servo runs as analog torque mode when mode switching signal is disabled.

In the running process of analog torque mode, servo switches to internal register torque mode when mode

switching signal is enabled and run to internal setting torque according to acceleration/deceleration time. In the running process of internal register torque mode, when mode switching signal is disabled, servo switches to analog torque mode and run to analog setting torque according to acceleration/deceleration time.

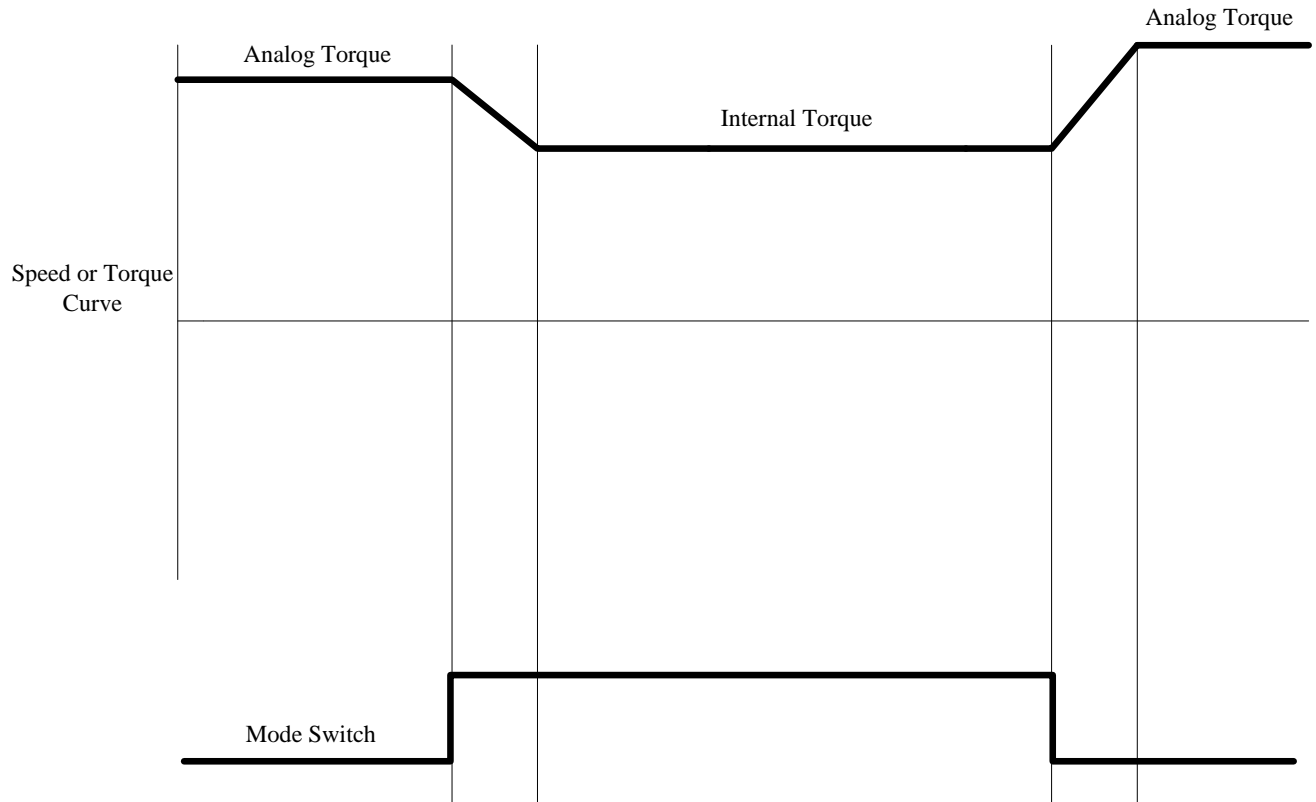


Fig 6.5.11 Analog torque and internal torque mode switching sequence diagram

6.6 Auxiliary Function

Servo drives supply auxiliary function in order to make sure system work correctly.

6.6.1 Setting password

| | | | | |
|-------|---|--------------|-------------|--------------|
| So-01 | Setting password speed position torque (Avoid modifying parameters by mistake) | | | |
| | Setting range | Setting unit | Mfr's value | When enabled |
| | 0~9999 | N/A | 0 | restart |

Setting password is used to avoid modifying parameters by mistake. The mfr's value is 0, which means password is invalid and users can modify parameters anytime. If users want to use this function, please set a password for this parameter and restart servo, then this function is valid.

Most auxiliary function and main function parameters except monitor function parameters can be modified when the password is input into this parameter. Or else Err will display.

6.6.2 Servo drive status display

| | | | | |
|-------|---|--------------|-------------|-----------------------|
| So-09 | Servo drive status display speed position torque | | | |
| | Setting range | Setting unit | Mfr's value | When enabled |
| | 0~37 | N/A | 2 | Effective Immediately |

This parameter is used to set default display content in keypad. Please refer to next table about the display item:

| Setting value | Definition | Setting value | Definition |
|---------------|---|---------------|---|
| 0 | Servo drive output current | 19 | Rotating inertia display |
| 1 | Servo drive bus voltage | 20 | Output torque display |
| 2 | Servo motor rotating speed | 21 | Current gain group |
| 3 | Servo motor feedback pulse displays high 5 digits. | 22 | Discharge time |
| 4 | Servo motor feedback pulse displays low 5 digits. | 23 | Encoder absolute position high digit pulse |
| 5 | Servo motor feedback rotation displays high 5 digits. | 24 | Encoder absolute position low digit pulse |
| 6 | Servo motor feedback rotation displays low 5 digits. | 25 | High 5 digits of number of turns of encoder absolute position |
| 7 | Given command pulse numbers display high 5 digits. | 26 | Low 5 digits of number of turns of encoder absolute position |
| 8 | Given command pulse numbers display low 5 digits. | 27 | AI1 voltage |
| 9 | Given command pulse error numbers | 28 | AI2 voltage |
| 10 | Given speed | 29 | Combined deviation |
| 11 | Given torque | 30 | Close-loop feedback |
| 12 | Analog speed command display | 31 | Gantry synchronous deviation |
| 13 | Analog torque command display | 32 | Reserved |
| 14 | D18~D15 status display | 33 | Hight- speed counter 1 |
| 15 | D14~D11status display | 34 | Hight- speed counter 2 |
| 16 | Other output interface status display | 35 | PLC monitor |
| 17 | D4~D1 status display | 36 | Motor temperature |
| 18 | Drive current temperature display | 37 | Motor shaft position |

6.6.3 Fan setting

| | | | | |
|-------|---|--------------|-------------|--------------------------|
| So-26 | Fan control speed position torque | | | |
| | Setting range | Setting unit | Mfr's value | When enabled |
| | 0~2 | N/A | 2 | Effective Immediately |
| | 0: Fan is controlled by temperature. 1: Fan will run after power on. 2: Fan will run when servo drive starts running. | | | |

When So-26=0, and when radiator temperature reaches to setting temperature, fan starts running. When radiator temperature is lower than So-27-5°, fan will stop running.

When So-26=2, fan will run when servo ON or temperature is higher than 45°. When servo off and radiator temperature is lower than 40°, fan will stop running after 500ms.

| | | | | |
|-------|--|--------------|-------------|--------------------------|
| So-27 | Fan temperature setting speed position torque | | | |
| | Setting range | Setting unit | Mfr's value | When enabled |
| | 10~100 | °C | 45 | Effective Immediately |

6.6.4 Parameter copy

So-44

| Parameter copy | | speed | position | torque |
|----------------|--------------|---|--|--|
| Setting range | Setting unit | Mfr's value | When enabled | |
| Four-parameter | N/A | 0000 | Effective Immediately | |

b

☐

☐

☐

☐

| | |
|---|---------------|
| A | Copy function |
| 0 | Invalid |
| 1 | Valid |

| | |
|---|-----------------------|
| B | Copy motor parameters |
| 0 | Invalid |
| 1 | Valid |

| | |
|---|----------------------|
| C | Copy gain parameters |
| 0 | Invalid |
| 1 | Valid |

| | |
|---|------------------------------|
| D | Copy notch filter parameters |
| 0 | Invalid |
| 1 | Valid |

6.6.5 Reverting to Mfr's Value

When there is disorder with parameters and mfr's value need to restored, set So-49=1.

Related Parameters

| | | | | |
|--------------|--|--------------|-------------|---------|
| So-49 | Reverting to Mfr's value speed position torque | | | |
| | Setting Range | Setting Unit | Mfr's Value | Effect |
| | 0~1 | N/A | 0 | Restart |

The procedure is that set So-49=1 and holding prees SET key for 0.5s, "00000" is displayed. After 5 seconds, all parameters revert to mfr's value automatically.

6.6.6 Motor Protection Function

(1) Motor Overload Protection

When there is output for servo motor, output current continuously generates heat, and releases heat into surrounding environment, when the generated heat goes over than released heat, the rising temperature of motor is so high that make the motor excitation-loss and damage, and therefore, servo drive provides motor overload protection function to prevent the damage from excessive temperature.

Set motor overload protection (So-37) to adjust the time of motor overload fault (AL-06). Generally, So-37 remains default value, but if the following situation happens, So-37 can be modified according to motor actual heat situation:

- The occasion of higher operating ambient temperature for servo motor;
- The occasion that servo motor runs circularly, one-time motion period is short and frequent switching;

(1) Related Parameter

| | | | | |
|--------------|--|--------------|-------------|------------------|
| So-37 | Motor overload coefficient setting speed position torque | | | |
| | Setting Range | Setting Unit | Mfr's Value | Effect |
| | 0~500 | % | 100 | Immediate effect |

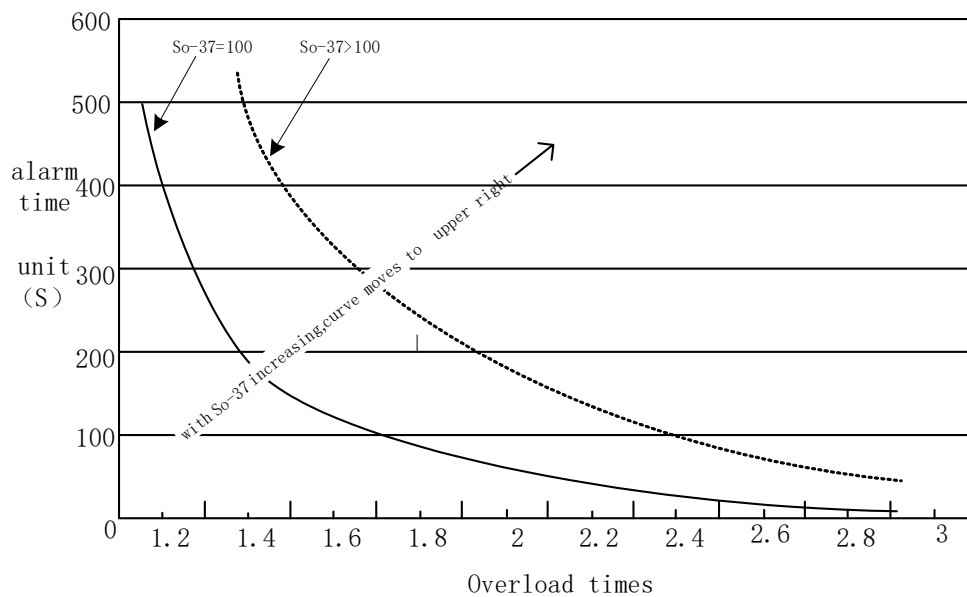


Fig 6.6.1 Motor overload curve and alarm time curve graph

(2) Motor lock-rotor protection

Motor speed is almost 0 when servo-motor lock-rotor occurs, but the actual current is very high, servo drive and servo motor may be damaged because of long time lock-rotor, therefore, servo drive provides the motor lock-rotor protection to prevent the damage from excessive temperature in the situation of motor lock-rotor.

Related Parameter

| | | | | |
|--------------|--|--------------|-------------|------------------|
| So-34 | Motor lock-rotor protection speed position torque | | | |
| | Setting Range | Setting Unit | Mfr's Value | Effect |
| | 0~1 | N/A | 1 | Immediate effect |
| So-40 | Delay time of lock-rotor protection speed position torque | | | |
| | Setting Range | Setting Unit | Mfr's Value | Effect |
| | 10~1000 | 10ms | 50 | Immediate effect |

(3) Motor overheat protection

| | | | | |
|--------------|--|--------------|-------------|--------------------------|
| So-50 | Motor overheat protection speed position torque | | | |
| | Setting range | Setting unit | Mfr's value | When enabled |
| | 0~1 | N/A | 0 | Effective Immediately |
| | 0: Invalid 1: Valid | | | |

| | | | | | | |
|-------|--|--------------|-------------|-----------------------|---------------------|-------------------|
| So-51 | Temperature detection disconnection protection | | | <div>speed</div> | <div>position</div> | <div>torque</div> |
| | Setting range | Setting unit | Mfr's value | When enabled | | |
| | 0~1 | N/A | 1 | Effective Immediately | | |
| | 0: Invalid 1: Valid | | | | | |

6.6.7 Encoder pulse filtering

| | | | | | | |
|-------|--|--------------|-------------|-----------------------|---------------------|-------------------|
| So-52 | Encoder pulse filtering coefficient | | | <div>speed</div> | <div>position</div> | <div>torque</div> |
| | Setting range | Setting unit | Mfr's value | When enabled | | |
| | 0~1000 | N/A | 0 | Effective Immediately | | |
| | When So-52≠0, the signal level which duration time is lower than (So-52/30MHz)s will be filtered. | | | | | |

6.6.8 Torque unreach protection control

When output torque can not reach given torque, keypad may display protection code 'AL-23' by setting following parameters.

| | | | | | | |
|-------|-----------------------------------|--------------|-------------|-----------------------|----------|--------|
| So-54 | Torque unreach protection setting | | | speed | position | torque |
| | Setting range | Setting unit | Mfr's value | When enabled | | |
| | 0~1 | N/A | 1 | Effective Immediately | | |

0: invalid 1: valid

| | | | | | | |
|-------|---------------------|--------------|-------------|-----------------------|----------|--------|
| So-55 | Torque unreach time | | | speed | position | torque |
| | Setting range | Setting unit | Mfr's value | When enabled | | |
| | 1~100 | 10ms | 10 | Effective Immediately | | |

After unreach torque keeps time of So-55, servo drive trips into AL-23.

6.6.9 DI Terminals Filter Function

Servo drive have 8 DI terminals, DI1~DI8 is normal DI terminal.

Normal DI terminal filter setting

If there is interference in terminal signal, users can carry on filter processing by setting Po438~Po444.

| | | | | | | |
|-------|-----------------|--------------|-------------|------------------|----------|--------|
| Po438 | DI1 filter time | | | speed | position | torque |
| | Setting Range | Setting Unit | Mfr's Value | Effect | | |
| | 0~30000 | N/A | 2 | Immediate effect | | |

| | | | | |
|--------------|--|--------------|-------------|------------------|
| Po439 | DI2 filter time speed position torque | | | |
| | Setting Range | Setting Unit | Mfr's Value | Effect |
| | 0~30000 | N/A | 2 | Immediate effect |
| Po440 | DI3 filter time speed position torque | | | |
| | Setting Range | Setting Unit | Mfr's Value | Effect |
| | 0~30000 | N/A | 2 | Immediate effect |
| Po441 | DI4 filter time speed position torque | | | |
| | Setting Range | Setting Unit | Mfr's Value | Effect |
| | 0~30000 | N/A | 2 | Immediate effect |
| Po442 | DI5 filter time speed position torque | | | |
| | Setting Range | Setting Unit | Mfr's Value | Effect |
| | 0~30000 | N/A | 2 | Immediate effect |
| Po443 | DI6 filter time speed position torque | | | |
| | Setting Range | Setting Unit | Mfr's Value | Effect |
| | 0~30000 | N/A | 2 | Immediate effect |
| Po444 | DI7 filter time speed position torque | | | |
| | Setting Range | Setting Unit | Mfr's Value | Effect |
| | 0~30000 | N/A | 2 | Immediate effect |
| Po445 | DI8 filter time speed position torque | | | |
| | Setting Range | Setting Unit | Mfr's Value | Effect |
| | 0~30000 | N/A | 2 | Immediate effect |

6.6.8 Other Output Signals

(1) Servo Alarm Terminal Output

ALM is activated when the servo drive has detected a fault condition. ON signal is output when servo works well, OFF signal is output when there is a malfunction.

| Signal Name | Name | Terminals | Remarks |
|--------------------|------|--------------|---|
| Servo Alarm Output | ALM | ALM- ALM+ | Servo alarm output signal, can provide failure indication |

(2) Servo Ready Output

| Signal Name | Name | Terminals | Remarks |
|-------------|------|-----------|--------------------|
| SRDY | SRDY | SRDY+ | Servo ready output |
| | | SRDY- | |

Output ON means that the servo drive is ready to receive signal, control circuit and main circuit power

supply are normal, there is no servo alarms. Output OFF means that servo drive is not ready.

(3) Overload pre-alarm signal output

When servo output current reaches or exceeds overload pre-alarm current, and after overload pre-alarm filter time, the output current still reaches or higher than pre-alarm current, then this signal is output.

| Signal Name | Default terminal | Remarks |
|-------------|--------------------|------------------------------|
| OL-W | Allocated by users | Pre-alarm signal of overload |

Related parameters:

| | | | | |
|--------------|---|--------------|-------------|------------------|
| So-35 | Overload pre-alarm current [speed] [position] [torque] | | | |
| | Setting Range | Setting Unit | Mfr's Value | Effect |
| | 0~800 | % | 120 | Immediate effect |
| So-36 | Overload pre-alarm filter time [speed] [position] [torque] | | | |
| | Setting Range | Setting Unit | Mfr's Value | Effect |
| | 0~1000 | 10ms | 10 | Immediate effect |

(4) Signal output in speed limit

When rotate speed is limited, DO outputs this signal, and not related to motor rotation but valid for forward/reverse .It should allocate 1 DO terminal(speed limiting) to servo drive and set DO terminal logic.

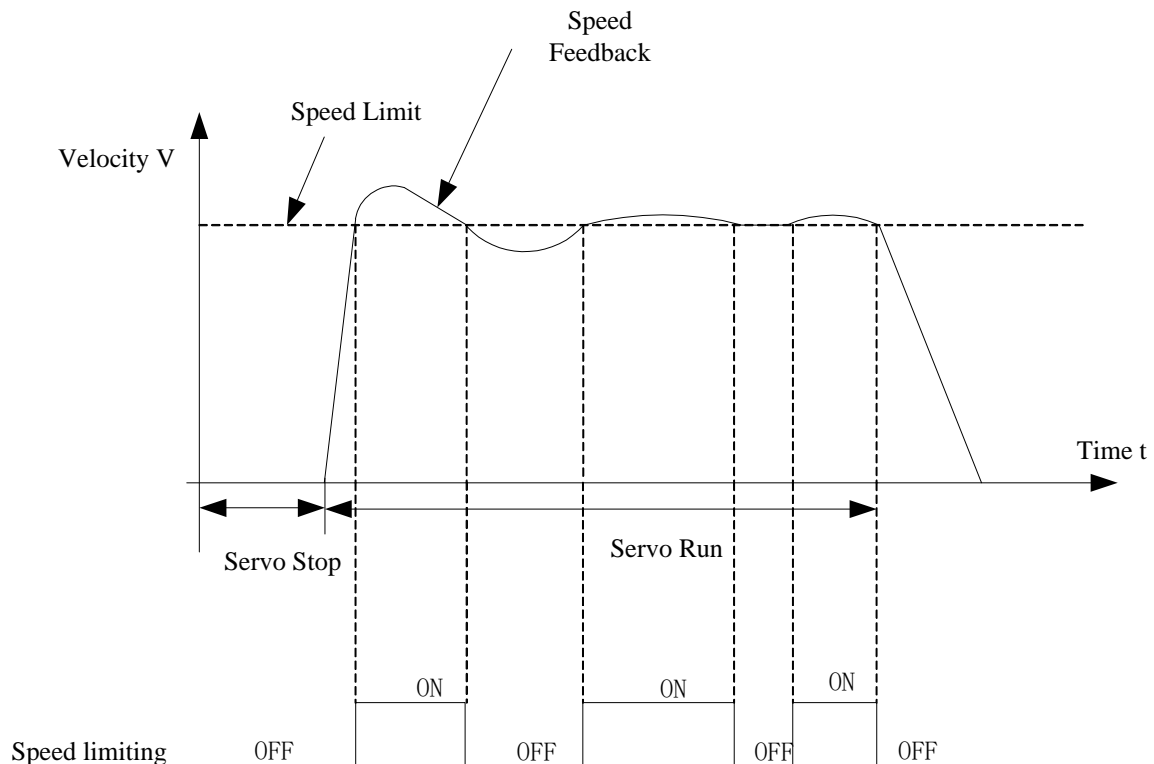


Fig 6.6.3 Output in speed limit under torque mode sketch map

6.7 High-Speed Counter Function

6.7.1 Overview

High-speed counter is the specific function of FL20 series. It is convenient for user to set external command processing mode and control servo system.

High-speed counter integrates the function of data capture, which is using external or internal trigger signal to capture the position data of motion axis instantaneously, and store to data array for the use of the follow-up motion control.

High-speed counter is applied mostly in full closed-loop, electronic cam, built-in PLC and pulse command function. It is more convenient to process external data and more efficient to execute instructions.

High-speed counter integrates 2 groups of counters, which can be set by user according to different demands.

6.7.2 High-Speed Counting

High-speed counter internal frame diagram shows as below:

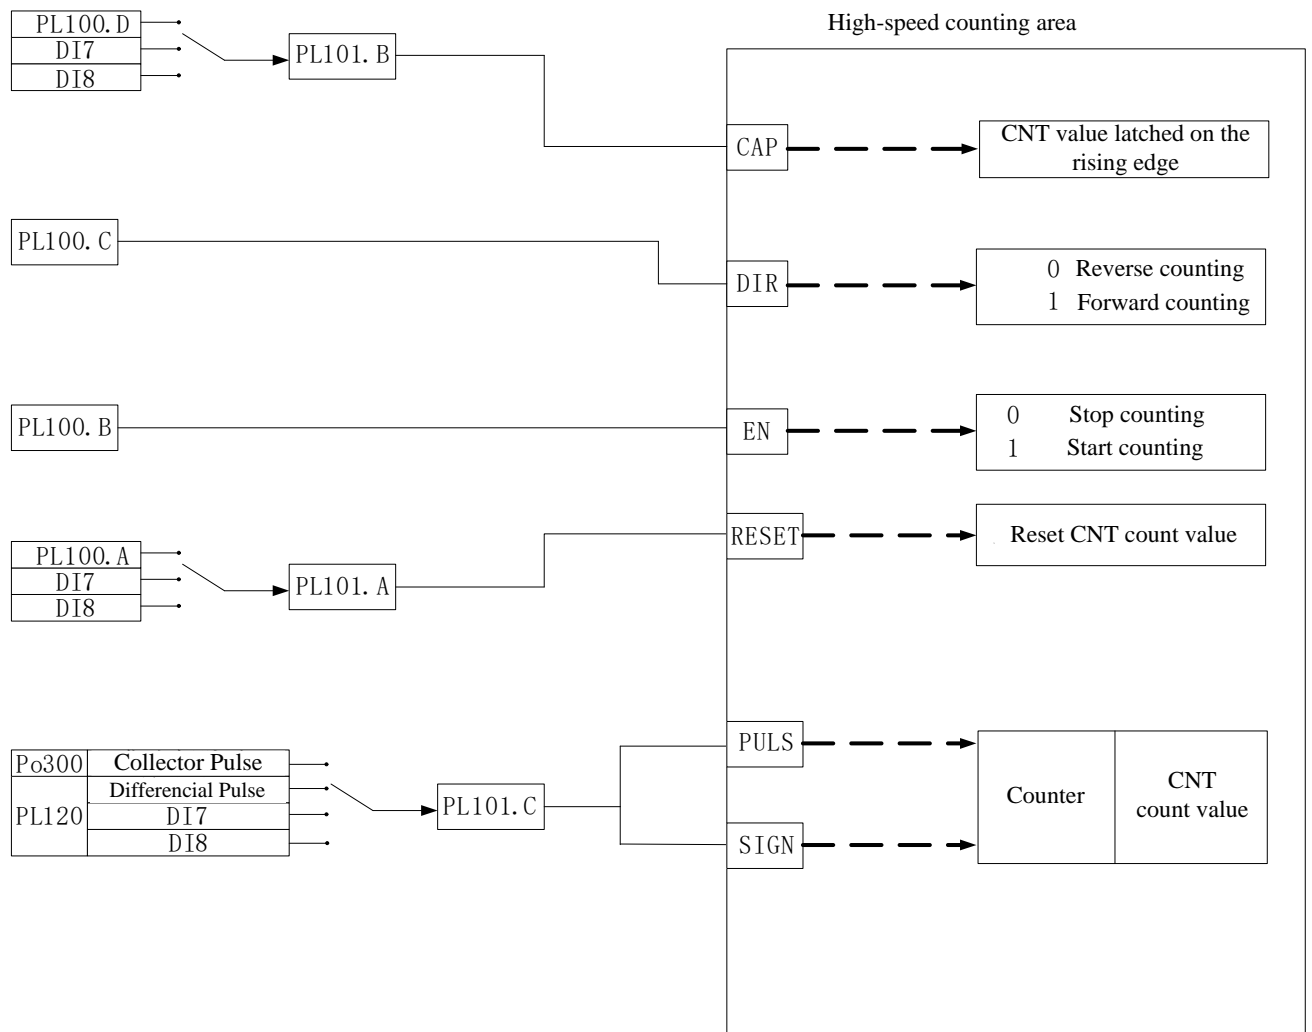


Fig 6.7.1 High-speed counter internal frame diagram

Note: DI7, DI8 support Max frquency 3KHz.

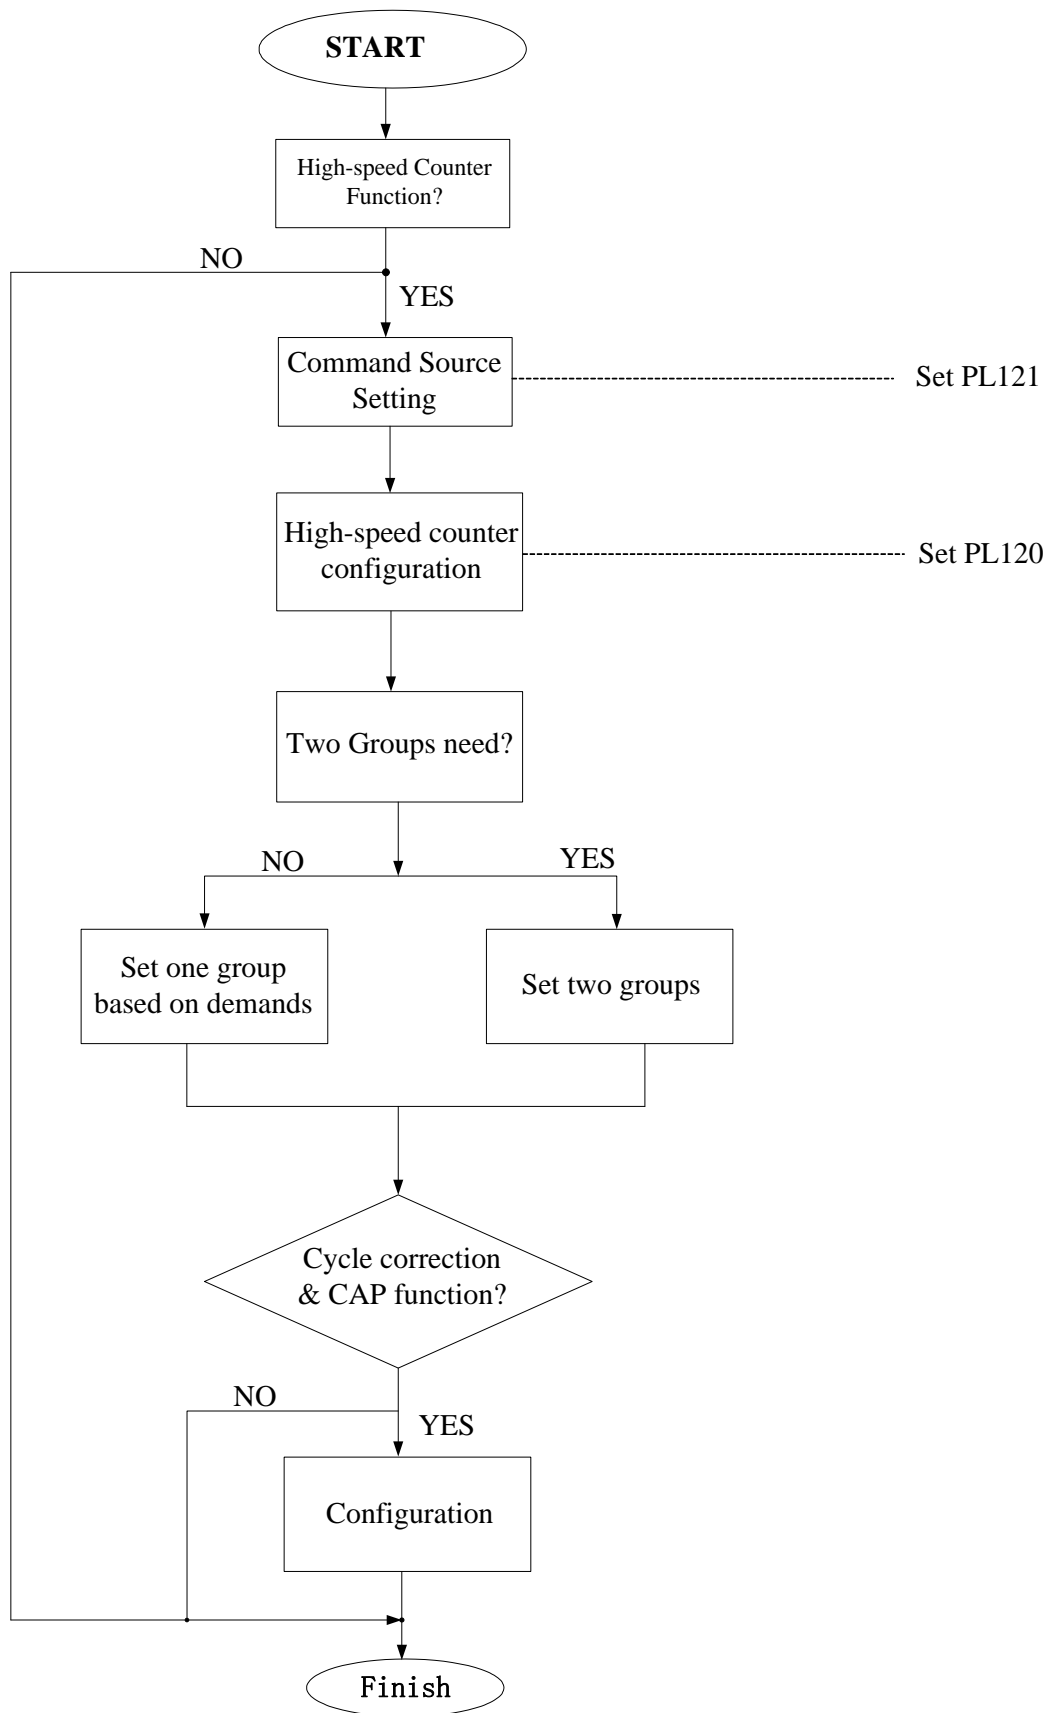


Fig 6.7.2 High-speed counter setting flow chart

(1) User Parameter

1) Set command source of high-speed counting command source

| | | | | |
|--------------|--|--------------|-------------|------------------|
| PL121 | Internal command source speed position torque | | | |
| | Setting Range | Setting Unit | Mfr's Value | Effect |
| | 0~1 | N/A | 0 | Immediate effect |
| | 0 : Internal parameter PL100 1 : Internal PLC | | | |

2) Configuration of high-speed counter

PL120

High-speed counter setting

speed

position

torque

Setting Range

Setting Unit

Mfr's Value

Effect

Four-parameter

N/A

0000

Immediate effect

b

A

High - speed pulse type

0

Direction+ Pulse

1

Dipulse

2

Orthogonal pulse

B

High-speed pulse filtering

0

8MHz

1

4MHz

2

2MHz

3

1MHz

4

500KHz

5

200KHz

6

150KHz

C

High-speed pulse direction

0

HPULS anti-logic, HSIGN anti-logic

1

HPULS positive logic, HSIGN positive logic

2

HPULS anti-logic, HSIGN positive logic

3

HPULS positive logic, HSIGN anti- logic

4

Exchange HPULS and HSIGN

D

DI7/DI8 filter time

0

800KHz

1

400KHz

2

200KHz

3

100KHz

4

40KHz

5

30KHz

6

16KHz

7

8 KHz

8

4 KHz

3) Set two gourps of high-speed counter function

| | | | | |
|--------------|---|--------------|-------------|------------------|
| PL100 | High-speed counter 1 control command speed position torque | | | |
| | Setting Range | Setting Unit | Mfr's Value | Effect |
| | Four-parameter | N/A | 0010 | Immediate effect |

| | <div style="text-align: center;"> </div> <table border="1"> <thead> <tr> <th>A</th><th>High-speed counter Reset</th></tr> </thead> <tbody> <tr> <td>0</td><td>No Reset</td></tr> <tr> <td>1</td><td>Reset</td></tr> </tbody> </table> <table border="1"> <thead> <tr> <th>B</th><th>High-speed counter enabled</th></tr> </thead> <tbody> <tr> <td>0</td><td>Disabled</td></tr> <tr> <td>1</td><td>Enabled</td></tr> </tbody> </table> <table border="1"> <thead> <tr> <th>C</th><th>High-speed counter direction</th></tr> </thead> <tbody> <tr> <td>0</td><td>Reverse</td></tr> <tr> <td>1</td><td>Forward</td></tr> </tbody> </table> <table border="1"> <thead> <tr> <th>D</th><th>CAP enabled</th></tr> </thead> <tbody> <tr> <td>0</td><td>Close CAP function</td></tr> <tr> <td>1</td><td>Open CAP function</td></tr> </tbody> </table> | A | High-speed counter Reset | 0 | No Reset | 1 | Reset | B | High-speed counter enabled | 0 | Disabled | 1 | Enabled | C | High-speed counter direction | 0 | Reverse | 1 | Forward | D | CAP enabled | 0 | Close CAP function | 1 | Open CAP function | | | | | | | |
|--------------|--|---|--------------------------|---|----------|---|-------|---|----------------------------|---|----------------------------|---|----------|---|------------------------------|---|---------|---|------------------------|---|-----------------|---|--------------------|---|-------------------|---|-----|---|----------------------------|---|-------|---|
| A | High-speed counter Reset | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 0 | No Reset | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 1 | Reset | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| B | High-speed counter enabled | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 0 | Disabled | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 1 | Enabled | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| C | High-speed counter direction | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 0 | Reverse | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 1 | Forward | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| D | CAP enabled | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 0 | Close CAP function | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 1 | Open CAP function | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| PL101 | High-speed counter 1 command source speed position torque | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | Setting Range Setting Unit Mfr's Value Effect | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | Four-parameter N/A 0100 Immediate effect | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | <div style="text-align: center;"> </div> <table border="1"> <thead> <tr> <th>A</th><th>Reset source setting</th></tr> </thead> <tbody> <tr> <td>0</td><td>Software</td></tr> <tr> <td>1</td><td>DI8</td></tr> <tr> <td>2</td><td>DI7</td></tr> </tbody> </table> <table border="1"> <thead> <tr> <th>B</th><th>CAP command source setting</th></tr> </thead> <tbody> <tr> <td>0</td><td>Software</td></tr> <tr> <td>1</td><td>DI8</td></tr> <tr> <td>2</td><td>DI7</td></tr> </tbody> </table> <table border="1"> <thead> <tr> <th>C</th><th>Command source setting</th></tr> </thead> <tbody> <tr> <td>0</td><td>Low-speed pulse</td></tr> <tr> <td>1</td><td>High-speed pulse</td></tr> <tr> <td>2</td><td>DI8</td></tr> <tr> <td>3</td><td>DI7</td></tr> </tbody> </table> <table border="1"> <thead> <tr> <th>D</th><th>Duty-cycle correction mode</th></tr> </thead> <tbody> <tr> <td>0</td><td>Close</td></tr> <tr> <td>1</td><td>Start</td></tr> </tbody> </table> | A | Reset source setting | 0 | Software | 1 | DI8 | 2 | DI7 | B | CAP command source setting | 0 | Software | 1 | DI8 | 2 | DI7 | C | Command source setting | 0 | Low-speed pulse | 1 | High-speed pulse | 2 | DI8 | 3 | DI7 | D | Duty-cycle correction mode | 0 | Close | 1 |
| A | Reset source setting | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 0 | Software | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 1 | DI8 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 2 | DI7 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| B | CAP command source setting | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 0 | Software | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 1 | DI8 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 2 | DI7 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| C | Command source setting | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 0 | Low-speed pulse | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 1 | High-speed pulse | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 2 | DI8 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 3 | DI7 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| D | Duty-cycle correction mode | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 0 | Close | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 1 | Start | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| PL102 | High-speed counter 1 compare register speed position torque | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | Setting Range Setting Unit Mfr's Value Effect | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | -2147483647~+2147483647 N/A 0 Immediate effect | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| PL104 | High-speed counter 1 periodic value speed position torque | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | Setting Range Setting Unit Mfr's Value Effect | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | -2147483647~+2147483647 N/A 0 Immediate effect | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| PL106 | High-speed counter 1 count value speed position torque | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | Setting Range Setting Unit Mfr's Value Effect | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | -2147483647~+2147483647 N/A 0 Check | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |

| | | | | | | |
|-------|--|--------------|-------------|------------------|----------|--------|
| PL108 | High-speed counter1 CAP value | | | speed | position | torque |
| | Setting Range | Setting Unit | Mfr's Value | Effect | | |
| | -2147483647~+2147483647 | N/A | 0 | Check | | |
| PL110 | High-speed counter 2 control command | | | speed | position | torque |
| | Setting Range | Setting Unit | Mfr's Value | Effect | | |
| | Four- parameter | N/A | 0000 | Immediate effect | | |
| | <div><div><div><div><div></div></div><div></div><div></div><div></div><div></div></div><div><div><div>A</div><div>High-speed counter Reset</div></div><div><div>0</div><div>No Reset</div></div><div><div>1</div><div>Reset</div></div></div><div><div><div>B</div><div>High-speed counter enabled</div></div><div><div>0</div><div>Disabled</div></div><div><div>1</div><div>Enabled</div></div></div><div><div><div>C</div><div>High-speed counter direction</div></div><div><div>0</div><div>Reverse</div></div><div><div>1</div><div>Forward</div></div></div><div><div><div>D</div><div>CAP enabled</div></div><div><div>0</div><div>Close CAP function</div></div><div><div>1</div><div>Open CAP function</div></div></div></div></div> | | | | | |
| PL111 | High-speed counter 2 command source | | | speed | position | torque |
| | Setting Range | Setting Unit | Mfr's Value | Effect | | |
| | Four-parameter | N/A | 0100 | Immediate effect | | |
| | <div><div><div><div><div></div></div><div></div><div></div><div></div><div></div></div><div><div><div>A</div><div>Reset source setting</div></div><div><div>0</div><div>Software</div></div><div><div>1</div><div>DI8</div></div><div><div>2</div><div>DI7</div></div></div><div><div><div>B</div><div>CAP command source setting</div></div><div><div>0</div><div>Software</div></div><div><div>1</div><div>DI8</div></div><div><div>2</div><div>DI7</div></div></div><div><div><div>C</div><div>Command source setting</div></div><div><div>0</div><div>Low-speed pulse</div></div><div><div>1</div><div>High-speed pulse</div></div><div><div>2</div><div>DI8</div></div><div><div>3</div><div>DI7</div></div></div><div><div><div>D</div><div>Duty-cycle correction mode</div></div><div><div>0</div><div>Close</div></div><div><div>1</div><div>Start</div></div></div></div></div> | | | | | |
| PL112 | High-speed counter 2 compare register | | | speed | position | torque |
| | Setting Range | Setting Unit | Mfr's Value | Effect | | |
| | -2147483647~+2147483647 | N/A | 0 | Immediate effect | | |
| PL114 | High-speed counter 2 periodic value | | | speed | position | torque |

| | | | | |
|--------------|---|--------------|-------------|------------------|
| | Setting Range | Setting Unit | Mfr's Value | Effect |
| | -2147483647~+2147483647 | N/A | 0 | Immediate effect |
| PL116 | High-speed counter 2 count value speed position torque | | | |
| | Setting Range | Setting Unit | Mfr's Value | Effect |
| | -2147483647~+2147483647 | N/A | 0 | Check |
| PL118 | High-speed counter2 CAP value speed position torque | | | |
| | Setting Range | Setting Unit | Mfr's Value | Effect |
| | -2147483647~+2147483647 | N/A | 0 | Check |

When using the function of high-speed counter, set the pulse source according to PL101.C and PL111.C, servo drive starts to use different high-speed counter based on the setting of PL101.C and PL111.C. In the condition of correct external connection, the pulse received by servo drive will be displayed on the count value of the corresponding high-speed counter.

If using CAP function, servo drive stores the counter value into CAP value in the rising edge of CAP command, the source of CAP are software, DI7 and DI8, meanwhile user can set the periodic value (PL104&PL114) as required, servo drive latches pulses in the rising edge of CAP or setting period. When using the function of CAP period, since CAP happens in random time of pulse, servo drive will compare actual received pulse with the pulse captured from edge, then makes compensation to make the pulse count value equal to CAP value finally.

When using RESET function, servo drive will clear out the count value.

6.8 Built-in PLC Function

6.8.1 Summary

Servo built-in PLC function is a specific function of FL20 servo system, user can control servo drive by simple command, it is convenient for the use of special occasion.

FL20 built-in PLC can operate internal 8 DIs, 5 DOs, 2 groups of pulse receive, 1 group of pulse output, 2 analog inputs and 1 analog output. The program written by user is running in the servo software background, every main cycle period runs 5 instructions continuously, in general, it runs 4000 commands for average 100ms, software can provide 4 low-speed timers, 2 high-speed counters and 2 high-speed timers.

When setting Po001 as d x 22, servo drive enters built-in PLC special control mode, the commands of position, speed and torque need to be set by built-in PLC, the other signals such as enabled signal still set by terminal or parameter. When setting Po001 to other control mode, PLC is still running, meanwhile operating mode still runs according to the setting value of Po001.

6.8.2 Servo built-in PLC Software Access Area

FL20 built-in PLC can access So area, Po area, PL area and internal special area. Internal special area starts from P0 , end to R255, 256 words in total, bit addressing space is B0-B4095, the address of So area, Po area and PL area can be checked in servo user manual. The description of internal special area shows as followings:

Table8.1 Internal Special Area

| Area | Bit addressing space | Content | Remark |
|------|----------------------|---|--------|
| R0 | B0-B15 | Operating Mode(Enabled when Po001=d □ 22) | WR |
| | | 0 : Command Position; 1 : Command Speed; 2 : Command Torque; 3 : Searching Origin; 4 : Analog Speed; 5 : Position Pulse; 6 : Internal Position; 7 : Analog Torque | |
| R1 | B16-B31 | Current Mode(Enabled when Po001=d □ 22) | RO |
| | | 0 : Command Position; 1 : Command Speed; 2 : Command Torque; 3 : Searching Origin; 4 : Analog Speed; 5 : Position Pulse; 6 : Internal Position; 7 : Analog Torque | |
| R2 | B32-B47 | B32-B47 control word | WR |

| | | | | | | |
|------|----------|--------------------------------|--|---|---------|----|
| | | | | | | |
| | | Addr | Content | | | |
| | | B32 | New command can be received or not, before accomplishing command position mode on the previous position. | 1 : YES; 0 : NO; | | |
| | | B33 | Command position mode operating mode | 1 : relative position; 0 : absolute position; | | |
| | | B34 | Previous unfinished command remainder process | 1 : Remainder and new command together; 0 : New command | | |
| | | B35 | Command position mode activated | Rising edge means new command coming | | |
| | | B36 | Command position mode activated receive RO | Set 1 automatically when new command coming; Reset after B35 resets | | |
| | | B37 | Command mode stop | 1 : Stop; 0 : Runnable | | |
| | | B38 | Speed mode stop acceleration/deceleration | 1 : Stop accel/decel, maintain current speed ; 0 : Runnable | | |
| | | B39 | Origin searching command activated | Rising edge activates Falling edge stop | | |
| R3 | B48-B63 | DI State | | | | RO |
| | | Addr | Content | Addr | Content | |
| | | B48 | DI1 | B52 | DI5 | |
| | | B49 | DI2 | B53 | DI6 | |
| | | B50 | DI3 | B54 | DI7 | |
| | | B51 | DI4 | B55 | DI8 | |
| | | | | | | |
| R4 | B64-B79 | Mandatory Valid of DO function | | | | WR |
| | | Addr | Content | Addr | Content | |
| | | B64 | DO1 | B67 | DO4 | |
| | | B65 | DO2 | B68 | DO5 | |
| | | B66 | DO3 | | | |
| | | | | | | |
| R5R6 | B80-B111 | Mandatory Valid of DI function | | | | WR |

| | | | | | | |
|------------|-----------|---|-----------------------------------|------|-----------------------------------|----|
| | | Addr | Content | Addr | Content | |
| | | B80 | Enabled | B96 | Internal position 1 | |
| | | B81 | Alarm Reset | B97 | Internal position 2 | |
| | | B82 | Fwd Torque Limit | B98 | Internal position 3 | |
| | | B83 | Rev Torque Limit | B99 | Internal position pause | |
| | | B84 | Speed selection terminal 1 | B100 | Internal position trigger | |
| | | B85 | Speed selection terminal 2 | B101 | Home search trigger | |
| | | B86 | Speed direction terminal | B102 | Origin reference | |
| | | B87 | Zero-speed clamp | B103 | Analog forward | |
| | | B88 | Gain selection | B104 | Analog reverse | |
| | | B89 | Internal position terminate | B105 | Mode switch | |
| | | B90 | Pulse eliminate | B106 | Forward Jog | |
| | | B91 | Pulse prohibition | B107 | Reverse Jog | |
| | | B92 | Emergency stop | B108 | Free | |
| | | B93 | Reverse prohibition | B109 | Interruption fixed length release | |
| | | B94 | Forward prohibition | B110 | Interruption fixed length start | |
| | | B95 | Free | B111 | Gantry synchro start | |
| R7R8 | B112-B143 | DO State | | | | RO |
| | | Addr | Content | Addr | Content | |
| | | B112 | Servo ready | B113 | Enabled | |
| | | B114 | Rotation detection | B115 | Speed Reach | |
| | | B116 | Position Reach | B117 | Torque limiting | |
| | | B118 | Alarm output | B119 | Brake output | |
| | | B120 | Overload pre-alarm | B121 | Speed limiting | |
| | | B122 | Internal position mode activating | B123 | Alarm of excessive position error | |
| | | B124 | Origin found | B125 | Not used | |
| | | B126 | E-cam action | | | |
| R9 | B144-B159 | Command position speed setting (enable when Po001=d □ 22) | | | | WR |
| R10R1 1 | B160-B191 | Command position setting(enable when Po001=d □ 22) | | | | WR |

| | | | | | | |
|------------|-----------|---|----------------------------------|-------|----------------------------------|----|
| R12 | B192-B207 | Command position acceleration time(enable when Po001=d □ 22) | | | | WR |
| R13 | B208-B223 | Command position deceleration time(enable when Po001=d □ 22) | | | | WR |
| R14 | B224-B239 | Command position accel/decel source(enable when Po001=d □ 22) | | | | WR |
| R15 R16 | B240-B271 | Command speed setting(enable when Po001=d □ 22) | | | | WR |
| R17 R18 | B272-B303 | Command torque setting(enable when Po001=d □ 22) | | | | WR |
| R19 R20 | B304-B335 | Analog speed | | | | RO |
| R21 R22 | B336-B367 | Analog torque | | | | RO |
| R23 | B368-B383 | Low-speed timer enabled | | | | WR |
| | | Addr. | Content | Addr | Content | |
| | | B368 | Low-speed timer 1 enabled | B369 | Low-speed timer 2 enabled | |
| | | B370 | Low-speed timer 3 enabled | B371 | Low-speed timer 4 enabled | |
| R24 | B384-B399 | Low-speed timing counter direction | | | | WR |
| | | Addr. | Content | Addr | Content | |
| | | B384 | Low-speed timer 1 direction | B385 | Low-speed timer 2 direction | |
| | | B386 | Low-speed timer 3 direction | B387 | Low-speed timer 4 direction | |
| R25 | B400-B415 | Low-speed timing counter reset | | | | WR |
| | | Addr. | Content | Addr. | Content | |
| | | B400 | Low-speed timing counter 1 reset | B401 | Low-speed timing counter 2 reset | |
| | | B402 | Low-speed timing counter 3 reset | B403 | Low-speed timing counter 4 reset | |
| R26 | B416-B431 | Low-speed timing counter output | | | | WR |

| | | | | | | |
|-------|---|--|------------------------------------|-------------------------|---|----|
| | | | | | | |
| | | Addr. | Content | Addr. | Content | |
| | | B416 | Low-speed timing counter 1 output | B417 | Low-speed timing counter 2 output | |
| | | B418 | Low-speed timing counter 3 output | B419 | Low-speed timing counter 4 output | |
| | | | | | | |
| R27 | B432-B447 | High-speed timing counter configuration The configuration signal refreshes one time every 0.1ms, the count increments corresponding to high-speed counter in this timingcycle will be latchedeverytime when timer OUT signal rising edge. | | | | WR |
| | | Addr. | Content | Addr. | Content | |
| | | B432 | High-speed timer 1 counting signal | B433 | High-speed timer 1 enabled | |
| | | B434 | High-speed timer 1 reset | B435 | High-speed timer 1 direction | |
| | | B436 | High-speed timer 2 counting signal | B437 | High-speed timer 2 enabled | |
| | | B438 | High-speed timer 2 reset | B439 | High-speed timer 2 direction | |
| | | B440 | High-speed counter 1 reset | B441 | High-speed counter 1 enabled | |
| | | B442 | High-speed counter 1 direction | B443 | High-speed counter 1 CAP | |
| | | B444 | High-speed counter 2 reset | B445 | High-speed counter 2 enabled | |
| | | B446 | High-speed counter 2 direction | B447 | High-speed counter 2 CAP | |
| | | R28 | B448-B463 | Low-speed timer counter | | |
| | | | | | | |
| Addr. | Content | | | Addr. | Content | |
| B448 | Low-speed timer counter 1 counting signal | | | B449 | Low-speed timer counter2 counjting signal | |
| B450 | Low-speed timer counter3 counting signal | | | B451 | Low-speed timer counter4 counting signal | |
| R29 | B464 | High-speed timer | | | | |

| | | | | | | |
|------------------|-------------------|------------|--|-------|--|--|
| | | Addr. | Content | Addr. | Content | |
| | | B464 | High-speed timer 1out | B465 | High-speed timer 2out | |
| | | B466 | High-speed counter 1out | B467 | High-speed counter 2out | |
| | | B468 | High-speed timer 1 reset confirmation | B469 | High-speed timer 2 reset confirmation | |
| | | B470 | High-speed counter 1 reset confirmation | B471 | High-speed counter 2 reset confirmation | |
| R30 ~ R255 | B464 B4095 | User space | | | | |

6.8.3 Built-in PLC Program Design

Built-in PLC program design is the special instruction of servo drive, customer should program the instructions in strict accordance with the following descriptions, otherwise, instruction compilation error could happen.

Table 6.8.1 Part of Instructions Abbreviation

| Name | Content |
|------|--|
| B□□ | PLC internal storage bit addressing address |
| P□□ | Servo parameter address |
| R□□ | PLC internal storage 16-bit addressing address |
| D□□ | 16-bit signed number |
| L□□ | 32-bit signed number |

6.8.3.1 Data Move Instruction

The data moveinstruction is to transfer the source operands of register into the register assigned by destination operands. The data transfer instruction of FL20 built-in PLC includes 16-bit and 32-bit, will be introduced respectively as follows:

(1) 16-bit Move Instruction

Instruction Format : [MOVW□□ X Y]

Instruction Description:

MOVW is move instruction code, □□ is instruction execution register area, X is execution operating register address, Y is destination register address; After executing instructions, the result is Y=X; □□ can be changed for register area according to practical operation, movable area includes R area, P area and immediate operand; See details in table 8.1.1

Table 8.1.1 16-bit Move Instruction Syntax, Results and relatedAnnotations

| Syntax Expression | Running Results | Annotations |
|-------------------|-----------------|---|
| MOVWRR R10 R2 | R2=R10 | Data transfer in R area; |
| MOVWDR D10 R1 | R1=10 | Immediate operand transfers to R area no.1 register; |
| MOVWPR P1 R10 | R10=Po001 | Content of no.1 register in P area transfers to no.10 |

| | | |
|-----------------|-------------|--|
| | | register in R area; |
| MOVWDP D-3 P101 | Po101=-3 | Immediate operand transfers to no.101 register in P area; |
| MOVWRP R10 P101 | Po101=R10 | No.10 register of R area transfers to no.101 register of P area; |
| MOVWPP P1 P2 | Po002=Po001 | Data transfer in P area; |

(2)32-bit Move Instruction

Instruction Format : [MOVD□□ X Y]

Instruction Description: : MOVD is move instruction code,□□ is instruction execution register area, X is execution operating register address, Y is destination register address; After executing instructions, the result is Y=X, of which register address of X, Y need dividing into high-low bits to store the data.

□□ can be changed for register area according to practical operation, movable area includes R area, P area and immediate operand; See details in table 8.1.2;

Table 8.1.2 32-bit Move Instruction Syntax, Results and related Annotations

| Syntax Expression | Running Results | Annotations |
|-------------------|-------------------------|---|
| MOVDRR R10 R2 | R3 R2=R11 R10 | Data transfer in R area; |
| MOVDDR L10 R1 | R2 R1=10 | Immediate operand transfers to R area no.1 register; |
| MOVDPR P1 R10 | R11 R10=Po002 Po001 | Content of no.1 register in P area transfers to no.10 register in R area; |
| MOVDDP L-3 P101 | Po102 Po101=-3 | Immediate operand sends to no.101 register in P area; |
| MOVDRP R10 P101 | Po102 Po101=R11 R10 | No.10 register of R area transfers to no.101 register of P area; |
| MOVDPP P1 P3 | Po004 Po003=Po002 Po001 | Data transfer in P area; |

6.8.3.2 Arithmetic Instruction

The arithmetic instruction has characteristics of strong operation function and rich instructions, it includes add instruction (ADD), sub instruction (SUB), multiplying instruction (MUL), division instruction (DIV) and special application instruction.

(1) Add Instruction

There are 12 add instructions, which are 16-bit addition and 32-bit addition, see details as below:

a) 16-bit addition:

Instruction Format: [ADDW□□ X Y Z]

Instruction Description:

ADDW is addition instruction,□□ is instruction execution register area; X is addend; Y is augend; Z stores results; The result of instruction execution is Z=X+Y, which means the value of register in X area added to the value of register of Y area, the result sends to Z register address. User can operate for R area, P area and immediate operand; See details as table 8.1.3

Table 8.1.3 16-bit Add Instruction Syntax, Results and related Annotations

| Syntax Expression | Running Results | Annotations |
|-------------------|-----------------|---|
| ADDWRR R1 R2 R3 | R3=R1+R2 | Two register contents in R area are added, the result sends to no.3 register in R area; |

| | | |
|-----------------|------------|--|
| ADDWDR D1 R2 R3 | $R3=R2+D1$ | Immediate operand added to the value of R register, the result sends to no.3 register in R area; |
| ADDWPR P1 R2 R3 | $R3=R2+P1$ | The value of register in P area added to the value of register in R area, the result sends to no.3 register in R area; |
| ADDWDP D1 P2 R3 | $R3=D1+P2$ | Immediate operand added to the value of P register, the result sends to no.3 register in R area; |
| ADDWRP R1 P2 R3 | $R3=R1+P2$ | The value of register in R area added to the value of register in P area, the result sends to no.3 register in R area; |
| ADDWPP P1 P2 P3 | $R3=P1+P2$ | Two register contents in P area are added, the result sends to no.3 register in R area; |

b) 32-bit addition:

Instruction Format: [ADDD□□ X Y Z]

Instruction Description:

ADDD is addition instruction, □□ is instruction execution register area; X is addend; Y is augend; Z stores results; The result of instruction execution is $Z=X+Y$, which means the value of register in X area added to the value of register of Y area, the result sends to Z register address. User can operate for R area, P area and immediate operand; See details as table 8.1.4

Table 8.1.4 32-bit Add Instruction Syntax, Results and related Annotations

| Syntax Expression | Running Results | Annotations |
|-------------------|-----------------|--|
| ADDDRR R1 R2 R3 | $R3=R1+R2$ | Two register contents in R area are added, the result sends to no.3 register in R area; |
| ADDDDR D1 R2 R3 | $R3=R2+D1$ | Immediate operand added to the value of R register, the result sends to no.3 register in R area; |
| ADDDPR P1 R2 R3 | $R3=R2+P1$ | The value of register in P area added to the value of register in R area, the result sends to no.3 register in R area; |
| ADDDDP D1 P2 R3 | $R3=D1+P2$ | Immediate operand added to the value of P register, the result sends to no.3 register in R area; |
| ADDDRP R1 P2 R3 | $R3=R1+P2$ | The value of register in R area added to the value of register in P area, the result sends to no.3 register in R area; |
| ADDDPP P1 P2 P3 | $R3=P1+P2$ | Two values of register in P area are added, the result sends to no.3 register in R area; |

(2) Subtraction Instruction

There are 12 sub instructions, which are 16-bit subtraction and 32-bit subtraction, see details as below:

a) 16-bit subtraction:

Instruction Format:[SUBW□□ X Y Z]

Instruction Description:

SUBW is subtraction instruction, □□ is instruction execution register area; X is subtrahend; Y is minuend, Z is store result area; The result of instruction execution is $Z=X-Y$, which means that the value of register address in X area is subtracted to the value of register address in Y area, the result sends to Z register address; User can operate for R area, P area and immediate operand; See details as table 8.1.5.

Table 8.1.5 16-bit Sub Instruction Syntax, Results and related Annotations

| Syntax Expression | Running Results | Annotations |
|-------------------|-----------------|---|
| SUBWRR R1 R2 R3 | $R3=R1-R2$ | The value of two registers in R area are subtracted, the result sends to no.3 register in R area; |
| SUBWDR D1 R2 R3 | $R3= D1-R2$ | Immediate operand subtracted to the value of R register, the result sends to no.3 register in R area; |
| SUBWPR P1 R2 R3 | $R3=R2-P1$ | The value of register in P area subtracted to the value of register in R area, the result sends to no.3 register in R area; |
| SUBWDP D1 P2 R3 | $R3=D1-P2$ | Immediate operand subtracted to the value of P register, the result sends to no.3 register in R area; |
| SUBWRP R1 P2 R3 | $R3=R1-P2$ | The value of R register subtracted to the value of P register, the result sends to no.3 register in R area; |
| SUBWPP P1 P2 P3 | $R3=P1-P2$ | The values of two registers in P area are subtracted, the result sends to no.3 register in R area; |

b) 32-bit subtraction:

Instruction Format:[SUBD□□ X Y Z]

Instruction Description:SUBD is subtraction instruction, □□ is instruction execution register area; X is subtrahend; Y is minuend, Z is store result area; The result of instruction execution is $Z=X-Y$, which means that the value of register address in X area is subtracted to the value of register address in Y area, the result sends to Z register address; User can operate for R area, P area and immediate operand; See details as table 8.1.6.

Table 8.1.6 32-bit Sub Instruction Syntax, Results and related Annotations

| Syntax Expression | Running Results | Annotations |
|-------------------|-----------------|---|
| SUBDRR R1 R2 R3 | $R3=R1-R2$ | The values of two registers in R area are subtracted, the result sends to no.3 register in R area; |
| SUBDDR D1 R2 R3 | $R3= D1-R2$ | Immediate operand subtracted to the value of R register, the result sends to no.3 register in R area; |
| SUBDPR P1 R2 R3 | $R3=R2-P1$ | The value of register in P area subtracted to the value of |

| | | |
|-----------------|------------|---|
| | | register in R area, the result sends to no.3 register in R area; |
| SUBDDP D1 P2 R3 | $R3=D1-P2$ | Immediate operand subtracted to the value of P register, the result sends to no.3 register in R area; |
| SUBDRP R1 P2 R3 | $R3=R1-P2$ | The value of R register subtracted to the value of P register, the result sends to no.3 register in R area; |
| SUBDPP P1 P2 P3 | $R3=P1-P2$ | The values of two registers in P area are subtracted, the result sends to no.3 register in R area; |

(3) Multiplying Instruction

There are 12 multiplying instructions, which are 16-bit and 32-bit multiplication, see details as below:

a) 16-bit Multiplication:

Instruction Format: [MULW□□ X Y Z]

Instruction Description: MULW is multiplying instruction, □□ is instruction execution register area; X is multiplier, Y is multiplicand, Z is store result area; The result of instruction execution is $Z=X*Y$, which means that the value of register address in X area multiplied to the value of register address in Y area, the result sends to Z register address; User can operate for R area, P area and immediate operand; See details as table 8.1.7.

Table 8.1.7 16-bit Multiplying Instruction Syntax, Results and related Annotations

| Syntax Expression | Running Results | Annotations |
|-------------------|-------------------|--|
| MULWRR R1 R2 R3 | $R4\ R3=R1*R2$ | Multiplying the value of 2 registers in R area, get the 32-bit result, storing to no.3 and no.4 register in R area respectively, of which no.4 stores high 16-bit, no.3 stores low 16-bit. |
| MULWDR D1 R2 R3 | $R4\ R3=1*R2$ | Multiplying immediate operand and the value of R register, get 32-bit result, storing to no.3 and no.4 registers in R area respectively, of which no.4 stores high 16-bit, no.3 stores low 16-bit. |
| MULWPR P1 R2 R3 | $R4\ R3=P0001*R2$ | Multiplying the values of P register and R register, get the 32-bit result, storing to no.3 and no.4 registers in R area respectively, of which no.4 stores high 16-bit, no.3 stores low 16-bit. |
| MULWDP D1 P2 R3 | $R4\ R3=1*P0002$ | Multiplying immediate operand and the value of P register, get the 32-bit result, storing to no.3 and no.4 registers in R area, of which no.4 stores high 16-bit, no.3 stores low 16-bit. |

| | | |
|-----------------|----------------------|--|
| MULWRP R1 P2 R3 | R4 R3=R1*Po002 | Multiplying the values of R register and P register, get the 32-bit result, storing to no.3 and no.4 registers in R area respectively, of which no.4 stores high 16-bit, no.3 stores low 16-bit. |
| MULWPP P1 P2 R3 | R4 R3=Po001*Po002 | Multiplying the value of 2 registers in P area, get the 32-bit result, storing to no.3 and no.4 registers in R area respectively, of which no.4 stores high 16-bit, no.3 stores low 16-bit. |

b) 32-bit Multiplication

Instruction Format: [MULD□□ X Y Z]

Instruction Description: MULD is multiplying instruction, □□ is instruction execution register area; X is multiplier, Y is multiplicand, Z is store result area; The result of instruction execution is $Z=X*Y$, which means that the value of register address in X area multiplied to the value of register address in Y area, the result sends to Z register address; User can operate for R area, P area and immediate operand; See details as table 8.1.8.

Table 8.1.8 32-bit Multiplying Instruction Syntax, Results and related Annotations

| Syntax Expression | Running Results | Annotations |
|-------------------|----------------------------------|---|
| MULDRR R1 R2 R3 | R6 R5 R4 R3=R2 R1*R3 R2 | Multiplying the value of 2 registers in R area, get the 32-bit result, storing to no.3~no.6 registers in R area, of which no.6 and no.5 store to high 32-bit, no.4 and no.3 store to low 32-bit; |
| MULDDR L1 R2 R3 | R6 R5 R4 R3=1*R3*R2 | Multiplying immediate operand and R register, get the 32-bit result, storing to no.3 and no.6 register in R area respectively, of which no.6 and no.5 store to high 32-bit, no.4 and no.3 store to low 32-bit; |
| MULDPR P1 R2 R3 | R6 R5 R4 R3=Po002 Po001*R3 R2 | Multiplying P register and R register, get the 32-bit result, storing to no.3~no.6 registers in R area respectively, of which no.6 and no.5 store to high 32-bit, no.4 and no.3 store to low 32-bit; |
| MULDDP L1 P2 R3 | R6 R5 R4 R3=1*Po002 Po001 | Multiplying immediate operand and P register, get the 32-bit result, storing to no.3 and no.4 registers in R area respectively, of which no.6 and no.5 store to high 32-bit, no.4 and no.3 store to low 32-bit; |
| MULDRP R1 P2 R3 | R6 R5 R4 R3=R1*Po002 | Multiplying the values of R register and P register, |

| | | |
|-----------------|--|---|
| | Po001 | get the 32-bit result, storing to no.3 and no.4 registers in R area respectively, of which no.6 and no.5 store to high 32-bit, no.4 and no.3 store to low 32-bit; |
| MULDPP P1 P2 R3 | R6 R5 R4 R3=Po002 Po001*Po003 Po002 | Multiplying the value of 2 registers in P area, get 32-bit result, storing to no.3 and no.4 registers in R area respectively, of which no.6 and no.5 store to high 32-bit, no.4 and no.3 store to low 32-bit; |

(4) Division Instruction

There are 12 division instructions, which have 16-bit division and 32-bit division, see details as below:

a) 16-bit Division

Instruction format: [DIVW□□ X Y Z]

Instruction Description: DIVW is division instruction, □□ is instruction execution register area, X is divisor, Y is dividend, Z is store result area; The result of instruction execution is $Z=X/Y$, which means that the value of register address in X area divided by the value of register address in Y area, the result sends to Z register address, of which integer of divisor stores to low-bit register address, remainder stores to high-bit register address; User can operate for R area, P area and immediate operand; See details as table 8.1.9.

Table 8.1.9 16-bit Division Instruction Syntax, Results and related Annotations

| Syntax Expression | Running Results | Annotations |
|-------------------|--------------------------------------|---|
| DIVWRR R1 R2 R3 | $R3=R1/R2$ $R4=R1\%R2$ | Dividing the value of 2 registers in R area, integer stores to no.3 register, remainder stores to no.4 register. |
| DIVWDR D1 R2 R3 | $R3=1/R2$ $R4=1\%R2$ | Dividing immediate operand and the value of R register, integer stores to no.3 register, remainder stores to no.4 register. |
| DIVWPR P1 R2 R3 | $R3=Po001/R2$ $R4=Po001\%R2$ | Dividing the value of P register and R register, integer stores to no.3 register, remainder stores to no.4 register. |
| DIVWDP D1 P2 R3 | $R3=1/Po002$ $R4=1\%Po002$ | Dividing immediate operand and the value of P register, integer stores to no.3 register, remainder stores to no.4 register. |
| DIVWRP R1 P2 R3 | $R3=R1/Po002$ $R4=R1\%Po002$ | Dividing the value of R register and P register, integer stores to no.3 register, remainder stores to no.4 register. |
| DIVWPP P1 P2 R3 | $R3=Po001/Po002$ $R4=Po001\%Po00$ | Dividing the value of 2 registers in P area, integer stores to no.3 register, and remainder stores to no.4 register. |

b) 32-bit Division**Instruction format:**[DIVD□□ X Y Z]

Instruction Description:DIVD is division instruction, □□is instruction execution register area, X is divisor, Y is dividend, Z is store result area; The result of instruction execution is $Z=X/Y$, which means that the value of register address in X area divided by the value of register address in Y area, the result sends to Z register address, of which integer of divisor stores to low-bit register address, remainder stores to high-bit register address; User can operate for R area, P area and immediate operand; See details as table 8.1.10.

Table 8.1.10 32-bit Division Instruction Syntax, Results and related Annotations

| Syntax Expression | Running Results | Annotations |
|-------------------|--|--|
| DIVDRR R1 R2 R3 | R4 R3=R2 R1/R3 R2 R6 R5=R2 R1%R3 R2 | Dividing the values of R area, the result stores to no.3~no.6 registers, integer stores to no.3 and no.4 registers, remainder stores to no.6 and no.5 registers. |
| DIVDDR L1 R2 R3 | R4 R3=R2 R1/R3 R2 R6 R5=R2 R1%R3 R2 | Dividing immediate operand and the value of R register, the result saves to no.3~no.6 registers, integer stores to no.3 and no.4 registers, remainder stores to no.6 and no.5 registers. |
| DIVDPR P1 R2 R3 | R4 R3=R2 R1/R3 R2 R6 R5=R2 R1%R3 R2 | Dividing the value of P register and R register, the result saves to no.3~no.6 registers, integer stores to no.3 and no.4 registers, remainder stores to no.6 and no.5 registers. |
| DIVDDP L1 P2 R3 | R4 R3=R2 R1/R3 R2 R6 R5=R2 R1%R3 R2 | Dividing immediate operand and the value of P register, the result saves to no.3~no.6 registers, integer stores to no.3 and no.4 registers, remainder stores to no.6 and no.5 registers. |
| DIVDRP R1 P2 R3 | R4 R3=R2 R1/R3 R2 R6 R5=R2 R1%R3 R2 | Dividing the value of R register and P register, the result saves to no.3~no.6 registers, integer stores to no.3 and no.4 registers, remainder stores to no.6 and no.5 registers. |
| DIVDPP P1 P2 R3 | R4 R3=R2 R1/R3 R2 R6 R5=R2 R1%R3 R2 | Dividing the value of 2 registers in P area, the result saves to no.3~no.6 registers, integer stores to no.3 and no.4 registers, remainder store to no.6 and no.5 registers; |

(5) Scaling Instruction**a) Scaling Division****Instruction Format:** [QDIV□□ D X Y Z]**Instruction Description:**

QDIV is instruction code, □□ is instruction execution register area, D is result scaling value, X is divisor, Y is dividend, Z is result storing address; User can operate for R area, P area and immediate operand;

See details as table below:

| Syntax Expression | Annotations |
|--------------------|--|
| QDIVRR D7 R1 R3 R5 | The value saved in R2/R1 divided by the value of R4/R3, get Q7 scaling result, and save the result into R6/R5; |
| QDIVDR D7 L1 R3 R5 | Immediate operand divided by the value of R4/R3, get Q7 scaling result, and save the result into R6/R5; |
| QDIVPR D7 P1 R3 R5 | The value saved in P2/P1 divided by the value of R4/R3, get Q7 scaling result, and save the result into R6/R5; |
| QDIVRP D7 R1 P3 R5 | The value saved in R2/R1 divided by the value of P4/P3, get Q7 scaling result, and save the result into R6/R5; |
| QDIVDP D7 L1 P3 R5 | Immediate operand divided by the value of R4/R3, get Q7 scaling result, and save the result into R6/R5; |
| QDIVPP D7 P1 P3 R5 | The value saved in P2/P1 divided by the value of R4/R3, get Q7 scaling result, and save the result into R6/R5; |

b) Scaling Multiplication

Instruction Format: [QMUL□□ D X D Y D Z]

Instruction Description: QMUL is instruction code, □□ is instruction execution register address, D is result-scaling value, X is multiplier, Y is multiplicand, Z is store result area;

User can operate for R area, P area and immediate operand; See details as table below:

| Syntax Expression | Annotations |
|-------------------------------|---|
| QMULRR D14 R1 D10 R3 D2 R5 | Multiplying Q10 scaling value saved in R2/R1 and Q2 scaling value saved in R4/R3, get Q14 scaling value, and save the result into the address of R6/R5. |
| QMULDR D14 L1 D10 R3 D2 R5 | Multiplying Q10 scaling value of immediate operand and Q2 scaling value saved in R4/R3, get Q14 scaling value, and save the result into the address of R6/R5. |
| QMULPR D14 P1 D10 R3 D2 R5 | Multiplying Q10 scaling value saved in P2/P1 and Q2 scaling value saved in R4/R3, get Q14 scaling value, and save the result into the address of R6/R5. |
| QMULRP D14 R1 D10 P3 D2 R5 | Multiplying Q10 scaling value saved in R2/R1 and Q2 scaling value saved in R4/R3, get Q14 scaling value, and save the result into the address of R6/R5. |
| QMULDP D14 L1 D10 P3 D2 R5 | Multiplying Q10 scaling value of immediate operand and Q2 scaling value saved in P4/P3, get Q14 scaling value, and save the result into the |

| | |
|-------------------------------|---|
| | address of R6/R5. |
| QMULPP D14 P1 D10 P3 D2 R5 | Multiplying Q10 scaling value saved in P2/P1 and Q2 scaling value saved in P4/P3, get Q14 scaling value, and save the result into the address of R6/R5. |

c) Integer Convert Scaling Value

Instruction Format: [ITOQ□ D X Y]

Instruction Description:

ITOQ is instruction code, □ is instruction execution register area, D is result scaling value, X is the register address which needs to covert; Y is result storing register address;

User can operate for R area, P area and immediate operand; See details as table below:

| Syntax Expression | Annotations |
|-------------------|---|
| ITOQR D14 R1 R3 | Q14 scaling for the value of R1/R2 register, and save result into R4/R3 register; |
| ITOQP D14 P1 R1 | Q14 scaling for the value of P1/P2 register, and save result into R2/R1 register; |

d) Scaling Value Convert Integer

Instruction Format: [QTOI□ D X Y]

Instruction Description: QTOI is instruction code, □ is instruction execution register area, D is result scaling value, X is the register address which needs to covert; Y is result storing register address;

User can operate for R area, P area and immediate operand; See details as table below:

| Syntax Expression | Annotations |
|-------------------|---|
| QTOIR D14 R1 R3 | Q14 scaling for the value of R1/R2 register, and save the result into R4/R3 register; |
| QTOIP D14 P1 R1 | Q14 scaling for the value of P1/P2 register, and save the result into R2/R1 register; |

6.8.3.3 Logic Instruction

FL20 built-in PLC logic instruction includes “and” instruction (AND), “or” instruction (OR), “exclusive OR” instruction (XOR), unsigned shift instruction (SH), signed shift instruction (SA), rotating shift instruction (RO) etc. See details as below:

(1) Logical Decision Instruction

Logical decision instruction can be divided into normally open and normally closed.

Instruction Format: [LD□ X]

Instruction Description: LD means logic instruction, □ means reversing program or not, X means register address; Determine the state of X, execute next instruction if TRUE, see details as table 8.1.11;

Table 8.1.11 Logical Decision Instruction Syntax, Results and related Annotations

| Syntax Expression | Running Result | Annotations |
|-------------------|----------------|-------------|
|-------------------|----------------|-------------|

| | | |
|--------|------------|--|
| LD B1 | IF (B1) | Similar as normally-open contact in PLC, if variable is TRUE, then contact is closed, and start to execute next instruction; |
| LDI B2 | IF (! B2) | Similar as normally-closed contact in PLC, if variable is TRUE, then contact is open; |

(2) “And” Instruction

There are 2 “And” Instructions, see details as below:

Instruction Format: [AN□ X]

Instruction Description: ANis logic instruction, □ means reversing program or not, X means register address; execute “and” instruction with last instruction for X register address; See details as table 8.1.12

Table 8.1.12 “AND”Instruction Syntax, Results and related Annotations

| Syntax Expression | Running Result | Annotations |
|-------------------|----------------|--|
| AND B16 | &B16 | B16 register address executes “and” instruction with last instruction; |
| ANI B17 | & (! B17) | Reversing the content of B17 register address, then executes“and” instruction with last instruction; |
| ANB | | “AND” instruction of series circuits with two or more contacts |

(3) “OR” Instruction

There are 2 “or” instructions, see details as below:

Instruction Format: [OR□ X]

Instruction Description: OR is logic instruction, □ means reversing program or not, X means register address; Execute “or” instruction with last instruction for X register address;

Table 8.1.13 “OR” Instruction Syntax, Results and related Annotations

| Syntax Expression | Running Result | Annotations |
|-------------------|----------------|--|
| OR B5 | (B5) | B5 register address executes “or” instruction with last instruction; |
| ORI B7 | (! B7) | Reversing the content of B7 register address, then executes“or” instruction with last instruction; |
| ORB | | “OR” instruction of series circuits with two or more contacts |

(4) Exclusive OR Instruction

There are 2 xor instructions, see details as below:

Instruction Format: [XOR□ X]

Instruction Description: XOR is logic instruction, □ means reversing program or not,X means register address; Execute “XOR” instruction with last instruction for X register address;

Table 8.1.14 “XOR” Instruction Syntax, Results and related Annotations

| Syntax Expression | Running Result | Annotations |
|-------------------|----------------|-------------|
|-------------------|----------------|-------------|

| | | |
|---------|----------------|---|
| XOR B0 | $\wedge (B0)$ | B0 register address executes “xor” instruction with last instruction; |
| XORI B1 | $\wedge (!B1)$ | Reversing the content of B1 register address, then executes“xor” instruction with last instruction; |

(5) Logical Inversion Instruction

Instruction Format: [INV X]

Instruction Description:

INV is logic instruction;X means register address; Reversing the content of X register address;

| Syntax Expression | Running Result | Annotations |
|-------------------|----------------|---|
| INV B0 | !B0 | Reversing the content of B0 register address; |

(6) Shift Instruction

Shift instruction can be divided into left shift and right shift, can also be divided into signed number and unsigned number based on data type, see details as tables below:

Table 8.1.15 16-bit Unsigned Left Shift

| Syntax Expression | Running Result | Annotations |
|-------------------|------------------|---|
| SHLWR R1 D1 | $R1=R1<<1$ | The content of R1 register shift left one bit |
| SHLWP P1 D1 | $Po001=Po001<<1$ | The content of P1 register shift left one bit |

Table 8.1.16 16-bit Unsigned Right Shift

| Syntax Expression | Running Result | Annotations |
|-------------------|------------------|--|
| SHRWR R1 D1 | $R1=R1>>1$ | The content of R1 register shift right one bit |
| SHRWP P1 D1 | $Po001=Po001>>1$ | The content of P1 register shift right one bit |

Table 8.1.17 32-bit Unsigned Left Shift

| Syntax Expression | Running Result | Annotations |
|-------------------|--------------------------------|---|
| SHLDR R1 D1 | $R2\ R1=R2\ R1<<1$ | The content of R1 register shift left one bit, of which high-bit stores to R2 register, low-bit stores to R1 register; |
| SHLDP P1 D1 | $Po002\ Po001=Po002\ Po001<<1$ | The content of P1 register shift left one bit , of which high-bit stores to P2 register, low-bit stores to P1 register; |

Table 8.1.18 32-bit Unsigned Right Shift

| Syntax Expression | Running Result | Annotations |
|-------------------|--------------------|---|
| SHRDR R1 D1 | $R2\ R1=R2\ R1>>1$ | The content of R1 register shift right one bit, of which high-bit stores to R2 register, low-bit stores to R1 register; |

| | | |
|-------------|-----------------------------|---|
| SHRDP P1 D1 | Po002 Po001= Po002 Po001>>1 | The content of P1 register shift right one bit, of which high-bit stores to P2 register, low-bit stores to P1 register; |
|-------------|-----------------------------|---|

Table 8.1.19 16-bit Signed Left Shift

| Syntax Expression | Running Result | Annotations |
|-------------------|----------------|--|
| SALWR R1 D1 | R1=R1<<1 | The content of R1 register shift left 1 bit; |
| SALWP P1 D1 | Po001=Po001<<1 | The content of P1 register shift left 1 bit; |

Table 8.1.20 16-bit Signed Right Shift

| Syntax Expression | Running Result | Annotations |
|-------------------|----------------|---|
| SARWR R1 D1 | R1=R1>>1 | The content of R1 register shift right 1 bit; |
| SARWP P1 D1 | Po001=Po001>>1 | The content of P1 register shift right 1 bit; |

Table 8.1.21 32-bit Signed Left Shift

| Syntax Expression | Running Result | Annotations |
|-------------------|-----------------------------|--|
| SALDR R1 D1 | R2 R1=R2 R1<<1 | The content of R1 register shift left one bit, of which high-bit stores to R2 register, low-bit stores to R1 register; |
| SALDP P1 D1 | Po002 Po001= Po002 Po001<<1 | The content of P1 register shift left one bit, of which high-bit stores to P2 register, low-bit stores to P1 register; |

Table 8.1.22 32-bit Unsigned Right Shift

| Syntax Expression | Running Result | Annotations |
|-------------------|-----------------------------|---|
| SARDR R1 D1 | R2 R1=R2 R1>>1 | The content of R1 register shift right one bit, of which high-bit stores to R2 register, low-bit stores to R1 register; |
| SARDP P1 D1 | Po002 Po001= Po002 Po001>>1 | The content of P1 register shift right one bit, of which high-bit stores to P2 register, low-bit stores to P1 register; |

Table 8.1.23 16-bit Rotate Left Shift

| Syntax Expression | Running Result | Annotations |
|-------------------|----------------|--|
| ROLWR R1 D1 | R1=R1<<1 | The content of R1 register shift left 1 bit; |
| ROLWP P1 D1 | Po001=Po001<<1 | The content of P1 register shift left 1 bit; |

Table 8.1.24 32-bit Rotate Left Shift

| Syntax Expression | Running Result | Annotations |
|-------------------|----------------|--|
| ROLDR R1 D1 | R1=R1<<1 | The content of R1 register shift left 1 bit; |
| ROLDP P1 D1 | Po001=Po001<<1 | The content of P1 register shift left 1 bit; |

Table 8.1.25 16-bit Rotate Right Shift

| Syntax Expression | Running Result | Annotations |
|-------------------|-----------------------|---|
| RORWR R1 D1 | $R1 = R1 \gg 1$ | The content of R1 register shift right 1 bit; |
| RORWP P1 D1 | $Po001 = Po001 \gg 1$ | The content of P1 register shift right 1 bit; |

Table 8.1.26 32-bit Rotate Rghit Shift

| Syntax Expression | Running Result | Annotations |
|-------------------|-----------------------|---|
| RORDR R1 D1 | $R1 = R1 \gg 1$ | The content of R1 register shift right 1 bit; |
| RORDP P1 D1 | $Po001 = Po001 \gg 1$ | The content of P1 register shift right 1 bit; |

6.8.3.4 Program Control Instruction

Program Control Instruction includes output instruction, jump instruction, stack instruction and other program control instruction, see details as below:

(1) Stack Instruction

Table 8.1.27 Stack Instruction

| Syntax Expression | Annotations |
|-------------------|-------------------------------------|
| MPS | Push current instruction into stack |
| MRD | Read logic status |
| MPP | Popup stack logic status |

【Note】 The max depth of stack is level 8;

(2) Jump Instruction

Table 8.1.28 Jump Instruction

| Syntax Expression | Running Result | Annotations |
|-------------------|----------------------------|---------------------------|
| JUMP R11 | Jump to R11 memory address | Jump to specified address |

Execute the instruction and refresh control signal of low-speed timer, if current main loop has not finished executing instructions yet, it will skip the rest instructions and wait for the next main loop execution. Jump instruction must be executed in the ending of program, or the program will stop running.

(3) End instruction

| Syntax Expression | Running Result | Annotations |
|-------------------|-------------------|-------------------|
| END | Jump to 0 address | Jump to 0 address |

Execute the instruction and refresh control signal of low-speed timer, if current main loop has not finished executing instructions yet, it will skip the rest instructions and wait for the next main loop execution. End instruction must be executed in the ending of program, or the program will stop running. There are 13 other program control instructions, see details as below:

(1) Rising Edge Instruction

Instruction Format: [PLS X Y]

Instruction Description:

PLS is instruction code, X stores the register address of last cyclic state, detect the rising edge of Y register address; When detecting the rising edge of Y register address, Y register=1 in this cycle, and X register saves last cyclic state.

(2) Falling Edge Instruction

Instruction Format: [PLF X Y]

Instruction Description: PLF is instruction code, X stores the register address of last cyclic state, detect the falling edge of Y register address; When detecting the falling edge of Y register address, Y register=1 in this cycle, and X register saves last cyclic state.

Table 8.1.29 Rising Edge and Falling Edge Syntax, Results and related Annotations

| Syntax Expression | Annotations |
|-------------------|---|
| PLS B12 B13 | When detecting the rising edge of B13 register, B13 register=1 in this cycle and B12 stores last cyclic state. |
| PLF B12 B13 | When detecting the falling edge of B13 register, B13 register=1 in this cycle and B12 stores last cyclic state. |

(3) Output Instruction

Instruction Format: [OUT X]**Instruction Description:**

OUT is instruction code, X is target register; Output the result of program to X register address;

| Syntax Expression | Annotations |
|-------------------|---|
| OUT B100 | Output the result of program to B100 register address |

(4) Main Control Instruction

Instruction Format: [MC]

Instruction Description: MC is instruction code; If current logic state is valid, the setting address is valid, so the code between MC and MCR will be in valid status; Otherwise, if current logic state is invalid, the setting address is invalid, so the code between MC and MCR will be in invalid status;

(5) Main Control Reset Instruction

Instruction Format: [MCR]

Instruction Description: MCR is instruction code; same as MC;

(6) Set Instruction

Instruction Format: [SET X]**Instruction Description:**

SET is instruction code, X is target register address; Set the content of X register address as 1;

(7) Reset Instruction

Instruction Format: [RST X]**Instruction Description:**

RST is instruction code, X is target register address; Set the content of B2 register as 0;

(8) 16-bit Absolute Value

Instruction Format: [ABSW□ X Y]

Instruction Description: ABSW is instruction code, □ is instruction execution register area, X is target register address, Y is the register address that stores results, take the content of X register address as absolute value, and store the results into Y register;

User can operate for R area, P area and immediate operand; See details as table below:

| Syntax Expression | Running Result | Annotations |
|-------------------|----------------|---|
| ABSWR R1 R2 | R2=ABS(R1) | Take the content of R1 register address as absolute register, and store the results into R2 register. |
| ABSWP P1 R2 | R2=ABS(Po001) | Take the content of P1 register address as absolute register, and store the results into R2 register. |

(9) 32-bit Absolute Value

Instruction Format: [ABSD□ X Y]

Instruction Description: ABSD is instruction code, □ is instruction execution register area, X is target register address; Y is the register address that stores results, take the content of X register address as absolute value, and store the results into Y register;

| Syntax Expression | Running Result | Annotations |
|-------------------|------------------------|---|
| ABSDR R1 R3 | R4 R3=ABS(R2 R1) | Take the content of R3 register address as absolute value, and store the result into R1 register, of which high-bit stores into R4, low-bit stores into R3; |
| ABSDP P1 R2 | R3 R2=ABS(Po002 Po001) | Take the content of P1 register address as absolute value, and store the result into R2 register, of which high-bit stores into R3, low-bit stores into R2; |

(10) Extension Instruction

Instruction Format: [EXT□ X Y]

Instruction Description:

EXT is instruction code, □ is instruction execution register area, X is target register address; Y is the register address that stores result, extend the value of X register address, and store the result into Y register;

| Syntax Expression | Running Result | Annotations |
|-------------------|----------------|---|
| EXTR R1 R2 | R3 R2=R1 | Extend the content of R2 register address, and store the result into R1 register address; |
| EXTP P1 R2 | R3 R3=Po001 | Extend the content of R2 register address, and store the result into P1 register address; |

(11) Idle Instruction

Instruction Format: [IDLE]

Instruction Description: IDLE is instruction code, the program executes a dummy instruction ;

(12) Comparison Instruction

The instruction is divided into 16-bit and 32-bit, can also be divided into signed number and unsigned number based on data type, see details as tables below:

a) 16-bit Unsigned Comparison Instruction

Instruction Format: [CMPW□□ X Y Z(n)]

Instruction Description: CMPW is instruction code, □□ is instruction execution register area, X,Y is comparison register address; Z is the register address that stores results, compare the value of X register address with the value of Y register address, and store the result into Z register;

Result output:

If X register value is lower than Y register value, then $Z(n)=1$; $Z(n+1)=0$; $Z(n+2)=0$;

If X register value is higher than Y register value, then $Z(n)=0$; $Z(n+1)=0$; $Z(n+2)=1$;

If X register value equals to Y register value, then $Z(n)=0$; $Z(n+1)=0$; $Z(n+2)=1$;

User can operate for R area, P area and immediate operand; See details as table below:

| Syntax Expression | Annotations |
|-------------------|--|
| CMPWRR R1 R2 B0 | Compare R1 register value with R2 register value, send result into B0-B3 register. |
| CMPWDR D1 R2 B0 | Compare immediate operand 1 with R2 register value, send result into B0-B3 register. |
| CMPWPR P1 R2 B0 | Compare P1 register value with R2 register value, send result into B0-B3 register. |
| CMPWDP D1 P2 B0 | Compare immediate operand 1 with P2 register value, send result into B0-B3 register. |
| CMPWRP R1 P2 B0 | Compare R1 register value with P2 register value, send result into B0-B3 register. |
| CMPWPP P1 P2 B0 | Compare P1 register value with P2 register value, send result into B0-B3 register. |

b) 16-bit Signed Comparison Instruction

Instruction Format: [CMPWS□□ X Y Z(n)]

Instruction Description: CMPWS is instruction code, □□ is instruction execution register area, X,Y is comparison register address; Z is the register address that stores results, compare the value of X register address with the value of Y register address, and store the result into Z register;

Result outputs:

If X register value is lower than Y register value, then $Z(n)=1$; $Z(n+1)=0$; $Z(n+2)=0$;

If X register value is larger than Y register value, then $Z(n)=0$; $Z(n+1)=0$; $Z(n+2)=1$;

If X register value equals to Y register value, then $Z(n)=0$; $Z(n+1)=0$; $Z(n+2)=1$;

User can operate for R area, P area and immediate operand; See details as table below:

| Syntax Expression | Annotations |
|-------------------|--|
| CMPWSRR R1 R2 B0 | Compare R1 register value with R2 register value, send result into B0-B3 register. |
| CMPWSDR D1 R2 B0 | Compare immediate operand 1 with R2 register value, send result into B0-B3 register. |
| CMPWSPR P1 R2 B0 | Compare P1 register value with R2 register value, send result into B0-B3 register. |
| CMPWSDP D1 P2 B0 | Compare immediate operand 1 with P2 register value, send result into B0-B3 register. |
| CMPWSRP R1 P2 B0 | Compare R1 register value with P2 register value, send result into B0-B3 register. |
| CMPWSPP P1 P2 B0 | Compare P1 register value with P2 register value, send result into B0-B3 register. |

c) 32-bit Unsigned Comparison Instruction

Instruction Format: [CMPD□□ X Y Z(n)]

Instruction Description: CMPD is instruction code, □□ is instruction execution register area, X,Y is comparison register address; Z is the register address that stores results, compare the value of X register address with the value of Y register address, and store the result into Z register;

Result outputs:

If X register value is lower than Y register value, then Z(n)=1 ; Z(n+1)=0 ; Z(n+2)=0 ;

If X register value is larger than Y register value, then Z(n)=0 ; Z(n+1)=0 ; Z(n+2)=1 ;

If X register value equals to Y register value, then Z(n)=0 ; Z(n+1)=0 ; Z(n+2)=1 ;

User can operate for R area, P area and immediate operand; See details as table below:

| Syntax Expression | Annotations |
|-------------------|--|
| CMPDRR R1 R2 B0 | Compare R1 register value with R2 register value, send result into B0-B3 register. |
| CMPDDR D1 R2 B0 | Compare immediate operand 1 with R2 register value, send result into B0-B3 register. |
| CMPDPR P1 R2 B0 | Compare P1 register value with R2 register value, send result into B0-B3 register. |
| CMPDDP D1 P2 B0 | Compare immediate operand 1 with P2 register value, send result into B0-B3 register. |
| CMPDRP R1 P2 B0 | Compare R1 register value with P2 register value, send result into B0-B3 register. |
| CMPDPP P1 P2 B0 | Compare P1 register value with P2 register value, send result into B0-B3 register. |

d) 32-bit Signed Comparison Instruction

Instruction Format: [CMPDS□□ X Y Z(n)]

Instruction Description: CMPDS is instruction code, □□ is instruction execution register area, X,Y is comparison register address; Z is the register address that stores results, compare the value of X register address with the value of Y register address, and store the result into Z register;

Result outputs:

If X register value is lower than Y register value, then Z(n)=1 ; Z(n+1)=0 ; Z(n+2)=0 ;

If X register value is larger than Y register value, then Z(n)=0 ; Z(n+1)=0 ; Z(n+2)=1 ;

If X register value equals to Y register value, then Z(n)=0 ; Z(n+1)=0 ; Z(n+2)=1 ;

User can operate for R area, P area and immediate operand; See details as table below:


| Syntax Expression | Annotations |
|-------------------|--|
| CMPDSRR R1 R2 B0 | Compare R1 register value with R2 register value, send result into B0-B3 register. |
| CMPDSDR D1 R2 B0 | Compare immediate operand 1 with R2 register value, send result into B0-B3 register. |
| CMPDSPR P1 R2 B0 | Compare P1 register value with R2 register value, send result into B0-B3 register. |
| CMPDSDP D1 P2 B0 | Compare immediate operand 1 with P2 register value, send result into B0-B3 register. |
| CMPDSRP R1 P2 B0 | Compare R1 register value with P2 register value, send result into B0-B3 register. |
| CMPDSPP P1 P2 B0 | Compare P1 register value with P2 register value, send result into B0-B3 register. |

6.8.4 Built-in PLC Parameters

| | | | | | | | | | | | | | | | | | |
|-------|---|--------------|-------------|------------------|---|------------|---|------------------------------|---|---------------------------------------|---|--------------|---|------|---|-------|---|
| PL170 | PLC Start Function <div>PLC</div> | | | | | | | | | | | | | | | | |
| | Setting Range | Setting Unit | Mfr's Value | Effect | | | | | | | | | | | | | |
| | 0~1 | N/A | 0 | Immediate Effect | | | | | | | | | | | | | |
| | 0 : Not start PLC function; 1 : Start PLC function; | | | | | | | | | | | | | | | | |
| PL172 | PLC Start Adress <div>PLC</div> | | | | | | | | | | | | | | | | |
| | Setting Range | Setting Unit | Mfr's Value | Effect | | | | | | | | | | | | | |
| | 0~2000 | N/A | 0 | Immediate Effect | | | | | | | | | | | | | |
| PL174 | PLC Reset <div>PLC</div> | | | | | | | | | | | | | | | | |
| | Setting Range | Setting Unit | Mfr's Value | Effect | | | | | | | | | | | | | |
| | 0~1 | N/A | 0 | Immediate Effect | | | | | | | | | | | | | |
| | 0: Not reset PLC function; 1: Reset PLC function; | | | | | | | | | | | | | | | | |
| PL130 | Low-speed Timer 1 Configuration <div>PLC</div> | | | | | | | | | | | | | | | | |
| | Setting Range | Setting Unit | Mfr's Value | Effect | | | | | | | | | | | | | |
| | Two-parameter | N/A | 00 | Immediate Effect | | | | | | | | | | | | | |
| | <div><div><div><div></div><div></div><div></div></div><div><div></div><div></div></div></div><div><table><tr><td>X</td><td>Timer Mode</td></tr><tr><td>0</td><td>Reach set value and maintain</td></tr><tr><td>1</td><td>Reach set value and continue to count</td></tr></table><table><tr><td>Y</td><td>Count Source</td></tr><tr><td>0</td><td>10ms</td></tr><tr><td>1</td><td>100ms</td></tr><tr><td>2</td><td>PLC stores B448</td></tr></table></div></div> | | | | X | Timer Mode | 0 | Reach set value and maintain | 1 | Reach set value and continue to count | Y | Count Source | 0 | 10ms | 1 | 100ms | 2 |
| X | Timer Mode | | | | | | | | | | | | | | | | |
| 0 | Reach set value and maintain | | | | | | | | | | | | | | | | |
| 1 | Reach set value and continue to count | | | | | | | | | | | | | | | | |
| Y | Count Source | | | | | | | | | | | | | | | | |
| 0 | 10ms | | | | | | | | | | | | | | | | |
| 1 | 100ms | | | | | | | | | | | | | | | | |
| 2 | PLC stores B448 | | | | | | | | | | | | | | | | |
| PL131 | Low-speed timer 2 Configuration <div>PLC</div> | | | | | | | | | | | | | | | | |
| | Setting Range | Setting Unit | Mfr's Value | Effect | | | | | | | | | | | | | |
| | Two-parameter | N/A | 00 | Immediate Effect | | | | | | | | | | | | | |

| | | | | | | | | | | | | | | | | | | |
|-------|---|--------------|-------------|------------------|---|------------|---|------------------------------|---|---------------------------------------|---|--------------|---|------|---|-------|---|-----------------|
| | <div><div><div><div><div></div><div></div></div><div><div></div><div></div></div></div><div><div></div><div></div></div></div><table><tr><td>X</td><td>Timer Mode</td></tr><tr><td>0</td><td>Reach set value and maintain</td></tr><tr><td>1</td><td>Reach set value and continue to count</td></tr></table><table><tr><td>Y</td><td>Count Source</td></tr><tr><td>0</td><td>10ms</td></tr><tr><td>1</td><td>100ms</td></tr><tr><td>2</td><td>PLC stores B449</td></tr></table></div> | | | | X | Timer Mode | 0 | Reach set value and maintain | 1 | Reach set value and continue to count | Y | Count Source | 0 | 10ms | 1 | 100ms | 2 | PLC stores B449 |
| X | Timer Mode | | | | | | | | | | | | | | | | | |
| 0 | Reach set value and maintain | | | | | | | | | | | | | | | | | |
| 1 | Reach set value and continue to count | | | | | | | | | | | | | | | | | |
| Y | Count Source | | | | | | | | | | | | | | | | | |
| 0 | 10ms | | | | | | | | | | | | | | | | | |
| 1 | 100ms | | | | | | | | | | | | | | | | | |
| 2 | PLC stores B449 | | | | | | | | | | | | | | | | | |
| PL132 | Low-speed timer 3 Configuration <div>PLC</div> | | | | | | | | | | | | | | | | | |
| | Setting Range | Setting Unit | Mfr's Value | Effect | | | | | | | | | | | | | | |
| | Two-parameter | N/A | 00 | Immediate Effect | | | | | | | | | | | | | | |
| | <div><div><div><div><div></div><div></div></div><div><div></div><div></div></div></div><div><div></div><div></div></div></div><table><tr><td>X</td><td>Timer Mode</td></tr><tr><td>0</td><td>Reach set value and maintain</td></tr><tr><td>1</td><td>Reach set value and continue to count</td></tr></table><table><tr><td>Y</td><td>Count Source</td></tr><tr><td>0</td><td>10ms</td></tr><tr><td>1</td><td>100ms</td></tr><tr><td>2</td><td>PLC stores B450</td></tr></table></div> | | | | X | Timer Mode | 0 | Reach set value and maintain | 1 | Reach set value and continue to count | Y | Count Source | 0 | 10ms | 1 | 100ms | 2 | PLC stores B450 |
| X | Timer Mode | | | | | | | | | | | | | | | | | |
| 0 | Reach set value and maintain | | | | | | | | | | | | | | | | | |
| 1 | Reach set value and continue to count | | | | | | | | | | | | | | | | | |
| Y | Count Source | | | | | | | | | | | | | | | | | |
| 0 | 10ms | | | | | | | | | | | | | | | | | |
| 1 | 100ms | | | | | | | | | | | | | | | | | |
| 2 | PLC stores B450 | | | | | | | | | | | | | | | | | |
| PL133 | Low-speed timer 4 Configuration <div>PLC</div> | | | | | | | | | | | | | | | | | |
| | Setting Range | Setting Unit | Mfr's Value | Effect | | | | | | | | | | | | | | |
| | Two-parameter | N/A | 00 | Immediate Effect | | | | | | | | | | | | | | |
| | <div><div><div><div><div></div><div></div></div><div><div></div><div></div></div></div><div><div></div><div></div></div></div><table><tr><td>X</td><td>Timer Mode</td></tr><tr><td>0</td><td>Reach set value and maintain</td></tr><tr><td>1</td><td>Reach set value and continue to count</td></tr></table><table><tr><td>Y</td><td>Count Source</td></tr><tr><td>0</td><td>10ms</td></tr><tr><td>1</td><td>100ms</td></tr><tr><td>2</td><td>PLC stores B451</td></tr></table></div> | | | | X | Timer Mode | 0 | Reach set value and maintain | 1 | Reach set value and continue to count | Y | Count Source | 0 | 10ms | 1 | 100ms | 2 | PLC stores B451 |
| X | Timer Mode | | | | | | | | | | | | | | | | | |
| 0 | Reach set value and maintain | | | | | | | | | | | | | | | | | |
| 1 | Reach set value and continue to count | | | | | | | | | | | | | | | | | |
| Y | Count Source | | | | | | | | | | | | | | | | | |
| 0 | 10ms | | | | | | | | | | | | | | | | | |
| 1 | 100ms | | | | | | | | | | | | | | | | | |
| 2 | PLC stores B451 | | | | | | | | | | | | | | | | | |
| PL140 | Low-speed timer 1 set value <div>PLC</div> | | | | | | | | | | | | | | | | | |
| | Setting Range | Setting Unit | Mfr's Value | Effect | | | | | | | | | | | | | | |
| | -2147483647~+2147483647 | N/A | 0 | Immediate Effect | | | | | | | | | | | | | | |
| PL142 | Low-speed timer 2 set value <div>PLC</div> | | | | | | | | | | | | | | | | | |
| | Setting Range | Setting Unit | Mfr's Value | Effect | | | | | | | | | | | | | | |
| | -2147483647~+2147483647 | N/A | 0 | Immediate Effect | | | | | | | | | | | | | | |
| PL144 | Low-speed timer 3 set value <div>PLC</div> | | | | | | | | | | | | | | | | | |
| | Setting Range | Setting Unit | Mfr's Value | Effect | | | | | | | | | | | | | | |
| | -2147483647~+2147483647 | N/A | 0 | Immediate Effect | | | | | | | | | | | | | | |

| | | | | | | | | | | | | | | | | |
|-------|---|--------------|-------------|------------------|---|------------|---|------------------------------|---|---------------------------------------|---|--------------|---|-------|---|-----------------|
| PL146 | Low-speed timer 4 set value <div>PLC</div> | | | | | | | | | | | | | | | |
| | Setting Range | Setting Unit | Mfr's Value | Effect | | | | | | | | | | | | |
| | -2147483647~+2147483647 | N/A | 0 | Immediate Effect | | | | | | | | | | | | |
| PL150 | Low-speed timer 1 current value <div>PLC</div> | | | | | | | | | | | | | | | |
| | Setting Range | Setting Unit | Mfr's Value | Effect | | | | | | | | | | | | |
| | -2147483647~+2147483647 | N/A | — | Immediate Effect | | | | | | | | | | | | |
| PL152 | Low-speed timer 2 current value <div>PLC</div> | | | | | | | | | | | | | | | |
| | Setting Range | Setting Unit | Mfr's Value | Effect | | | | | | | | | | | | |
| | -2147483647~+2147483647 | N/A | — | — | | | | | | | | | | | | |
| PL154 | Low-speed timer 3 current value <div>PLC</div> | | | | | | | | | | | | | | | |
| | Setting Range | Setting Unit | Mfr's Value | Effect | | | | | | | | | | | | |
| | -2147483647~+2147483647 | N/A | — | — | | | | | | | | | | | | |
| PL156 | Low-speed timer 4 current value <div>PLC</div> | | | | | | | | | | | | | | | |
| | Setting Range | Setting Unit | Mfr's Value | Effect | | | | | | | | | | | | |
| | -2147483647~+2147483647 | N/A | — | — | | | | | | | | | | | | |
| PL160 | High-speed counter 1 set <div>PLC</div> | | | | | | | | | | | | | | | |
| | Setting Range | Setting Unit | Mfr's Value | Effect | | | | | | | | | | | | |
| | Two-parameter | N/A | 00 | Immediate Effect | | | | | | | | | | | | |
| | <div><div><div><div></div><div></div><div></div></div><div><div></div><div></div></div></div><div><table><tr><td>X</td><td>Timer Mode</td></tr><tr><td>0</td><td>Reach set value and maintain</td></tr><tr><td>1</td><td>Reach set value and continue to count</td></tr></table><table><tr><td>Y</td><td>Count Source</td></tr><tr><td>0</td><td>0.1ms</td></tr><tr><td>1</td><td>PLC stores B432</td></tr></table></div></div> | | | | X | Timer Mode | 0 | Reach set value and maintain | 1 | Reach set value and continue to count | Y | Count Source | 0 | 0.1ms | 1 | PLC stores B432 |
| | X | Timer Mode | | | | | | | | | | | | | | |
| 0 | Reach set value and maintain | | | | | | | | | | | | | | | |
| 1 | Reach set value and continue to count | | | | | | | | | | | | | | | |
| Y | Count Source | | | | | | | | | | | | | | | |
| 0 | 0.1ms | | | | | | | | | | | | | | | |
| 1 | PLC stores B432 | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | |
| PL161 | High-speed counter 1 set value <div>PLC</div> | | | | | | | | | | | | | | | |
| | Setting Range | Setting Unit | Mfr's Value | Effect | | | | | | | | | | | | |
| | -2147483647~+2147483647 | N/A | 0 | Immediate Effect | | | | | | | | | | | | |
| PL163 | High-speed counter 1 current value <div>PLC</div> | | | | | | | | | | | | | | | |
| | Setting Range | Setting Unit | Mfr's Value | Effect | | | | | | | | | | | | |
| | -2147483647~+2147483647 | N/A | — | Immediate Effect | | | | | | | | | | | | |
| PL165 | High-speed counter 2 set <div>PLC</div> | | | | | | | | | | | | | | | |
| | Setting Range | Setting Unit | Mfr's Value | Effect | | | | | | | | | | | | |
| | Two-parameter | N/A | 00 | Immediate Effect | | | | | | | | | | | | |
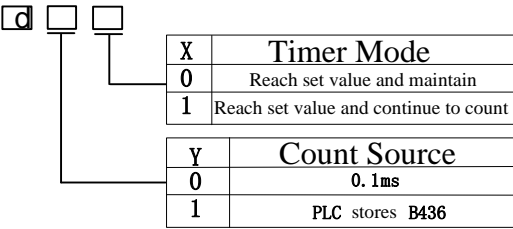
| | | | | |
|--------------|---|--------------|-------------|------------------|
| |  | | | |
| PL166 | High-speed counter 2 set value PLC | | | |
| | Setting Range | Setting Unit | Mfr's Value | Effect |
| | -2147483647~+2147483647 | N/A | 0 | Immediate Effect |
| PL168 | High-speed counter 2 current value PLC | | | |
| | Setting Range | Setting Unit | Mfr's Value | Effect |
| | -2147483647~+2147483647 | N/A | — | — |

6.8.5 Built-in PC/PLC Use and Application Example

To satisfy user requirement, FL20 built-in PLC adopts free installation version. Download the software, double-click ParkerDV shortcut icon, then below interface is displayed:

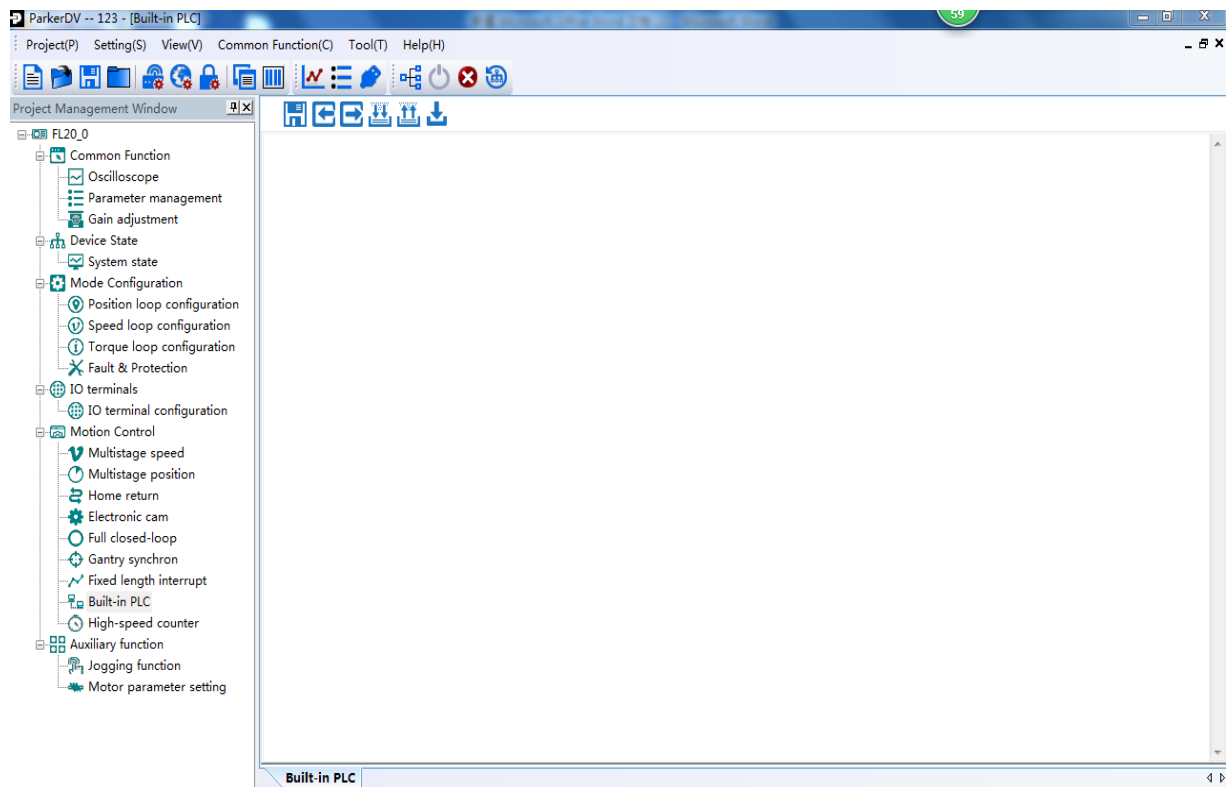


Fig 6.8.1 Interface after double-click

Click built-in PLC, PLC programming interface is displayed.

In menu bar, find **【setting】** → **【communication setting】** command or press shortcut key F4, open

Communication Setting window, as following:

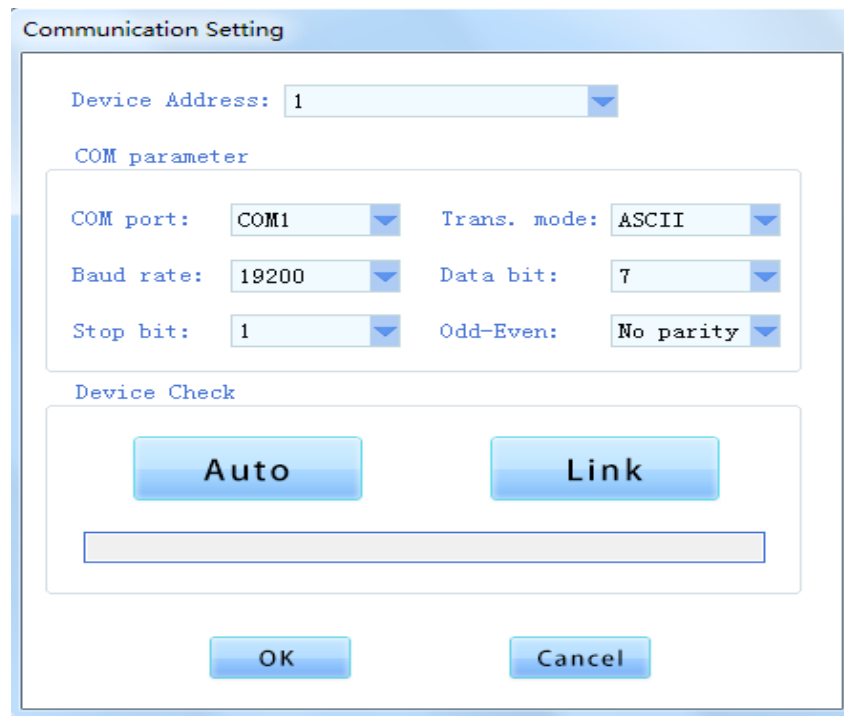


Fig 6.8.2 Communication setting window

After finishing programming, user can compile program. If program is correct, below window will pop up:

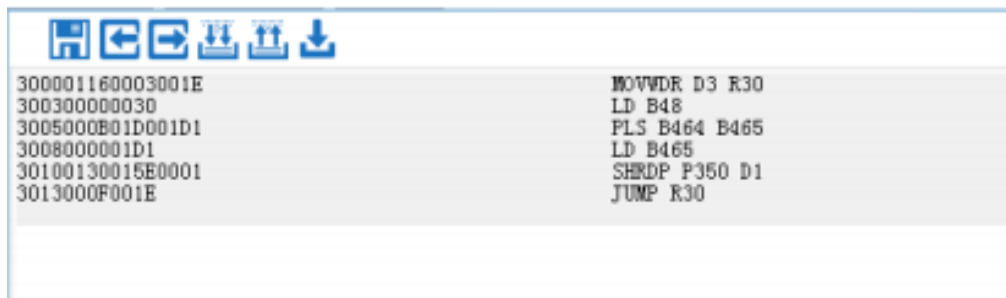


Fig 6.8.3 Program is correct

If program is not correct, following window will pop up.

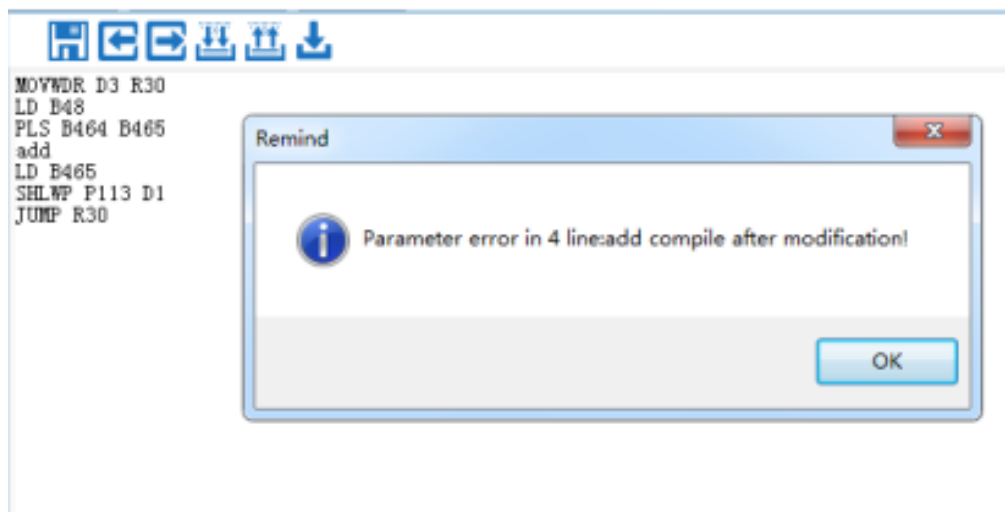


Fig 6.8.4 Program is not correct

Press **【OK】**, user can revise the error line.



Fig 6.8.5 Compiling interface

After finishing programming, user can download program to servo drive by **【File】** → **【download】** or shortcut key F5. Download window will pop up, user can press **【download】** key.

Note: current software doesn't support ladder logic programming, only support language programming.

6.8.5.1 Application Example

The application example illustrates the programming of common instructions:

Case 1: 16-bit Addition Instruction

```
MOVWDR D3 R100      ##Set the starting point of a program;
ADDWDP D1000 P113 R29  ##The value of Po113 added to immediate operand 1000, send the
                        result to R29 area
```

MOVWRP R29 P114 ##Send the result of R29 into Po114, it is convenient to check;
 JUMP R100 ##Echoing first sentence, maintain the program in running status;

Case 2: 16-bit Subtraction Instruction

MOVWDR D3 R100 ##Set the starting point of a program;
 SUBWDP D1000 P113 R29 ##Immediate operand 1000 subtracts the value of Po113, send the
 result into R29 area
 MOVWRP R29 P114 ##Send the result of R29 into Po114, it is convenient to check;
 JUMP R100 ##Echoing with first sentence, maintain the program in running
 status;

Case 3: 16-bit Multiplying Instruction

MOVWDR D3 R100 ##Set the starting point of a program;
 MULWDP D100 P113 R29 ##Multiplying immediate operand 100 and the value of Po113, send
 theresult into R29 and R30 area;
 ##R30 stores high-bit, R29 stores low-bit;
 MOVWRP R29 P114 ##Send the result of R29 into Po114, it is convenient to check;
 JUMP R100 ##Echoing with first sentence, maintain the program in running
 status;

Case 4: 16-bit Division Instruction

MOVWDR D3 R100 ##Set the starting point of a program;
 DIVWDP D100 P113 R29 ##Dividing immediate operand 100 by the value of Po113, send the
 result into R29 and R39 area, R30 stores remainder;
 MOVWRP R29 P114 ##Send the result of R29 into Po114, it is convenient to check;
 MOVWRP R30 P115 ##Send the remainder into Po115, it is convenient to check;
 JUMP R100 ##Echoing with first sentence, maintain the program in running
 status;

Case 5: Logic and Instruction

MOVWDR D3 R100 ##Set the starting point of a program;
 LD B48 ##Judge DI1 status;
 OR B49 ## “OR”instruction for DI1 and DI2;
 OUT B64 ##Send the result into DO1;
 JUMP R100 ##Echoing with first sentence, maintain the program in running
 status;

Case 6: Logic and Instruction

MOVWDR D3 R100 ##Set the starting point of a program;
 LD B48 ##Judge DI1 status;

```

AND  B49          ## “AND” instruction for DI1 and DI2;
OUT  B64          ##Send the result into DO1;
JUMP R100         ##Echoing with first sentence, maintain the program in running
status;

```

Case 7: Logical block and Instruction

```

MOVWDR D3 R100    ##Set the starting point of a program;
LD  B48           ##Judge DI1 status;
MC  B464          ##Set B464 valid if DI1=1, meanwhile, execute the program between
                  MC and MCR.

LD  B49           ##Judge DI2 status;
LD  B50           ##Judge DI3 status;
LD  B51           ##Judge DI4 status;
ANB              ##“AND” instruction for above;
OUT  B64          ##Send the result into DO1
MCR              ##
JUMP R100         ##Echoing with first sentence, maintain the program in running
status;

```

Case 8: Program Control Instruction Example

```

MOVWDR D3 R30     ##Set program jump address
LD  B48           ##Judge DI1 status
MC  B464          ##Set B464 valid if DI1 is enabled, meanwhile, the code between MC and
                  MCR in executing status;

LD  B49           ##Judge DI2 status;
MPS              ##Current logic status pushes into stack
LD  B51           ##Judge DI4 status
ANB              ##”AND” instruction for above LD logic status
OUT  B64          ##Output result into DO1
MCR              ##Main control program reset
MRD              ##Read stack logic
OUT  B65          ##Stack logic outputs to DO2
MPP              ##Popup stack logic
INV              ##Reversing current logic
OUT  B66          ##Output current logic to DO3
JUMP R30          ##Jump to R30 address, program continues to execute

```

6.8.6 Built-in PLC Communication Operation

6.8.6.1 MODBUS Address

MODBUS address of PL area start from 1000, see details for built-in PLC address as table below:

Table 1: MODBUS address of built-in PLC area

| Address | Content | Range | Remarks |
|---------|-------------------|----------|---------|
| 1170 | PLC start | 0 ~ 1 | |
| 1172 | PLC start address | 0 ~ 2000 | |
| 1174 | PLC reset | 0 ~ 1 | |

6.8.6.2 DEBUG function of built-in PLC

Table 2: MODBUSAddress and Contents

| Address | Content | Range | Remarks |
|------------------|-----------------------|-------|---------|
| 10000 | Debug Mode | | WR |
| 10001 | Single step execution | | WR |
| 10002 | Running to breakpoint | | WR |
| 10003 | Breakpoint address | | WR |
| 1175 | Current address | | RO |
| 10100 ~ 10355 | Data of R0 ~ R255 | | WR |

Table 3: DEBUG Mode Function

| Action | Debug mode | Single step | Running to breakpoint | Breakpoint address |
|--|------------|-------------|-----------------------|--------------------|
| Running to breakpoint address N, then enter single step mode. | 1 | 0 | 1 | N |
| In single step mode, single-step executes one instruction, and single-step execute automatic reset | 1 | 1 | 0 | N |
| Pause in current instruction | 1 | 0 | 0 | N |
| Run the program normally | 0 | 0 | 0 | N |

VII. Adjustments

7.1 Summary

Servo drive needs rapid, accurate drive motor to track PC/PLC or its internal setting instructions. To achieve the requirements, reasonable adjustments for servo gain must be made.

The general process of gain adjustment shows as below:

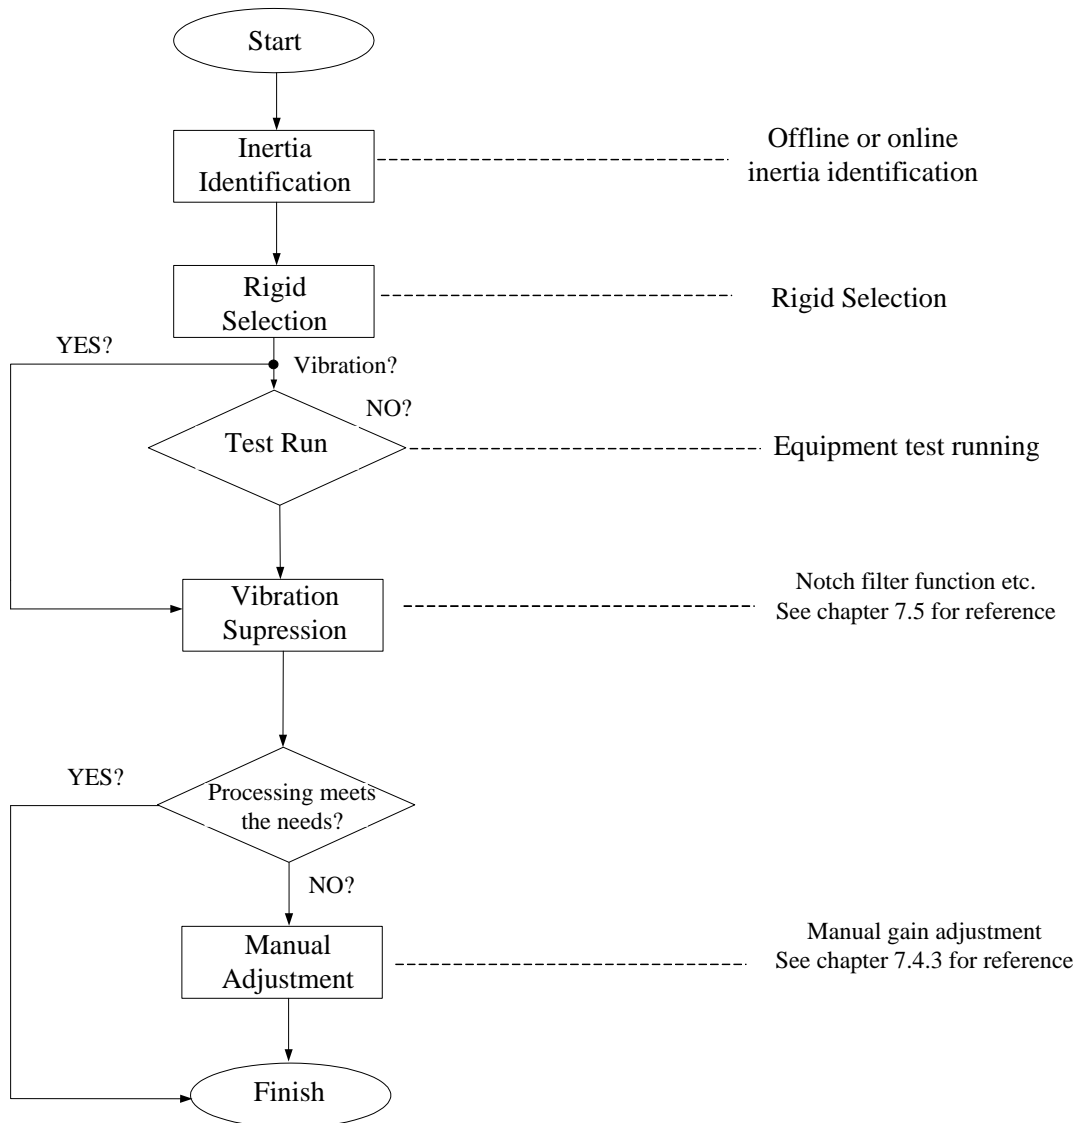


Fig 7.1.1 Gain adjustment flow chart

Note:

- It is recommended that jog test running firstly before gain adjustment to ensure the normal running of motor;
- Servo gain can be set by the combination of multi-parameters (position-loop, speed-loop, filter, load rotational inertia ratio etc.), they influence each other, therefore, the setting of servo gain must consider the balance of each parameter;

7.2 Inertia Identification

After motor is connected to mechanical equipment or motor is installed in load simulator, servo drive needs to “study” the rotational inertia of current equipment before test running for normal production. It is convenient for user to adjust related parameters, and make the servo system run in proper rotational inertia.

Load inertia ratio=(the total rotational inertia of mechanical load)/(the rotational inertia of motor itself)

Load inertia ratio is important parameter of servo system. Set the load inertia ratio correctly is helpful for finishing the debug rapidly. Load inertia ratio can be set either manually or by inertia automatic identification.

Servo drive provides two kinds of inertia identification methods:

1) Offline Inertia Identification

Use “rotational inertia identification function (Po008)”, operate the keys of servo drive to realize inertia identification;

2) Online Inertia Identification

Servo drive identifies current load inertia automatically according to the load condition, the identified value writes to “rotational inertia ratio (Po013)”.



- 1. If actual load inertia ratio is big and the drive gain is low, motor will be slow and cannot meet the requirements; user can increase the rigidity by Po010 to learn the inertia again;**
- 2. If vibration occurs in the process of inertia learning, user should stop inertia learning Immediate and lower the gain;**

7.2.1 Offline Inertia Identification

Servo drive can drive the load running by servo motor according to forward/reverse curve to calculate the rotational inertia ratio of load and confirm the rotational inertia.

Before running offline inertia identification, confirm the content below firstly:

1) The movable distance of motor should satisfy one requirement

Before offline inertia identification, make sure the limit switch is installed in machinery, and ensure that motor has the movable distance of over 1 cycle for each forward and reverse to prevent accident from over-distance in the process of inertia identification; Check the movable distance in the stop position of

current motor is larger than the setting value of Po015, if not, the distance can be increased properly.

2) Estimate load inertia ratio(Po013)

a) Preset Po013 as a bigger initial value;

400 of initial value is recommended as preset value, gradually increase till the displayed value in keypad can be updated with the actual value in the process of identification.

b) Increase the rigidity level of the servo drive properly:

Increase the rigidity level (Po010) properly to meet the requirements of inertia identification.

General operation process of offline inertia identification shows as below:

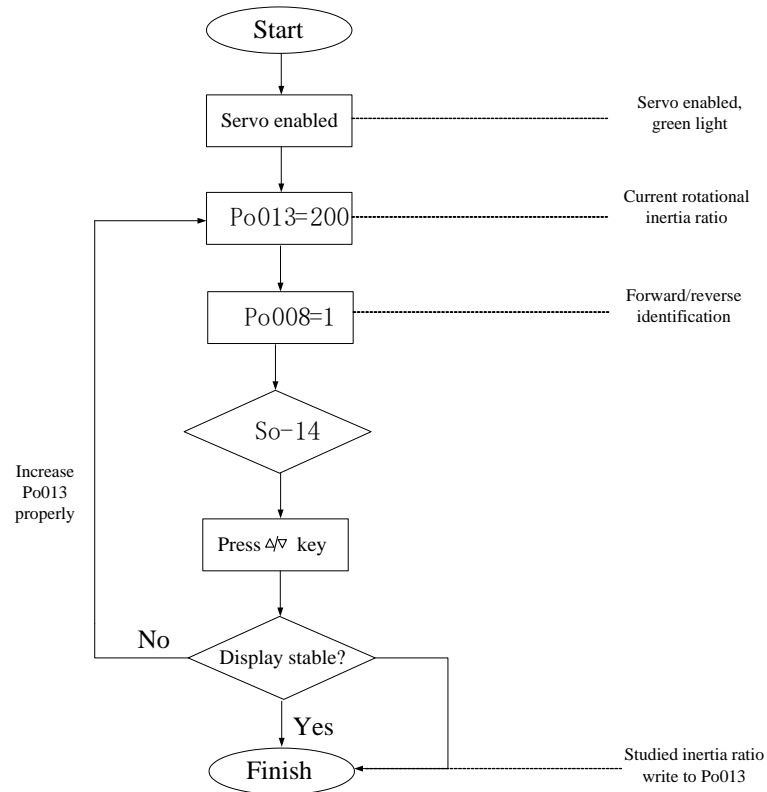


Fig 7.2.1 Offline rotational inertia setting flow chart

Related Parameters:

1) Motion range of offline rotational inertia identification(pulse)

| Signal Name | Parameter | Setting Range | Mfr's value | Content |
|--------------|-----------|----------------|-------------|--|
| Motion range | Po015 | 200~2147483647 | — | Approximate value, One-time identification action finished in setting pulse range. |

2) Inertia identification mode selection

| | | | | | |
|--------------|---------------------------------------|--|------|-------------|--|
| Po008 | Inertia identification mode selection | | | | <input type="checkbox"/> speed <input type="checkbox"/> position <input type="checkbox"/> torque |
| | Setting Range | | Unit | Mfr's Value | Effect |

| | | | | |
|--|--|-----|---|---|
| | 0 : No start function 1 : Offline fwd/rev direction identification. 2 : Offline single direction identification. 3 : Online auto inertia identification | N/A | 0 | Immediate effect Lost if power's off |
|--|--|-----|---|---|

Illustration:

- (1) Po008=0 : Not start rotational inertia identification function.
- (2) Po008=1 : Offline fwd/rev direction identification, suit for the equipment with limit motion range.
- (3) Po008=2 : Offline single direction identification, suit for the equipment, which cannot reverse.
- (4) Po008=3 : Online automatic inertia identification; in this mode, servo drive maintains online automatic identification status, when jog running, it displays not “JOG”, but the value of current rotational inertia.

3) Offline rotational inertia identification action gap time

| | | | | |
|--------------|--|--------------|-------------|------------------|
| Po009 | Offline rotational inertia identification action gap time speed position torque | | | |
| | Setting Range | Setting Unit | Mfr's Value | Effect |
| | 10~2000 | ms | 100 | Immediate effect |

4) Motor accel/decel time when offline rotational inertia identification

| | | | | |
|--------------|---|--------------|-------------|------------------|
| Po014 | Motor accel/decel time speed position torque | | | |
| | Setting Range | Setting Unit | Mfr's Value | Effect |
| | 200~5000 | ms | 1000 | Immediate effect |

5) Rotational inertia ratio

| | | | | |
|--------------|---|--------------|-------------|------------------|
| Po013 | Rotational inertia ratio speed position torque | | | |
| | Setting Range | Setting Unit | Mfr's Value | Effect |
| | 1~30000 | 0.01 | 200 | Immediate effect |

Note: Rotational inertia identification just measures the inertia ratio, does not match speed-location parameter, therefore, please make sure that make the selection of rigidity after finishing rotational inertia identification.

7.2.2 Online Inertia Identification

Online automatic inertia identification:

When Po008=3, enter rotational inertia online automatic identification status, servo drive identifies current load inertia automatically according to load condition.

Note: The condition of online automatic inertia identification shows as below:

- Max rotary speed is higher than 200rpm in the motion process of servomotor.
- The acceleration/deceleration of servomotor is higher than 3000rpm/s.
- The machinery that rigid load is not easy to generate small vibration.
- Slow changing of load inertia
- Mechanical clearance is not big in the motor process

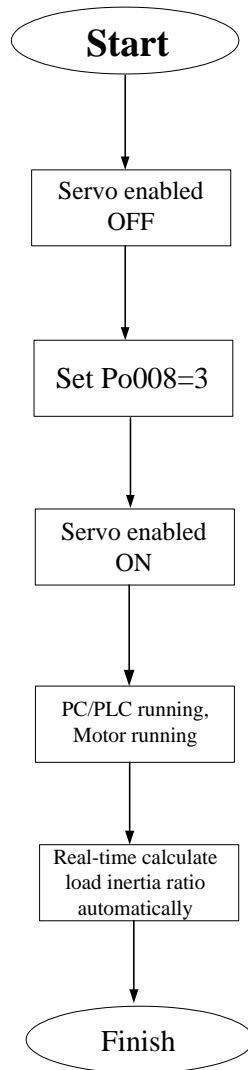


Fig 7.2.2 Online rotational inertia setting flow chart

7.3 Gain Adjustment

7.3.1 Summary

To optimize the responsiveness of servo drive, the setting servo gain needs to adjust. Servo gain needs to set for the combination of multi-parameter, they influence with each other, and therefore, the adjustment of servo gain must consider the relationship of each parameter.

In general, the machinery of high rigidity can improve response performance by increasing servo gain. For the machinery of low rigidity, vibration may occur when increasing servo gain. Therefore, in the occasion of high response requirements, the machinery of high rigidity is needed to avoid mechanical resonance.

The selection of position or speed response frequency must be decided by mechanical rigidity and application occasion. In general, the machinery of high rigidity requires high response frequency, but high response frequency can easily trigger mechanical resonance. If response frequency is unknown, user can increase gain setting gradually to improve response frequency until the resonance happens, then turn down the setting value of gain. Related gain adjustment principle illustrates as below:

The rigidity of servo drive is the ability that motor rotor overcomes load inertia, which is self-locking ability of motor rotor. The stronger servo rigidity is, the bigger corresponding speed-loop gain is, the faster system response speed is.

Servo rigidity must use in conjunction with the rotational inertia of load, the bigger mechanical load rotational inertia is, the lower the rigidity level is. If servo rigidity is higher than rotational inertia ratio, high-frequency self-excited oscillation would happen; whereas, motor would response slowly and take longer to reach the specified location.

Servosystem consists of three control loops, from outside-in: position-loop, speed-loop, current loop, basic control diagram shows as below:

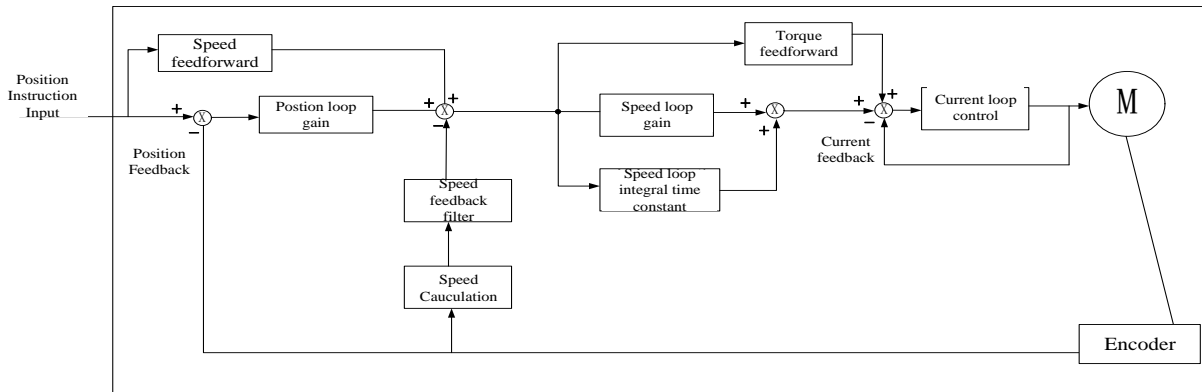



Fig 7.3.1 Servo drive internal frame diagram

Inside loop requires high responsiveness, system may not stable if not following the principle:

The default current loop can ensure the responsiveness that is not need to adjust. The position loop gain, speed loop gain and other auxiliary gain needs adjustment.

7.3.2 Automatic Gain Adjustment

When automatic gain adjustment, use rigidity selection function (Po010), servo drive will generate one group of matching gain parameter to satisfy the requirements of rapidity and stability.

 Make sure obtain load inertia ratio correctly before using the parameter of auto gain adjustment.

Related Parameter:

| Po010 | Rigidity Selection speed position torque | | | |
|--------------|--|--------------|-------------|------------------|
| | Setting Range | Setting Unit | Mfr's Value | Effect |
| | 1~30 | N/A | 6 | Immediate effect |

Set Po010 for rigidity selection, setting range: 1~19, the bigger value is, the stronger rigidity is. System will generate first group parameters of gain. The first gain group includes: first position loop gain Po301, first speed loop proportional gain Po101, first speed loop integral time Po102, first speed filter time constant Po105, first torque filter time constant Po214, first current loop bandwidth Po200.

Table 7.3.1 Rigidity Level and Related Parameters

| Rigidity Level Po010 | 1 st position loop gain Po301 | 1 st Speed-loop proportional gain Po101 | 1 st speed loop integral time Po102 | 1 st speed filter time constant Po105 | 1 st current loop bandwidth Po200 | 1 st torque filter time constant Po214 | Servo response speed |
|-------------------------|---|---|---|---|---|--|----------------------------------|
| 1 | 384 | 100 | 5000 | 3200 | 1000 | 0 | Slow ↓ Medium ↓ Fast |
| 2 | 769 | 200 | 2500 | 1668 | 1000 | 0 | |
| 3 | 1154 | 300 | 1666 | 1100 | 1000 | 0 | |
| 4 | 1538 | 400 | 1250 | 830 | 1000 | 0 | |
| 5 | 1923 | 500 | 1000 | 650 | 1000 | 0 | |
| 6 | 2423 | 630 | 793 | 529 | 1000 | 0 | |
| 7 | 2885 | 750 | 666 | 440 | 1000 | 0 | |
| 8 | 3346 | 870 | 574 | 383 | 1000 | 0 | |
| 9 | 3846 | 1000 | 500 | 330 | 1000 | 0 | |
| 10 | 4308 | 1120 | 446 | 297 | 1000 | 0 | |
| 11 | 4808 | 1250 | 400 | 260 | 1000 | 0 | |
| 12 | 5270 | 1370 | 364 | 243 | 1000 | 0 | |
| 13 | 5770 | 1500 | 333 | 220 | 1000 | 0 | |
| 14 | 6231 | 1620 | 308 | 205 | 1000 | 0 | |
| 15 | 6731 | 1750 | 285 | 190 | 1000 | 0 | |

| | | | | | | |
|----|-------|------|-----|-----|------|---|
| 16 | 7193 | 1870 | 267 | 178 | 1000 | 0 |
| 17 | 7693 | 2000 | 250 | 160 | 1000 | 0 |
| 18 | 8193 | 2130 | 234 | 156 | 1000 | 0 |
| 19 | 8655 | 2250 | 222 | 148 | 1000 | 0 |
| 20 | 9617 | 2500 | 200 | 130 | 1000 | 0 |
| 21 | 10578 | 2750 | 181 | 121 | 1000 | 0 |
| 22 | 11540 | 3000 | 166 | 110 | 1000 | 0 |
| 23 | 12502 | 3250 | 153 | 102 | 1000 | 0 |
| 24 | 13463 | 3500 | 142 | 95 | 1000 | 0 |
| 25 | 14425 | 3750 | 133 | 88 | 1000 | 0 |
| 26 | 15387 | 4000 | 125 | 83 | 1000 | 0 |
| 27 | 16349 | 4250 | 117 | 78 | 1000 | 0 |
| 28 | 17310 | 4500 | 111 | 74 | 1000 | 0 |
| 29 | 18272 | 4750 | 105 | 70 | 1000 | 0 |
| 30 | 19234 | 5000 | 100 | 66 | 1000 | 0 |

Mechanical connection mode:

The machinery with synchro belt driving, chain driving, speed reducer with fluctuation gear→Ball screw controlled by speed reducer or long-size machinery connected with ball bearings directly (Normal working machine, handling machine) →Machinery directly connected with ball screw (machine tool etc.)

Setting method of rigidity level:

1) Confirm that inertia identification has been executed and the inertia ratio is reasonable, estimate proper rigidity level Po010 according to inertia ratio and drive connection mode (the bigger mechanical load is, the lower rigidity level is).

2) So-14 enters jog test running, check the normal operation and noise. Reduce rigidity level Po010 properly if there is any noise. Otherwise, user can try to improve the rigidity level and test running again until satisfying the system requirement.

When changing rigidity level, speed loop gain and position loop gain will change too. After setting rigidity level, user can still make a fine-tuning for the first gain group (not influence rigidity Po010).

The data of table above is related to the parameter of Po010 rigidity level, check the table above for reference when rigidity selection.

7.3.3 Manual Gain Adjustment

User can make fine adjustment manually when the automatic gain adjustment cannot reach the expected effect.

Table 7.3.2 Manual Gain Adjustment Parameter Table

| Parameter | Name | Parameter | Name |
|-----------|---|-----------|---|
| Po101 | 1 st Speed loop proportional gain | Po135 | Gain 2 switch to gain 1 delay time |
| Po102 | 1 st Speed loop integral time | Po200 | 1 st current loop bandwidth |
| Po103 | 2 nd Speed loop proportional gain | Po201 | 2 nd current loop bandwidth |
| Po104 | 2 nd Speed loop integral time | Po214 | 1 st torque filter time constant |
| Po105 | 1 st Speed loop time constant | Po215 | 2 nd torque filter time constant |
| Po106 | 2 nd Speed loop filter time constant | Po301 | 1 st position loop gain |
| Po107 | Torque feedforward gain | Po302 | 2 nd position loop gain |
| Po108 | Torque feedforward gain filter | Po303 | Position loop feedforward gain |
| Po130 | Gain switching mode | Po306 | Position loop filter time constant |
| Po131 | Gain switching speed | Po343 | Position mode accel/decel time |
| Po132 | Gain switching pulse | Po229 | Notch filter start |
| Po133 | Position loop gain switching time | Po217 | 1 st Notch filter center frequency |
| Po134 | Speed loop gain switching time | Po218 | 1 st Notch filter width |
| Po219 | 1 st Notch filter depth | Po220 | 2 nd Notch filter center frequency |
| Po221 | 2 nd Notch filter width | Po222 | 2 nd Notch filter depth |
| Po223 | 3 rd Notch filter center frequency | Po224 | 3 rd Notch filter width |
| Po225 | 3 rd Notch filter depth | Po226 | 4 th Notch filter center frequency |
| Po227 | 4 th Notch filter width | Po228 | 4 th Notch filter depth |
| Po240 | Vibration suppression central frequency | Po241 | Reserved |
| Po242 | Vibration suppression intensity | | |

(1) User Parameter Illustration

A) Position Loop Gain

| | | | | |
|--------------|--|--------------|-------------|------------------|
| Po301 | 1 st position loop gain Position | | | |
| | Setting Range | Setting Unit | Mfr's Value | Effect |
| | 1~30000 | N/A | — | Immediate effect |
| Po302 | 2 nd position loop gain Position | | | |
| | Setting Range | Setting Unit | Mfr's Value | Effect |
| | 1~30000 | N/A | — | Immediate effect |

| | | | | |
|--------------|--------------------------------|--------------|-------------|------------------|
| Po303 | Position loop feedforward gain | | | Position |
| | Setting Range | Setting Unit | Mfr's Value | Effect |
| | 0~1000 | N/A | 0 | Immediate effect |
| Po306 | Position filter time constant | | | Position |
| | Setting Range | Setting Unit | Mfr's Value | Effect |
| | 1~10000 | 1ms | 1 | Immediate effect |

Position loop gain decides the responsiveness of position control. The bigger setting value is, the higher gain is, and rigidity is larger. In same frequency instruction pulse, the better following feature of position instruction is, the lower position error is, and the shorter positioning setting time is, but overlarge setting value could cause mechanical shack or position overshoot. Internal servo drive uses feedforward compensation for position control to narrow the positioning time, but the setting value is overlarge, it may cause mechanical vibration.

If position control instruction changes smoothly, increasing gain can reduce the position following error; if it does not change smoothly, lower gain can reduce the vibration of system.

B) Speed Loop Gain

| | | | | | | |
|--------------|---|--------------|-------------|------------------|----------|--------|
| Po101 | 1 st Speed loop proportional gain | | | speed | position | torque |
| | Setting Range | Setting Unit | Mfr's Value | Effect | | |
| | 0~30000 | 0.1Hz | 600 | Immediate effect | | |
| Po102 | 1 st Speed loop integral time | | | speed | position | torque |
| | Setting Range | Setting Unit | Mfr's Value | Effect | | |
| | 0~10000 | 0.1ms | 500 | Immediate effect | | |
| Po103 | 2 nd Speed loop proportional gain | | | speed | position | torque |
| | Setting Range | Setting Unit | Mfr's Value | Effect | | |
| | 0~30000 | 0.1Hz | 240 | Immediate effect | | |
| Po104 | 2 nd Speed loop integral time | | | speed | position | torque |
| | Setting Range | Setting Unit | Mfr's Value | Effect | | |
| | 0~30000 | 0.1ms | 1250 | Immediate effect | | |
| Po105 | 1 st Speed loop time constant | | | speedposition | | |
| | Setting Range | Setting Unit | Mfr's Value | Effect | | |
| | 1~20000 | 0.1ms | 1250 | Immediate effect | | |
| Po106 | 2 nd Speed loop filter time constant | | | speedposition | | |
| | Setting Range | Setting Unit | Mfr's Value | Effect | | |
| | 1~20000 | 0.1ms | — | Immediate effect | | |

Speed loop proportional gain decides the responsiveness of position control. The bigger setting value is, the higher gain is, but oversize setting could cause mechanical resonance. The frequency in speed mode

control is 4~6 times higher than that in position mode control, when position response frequency is higher than speed response frequency, the machinery could shake or position overshoot. When inertia ratio becomes larger, the speed response of control system goes down and becomes unstable. Generally increase the speed loop gain, but when the speed loop gain is overlarge, vibration occurs in running or stop status (abnormal sound), therefore, set the speed loop gain to 50%~80% of gain when vibration. Increase speed response and integral time to reduce the overshoot of accel/decel; reduce integral time can improve the rotation. Reducing speed control integral time can increase speed response and narrow speed control error, but vibration and noise may happen.

Reduce the noises in speed mode and position mode; Increase filter time constant can reduce noise but could slow down the response.

C) Torque Loop Gain

| | | | | |
|--------------|--|--------------|-------------|------------------|
| Po200 | 1 st current loop bandwidth speed position torque | | | |
| | Setting Range | Setting Unit | Mfr's Value | Effect |
| | 10~3000 | HZ | — | Immediate effect |
| Po201 | 2 nd current loop bandwidth speed position torque | | | |
| | Setting Range | Setting Unit | Mfr's Value | Effect |
| | 10~3000 | HZ | — | Immediate effect |
| Po214 | 1 st torque filter time constant speed position torque | | | |
| | Setting Range | Setting Unit | Mfr's Value | Effect |
| | 0~30000 | 0.01ms | — | Immediate effect |
| Po215 | 2 nd torque filter time constant speed position torque | | | |
| | Setting Range | Setting Unit | Mfr's Value | Effect |
| | 0~30000 | 0.01ms | — | Immediate effect |

The larger current loop bandwidth is, the faster system response speed is, but the noise may be louder; vice versa.

7.3.4 Gain Switch

Internal status or external DI can trigger gain-switching function, which has effects below:

- Switch to lower gain for vibration inhibition in the idle state of motor (servo enabled);
- Switch to higher gain for narrowing positioning time in the idle state of motor;
- Switch to higher gain for obtaining better instruction tracking performance in the running status of motor;
- Switch different gain setting by external signal according to the condition of loading equipment;

(1) User Parameter

| | | | | | | |
|--------------|------------------------|--------------|-------------|--|------------------|-------|
| Po130 | Gain switching setting | | | | Position | Speed |
| | Setting Range | Setting Unit | Mfr's Value | | Effect | |
| | 0~6 | N/A | 0 | | Immediate effect | |

The setting of Po130 can realize the switchover between gain 1 and gain 2 according to different conditions.

Gain 1 includes speed loop proportional gain 1(Po101), speed loop integral time 1(Po102) and position loop proportional gain 1(Po301), first speed loop filter time constant (Po105), torque filter time constant (Po214).

Gain 2 includes speed loop proportional gain 2(Po103), speed loop integral time 2 (Po104) and position loop proportional gain 2(Po302), speed loop filter time constant (Po106), torque filter time constant (Po215).

| Parameter | Content |
|-----------|--|
| Po130=0 | No switch, default to use gain 1 |
| Po130=1 | No switch, default to use gain 2 |
| Po130=2 | Switch to gain 2 Immediate when speed is higher than the setting value of Po131, if speed is lower than Po131, after delay the setting time of Po135(0.1ms), switch to gain 1. |
| Po130=3 | Switch terminal control, use gain 1 if the switching terminal defined in CN3 is invalid; use gain 2 if valid. |
| Po130=4 | Switch to gain 2 Immediate when position error is higher than the setting value of Po132; If lower than Po131, delay the setting time of Po135 (0.1ms), switch to gain 1. |
| Po130=5 | Switch to gain 2 Immediate if there is pulse input; if there is no pulse input, delay the setting time of Po135(0.1ms), then switch to gain 1. |
| Po130=6 | Switch to gain 2 Immediate if there is pulse input; If there is no pulse input and the speed is lower than Po131, delay the setting time of Po135(0.1ms), then switch to gain 1. |

| | | | | |
|--------------|--|--------------|-------------|------------------|
| Po131 | <div>Position</div> <div>Speed</div> | | | |
| | Setting Range | Setting Unit | Mfr's Value | Effect |
| | 1~32000 | 0.1r/min | 100 | Immediate effect |
| Po132 | Gain switching pulse <div>Position</div> <div>Speed</div> | | | |
| | Setting Range | Setting Unit | Mfr's Value | Effect |
| | 1~32000 | N/A | 100 | Immediate effect |
| Po133 | Positon loop gain switching time <div>Position</div> <div>Speed</div> | | | |
| | Setting Range | Setting Unit | Mfr's Value | Effect |
| | 1~32000 | 0.1ms | 20 | Immediate effect |
| | The time from one gain switching to another gain smoothly. | | | |
| Po134 | Speed loop gain switching time <div>Position</div> <div>Speed</div> | | | |
| | Setting Range | Setting Unit | Mfr's Value | Effect |
| | 0~20000 | 0.1ms | 100 | Immediate effect |
| | The time from one gain switching to another gain smoothly. | | | |
| Po135 | Gain 2 switch to gain 1 delay time <div>Position</div> <div>Speed</div> | | | |
| | Setting Range | Setting Unit | Mfr's Value | Effect |
| | 0~32000 | 0.1ms | 1000 | Immediate effect |
| | When gain 2 switches to gain 1, delay the time set by Po135, then switch the time according to the setting of Po133. | | | |

7.4 Vibration Inhibition

7.4.1 Vibration Inhibition Function

Mechanical system has certain resonant frequency, when improving servo gain, resonance may generate, which could not make the gain improving continuously. There are 2 main schemes for vibration inhibition:

1) Torque Instruction Filter(Po214 and Po215)

Torque instruction decays in high frequency by setting filter time constant to realize vibration inhibition.

2) Notch Filter

Notch filter can lower the gain of certain frequency to reach vibration inhibition.

The principle of notch filter shows as below:

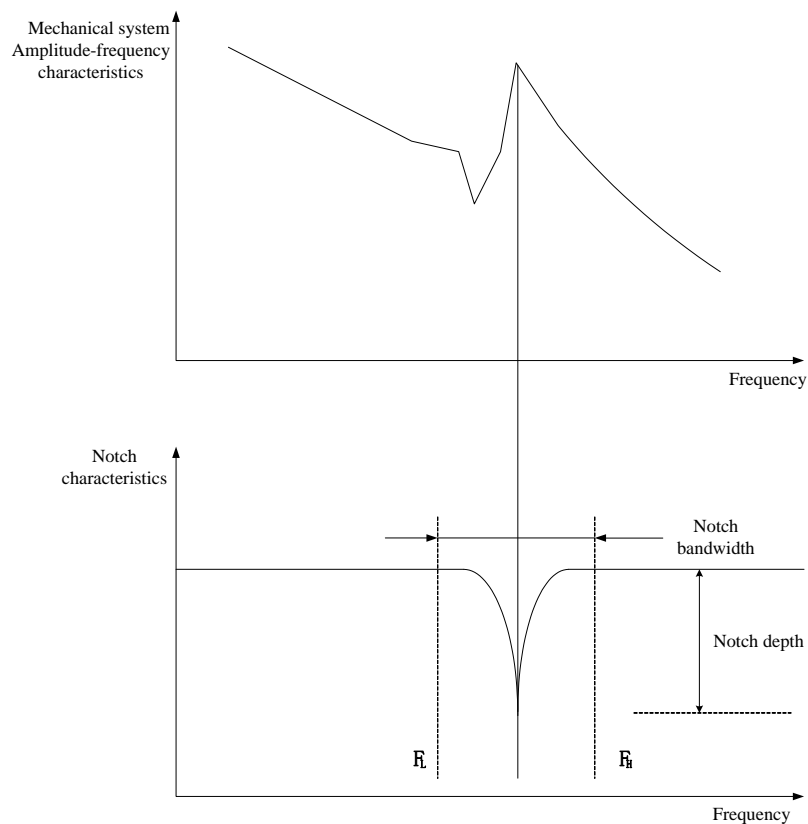


Fig 7.4.1 Inhibition principle of notch filter

Servo drive has 4 groups of notch filters; each notch filter has 3 parameters, which are notch filter frequency, width level and depth level. Four notch filters either can be set manually or can be configured as adaptive notch filter, at this time each parameter is set by servo drive.

| Object | 1 st Notch Filter | 2 nd Notch Filter | 3 rd Notch Filter | 4 th Notch Filter |
|-------------|------------------------------|------------------------------|------------------------------|------------------------------|
| Frequency | Po217 | Po220 | Po223 | Po226 |
| Width level | Po218 | Po221 | Po224 | Po227 |

| Depth level | Po219 | Po222 | Po225 | Po228 |
|-------------|-------|-------|-------|-------|
|-------------|-------|-------|-------|-------|

7.4.2 Low-frequency Vibration Inhibition Function

If the mechanical load end is long and heavy, end is likely to vibrate when emergency stop to influence positioning. The frequency of this kind of vibration is within 100Hz generally, which is lower than the mechanical resonance frequency introduced in chapter 7.4.1, so is called low-frequency resonance. It can reduce the frequency effectively by the function of low-frequency vibration inhibition.

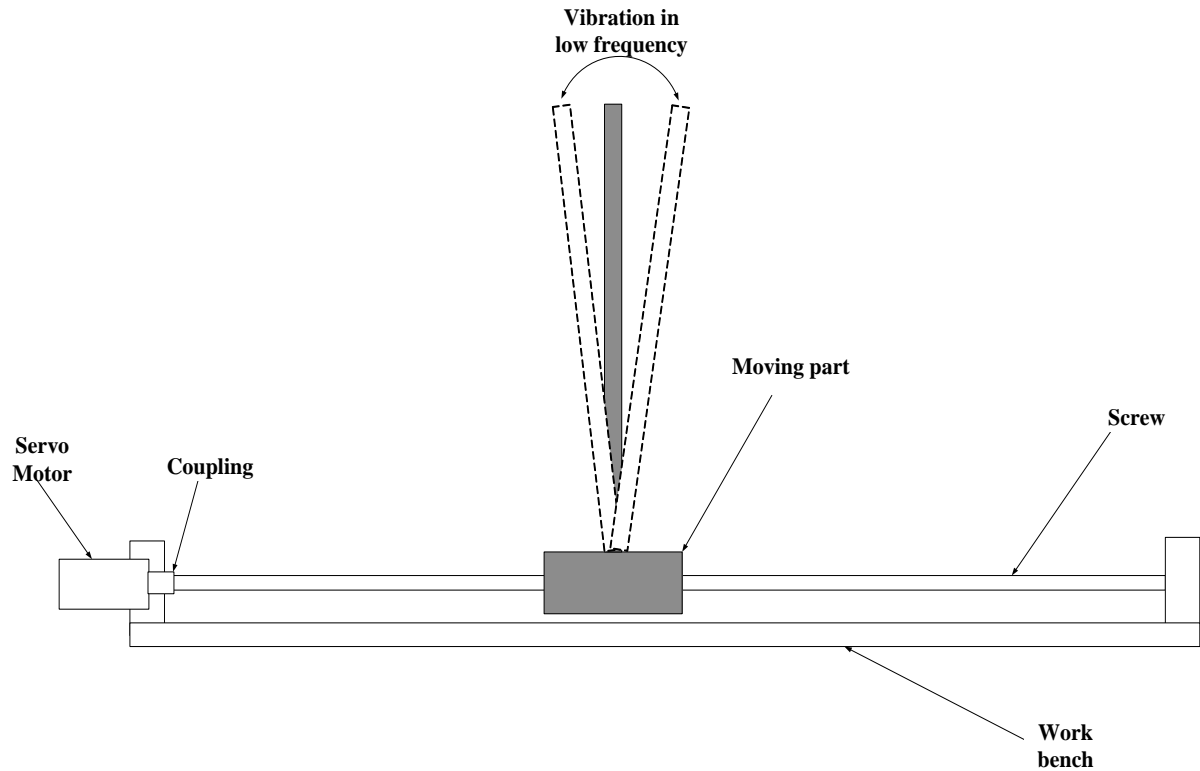


Fig 7.4.2 Low frequency resonance sketch map

(1) User Parameter

| | | | | |
|--------------|---|--------------|-------------|------------------|
| Po240 | Vibration suppression central frequency Position | | | |
| | Setting Range | Setting Unit | Mfr's Value | Effect |
| | 50~2000 | 0.1Hz | 2000 | Immediate effect |
| Po242 | Vibration suppression intensity Position | | | |
| | Setting Range | Setting Unit | Mfr's Value | Effect |
| | 0~100 | N/A | 0 | Immediate effect |

VIII List of parameters

| No. | Group name | Group shorten name | Function code range | Descriptions |
|-----|-------------------------------|--------------------|---------------------|--|
| 1 | Monitor function group | L group | Lo-00~Lo-35 | Monitor servo present status. |
| 2 | Utility function group | S group | So-00~So-62 | Set the utility function. |
| 3 | Main function group | P group | Po000~Po049 | Parameters related to system. |
| | | | Po100~Po149 | Parameters related to speed loop. |
| | | | Po200~Po249 | Parameters related to torque loop. |
| | | | Po300~Po399 | Parameters related to position loop. |
| | | | Po400~Po449 | Parameters related to terminals. |
| | | | Po500~Po549 | Parameters related to communication. |
| 4 | Motor parameter | H group | Ho000~ Ho049 | Parameters related to motor |
| 5 | Alarm record parameters | H group | Ho300~ Ho330 | Parameters related to alarm |
| 6 | High-speed counter parameters | PL group | PL000~PL199 | Parameters related to high-speed counter |

Instruction for parameters list:

(1) Instruction of parameter name

When the parameter is “reserved”, please do not set this kind of parameters.

(2) Instruction of parameter units

The units of function selection parameters are N/A, they are no units.

(3) Instruction of control mode

The scopes of parameters are all servo running modes.

(4) Instruction of Mfr’s value

The Mfr’s value of parameter is “—”, it indicates that this parameter is related to the characteristic of matching servo motor. If servo motors are different, the parameters are different.


The user must enter correct user’s password if you intend to change parameters. Otherwise, parameters can not be modified, and Err will be displayed.

8.1 .1 Monitor function group (Lo-□□)


The monitor mode can be used for monitoring the command value and servodrive internal status.

| Parameter | Display content | Unit | Remark |
|-----------|--|--------------|--------|
| Lo-00 | Servodrive output current | 0.1A | |
| Lo-01 | Servodrive bus voltage | V | |
| Lo-02 | Servo motor rotation speed | 0.1r/min | |
| Lo-03 | Servo motor feedback pulse displays high 5 digits. | 10000 | |
| Lo-04 | Servo motor feedback pulse displays low 5 digits | Command unit | |

| | | | |
|-------|--|--------------------|-------------------------------|
| Lo-05 | Servo motor feedback rotation displays high 5 digits | 10000 | |
| Lo-06 | Servo motor feedback rotation displays low 5 digits | Command unit | |
| Lo-07 | Given command pulse numbers display high 5 digits | Command unit | Valid in position pulse mode. |
| Lo-08 | Given command pulse numbers display low 5 digits | Command unit | Valid in position pulse mode. |
| Lo-09 | Command pulse error numbers | Command unit | Valid in position pulse mode. |
| Lo-10 | Given speed | 0.1r/min | Valid in speed mode. |
| Lo-11 | Given torque | 1% of rated torque | Valid in torque mode. |
| Lo-12 | Analog speed command display | 0.1r/min | Valid in analog speed mode. |
| Lo-13 | Analog torque command display | 1% of rated torque | Valid in analog torque mode. |
| Lo-14 | DI8~DI5 status display | None | |

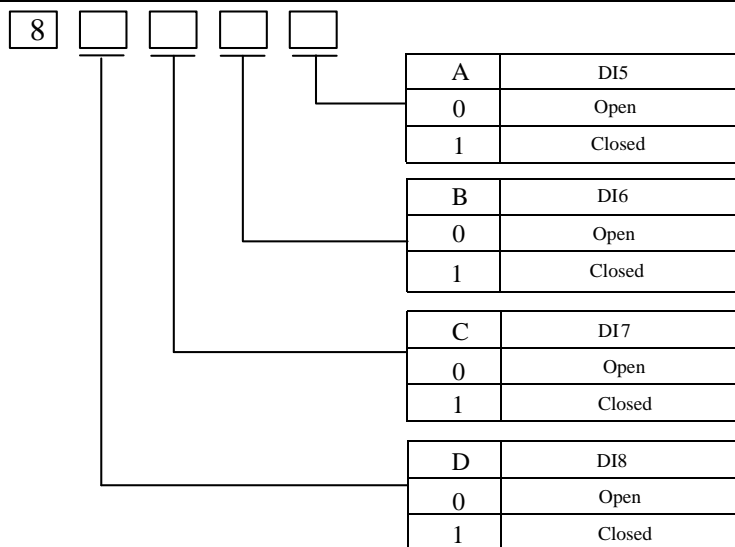

| | | | |
|-------|------------------------|------|--|
| Lo-15 | DI4~DI1 status display | None | |
|-------|------------------------|------|--|

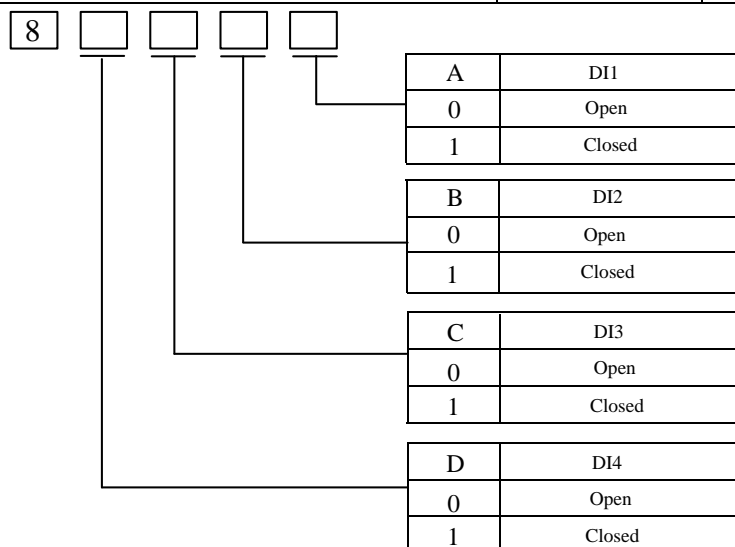

| | | | |
|-------|---|--------------|--|
| Lo-16 | The other output interface status display. | None | |
| | | | |
| Lo-17 | DO4~DO1 status display | None | |
| | | | |
| Lo-18 | Current temperature display of servo drive | ℃ | |
| Lo-19 | Rotation inertia display | 0.01 | |
| Lo-20 | Current output torque display | % | |
| Lo-21 | Current gain group display | N/A | |
| Lo-22 | Braking power display | 10ms | |
| Lo-23 | One-loop pulse high 5 digits of motor absolute position | 100000 | |
| Lo-24 | One-loop pulse low 5 digits of motor absolute position | Command unit | |
| Lo-25 | Multi-loop pulse high 5 digits of motor absolute position | 100000 | |
| Lo-26 | Multi-loop pulse low 5 digits of motor absolute position | Command unit | |

| | | | |
|-------|---|--------------|--|
| Lo-27 | AI1 voltage | 10mv | |
| Lo-28 | AI2 voltage | 10mv | |
| Lo-29 | Mix error | Command unit | |
| Lo-30 | Full closed-loop feedback pulse numbers | | |
| Lo-31 | Gantry sync error pulse numbers | | |
| Lo-32 | Reserved | | |
| Lo-33 | Pulse numbers of high-speed counter 1 | Command unit | |
| Lo-34 | Pulse numbers of high-speed counter 2 | Command unit | |
| Lo-36 | Temperature of motor | °C | |

Note: This group of parameters can only be checked, not be set.

8.1.2 Utility function group (So-□□)

| | | | | |
|---|--|--------------|-------------|------------------|
| So-00 | Software version Speed Position Torque | | | |
| | Setting range | Setting unit | Mfr's value | Effect |
| | N/A | N/A | — | — |
| So-00 is software version of FL20 series servo drive. For example, if 100 is displayed, software version is 1.00. | | | | |
| So-01 | User's password (Avoid modifying parameters by mistake) Speed Position Torque | | | |
| | Setting range | Setting unit | Mfr's value | Effect |
| | 0 ~ 9999 | N/A | 0 | Re-power on |
| Setting password is used to avoid modifying parameters by mistake. The Mfr's value is 0, which means password is invalid and users can modify parameters anytime. If users want to use this function, please set a password for this parameter and restart servo, then this function is valid. Most auxiliary function and main function parameters except monitor function parameters can be modified when the password is input into this parameter. Or else Err will display. | | | | |
| So-02 | Delay time for servo OFF Speed Position Torque | | | |
| | Setting range | Setting unit | Mfr's value | Effect |
| | 0 ~ 500 | 10ms | 0 | Immediate effect |
| When braking motor is used, So-02 is delay time before servo drive is enabled. Please refer to 6.1.3 for details | | | | |
| So-03 | Delay time for electro-magnetic braking OFF Speed Position Torque | | | |
| | Setting range | Setting unit | Mfr's value | Effect |
| | 10 ~ 100 | 10ms | 50 | Immediate effect |
| When braking motor is used, So-03 is delay time for electro- magnetic braking OFF. Please refer to 6.1.3 for details. | | | | |

| | | | | |
|--|--|--------------|-------------|------------------|
| So-04 | Braking resistor value Speed Position Torque | | | |
| | Setting range | Setting unit | Mfr's value | Effect |
| | 8 ~ 1000 | Ω | — | Immediate effect |
| So-04 is used to set external braking resistor value. External braking resistor can not be used with internal braking resistor at the same time. Before connecting to external resistor, please remove jumper between B2 and B3, then connect resistor to B1 and B2 terminal. Please refer to 6.1.7 for details. | | | | |
| So-05 | Discharge duty ratio Speed Position Torque | | | |
| | Setting range | Setting unit | Mfr's value | Effect |
| | 0 ~ 100 | % | 50 | Immediate effect |
| So-05 is used to set discharge duty ratio. The higher the duty ratio, the faster discharge speed. | | | | |
| So-06 | Input power phase-loss protection Speed Position Torque | | | |
| | Setting range | Setting unit | Mfr's value | Effect |
| | 0 ~ 1 | N/A | — | Immediate effect |
| 0: phase-loss protection is invalid; 1: phase-loss protection is valid | | | | |
| So-07 | Servo OFF stop mode Speed Position Torque | | | |
| | Setting range | Setting unit | Mfr's value | Effect |
| | 0 ~ 2 | N/A | 0 | Immediate effect |
| 0: Free stop 1 : Dynamic brake. This function is valid only when servo drive has dynamic brake. 2: Fast enabled. For fast enable requirement, after power on servo drive 10 ms, servo drive is enabled. | | | | |
| So-08 | Delay time of dynamic braking Speed Position Torque | | | |
| | Setting range | Setting unit | Mfr's value | Effect |
| | 100 ~ 30000 | 0.1ms | 5000 | Immediate effect |
| So-09 | Servo drive display items Speed Position Torque | | | |
| | Setting range | Setting unit | Mfr's value | Effect |
| | 0 ~ 37 | N/A | 2 | Immediate effect |

| Setting value | Definition | Setting value | Definition |
|---|--|---------------|---|
| 0 | Servo drive output current | 19 | Rotating inertia display |
| 1 | Servo drive bus voltage | 20 | Output torque display |
| 2 | Servo motor rotating speed | 21 | Current gain group |
| 3 | Servo motor feedback pulse displays high 5 digits. | 22 | Discharge time |
| 4 | Servo motor feedback pulse displays low 5 digits. | 23 | Encoder absolute position high digit pulse |
| 5 | Servo motor feedback rotation displays high 5 digits. | 24 | Encoder absolute position low digit pulse |
| 6 | Servo motor feedback rotation displays low 5 digits. | 25 | High 5 digits of number of turns of encoder absolute position |
| 7 | Given command pulse numbers display high 5 digits. | 26 | Low 5 digits of number of turns of encoder absolute position |
| 8 | Given command pulse numbers display low 5 digits. | 27 | AI1 voltage |
| 9 | Given command pulse error numbers | 28 | AI2 voltage |
| 10 | Given speed | 29 | Combined deviation |
| 11 | Given torque | 30 | Close-loop feedback |
| 12 | Analog speed command display | 31 | Gantry synchronous deviation |
| 13 | Analog torque command display | 32 | Reserved |
| 14 | D18~D15 status display | 33 | High- speed counter 1 |
| 15 | D14~D11 status display | 34 | High- speed counter 2 |
| 16 | Other output interface status display | 35 | PLC monitor |
| 17 | D4~D1 status display | 36 | Motor temperature |
| 18 | Drive current temperature display | 37 | Motor shaft position |
| So-10 | Record of the latest malfunction typ Speed Position Torque | | |
| | Setting range | Setting unit | Mfr's value |
| | N/A | N/A | — |
| So-10 can only be checked, not be modified. | | | |
| So-11 | Record of malfunction type for last but one Speed Position Torque | | |
| | Setting range | Setting unit | Mfr's value |
| | N/A | N/A | — |

| | | | | |
|--|---|--------------|-------------|------------------|
| So-12 | Record of malfunction type for two but one Speed Position Torque | | | |
| | Setting range | Setting unit | Mfr's value | Effect |
| | N/A | N/A | — | — |
| So-13 | JOG speed Speed Position Torque | | | |
| | Setting range | Setting unit | Mfr's value | Effect |
| | 0 ~ 30000 | 0.1r/min | 1000 | Immediate effect |
| So-14 | JOG run Speed Position Torque | | | |
| | Setting range | Setting unit | Mfr's value | Effect |
| | — | — | — | Immediate effect |
| So-15 | Encoder disconnection protection Speed Position Torque | | | |
| | Setting range | Setting unit | Mfr's value | Effect |
| | 0 ~ 1 | N/A | 1 | Immediate effect |
| 0: close protection; 1:open protection | | | | |
| So-16 | Speed threshold of electromagnetic brake Speed Position Torque | | | |
| | Setting range | Setting unit | Mfr's value | Effect |
| | 0 ~ 30000 | 0.1r/min | 1000 | Immediate effect |
| When brake motor is used, So-16 is used to set speed threshold of electromagnetic brake. Refer to 6.1.3 for details. | | | | |
| So-17 | Forward run prohibited Speed Position Torque | | | |
| | Setting range | Setting unit | Mfr's value | Effect |
| | 0 ~ 1 | N/A | 1 | Immediate effect |
| 0: Invalid; 1:Valid When So-17=1, So-18=1 and external control terminals with the function of F-INH and R-INH are allocated, the overtravel function is enabled. For security, the default setting of So-17 and So-18 are prohibited valid and the signal input type is common-close contact. So even malfunction occurs, the overtravel protection is still valid. | | | | |
| So-18 | Reverse run prohibited Speed Position Torque | | | |
| | Setting range | Setting unit | Mfr's value | Effect |
| | 0 ~ 1 | N/A | 1 | Immediate effect |
| 0: Invalid; 1:Valid Refer to So-17. | | | | |
| So-19 | Analog monitor channel 1 Speed Position Torque | | | |
| | Setting range | Setting unit | Mfr's value | Effect |
| | 0 ~ 3 | N/A | 0 | Immediate effect |

Please refer to 6.2.5 for details.

| Parameter setting | Output analog contents | Remarks |
|-------------------|----------------------------|--|
| So-19=0 | Servo drive output current | Servodrive output current corresponding to 10V is controlled by So-20. |
| So-19=1 | Servo drive bus voltage | Servodrive max bus line voltage corresponding to 10V is controlled by So-21. |
| So-19=2 | Servo motor rotation speed | Servo motor rotation speed corresponding to 10V is controlled by So-22. |
| So-19=3 | Output voltage 0V + offset | |

| | | | | | | |
|-------|--|--------------|-------------|---------------------|----------|--------|
| So-20 | Servodrive output current corresponding to 10V | | | Speed | Position | Torque |
| | Setting range | Setting unit | Mfr's value | Effect | | |
| | 1~1000 | 0.1A | 200 | Effective Immediate | | |
| So-21 | Servodrive max bus line voltage corresponding to 10V | | | Speed | Position | Torque |
| | Setting range | Setting unit | Mfr's value | Effect | | |
| | 1~500 | 1V | 500 | Effective Immediate | | |
| So-22 | Max rotation speed corresponding to 10V | | | Speed | Position | Torque |
| | Setting range | Setting unit | Mfr's value | Effect | | |
| | 1~32000 | 0.1r/min | 30000 | Effective Immediate | | |
| So-24 | Analog monitor voltage compensation 1 | | | Speed | Position | Torque |
| | Setting range | Setting unit | Mfr's value | Effect | | |
| | -10000~+1000 | mv | 0 | Effective Immediate | | |
| So-25 | Electric angle identification | | | Speed | Position | Torque |
| | Setting range | Setting unit | Mfr's value | Effect | | |
| | 0~4 | N/A | 0 | Effective Immediate | | |

Please refer to the chapter 6.

| | | | | | | |
|-------|---------------------|--------------|-------------|---------------------|----------|--------|
| So-26 | Control mode of fan | | | Speed | Position | Torque |
| | Setting range | Setting unit | Mfr's value | Effect | | |
| | 0 ~ 2 | N/A | 2 | Effective Immediate | | |

So-26 is available for 15kw and above 15kw servo drive.

0: Fan is controlled by temperature.

L: As long as power on, fan starts to run.

2: As long as servo drive runs, fan starts to run..

| | | | | | | |
|-----------------------|--|-------------------|--|---------------------|---------------------|-------------------|
| So-27 | Fan temperature setting | | | <div>Speed</div> | <div>Position</div> | <div>Torque</div> |
| | Setting range | Setting unit | Mfr's value | Effect | | |
| | 10~100 | °C | 45 | Effective Immediate | | |
| So-28 | Power-off brake | | | <div>Speed</div> | <div>Position</div> | <div>Torque</div> |
| | Setting range | Setting unit | Mfr's value | Effect | | |
| | 0 ~ 1 | N/A | 1 | Effective Immediate | | |
| 0:invalid 1:valid | | | | | | |
| So-29 | Power-off brake time | | | <div>Speed</div> | <div>Position</div> | <div>Torque</div> |
| | Setting range | Setting unit | Mfr's value | Effect | | |
| | 500 ~ 30000 | 0.1ms | 1000 | Effective Immediate | | |
| So-30 | Setting of absolute position and relative position | | | <div>Speed</div> | <div>Position</div> | <div>Torque</div> |
| | Setting range | Setting unit | Mfr's value | Effect | | |
| | 0 ~ 1 | N/A | 1 | Effective Immediate | | |
| | Setting value | Definition | Remarks | | | |
| | 0 | Absolute position | In internal position absolute mode, encoder feedback absolute position is adopted. | | | |
| | 1 | Relative position | Battery protection is shielded, in internal position absolute mode, encoder feedback absolute position isn't adopted.. | | | |
| So-32 | Grounding protection | | | <div>Speed</div> | <div>Position</div> | <div>Torque</div> |
| | Setting range | Setting unit | Mfr's value | Effect | | |
| | 0 ~ 1 | N/A | 0 | Effective Immediate | | |
| 0: invalid 1:valid | | | | | | |
| So-34 | Motor lock-rotor protection | | | <div>Speed</div> | <div>Position</div> | <div>Torque</div> |
| | Setting range | Setting unit | Mfr's value | Effect | | |
| | 0 ~ 1 | N/A | 1 | Effective Immediate | | |
| 0: invalid 1:valid | | | | | | |
| So-35 | Overload pre-alarm current | | | <div>Speed</div> | <div>Position</div> | <div>Torque</div> |
| | Setting range | Setting unit | Mfr's value | Effect | | |
| | 0 ~ 800 | % | 120 | Effective Immediate | | |
| So-36 | Overload pre-alarm filter time | | | <div>Speed</div> | <div>Position</div> | <div>Torque</div> |
| | Setting range | Setting unit | Mfr's value | Effect | | |
| | 0 ~ 1000 | 10ms | 10 | Effective Immediate | | |

| | | | | |
|--|--|--------------|-------------|-----------------------|
| | | | | |
| So-37 | Motor overload coefficient setting | | | Speed Position Torque |
| | Setting range | Setting unit | Mfr's value | Effect |
| | 1 ~ 500 | % | 100 | Effective Immediate |
| Please refer to 6.6.2 for details. | | | | |
| So-38 | Under voltage protection of LI battery | | | Speed Position Torque |
| | Setting range | Setting unit | Mfr's value | Effect |
| | 0 ~ 1 | N/A | 1 | Effective Immediate |
| 0: invalid 1:valid | | | | |
| So-39 | Overtravel limit function | | | Speed Position Torque |
| | Setting range | Setting unit | Mfr's value | Effect |
| | 0 ~ 2 | N/A | 1 | Effective Immediate |
| 0: invalid 1:valid | | | | |
| So-40 | Delay time of lock-rotor protection | | | Speed Position Torque |
| | Setting range | Setting unit | Mfr's value | Effect |
| | 10 ~ 1000 | 10ms | 100 | Effective Immediate |
| So-41 | Setting mechanical origin | | | Speed Position Torque |
| | Setting range | Setting unit | Mfr's value | Effect |
| | 0 ~ 1 | N/A | 0 | Effective Immediate |
| 0: invalid 1:valid | | | | |
| So-42 | Alarm output duty ratio | | | Speed Position Torque |
| | Setting range | Setting unit | Mfr's value | Effect |
| | 1 ~ 100 | % | 100 | Effective Immediate |
| So-43 | Encoder reset | | | Speed Position Torque |
| | Setting range | Setting unit | Mfr's value | Effect |
| | 0 ~ 1 | N/A | 0 | Effective Immediate |
| 0: invalid 1:valid | | | | |
| So-43 is used to reset motor encoder when encoder alarm occurs. User must hold down SET key to reset keypad panel. | | | | |
| So-44 | Paramter copy | | | Speed Position Torque |
| | Setting range | Setting unit | Mfr's value | Effect |
| | Four- parameter | N/A | 0000 | Effective Immediate |

| | | | | |
|---|--|----------------------------|--|-----------------------|
| 0: invalid 1: valid | | | | |
| So-52 | Encoder pulse filtering coefficient speed position torque | | | |
| | Setting range | Setting unit | Mfr's value | Effect |
| | 0~1000 | N/A | 0 | Effective Immediate |
| When So-52≠0, the signal level which duration time is lower than (So-52/30MHz)s will be filtered. | | | | |
| So-54 | Torque unreached protection setting speed position torque | | | |
| | Setting range | Setting unit | Mfr's value | When enabled |
| | 0~1 | N/A | 1 | Effective Immediately |
| So-55 | Torque unreached time speed position torque | | | |
| | Setting range | Setting unit | Mfr's value | When enabled |
| | 1 ~ 100 | 10ms | 10 | Effective Immediately |
| So-61 | Analog monitor channel 2 Speed Position Torque | | | |
| | Setting range | Setting unit | Mfr's value | Effect |
| | 0 ~ 3 | N/A | 0 | Effective Immediate |
| | Setting value | Definition | Remarks | |
| | 0 | Servo drive output current | Determined by So-20 | |
| | 1 | Servo drive output voltage | Determined by So-21 | |
| | 2 | Servo motor speed | Determined by So-22 | |
| | 3 | Output voltage 0V + offset | Offset voltage is determined by So-62. | |
| So-62 | Voltage compensation for Analog monitor channel 2 Speed Position Torque | | | |
| | Setting range | Setting unit | Mfr's value | Effect |
| | -10000 ~ 10000 | mv | 0 | Effective Immediate |

8.1.3 Main function group (Po-□□□)

| | | | | |
|---|---|--------------|-------------|--------|
| Po000 | Motor code Speed Position Torque | | | |
| | Setting range | Setting unit | Mfr's value | Effect |
| | — | N/A | — | — |
| Po000 is motor code, user can check motor parameter by Po000. | | | | |

| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
|--|--|--------------|-------------|---------------------|-------|----------|--------|---|----------------------|---|------------------------------|---|---------------------|---|-------------------------------|---|-------------------|---|--------------------|---|---------------------------------|---|--|---|--|---|--|---|---|----|--|----|---|----|---|----|--|----|---|----|---|----|--|----|--|----|--|----|---|----|--|----|------------------|----|---------------------------|---|-------------------------|---|--|---|---|
| Po001 | Setting of Control mode and rotary direction | | | | Speed | Position | Torque | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | Setting range | Setting unit | Mfr's value | Effect | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | Two-parameter | N/A | 11 | Repower on | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| <div><div><div>d</div><div></div><div></div><div></div><div></div></div><div><table><tr><td>X</td><td>Control mode setting</td></tr><tr><td>0</td><td>Internal register speed mode</td></tr><tr><td>1</td><td>Position pulse mode</td></tr><tr><td>2</td><td>Internal register torque mode</td></tr><tr><td>3</td><td>Analog speed mode</td></tr><tr><td>4</td><td>Analog torque mode</td></tr><tr><td>5</td><td>Internal register position mode</td></tr><tr><td>6</td><td>Mix mode of internal register speed and position pulse</td></tr><tr><td>7</td><td>Mix mode of internal register speed and internal register torque</td></tr><tr><td>8</td><td>Mix mode of internal register speed and analog speed</td></tr><tr><td>9</td><td>Mix mode of internal register speed and analog torque</td></tr><tr><td>10</td><td>Mix mode of internal register speed and internal register position</td></tr><tr><td>11</td><td>Mix mode of internal register torque and position pulse</td></tr><tr><td>12</td><td>Mix mode of analog speed and position pulse</td></tr><tr><td>13</td><td>Mix mode of analog torque and position pulse</td></tr><tr><td>14</td><td>Mix mode of position pulse and internal register position</td></tr><tr><td>15</td><td>Mix mode of analog speed and internal register torque</td></tr><tr><td>16</td><td>Mix mode of analog torque and internal register torque</td></tr><tr><td>17</td><td>Mix mode of register torque and internal register position</td></tr><tr><td>18</td><td>Mix mode of analog speed and analog torque</td></tr><tr><td>19</td><td>Mix mode of analog speed and internal register position</td></tr><tr><td>20</td><td>Mix mode of analog torque and internal register position</td></tr><tr><td>21</td><td>Bus control mode</td></tr><tr><td>22</td><td>Built-in PLC control mode</td></tr><tr><td>Y</td><td>Motor forward direction</td></tr><tr><td>0</td><td>Clockwise as viewed from the servo motor shaft</td></tr><tr><td>1</td><td>Counterclockwise as viewed from the servo motor shaft</td></tr></table></div></div> | | | | | | | | X | Control mode setting | 0 | Internal register speed mode | 1 | Position pulse mode | 2 | Internal register torque mode | 3 | Analog speed mode | 4 | Analog torque mode | 5 | Internal register position mode | 6 | Mix mode of internal register speed and position pulse | 7 | Mix mode of internal register speed and internal register torque | 8 | Mix mode of internal register speed and analog speed | 9 | Mix mode of internal register speed and analog torque | 10 | Mix mode of internal register speed and internal register position | 11 | Mix mode of internal register torque and position pulse | 12 | Mix mode of analog speed and position pulse | 13 | Mix mode of analog torque and position pulse | 14 | Mix mode of position pulse and internal register position | 15 | Mix mode of analog speed and internal register torque | 16 | Mix mode of analog torque and internal register torque | 17 | Mix mode of register torque and internal register position | 18 | Mix mode of analog speed and analog torque | 19 | Mix mode of analog speed and internal register position | 20 | Mix mode of analog torque and internal register position | 21 | Bus control mode | 22 | Built-in PLC control mode | Y | Motor forward direction | 0 | Clockwise as viewed from the servo motor shaft | 1 | Counterclockwise as viewed from the servo motor shaft |
| X | Control mode setting | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 0 | Internal register speed mode | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 1 | Position pulse mode | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 2 | Internal register torque mode | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 3 | Analog speed mode | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 4 | Analog torque mode | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 5 | Internal register position mode | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 6 | Mix mode of internal register speed and position pulse | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 7 | Mix mode of internal register speed and internal register torque | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 8 | Mix mode of internal register speed and analog speed | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 9 | Mix mode of internal register speed and analog torque | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 10 | Mix mode of internal register speed and internal register position | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 11 | Mix mode of internal register torque and position pulse | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 12 | Mix mode of analog speed and position pulse | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 13 | Mix mode of analog torque and position pulse | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 14 | Mix mode of position pulse and internal register position | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 15 | Mix mode of analog speed and internal register torque | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 16 | Mix mode of analog torque and internal register torque | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 17 | Mix mode of register torque and internal register position | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 18 | Mix mode of analog speed and analog torque | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 19 | Mix mode of analog speed and internal register position | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 20 | Mix mode of analog torque and internal register position | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 21 | Bus control mode | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 22 | Built-in PLC control mode | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Y | Motor forward direction | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 0 | Clockwise as viewed from the servo motor shaft | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 1 | Counterclockwise as viewed from the servo motor shaft | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Po002 | Max speed (Absolute value) | | | | Speed | Position | Torque | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | Setting range | Setting unit | Mfr's value | Effect | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | 0 ~ 10000 | r/min | — | Effective Immediate | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Po002 is motor max speed limit, which is valid for forward and reverse running. | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Po003 | Numerator of frequency-division number of Encoder pulse | | | | Speed | Position | Torque | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |

| | | | | |
|--|---|--------------|-------------|--|
| | Setting range | Setting unit | Mfr's value | Effect |
| | 1 ~ 65535 | N/A | — | Effective Immediate |
| Encoder frequency-division number for each phase is set by Po003. | | | | |
| Po004 | Servo-on mode | | | <input type="checkbox"/> Speed <input type="checkbox"/> Position <input type="checkbox"/> Torque |
| | Setting range | Setting unit | Mfr's value | Effect |
| | 0~1 | N/A | 0 | Repower on |
| 0: External terminal enabled, there must be input terminal, which is set SON-I function. | | | | |
| 1: Internal parameter enabled, which is determined by Po100. | | | | |
| Po005 | Denominator of frequency-division number of Encoder pulse | | | <input type="checkbox"/> Speed <input type="checkbox"/> Position <input type="checkbox"/> Torque |
| | Setting range | Setting unit | Mfr's value | Effect |
| | 1~2147483647 | N/A | — | Effective Immediate |
| | | | | |
| Po007 | Change rate of load inertia | | | <input type="checkbox"/> Speed <input type="checkbox"/> Position <input type="checkbox"/> Torque |
| | Setting range | Setting unit | Mfr's value | Effect |
| | 1~100 | N/A | 10 | Effective Immediate |
| Po008 | Rotary inertia mode | | | <input type="checkbox"/> Speed <input type="checkbox"/> Position <input type="checkbox"/> Torque |
| | Setting range | Setting unit | Mfr's value | Effect |
| | 0~3 | N/A | 0 | Effective Immediate |
| 0: Rotary inertia identification is invalid | | | | |
| 1: Off-line forward/reverse identification | | | | |
| 2: Off-line single-direction identification | | | | |
| 3: On-line inertia auto-identification. Inverter keeps in on-line auto-identification, if inverter is jog running, keypad will display rotary inertia, not 'JOG'. | | | | |
| Po009 | Interval time of off-line rotary inertia identification | | | <input type="checkbox"/> Speed <input type="checkbox"/> Position <input type="checkbox"/> Torque |
| | Setting range | Setting unit | Mfr's value | Effect |
| | 10~2000 | ms | 100 | Effective Immediate |
| Po010 | Rigidity selection | | | <input type="checkbox"/> Speed <input type="checkbox"/> Position <input type="checkbox"/> Torque |
| | Setting range | Setting unit | Mfr's value | Effect |
| | 1~30 | N/A | 6 | Effective Immediate |

| Rigidity rank Po010 | 1 st position loop gain Po301 | speed loop proportional gain 1 Po101 | speed loop integral time1 Po102 | 1 st speed loop filter time constant Po105 | 1 st current loop bandwidth Po200 | 1 st torque filter time constant Po214 | Corresponding servo response speed | corresponding mechanical connection |
|------------------------|---|--|--|---|--|--|---|--|
| 1 | 384 | 100 | 5000 | 3200 | 1000 | 0 | <div>slow ↓ medium ↓ fast</div> | <p>Synchronous belt drive, chain drive, wave gear reducer etc ↓ Ball screw controlled by reducer or big size machinery connected to ball (for example: normal working machine, moving machine) ↓ Ball screw directly connected machinery (High-precision processing machinery such as machine tools, etc.)</p> |
| 2 | 769 | 200 | 2500 | 1668 | 1000 | 0 | | |
| 3 | 1154 | 300 | 1666 | 1100 | 1000 | 0 | | |
| 4 | 1538 | 400 | 1250 | 830 | 1000 | 0 | | |
| 5 | 1923 | 500 | 1000 | 650 | 1000 | 0 | | |
| 6 | 2423 | 630 | 793 | 529 | 1000 | 0 | | |
| 7 | 2885 | 750 | 666 | 440 | 1000 | 0 | | |
| 8 | 3346 | 870 | 574 | 383 | 1000 | 0 | | |
| 9 | 3846 | 1000 | 500 | 330 | 1000 | 0 | | |
| 10 | 4308 | 1120 | 446 | 297 | 1000 | 0 | | |
| 11 | 4808 | 1250 | 400 | 260 | 1000 | 0 | | |
| 12 | 5270 | 1370 | 364 | 243 | 1000 | 0 | | |
| 13 | 5770 | 1500 | 333 | 220 | 1000 | 0 | | |
| 14 | 6231 | 1620 | 308 | 205 | 1000 | 0 | | |
| 15 | 6731 | 1750 | 285 | 190 | 1000 | 0 | | |
| 16 | 7193 | 1870 | 267 | 178 | 1000 | 0 | | |
| 17 | 7693 | 2000 | 250 | 160 | 1000 | 0 | | |
| 18 | 8193 | 2130 | 234 | 156 | 1000 | 0 | | |
| 19 | 8655 | 2250 | 222 | 148 | 1000 | 0 | | |
| 20 | 9617 | 2500 | 200 | 130 | 1000 | 0 | | |
| 21 | 10578 | 2750 | 181 | 121 | 1000 | 0 | | |
| 22 | 11540 | 3000 | 166 | 110 | 1000 | 0 | | |
| 23 | 12502 | 3250 | 153 | 102 | 1000 | 0 | | |
| 24 | 13463 | 3500 | 142 | 95 | 1000 | 0 | | |
| 25 | 14425 | 3750 | 133 | 88 | 1000 | 0 | | |
| 26 | 15387 | 4000 | 125 | 83 | 1000 | 0 | | |
| 27 | 16349 | 4250 | 117 | 78 | 1000 | 0 | | |
| 28 | 17310 | 4500 | 111 | 74 | 1000 | 0 | | |
| 29 | 18272 | 4750 | 105 | 70 | 1000 | 0 | | |
| 30 | 19234 | 5000 | 100 | 66 | 1000 | 0 | | |

| | | | | |
|--|--|--------------|-------------|---------------------|
| Po013 | Rotary inertia ratio Speed Position Torque | | | |
| | Setting range | Setting unit | Mfr's value | Effect |
| | 1~30000 | 0.01 | 200 | Effective Immediate |
| Please refer to 7.3 | | | | |
| Po014 | Motion trail accel/decel time Speed Position Torque | | | |
| | Setting range | Setting unit | Mfr's value | Effect |
| | 200~5000 | ms | 1000 | Effective Immediate |
| Please refer to 7.3 | | | | |
| Po015 | Motion range of off-line rotary inertia indentification Speed Position Torque | | | |
| | Setting range | Setting unit | Mfr's value | Effect |
| | 200~2147483647 | N/A | — | Effective Immediate |
| Please refer to 7.3 | | | | |
| Po017 | Z pulse frequency-division output width Speed Position Torque | | | |
| | Setting range | Setting unit | Mfr's value | Effect |
| | 50~30000 | N/A | — | Effective Immediate |
| Please refer to 6.4.7 for details | | | | |
| Po018 | Pluse output setting Speed Position Torque | | | |
| | Setting range | Setting unit | Mfr's value | Effect |
| | Four-parameter | N/A | 0001 | Effective Immediate |
| <div> <div> <div>b</div> <div></div> <div></div> <div></div> <div></div> </div> <div> <div>A</div> <div>Z pulse output polarity</div> <div>0</div> <div>Negative</div> <div>1</div> <div>Positive</div> </div> <div> <div>B</div> <div>Z pulse command source</div> <div>0</div> <div>Motor shaft</div> <div>1</div> <div>Virtual shaft</div> </div> <div> <div>C</div> <div>Command source of pulse frequency-division</div> <div>0</div> <div>Motor shaft</div> <div>1</div> <div>Internal position given</div> <div>2</div> <div>Collector pulse input</div> <div>3</div> <div>High-speed counter 1</div> <div>4</div> <div>High-speed counter 2</div> <div>5</div> <div>Position command</div> </div> </div> | | | | |

| | | | | |
|---|--|--------------|-------------|---------------------|
| Po019 | Virtual Z output period Speed Position Torque | | | |
| | Setting range | Setting unit | Mfr's value | Effect |
| | 1~2147483647 | N/A | 10000 | Effective Immediate |
| One Z pulse is output per number of Po019 pulses, frequency-division source is determined by Po018. | | | | |
| Po100 | Internal enabled Speed Position Torque | | | |
| | Setting range | Setting unit | Mfr's value | Effect |
| | 0~1 | N/A | 0 | Effective Immediate |
| 0: External terminal enabled. There must be terminal being set SON-I. | | | | |
| 1: Internal enabled, which is determined by Internal Po100. | | | | |
| Po101 | First speed loop proportional gain Speed Position Torque | | | |
| | Setting range | Setting unit | Mfr's value | Effect |
| | 0~30000 | 0.1Hz | 600 | Effective Immediate |
| Please refer to 7.3.3 | | | | |
| Po102 | First speed loop integral gain Speed Position Torque | | | |
| | Setting range | Setting unit | Mfr's value | Effect |
| | 0~10000 | 0.1ms | 500 | Effective Immediate |
| Please refer to 7.3.3 | | | | |
| Po103 | Second speed loop proportional gain Speed Position Torque | | | |
| | Setting range | Setting unit | Mfr's value | Effect |
| | 0~30000 | 0.1Hz | 240 | Effective Immediate |
| Please refer to 7.3.3 | | | | |
| Po104 | Second speed loop integral gain Speed Position Torque | | | |
| | Setting range | Setting unit | Mfr's value | Effect |
| | 0~30000 | 0.1ms | 1250 | Effective Immediate |
| Po105 | First speed loop filter time constant Speed Position | | | |
| | Setting range | Setting unit | Mfr's value | Effect |
| | 1~20000 | 0.01ms | — | Effective Immediate |
| Po106 | Second speed loop filter time constant Speed Position | | | |
| | Setting range | Setting unit | Mfr's value | Effect |
| | 1~20000 | 0.01ms | — | Effective Immediate |

| | | | | |
|---|---|--------------|-------------|---------------------|
| Po107 | Torque feedforward gain Speed Position | | | |
| | Setting range | Setting unit | Mfr's value | Effect |
| | 0~1000 | N/A | 0 | Effective Immediate |
| In speed and position mode, torque feedforward signal multiplied by Po107 equals torque feedback gain. Increasing Po107 can improve response of dynamic speed command and response of position command and reduce position error at constant speed. | | | | |
| Po108 | Torque feedforward gain filter Speed Position | | | |
| | Setting range | Setting unit | Mfr's value | Effect |
| | 1~30000 | 0.01ms | 100 | Effective Immediate |
| Please refer to 7.3.3 | | | | |
| Po109 | Acceleration time (only valid in speed mode) Speed | | | |
| | Setting range | Setting unit | Mfr's value | Effect |
| | 1~30000 | 1ms | 200 | Effective Immediate |
| Po110 | Deceleration time (only valid in speed mode) Speed | | | |
| | Setting range | Setting unit | Mfr's value | Effect |
| | 1~30000 | 1ms | 200 | Effective Immediate |
| Po111 | S curve accele/decel time Speed | | | |
| | Setting range | Setting unit | Mfr's value | Effect |
| | 1~15000 | 1ms | 100 | Effective Immediate |
| Po112 | S curve start Speed | | | |
| | Setting range | Setting unit | Mfr's value | Effect |
| | 0~1 | N/A | 0 | Effective Immediate |
| 0: S curve is not valid 1: S curve is valid | | | | |
| Po113 | Internal speed given 1 Internal register speed | | | |
| | Setting range | Setting unit | Mfr's value | Effect |
| | 0~±32000 | 0.1r/min | 1000 | Effective Immediate |
| Po114 | Internal speed given 2 Internal register speed | | | |
| | Setting range | Setting unit | Mfr's value | Effect |
| | 0~±32000 | 0.1r/min | 2000 | Effective Immediate |

| | | | | |
|---|---|--------------|-------------|---------------------------|
| Po115 | Internal speed given 3 | | | Internal register speed |
| | Setting range | Setting unit | Mfr's value | Effect |
| | 0~±32000 | 0.1r/min | 3000 | Effective Immediate |
| Po117 | Range of target speed | | | Speed |
| | Setting range | Setting unit | Mfr's value | Effect |
| | 0~30000 | 0.1r/min | 300 | Effective Immediate |
| Po118 | Rotation detection value | | | Speed |
| | Setting range | Setting unit | Mfr's value | Effect |
| | 0~30000 | 0.1r/min | 300 | Effective Immediate |
| Po119 | Home searching | | | Speed Position Torque |
| | Setting range | Setting unit | Mfr's value | Effect |
| | Four-parameter | N/A | 0000 | Effective Immediate |
| <div><div><div>b</div><div></div><div></div><div></div><div></div></div><div><div>A</div><div>Home searching mode</div><div>0</div><div>Reversal home searching</div><div>1</div><div>Forward home searching</div><div>B</div><div>Home searching mode</div><div>0</div><div>Left-right position limitation as home reference</div><div>1</div><div>Input terminal ORGP as home reference</div><div>2</div><div>Nearest Z-phase pulse as home reference</div><div>3</div><div>Searching mechanical origin</div><div>C</div><div>Home searching mode</div><div>0</div><div>Deceleration to stop after arriving at home reference</div><div>1</div><div>Searching Z signal at second speed with opposite direction after arriving at home reference</div><div>2</div><div>Searching Z signal at second speed with same direction after arriving at home reference</div><div>3</div><div>Searching the rising edge of input terminal ORGP as the Mechanical origin at the second speed with opposite direction after arriving at the input terminal ORGP.</div><div>D</div><div>Home searching mode</div><div>0</div><div>Deceleration to stop after searching Z signal</div><div>1</div><div>Turn back to Z signal after searching Z signal</div></div></div> | | | | |
| Po120 | Home/Mechanical origin searching at first speed | | | Speed Position Torque |
| | Setting range | Setting unit | Mfr's value | Effect |
| | 0~20000 | 0.1r/min | 500 | Effective Immediate |

| | | | | |
|---|--|--------------|-------------|---------------------|
| Po121 | Home/Mechanical origin searching at second speed Speed Position Torque | | | |
| | Setting range | Setting unit | Mfr's value | Effect |
| | 0~10000 | 0.1r/min | 200 | Effective Immediate |
| Po122 | Home/Mechanical origin searching acceleration/deceleration time Speed Position Torque | | | |
| | Setting range | Setting unit | Mfr's value | Effect |
| | 0~1000 | ms | 0 | Effective Immediate |
| Po123 | Home searching offset pulse Speed Position Torque | | | |
| | Setting range | Setting unit | Mfr's value | Effect |
| | -2147483647~+2147483647 | N/A | 0 | Effective Immediate |
| Po125 | Selection of home search function Speed Position Torque | | | |
| | Setting range | Setting unit | Mfr's value | Effect |
| | 0~3 | N/A | 0 | Effective Immediate |
| 0: No home searching 1:Auto-searching when power-on 2:I/O port trigger 3:Start Immediate | | | | |
| Po126 | Speed value in the zero clamp Speed | | | |
| | Setting range | Setting unit | Mfr's value | Effect |
| | 0 ~30000 | 0.1r/min | 50 | Effective Immediate |
| Po127 | Zero clamp enabled Speed | | | |
| | Setting range | Setting unit | Mfr's value | Effect |
| | 0 ~1 | N/A | 0 | Effective Immediate |
| 0: Zero clamp function OFF 1: Zero clamp function ON | | | | |
| Po128 | Home searching signal duration time Speed Position Torque | | | |
| | Setting range | Setting unit | Mfr's value | Effect |
| | 1 ~30000 | 10ms | 100 | Effective Immediate |
| Po129 | Home searching timeout Speed Position Torque | | | |
| | Setting range | Setting unit | Mfr's value | Effect |
| | 10~65535 | ms | 10000 | Effective Immediate |
| Po130 | Gain switching setting Speed Position | | | |
| | Setting range | Setting unit | Mfr's value | Effect |
| | 0~6 | N/A | 0 | Effective Immediate |

| Parameter | Content | | | |
|--|--|--------------|-------------|--|
| Po130=0 | No switch, default to use gain 1 | | | |
| Po130=1 | No switch, default to use gain 2 | | | |
| Po130=2 | Switch to gain 2 Immediate when speed is higher than the setting value of Po131, if speed is lower than Po131, after delay the setting time of Po135(0.1ms), switch to gain 1. | | | |
| Po130=3 | Switch terminal control, use gain 1 if the switching terminal defined in CN3 is invalid; use gain 2 if valid. | | | |
| Po130=4 | Switch to gain 2 Immediate when position error is higher than the setting value of Po132; If lower than Po131, delay the setting time of Po135 (0.1ms), switch to gain 1. | | | |
| Po130=5 | Switch to gain 2 Immediate if there is pulse input; if there is no pulse input, delay the setting time of Po135(0.1ms), then switch to gain 1. | | | |
| Po130=6 | Switch to gain 2 Immediate if there is pulse input; If there is no pulse input and the speed is lower than Po131, delay the setting time of Po135(0.1ms), then switch to gain 1. | | | |
| Po131 | Gain switching speed | | | Speed Position |
| | Setting range | Setting unit | Mfr's value | Effect |
| | 1~32000 | 0.1r/min | 100 | Effective Immediate |
| Po132 | Gain switching pulse | | | Speed Position |
| | Setting range | Setting unit | Mfr's value | Effect |
| | 1~32000 | N/A | 100 | Effective Immediate |
| Po133 | Positon loop gain switching time | | | Speed Position |
| | Setting range | Setting unit | Mfr's value | Effect |
| | 1~32000 | 0.1ms | 20 | Effective Immediate |
| Po134 | Speed loop gain switching time | | | Speed Position |
| | Setting range | Setting unit | Mfr's value | Effect |
| | 0~20000 | 0.1ms | 100 | Effective Immediate |
| Po135 | Gain 2 switch to gain 1 delay time | | | Speed Position |
| | Setting range | Setting unit | Mfr's value | Effect |
| | 0~32000 | 0.1ms | 1000 | Effective Immediate |
| When gain 2 switches to gain 1, delay the time set by Po135, then switch the time according to the setting of Po133. | | | | |

| | | | | | | |
|-----------------------|---|--------------------|-------------|---------------------|---------------------|-------------------|
| Po136 | Mechanical origin single-turn value | | | <div>Speed</div> | <div>Position</div> | <div>Torque</div> |
| | Setting range | Setting unit | Mfr's value | Effect | | |
| | 0~2147483647 | N/A | 0 | Effective Immediate | | |
| Po138 | Mechanical origin multi-turn value | | | <div>Speed</div> | <div>Position</div> | <div>Torque</div> |
| | Setting range | Setting unit | Mfr's value | Effect | | |
| | 0~2147483647 | N/A | 0 | Effective Immediate | | |
| Po140 | Forward running range pulse when overtravel protection | | | <div>Speed</div> | <div>Position</div> | <div>Torque</div> |
| | Setting range | Setting unit | Mfr's value | Effect | | |
| | 0~2147483647 | N/A | 0 | Effective Immediate | | |
| Po142 | Forward running range multi-loop numbers when overtravel protection | | | <div>Speed</div> | <div>Position</div> | <div>Torque</div> |
| | Setting range | Setting unit | Mfr's value | Effect | | |
| | 0~32000 | N/A | 1000 | Effective Immediate | | |
| Po143 | Reverse running range pulse when overtravel protection | | | <div>Speed</div> | <div>Position</div> | <div>Torque</div> |
| | Setting range | Setting unit | Mfr's value | Effect | | |
| | 0~2147483647 | N/A | 0 | Effective Immediate | | |
| Po145 | Reverse running range pulse when overtravel protection | | | <div>Speed</div> | <div>Position</div> | <div>Torque</div> |
| | Setting range | Setting unit | Mfr's value | Effect | | |
| | 0~32000 | N/A | 1000 | Effective Immediate | | |
| Po200 | 1 st current loop bandwidth | | | <div>Speed</div> | <div>Position</div> | <div>Torque</div> |
| | Setting range | Setting unit | Mfr's value | Effect | | |
| | 10~3000 | HZ | — | Effective Immediate | | |
| Please refer to 7.3.3 | | | | | | |
| Po201 | 2 nd current loop bandwidth | | | <div>Speed</div> | <div>Position</div> | <div>Torque</div> |
| | Setting range | Setting unit | Mfr's value | Effect | | |
| | 10~3000 | HZ | — | Effective Immediate | | |
| Please refer to 7.3.3 | | | | | | |
| Po202 | Inernal max torque limit value | | | <div>Speed</div> | <div>Position</div> | <div>Torque</div> |
| | Setting range | Setting unit | Mfr's value | Effect | | |
| | 0~800 | 1% of rated torque | 200 | Effective Immediate | | |

Note:

1. When Po202 is larger than servo Max torque, torque limit value is Max servo motor torque.
2. Too small a torque limit setting will result in insufficient torque.

| | | | | |
|-------|--|--------------|-------------|---------------------|
| Po203 | Torque limiting by analog Speed Position Torque | | | |
| | Setting range | Setting unit | Mfr's value | Effect |
| | 0~1 | N/A | 0 | Effective Immediate |

When Po203=0, torque limiting by analog is invalid, when Po203=1, torque limiting by analog is valid. Torque limiting by analog takes input voltage of analog torque as control signal to limit torque. The relation between analog voltage and torque limiting value conforms to Po401.

| | | | | |
|-------|--|--------------------|-------------|---------------------|
| Po204 | Internal given torque Speed Position Torque | | | |
| | Setting range | Setting unit | Mfr's value | Effect |
| | -800~800 | 1% of rated torque | 10 | Effective Immediate |

| | | | | |
|-------|---|--------------------|-------------|---------------------|
| Po207 | Forward/reverse run prohibited and emergency stop torque Speed Position Torque | | | |
| | Setting range | Setting unit | Mfr's value | Effect |
| | 1~300 | 1% of rated torque | 100 | Effective Immediate |

When forward/reverse run prohibited signal or emergency stop signal is valid, the max value of instantaneous reverse stop torque of servo motor is limited within the range of this value, and this value is an absolute value, it works on both forward run and reverse run.

| | | | | |
|-------|---|--------------------|-------------|---------------------|
| Po208 | Forward max torque limit Speed Position Torque | | | |
| | Setting range | Setting unit | Mfr's value | Effect |
| | 0~800 | 1% of rated torque | 100 | Effective Immediate |

| | | | | |
|-------|---|--------------------|-------------|---------------------|
| Po209 | Reverse max torque limit Speed Position Torque | | | |
| | Setting range | Setting unit | Mfr's value | Effect |
| | 0~800 | 1% of rated torque | 100 | Effective Immediate |


| | | | | |
|-------|---|--------------|-------------|---------------------|
| Po210 | Speed Limit During Torque Control Torque | | | |
| | Setting range | Setting unit | Mfr's value | Effect |
| | N/A | 0~2 | 2 | Effective Immediate |

Po210=0, Use the value set in Po211 as the speed limit..

Po210=1, Inputs an analog voltage command as the servo motor speed limit value, this is valid for forward/reverse rotation.

Po210=2, Use the lower value between max rotation speed Po002 and actual motor max rotation speed as the speed limit.

| | | | | |
|-------|--|--------------|-------------|---------------------|
| Po211 | Internal speed limit Torque | | | |
| | Setting range | Setting unit | Mfr's value | Effect |
| | 0~32000 | 0.1r/min | 20000 | Effective Immediate |
| Po212 | Torque increasing time Torque | | | |
| | Setting range | Setting unit | Mfr's value | Effect |
| | 0~30000 | 0.1ms | 0 | Effective Immediate |
| Po213 | Torque decreasing time Torque | | | |
| | Setting range | Setting unit | Mfr's value | Effect |
| | 0~30000 | 0.1ms | 0 | Effective Immediate |

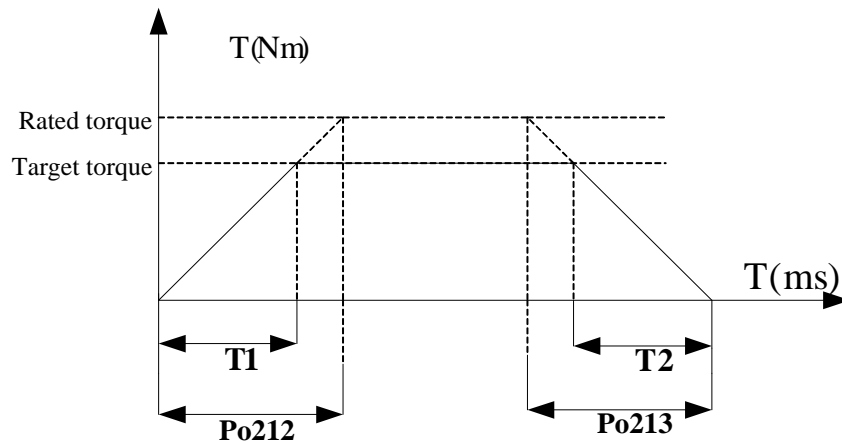

| | | | | |
|-------|--|--------------|-------------|---------------------|
| Po214 | 1 st torque filter time constant Speed Position Torque | | | |
| | Setting range | Setting unit | Mfr's value | Effect |
| | 0~30000 | 0.01ms | — | Effective Immediate |
| Po215 | 2 nd torque filter time constant Speed Position Torque | | | |
| | Setting range | Setting unit | Mfr's value | Effect |
| | 0~30000 | 0.01ms | — | Effective Immediate |

Please refer to 7.3.3

| | | | | |
|---|--|--------------|-------------|---------------------|
| Po216 | Forward/reverse run prohibited torque setting Torque | | | |
| | Setting range | Setting unit | Mfr's value | Effect |
| | 0~1 | N/A | 1 | Effective Immediate |
| 0: Actual limit torque is Po207 1: Torque limit is 0 | | | | |
| Po217 | 1 st Notch filter center frequency Speed Position Torque | | | |
| | Setting range | Setting unit | Mfr's value | Effect |
| | 50~30000 | Hz | 2000 | Effective Immediate |
| Po218 | 1 st Notch filter width Speed Position Torque | | | |
| | Setting range | Setting unit | Mfr's value | Effect |
| | 0~30000 | Hz | 5 | Effective Immediate |
| Po219 | 1 st Notch filter depth Speed Position Torque | | | |
| | Setting range | Setting unit | Mfr's value | Effect |
| | 0~100 | N/A | 0 | Effective Immediate |
| Please refer to 7.4. | | | | |
| Po220 | 2 nd Notch filter center frequency Speed Position Torque | | | |
| | Setting range | Setting unit | Mfr's value | Effect |
| | 50~30000 | Hz | 2000 | Effective Immediate |
| Please refer to 7.4. | | | | |
| Po221 | 2 nd Notch filter width Speed Position Torque | | | |
| | Setting range | Setting unit | Mfr's value | Effect |
| | 0~30000 | Hz | 5 | Effective Immediate |
| Po222 | 2 nd Notch filter depth Speed Position Torque | | | |
| | Setting range | Setting unit | Mfr's value | Effect |
| | 0~100 | N/A | 0 | Effective Immediate |
| Po223 | 3 rd Notch filter center frequency Speed Position Torque | | | |
| | Setting range | Setting unit | Mfr's value | Effect |
| | 50~30000 | Hz | 2000 | Effective Immediate |
| Po224 | 3 rd Notch filter width Speed Position Torque | | | |
| | Setting range | Setting unit | Mfr's value | Effect |

| | | | | |
|--|--|--------------|-------------|---------------------|
| | 0~30000 | Hz | 5 | Effective Immediate |
| Po225 | 3 rd Notch filter depth Speed Position Torque | | | |
| | Setting range | Setting unit | Mfr's value | Effect |
| | 0~100 | N/A | 0 | Effective Immediate |
| Po226 | 4 th Notch filter center frequency Speed Position Torque | | | |
| | Setting range | Setting unit | Mfr's value | Effect |
| | 50~30000 | Hz | 2000 | Effective Immediate |
| Po227 | 4 th Notch filter width Speed Position Torque | | | |
| | Setting range | Setting unit | Mfr's value | Effect |
| | 0~30000 | Hz | 5 | Effective Immediate |
| Po228 | 4 th Notch filter depth Speed Position Torque | | | |
| | Setting range | Setting unit | Mfr's value | Effect |
| | 0~100 | N/A | 0 | Effective Immediate |
| Po229 | Notch filter start Speed Position Torque | | | |
| | Setting range | Setting unit | Mfr's value | Effect |
| | 0~3 | N/A | 0 | Effective Immediate |
| 0: Off 1: On 2: Notch filter is auto-setting. 3: Clear filter data | | | | |
| Po230 | Notch filter number Speed Position Torque | | | |
| | Setting range | Setting unit | Mfr's value | Effect |
| | 1~4 | N/A | 2 | Effective Immediate |
| Po231 | Resonance threshold Speed Position Torque | | | |
| | Setting range | Setting unit | Mfr's value | Effect |
| | 1~30000 | N/A | 20 | Effective Immediate |
| When resonance amplitude is higher than Po231, the point is detected as resonance point. | | | | |
| Po234 | Gain of load observer Speed Position Torque | | | |
| | Setting range | Setting unit | Mfr's value | Effect |
| | 0~1000 | N/A | 0 | Effective Immediate |

| | | | | |
|---|--|--------------|-------------|---------------------|
| Load torque compensation may raise rigidity to some degree. But if it is set too large, there will be noise. | | | | |
| Po235 | Filter time of load observer Speed Position Torque | | | |
| | Setting range | Setting unit | Mfr's value | Effect |
| | 0~30000 | 0.01ms | 1000 | Effective Immediate |
| Setting Po235 may compensate load torque and enhance system rigidity to some extent. If filter time is set to low, noise will increase. | | | | |
| Po236 | Back EMF compensation coefficient Speed Position Torque | | | |
| | Setting range | Setting unit | Mfr's value | Effect |
| | 0~1000 | 0.1% | 500 | Effective Immediate |
| Po237 | Target torque range Torque | | | |
| | Setting range | Setting unit | Mfr's value | Effect |
| | 1 ~ 50 | 1% | 2 | Effective Immediate |
| Po238 | Torque filter frequency Torque | | | |
| | Setting range | Setting unit | Mfr's value | Effect |
| | 1~ 1000 | 0.1Hz | 10 | Effective Immediate |
| Po240 | Vibration suppression central frequency Position | | | |
| | Setting range | Setting unit | Mfr's value | Effect |
| | 50~2000 | 0.1Hz | 2000 | Effective Immediate |
| Po242 | Vibration suppression intensity Position | | | |
| | Setting range | Setting unit | Mfr's value | Effect |
| | 0~100 | N/A | 0 | Effective Immediate |
| Po300 | Command pulse form Speed Position Torque | | | |
| | Setting range | Setting unit | Mfr's value | Effect |
| | Four-parameter | N/A | 1000 | Effective Immediate |

| | | | | | |
|--|--|--------------|-------------|---------------------|----------------------------|
| Po306 | Position loop filter time constant | | | | Position |
| | Setting range | Setting unit | Mfr's value | Effect | |
| | 1~10000 | ms | 1 | Effective Immediate | |
| Po307 | Position reach pulses range | | | | Position |
| | Setting range | Setting unit | Mfr's value | Effect | |
| | 1~32000 | N/A | — | Effective Immediate | |
| Po308 | Position pulse clear | | | | Position |
| | Setting range | Setting unit | Mfr's value | Effect | |
| | Four-parameter | N/A | — | Effective Immediate | |
| <div><div><div><div><div>b</div><div></div><div></div><div></div><div></div></div><div><div><div>A</div><div>Terminal of inhibiting command pulse</div><div>0</div><div>Invalid</div><div>1</div><div>Valid (INH-P must be allocated)</div></div><div><div>B</div><div>Command pulse clear</div><div>0</div><div>Invalid</div><div>1</div><div>Valid (CLR must be Allocated)</div></div><div><div>C</div><div>Position loop tracking error rate unit</div><div>0</div><div>1 pulse</div><div>1</div><div>100 pulses</div></div><div><div>D</div><div>Position loop tracking alarm rate unit</div><div>0</div><div>1 pulse</div><div>1</div><div>100 pulses</div></div></div></div></div></div> | | | | | |
| Po309 | Position error alarm pulses | | | | Position |
| | Setting range | Setting unit | Mfr's value | Effect | |
| | 1~32000 | N/A | — | Effective Immediate | |
| Po310 | Acceleration time of internal position 1 | | | | Internal register position |
| | Setting range | Setting unit | Mfr's value | Effect | |
| | 0~32000 | ms | 100 | Effective Immediate | |
| Po311 | Deceleration time of internal position 1 | | | | Internal register position |
| | Setting range | Setting unit | Mfr's value | Effect | |
| | 0~32000 | ms | 100 | Effective Immediate | |

| | | | | |
|-------|--|--------------|-------------|-----------------------------------|
| Po312 | Acceleration time of internal position 2 | | | <u>Internal register position</u> |
| | Setting range | Setting unit | Mfr's value | Effect |
| | 0~32000 | ms | 100 | Effective Immediate |
| Po313 | Deceleration time of internal position 2 | | | <u>Internal register position</u> |
| | Setting range | Setting unit | Mfr's value | Effect |
| | 0~32000 | ms | 100 | Effective Immediate |
| Po314 | Acceleration time of internal position 3 | | | <u>Internal register position</u> |
| | Setting range | Setting unit | Mfr's value | Effect |
| | 0~32000 | ms | 100 | Effective Immediate |
| Po315 | Deceleration time of internal position 3 | | | <u>Internal register position</u> |
| | Setting range | Setting unit | Mfr's value | Effect |
| | 0~32000 | ms | 100 | Effective Immediate |
| Po316 | Acceleration time of internal position 4 | | | <u>Internal register position</u> |
| | Setting range | Setting unit | Mfr's value | Effect |
| | 0~32000 | ms | 100 | Effective Immediate |
| Po317 | Deceleration time of internal position 4 | | | <u>Internal register position</u> |
| | Setting range | Setting unit | Mfr's value | Effect |
| | 0~32000 | ms | 100 | Effective Immediate |
| Po318 | Acceleration time of internal position 5 | | | <u>Internal register position</u> |
| | Setting range | Setting unit | Mfr's value | Effect |
| | 0~32000 | ms | 100 | Effective Immediate |
| Po319 | Deceleration time of internal position 5 | | | <u>Internal register position</u> |
| | Setting range | Setting unit | Mfr's value | Effect |
| | 0~32000 | ms | 100 | Effective Immediate |
| Po320 | Acceleration time of internal position 6 | | | <u>Internal register position</u> |
| | Setting range | Setting unit | Mfr's value | Effect |
| | 0~32000 | ms | 100 | Effective Immediate |
| | | | | |

| | | | | |
|-------|--|--------------|-------------|----------------------------|
| Po321 | Deceleration time of internal position 6 | | | Internal register position |
| | Setting range | Setting unit | Mfr's value | Effect |
| | 0~32000 | ms | 100 | Effective Immediate |
| Po322 | Acceleration time of internal position 7 | | | Internal register position |
| | Setting range | Setting unit | Mfr's value | Effect |
| | 0~32000 | ms | 100 | Effective Immediate |
| Po323 | Deceleration time of internal position 7 | | | Internal register position |
| | Setting range | Setting unit | Mfr's value | Effect |
| | 0~32000 | ms | 100 | Effective Immediate |
| Po324 | Acceleration time of internal position 8 | | | Internal register position |
| | Setting range | Setting unit | Mfr's value | Effect |
| | 0~32000 | ms | 100 | Effective Immediate |
| Po325 | Deceleration time of internal position 8 | | | Internal register position |
| | Setting range | Setting unit | Mfr's value | Effect |
| | 0~32000 | ms | 100 | Effective Immediate |
| Po326 | Filter time constant of position feedforward | | | Position |
| | Setting range | Setting unit | Mfr's value | Effect |
| | 1~32000 | 0.01ms | 1000 | Effective Immediate |
| Po327 | No. of Position deviation alarm pulse | | | Position |
| | Setting range | Setting unit | Mfr's value | Effect |
| | 1~30000 | N/A | — | Effective Immediate |
| Po330 | Given speed of postion 1 | | | Internal register position |
| | Setting range | Setting unit | Mfr's value | Effect |
| | 1~65535 | 0.1r/min | 1000 | Effective Immediate |
| Po331 | Given speed of postion 2 | | | Internal register position |
| | Setting range | Setting unit | Mfr's value | Effect |
| | 1~65535 | 0.1r/min | 1000 | Effective Immediate |
| Po332 | Given speed of postion 3 | | | Internal register position |
| | Setting range | Setting unit | Mfr's value | Effect |



| | | | | |
|--|---------------------------------|--------------|-------------|-----------------------------------|
| | 1~65535 | 0.1r/min | 1000 | Effective Immediate |
| Po333 | Given speed of postion 4 | | | <u>Internal register position</u> |
| | Setting range | Setting unit | Mfr's value | Effect |
| | 1~65535 | 0.1r/min | 1000 | Effective Immediate |
| Po334 | Given speed of postion 5 | | | <u>Internal register position</u> |
| | Setting range | Setting unit | Mfr's value | Effect |
| | 1~65535 | 0.1r/min | 1000 | Effective Immediate |
| Po335 | Given speed of postion 6 | | | <u>Internal register position</u> |
| | Setting range | Setting unit | Mfr's value | Effect |
| | 1~65535 | 0.1r/min | 1000 | Effective Immediate |
| Po336 | Given speed of postion 7 | | | <u>Internal register position</u> |
| | Setting range | Setting unit | Mfr's value | Effect |
| | 1~65535 | 0.1r/min | 1000 | Effective Immediate |
| Po337 | Given speed of postion 8 | | | <u>Internal register position</u> |
| | Setting range | Setting unit | Mfr's value | Effect |
| | 1~65535 | 0.1r/min | 1000 | Effective Immediate |
| Po338 | Unit of position given speed | | | <u>Internal register position</u> |
| | Setting range | Setting unit | Mfr's value | Effect |
| | 0~1 | N/A | 0 | Effective Immediate |
| 0: Motor actual speed, has no relation with electronic gear.Unit is 0.1r/min, 1: Treated by electronic gear, unit is 0.01Khz. | | | | |
| Po339 | Electronic gear ratio selection | | | <u>Position</u> |
| | Setting range | Setting unit | Mfr's value | Effect |
| | 0~2 | N/A | 0 | Effective Immediate |
| 0: First electronic gear ratio 1: Second electronic gear ratio 2: Two groups of electronic gear ratio swithchover | | | | |
| Po340 | FIR filter | | | <u>Position</u> |
| | Setting range | Setting unit | Mfr's value | Effect |
| | 0~10000 | 0.1ms | 0 | Effective Immediate |

The large the value, the smoother servo drive running, however, response may become slow.

| | | | | | | | | | | | | | | | | | | |
|---|---|--------------|-------------|----------------------------|---|--------------------------------------|---|---------|---|-------|---|-----------------------|---|-----------------|---|----------------|-----|-----|
| Po341 | Internal position mode selection | | | Internal register position | | | | | | | | | | | | | | |
| | Setting range | Setting unit | Mfr's value | Effect | | | | | | | | | | | | | | |
| | 0~1 | N/A | 0 | Effective Immediate | | | | | | | | | | | | | | |
| 0:Incremental mode 1: Absolute mode | | | | | | | | | | | | | | | | | | |
| Po342 | Internal position trigger | | | Internal register position | | | | | | | | | | | | | | |
| | Setting range | Setting unit | Mfr's value | Effect | | | | | | | | | | | | | | |
| | 0~1 | N/A | 0 | Effective Immediate | | | | | | | | | | | | | | |
| 0: no trigger 1: trigger | | | | | | | | | | | | | | | | | | |
| Po343 | Acceleration/deceleration time in position mode | | | Position | | | | | | | | | | | | | | |
| | Setting range | Setting unit | Mfr's value | Effect | | | | | | | | | | | | | | |
| | 0~10000 | ms | 0 | Effective Immediate | | | | | | | | | | | | | | |
| Po344 | 2 ^{ed} group electronic gear numerator | | | Position | | | | | | | | | | | | | | |
| | Setting range | Setting unit | Mfr's value | Effect | | | | | | | | | | | | | | |
| | 0~2147483647 | N/A | 0 | Effective Immediate | | | | | | | | | | | | | | |
| Please refer to 6.4.2. | | | | | | | | | | | | | | | | | | |
| Po346 | 2 ^{ed} electronic gear denominator | | | Position | | | | | | | | | | | | | | |
| | Setting range | Setting unit | Mfr's value | Effect | | | | | | | | | | | | | | |
| | 1~2147483647 | N/A | 10000 | Effective Immediate | | | | | | | | | | | | | | |
| Please refer to 6.4.2. | | | | | | | | | | | | | | | | | | |
| Po348 | Setting of multistage internal position | | | Position | | | | | | | | | | | | | | |
| | Setting range | Setting unit | Mfr's value | Effect | | | | | | | | | | | | | | |
| | Two-parameter | N/A | 2 0 | Effective Immediate | | | | | | | | | | | | | | |
| <div><div><div>d</div><div>2</div><div>0</div></div><div><table><tr><td>X</td><td>Multistage position function setting</td></tr><tr><td>0</td><td>Invalid</td></tr><tr><td>1</td><td>Valid</td></tr><tr><td>Y</td><td>Stage numbers setting</td></tr><tr><td>2</td><td>Second position</td></tr><tr><td>3</td><td>Third position</td></tr><tr><td>...</td><td>...</td></tr></table></div></div> | | | | | X | Multistage position function setting | 0 | Invalid | 1 | Valid | Y | Stage numbers setting | 2 | Second position | 3 | Third position | ... | ... |
| X | Multistage position function setting | | | | | | | | | | | | | | | | | |
| 0 | Invalid | | | | | | | | | | | | | | | | | |
| 1 | Valid | | | | | | | | | | | | | | | | | |
| Y | Stage numbers setting | | | | | | | | | | | | | | | | | |
| 2 | Second position | | | | | | | | | | | | | | | | | |
| 3 | Third position | | | | | | | | | | | | | | | | | |
| ... | ... | | | | | | | | | | | | | | | | | |

| | | | | |
|----------------------|--|--------------|-------------|---------------------|
| Po349 | Circulation times of multistage internal position Position | | | |
| | Setting range | Setting unit | Mfr's value | Effect |
| | 0~30000 | N/A | 0 | Effective Immediate |
| Please refer to 6.4. | | | | |
| Po350 | Given postion of postion 1 Internal register position | | | |
| | Setting range | Setting unit | Mfr's value | Effect |
| | -2147483647~+2147483647 | N/A | 0 | Effective Immediate |
| Po352 | Given postion of postion 2 Internal register position | | | |
| | Setting range | Setting unit | Mfr's value | Effect |
| | -2147483647~+2147483647 | N/A | 0 | Effective Immediate |
| Po354 | Given postion of postion 3 Internal register position | | | |
| | Setting range | Setting unit | Mfr's value | Effect |
| | -2147483647~+2147483647 | N/A | 0 | Effective Immediate |
| Po356 | Given postion of postion 4 Internal register position | | | |
| | Setting range | Setting unit | Mfr's value | Effect |
| | -2147483647~+2147483647 | N/A | 0 | Effective Immediate |
| Po358 | Given postion of postion 5 Internal register position | | | |
| | Setting range | Setting unit | Mfr's value | Effect |
| | -2147483647~+2147483647 | N/A | 0 | Effective Immediate |
| Po360 | Given postion of postion 6 Internal register position | | | |
| | Setting range | Setting unit | Mfr's value | Effect |
| | -2147483647~+2147483647 | N/A | 0 | Effective Immediate |
| Po362 | Given postion of postion 7 Internal register position | | | |
| | Setting range | Setting unit | Mfr's value | Effect |
| | -2147483647~+2147483647 | N/A | 0 | Effective Immediate |
| Po364 | Given postion of postion 8 Internal register position | | | |
| | Setting range | Setting unit | Mfr's value | Effect |
| | -2147483647~+2147483647 | N/A | 0 | Effective Immediate |
| Please refer to 6.4 | | | | |

| | | | | |
|-------|---------------------------------------|--------------|-------------|----------------------------|
| Po366 | Interval time 1 | | | Internal register position |
| | Setting range | Setting unit | Mfr's value | Effect |
| | 0~32000 | ms | 0 | Effective Immediate |
| Po367 | Interval time 2 | | | Internal register position |
| | Setting range | Setting unit | Mfr's value | Effect |
| | 0~32000 | ms | 0 | Effective Immediate |
| Po368 | Interval time 3 | | | Internal register position |
| | Setting range | Setting unit | Mfr's value | Effect |
| | 0~32000 | ms | 0 | Effective Immediate |
| Po369 | Interval time 4 | | | Internal register position |
| | Setting range | Setting unit | Mfr's value | Effect |
| | 0~32000 | ms | 0 | Effective Immediate |
| Po370 | Interval time 5 | | | Internal register position |
| | Setting range | Setting unit | Mfr's value | Effect |
| | 0~32000 | ms | 0 | Effective Immediate |
| Po371 | Interval time 6 | | | Internal register position |
| | Setting range | Setting unit | Mfr's value | Effect |
| | 0~32000 | ms | 0 | Effective Immediate |
| Po372 | Interval time 7 | | | Internal register position |
| | Setting range | Setting unit | Mfr's value | Effect |
| | 0~32000 | ms | 0 | Effective Immediate |
| Po373 | Interval time 8 | | | Internal register position |
| | Setting range | Setting unit | Mfr's value | Effect |
| | 0~32000 | ms | 0 | Effective Immediate |
| Po374 | Command source in position pulse mode | | | Position pulse |
| | Setting range | Setting unit | Mfr's value | Effect |
| | Four-parameter | N/A | 0001 | Effective Immediate |
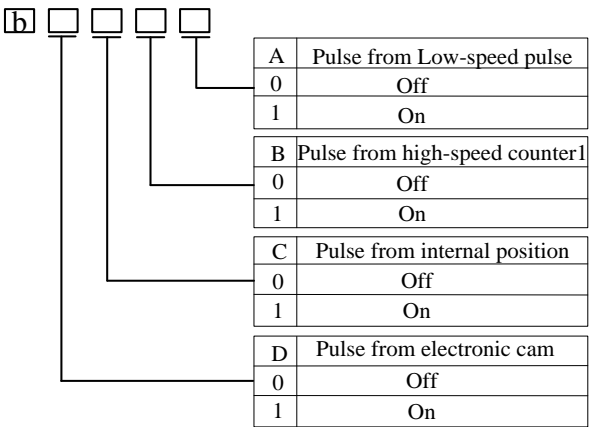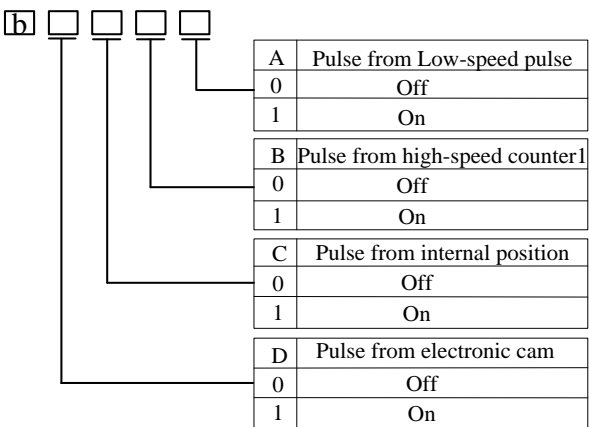
| | | | | |
|--|---|--------------|-------------|---------------------|
|  | | | | |
| Po375 | Command source in internal register position mode Internal register position | | | |
| | Setting range | Setting unit | Mfr's value | Effect |
| | Four-parameter | N/A | 0100 | Effective Immediate |
|  | | | | |
| Po376 | Position feedback source Position | | | |
| | Setting range | Setting unit | Mfr's value | Effect |
| | 0~2 | N/A | 0 | Effective Immediate |
| 0: Position feedback root in motor motor shaft 1: Position feedback root in high-speed counter 1 2: Position feedback root in high-speed counter 2 | | | | |
| Po377 | Position feedback pulse proportion numerator Position | | | |
| | Setting range | Setting unit | Mfr's value | Effect |
| | 1~65535 | N/A | 1 | Effective Immediate |
| Po378 | Position feedback pulse proportion denominator Position | | | |
| | Setting range | Setting unit | Mfr's value | Effect |

| | | | | |
|------------------------|---|--------------|-------------|---------------------|
| | 1~65535 | N/A | 1 | Effective Immediate |
| Please refer to 6.4.12 | | | | |
| Po379 | Mixed error remove turns | | | Position |
| | Setting range | Setting unit | Mfr's value | Effect |
| | 0~32000 | N/A | 0 | Effective Immediate |
| Please refer to 6.4.12 | | | | |
| Po380 | Mixed error alarm pulses | | | Position |
| | Setting range | Setting unit | Mfr's value | Effect |
| | 1~65535 | N/A | 1000 | Effective Immediate |
| Please refer to 6.4.12 | | | | |
| Po381 | Gantry synchron gain | | | Position |
| | Setting range | Setting unit | Mfr's value | Effect |
| | 1~30000 | N/A | 1000 | Effective Immediate |
| Po382 | Gantry position feedback source | | | Position |
| | Setting range | Setting unit | Mfr's value | Effect |
| | 0~1 | N/A | 0 | Effective Immediate |
| Po383 | Gantry synchron alarm pulse | | | Position |
| | Setting range | Setting unit | Mfr's value | Effect |
| | 10~65535 | N/A | 1000 | Effective Immediate |
| Po384 | Gantry synchron feedback proportion numerator | | | Position |
| | Setting range | Setting unit | Mfr's value | Effect |
| | 1~2147483647 | N/A | 10 | Effective Immediate |
| Po386 | Gantry synchron feedback proportion denominator | | | Position |
| | Setting range | Setting unit | Mfr's value | Effect |
| | 1~2147483647 | N/A | 10 | Effective Immediate |
| Please refer to 6.4.13 | | | | |
| Po388 | Fixed length interrupt | | | Position |
| | Setting range | Setting unit | Mfr's value | Effect |
| | Two-parameter | N/A | 00 | Effective Immediate |

| | | | | |
|---|---|--------------------|-------------|---------------------|
| <div><div><div><div>d</div><div></div><div></div></div><div><div><div>A</div><div>Interrupt fixed length function</div></div><div><div>0</div><div>Invalid</div></div><div><div>1</div><div>Valid</div></div></div><div><div><div>B</div><div>Interrupt fixed length release terminal</div></div><div><div>0</div><div>Invalid</div></div><div><div>1</div><div>Valid</div></div></div></div></div> | | | | |
| Po400 | Max speed corresponding to analog voltage <div>Speed</div> | | | |
| | Setting range | Setting unit | Mfr's value | Effect |
| | 1~10000 | r/min | — | Effective Immediate |
| Po401 | Max torque corresponding to Analog torque <div>Torque</div> | | | |
| | Setting range | Setting unit | Mfr's value | Effect |
| | 1~800 | 1% of rated torque | 100 | Effective Immediate |
| Po402 | AI1 command zero drift compensation <div>Speed</div> <div>Position</div> <div>Torque</div> | | | |
| | Setting range | Setting unit | Mfr's value | Effect |
| | 0~±5000 | mv | 0 | Effective Immediate |
| Po403 | AI2 torque command zero drift compensation <div>Speed</div> <div>Position</div> <div>Torque</div> | | | |
| | Setting range | Setting unit | Mfr's value | Effect |
| | 0~±5000 | mv | 0 | Effective Immediate |
| Po404 | Analog speed command filter time constant <div>Speed</div> <div>Position</div> <div>Torque</div> | | | |
| | Setting range | Setting unit | Mfr's value | Effect |
| | 1~30000 | 0.01ms | 200 | Effective Immediate |
| Po405 | Analog torque command filter time constant <div>Torque</div> | | | |
| | Setting range | Setting unit | Mfr's value | Effect |
| | 1~30000 | 0.01ms | 200 | Effective Immediate |
| Po406 | AI automatic zero set <div>Speed</div> <div>Torque</div> | | | |
| | Setting range | Setting unit | Mfr's value | Effect |
| | 0~1 | N/A | 0 | Effective Immediate |
| Po407 | DI1 terminal function <div>Speed</div> <div>Position</div> <div>Torque</div> | | | |
| | Setting range | Setting unit | Mfr's value | Effect |
| | Two-parameter | N/A | — | Repower on |

| | | | | | | |
|-------|-----------------------|--------------|-------------|------------------|---------------------|-------------------|
| Po408 | DI2 terminal function | | | <div>Speed</div> | <div>Position</div> | <div>Torque</div> |
| | Setting range | Setting unit | Mfr's value | Effect | | |
| | Two-parameter | N/A | — | Repower on | | |
| Po409 | DI3 terminal function | | | <div>Speed</div> | <div>Position</div> | <div>Torque</div> |
| | Setting range | Setting unit | Mfr's value | Effect | | |
| | Two-parameter | N/A | — | Repower on | | |
| Po410 | DI4 terminal function | | | <div>Speed</div> | <div>Position</div> | <div>Torque</div> |
| | Setting range | Setting unit | Mfr's value | Effect | | |
| | Two-parameter | N/A | — | Repower on | | |
| Po411 | DI5 terminal function | | | <div>Speed</div> | <div>Position</div> | <div>Torque</div> |
| | Setting range | Setting unit | Mfr's value | Effect | | |
| | Two-parameter | N/A | — | Repower on | | |
| Po412 | DI6 terminal function | | | <div>Speed</div> | <div>Position</div> | <div>Torque</div> |
| | Setting range | Setting unit | Mfr's value | Effect | | |
| | Two-parameter | N/A | — | Repower on | | |
| Po413 | DI7 terminal function | | | <div>Speed</div> | <div>Position</div> | <div>Torque</div> |
| | Setting range | Setting unit | Mfr's value | Effect | | |
| | Two-parameter | N/A | — | Repower on | | |
| Po414 | DI8 terminal function | | | <div>Speed</div> | <div>Position</div> | <div>Torque</div> |
| | Setting range | Setting unit | Mfr's value | Effect | | |
| | Two-parameter | N/A | — | Repower on | | |
| Po421 | DO1 terminal function | | | <div>Speed</div> | <div>Position</div> | <div>Torque</div> |
| | Setting range | Setting unit | Mfr's value | Effect | | |
| | Two-parameter | N/A | — | Repower on | | |
| Po422 | DO2 terminal function | | | <div>Speed</div> | <div>Position</div> | <div>Torque</div> |
| | Setting range | Setting unit | Mfr's value | Effect | | |
| | Two-parameter | N/A | — | Repower on | | |
| | | | | | | |

| | | | | | | |
|--|--|--------------|-------------|---------------------|---------------------|-------------------|
| Po423 | DO3 terminal function | | | <div>Speed</div> | <div>Position</div> | <div>Torque</div> |
| | Setting range | Setting unit | Mfr's value | Effect | | |
| | Two-parameter | N/A | — | Repower on | | |
| Po424 | DO4 terminal function | | | <div>Speed</div> | <div>Position</div> | <div>Torque</div> |
| | Setting range | Setting unit | Mfr's value | Effect | | |
| | Two-parameter | N/A | — | Repower on | | |
| Po425 | ALM terminal function | | | <div>Speed</div> | <div>Position</div> | <div>Torque</div> |
| | Setting range | Setting unit | Mfr's value | Effect | | |
| | Two-parameter | N/A | — | Repower on | | |
| Please refer to 8.1.7 | | | | | | |
| Po426 | AI zero drift alarm | | | <div>Speed</div> | <div>Position</div> | <div>Torque</div> |
| | Setting range | Setting unit | Mfr's value | Effect | | |
| | 100~5000 | mv | 2000 | Effective Immediate | | |
| Po427 | Analog terminal control | | | <div>Speed</div> | | |
| | Setting range | Setting unit | Mfr's value | Effect | | |
| | 0~1 | N/A | 0 | Effective Immediate | | |
| 0: Off 1:On | | | | | | |
| Po428 | Analog speed mode setting | | | <div>Speed</div> | <div>Torque</div> | |
| | Setting range | Setting unit | Mfr's value | Effect | | |
| | 0~1 | N/A | 0 | Effective Immediate | | |
| 0: Analog command is set by AI1. 1: Analog command is set by AI2. | | | | | | |
| Po429 | Analog torque command source | | | <div>Speed</div> | <div>Position</div> | <div>Torque</div> |
| | Setting range | Setting unit | Mfr's value | Effect | | |
| | 0~1 | N/A | 1 | Effective Immediate | | |
| Po430 | Corresponding speed of lower limit voltage | | | <div>Speed</div> | <div>Position</div> | <div>Torque</div> |
| | Setting range | Setting unit | Mfr's value | Effect | | |
| | -1000~1000 | 0.1% | -1000 | Effective Immediate | | |
| Please refer to 6.2 | | | | | | |

| | | | | | | |
|---------------------|---|--------------|-------------|---------------------|----------|--------|
| Po431 | Corresponding speed of lower limit voltage | | | Speed | Position | Torque |
| | Setting range | Setting unit | Mfr's value | Effect | | |
| | -1000~1000 | 0.01V | -1000 | Effective Immediate | | |
| Please refer to 6.2 | | | | | | |
| Po432 | Corresponding speed of upper limit voltage | | | Speed | Position | Torque |
| | Setting range | Setting unit | Mfr's value | Effect | | |
| | -1000~1000 | 0.1% | 1000 | Effective Immediate | | |
| Please refer to 6.2 | | | | | | |
| Po433 | Upper limit voltage in speed analog mode | | | Speed | Position | Torque |
| | Setting range | Setting unit | Mfr's value | Effect | | |
| | -1000~1000 | 0.01V | 1000 | Effective Immediate | | |
| Please refer to 6.2 | | | | | | |
| Po434 | Torque corresponding to lower limit voltage in torque analog mode | | | Speed | Position | Torque |
| | Setting range | Setting unit | Mfr's value | Effect | | |
| | -1000~1000 | 0.1% | -1000 | Effective Immediate | | |
| Please refer to 6.3 | | | | | | |
| Po435 | Lower limit voltage in torque analog mode | | | Speed | Position | Torque |
| | Setting range | Setting unit | Mfr's value | Effect | | |
| | -1000~1000 | 0.01V | -1000 | Effective Immediate | | |
| Please refer to 6.3 | | | | | | |
| Po436 | Torque corresponding to upper limit voltage in torque analog mode | | | Speed | Position | Torque |
| | Setting range | Setting unit | Mfr's value | Effect | | |
| | -1000~1000 | 0.1% | 1000 | Effective Immediate | | |
| Please refer to 6.3 | | | | | | |
| Po437 | Upper limit voltage in torque analog mode | | | Speed | Position | Torque |
| | Setting range | Setting unit | Mfr's value | Effect | | |
| | -1000~1000 | 0.01V | 1000 | Effective Immediate | | |
| Please refer to 6.3 | | | | | | |

| | | | | | | |
|----------------------------|-----------------------|--------------|-------------|---------------------|---------------------|-------------------|
| Po438 | DI1 filter time | | | <div>Speed</div> | <div>Position</div> | <div>Torque</div> |
| | Setting range | Setting unit | Mfr's value | Effect | | |
| | 0~30000 | N/A | 2 | Effective Immediate | | |
| Po439 | DI2 filter time | | | <div>Speed</div> | <div>Position</div> | <div>Torque</div> |
| | Setting range | Setting unit | Mfr's value | Effect | | |
| | 0~30000 | N/A | 2 | Effective Immediate | | |
| Po440 | DI3 filter time | | | <div>Speed</div> | <div>Position</div> | <div>Torque</div> |
| | Setting range | Setting unit | Mfr's value | Effect | | |
| | 0~30000 | N/A | 2 | Effective Immediate | | |
| Po441 | DI4 filter time | | | <div>Speed</div> | <div>Position</div> | <div>Torque</div> |
| | Setting range | Setting unit | Mfr's value | Effect | | |
| | 0~30000 | N/A | 2 | Effective Immediate | | |
| Po442 | DI5 filter time | | | <div>Speed</div> | <div>Position</div> | <div>Torque</div> |
| | Setting range | Setting unit | Mfr's value | Effect | | |
| | 0~30000 | N/A | 2 | Effective Immediate | | |
| Po443 | DI6 filter time | | | <div>Speed</div> | <div>Position</div> | <div>Torque</div> |
| | Setting range | Setting unit | Mfr's value | Effect | | |
| | 0~30000 | N/A | 2 | Effective Immediate | | |
| Po444 | DI7 filter time | | | <div>Speed</div> | <div>Position</div> | <div>Torque</div> |
| | Setting range | Setting unit | Mfr's value | Effect | | |
| | 0~30000 | N/A | 2 | Effective Immediate | | |
| Po445 | DI8 filter time | | | <div>Speed</div> | <div>Position</div> | <div>Torque</div> |
| | Setting range | Setting unit | Mfr's value | Effect | | |
| | 0~30000 | N/A | 2 | Effective Immediate | | |
| Po500 | Communication address | | | <div>Speed</div> | <div>Position</div> | <div>Torque</div> |
| | Setting range | Setting unit | Mfr's value | Effect | | |
| | 1~254 | N/A | 1 | Effective Immediate | | |
| Please refer to chapter 10 | | | | | | |

| | | | | | | |
|---|--------------------------|--------------|-------------|---------------------|----------|--------|
| Po501 | Communication mode | | | Speed | Position | Torque |
| | Setting range | Setting unit | Mfr's value | Effect | | |
| | 0~1 | N/A | 1 | Effective Immediate | | |
| Please refer to chapter 10 | | | | | | |
| Po502 | Stop bit | | | Speed | Position | Torque |
| | Setting range | Setting unit | Mfr's value | Effect | | |
| | 0~1 | N/A | 0 | Effective Immediate | | |
| 0: 1bit 1: 2 bits | | | | | | |
| Po503 | Parity check selection | | | Speed | Position | Torque |
| | Setting range | Setting unit | Mfr's value | Effect | | |
| | 0~2 | N/A | 0 | Effective Immediate | | |
| 0: No checkout 1: Odd 2: Even | | | | | | |
| Po504 | Baud rate | | | Speed | Position | Torque |
| | Setting range | Setting unit | Mfr's value | Effect | | |
| | 0~5 | bit/s | 3 | Effective Immediate | | |
| 0: 2400 1: 4800 2: 9600 3: 19200 4: 38400 5: 57600 | | | | | | |
| Po505 | Permission of Read&Write | | | Speed | Position | Torque |
| | Setting range | Setting unit | Mfr's value | Effect | | |
| | 0~1 | N/A | 1 | Effective Immediate | | |
| 0: Permission of Read & Write, the communication data is allowed to be written into data register. 1: Prohibition of Read&Write, the communication commands are only executed, but they are not allowed to be written into data register. If the servodrive is power off, data will be lost and they need to be written again. | | | | | | |

8.1.4 Motor function group (Ho-□□□)

| | | | | | | | |
|--|------------------------------|--------------|-------------|---------------------|------------------|---------------------|-------------------|
| Ho000 | Rated voltage of servo motor | | | | <div>Speed</div> | <div>Position</div> | <div>Torque</div> |
| | Setting range | Setting unit | Mfr's value | Effect | | | |
| | 1~30000 | V | — | Effective Immediate | | | |
| Please set Ho000 according to servo motor nameplate. | | | | | | | |
| Ho001 | Rated current of servo motor | | | | <div>Speed</div> | <div>Position</div> | <div>Torque</div> |
| | Setting range | Setting unit | Mfr's value | Effect | | | |

| | | | | |
|--|---------------------------------------|-------------------|-------------|--|
| | 1~30000 | 0.1A | — | Effective Immediate |
| Please set Ho001 according to servo motor nameplate. | | | | |
| Ho002 | Max speed of servo motor | | | <input type="checkbox"/> Speed <input type="checkbox"/> Position <input type="checkbox"/> Torque |
| | Setting range | Setting unit | Mfr's value | Effect |
| | 0~32000 | r/min | — | Effective Immediate |
| Please set Ho002 according to servo motor nameplate. | | | | |
| Ho003 | Rated speed of servo motor | | | <input type="checkbox"/> Speed <input type="checkbox"/> Position <input type="checkbox"/> Torque |
| | Setting range | Setting unit | Mfr's value | Effect |
| | 1~32000 | r/min | — | Effective Immediate |
| Please set Ho003 according to servo motor nameplate. | | | | |
| Ho004 | Pole-pairs | | | <input type="checkbox"/> Speed <input type="checkbox"/> Position <input type="checkbox"/> Torque |
| | Setting range | Setting unit | Mfr's value | Effect |
| | 1~30 | pair | — | Effective Immediate |
| If servo motor is 8 poles, Ho004 is 4. | | | | |
| Ho005 | Phase resistance | | | <input type="checkbox"/> Speed <input type="checkbox"/> Position <input type="checkbox"/> Torque |
| | Setting range | Setting unit | Mfr's value | Effect |
| | 0~65535 | $10^{-3}\Omega$ | — | Effective Immediate |
| Ho006 | D-axis inductance | | | <input type="checkbox"/> Speed <input type="checkbox"/> Position <input type="checkbox"/> Torque |
| | Setting range | Setting unit | Mfr's value | Effect |
| | 0~65535 | 10^{-6}H | — | Effective Immediate |
| Ho007 | Q-axis inductance | | | <input type="checkbox"/> Speed <input type="checkbox"/> Position <input type="checkbox"/> Torque |
| | Setting range | Setting unit | Mfr's value | Effect |
| | 0~65535 | 10^{-6}H | — | Effective Immediate |
| Ho008 | Back EMF line voltage effective value | | | <input type="checkbox"/> Speed <input type="checkbox"/> Position <input type="checkbox"/> Torque |
| | Setting range | Setting unit | Mfr's value | Effect |
| | 0~30000 | 0.1V/1000 r/min | — | Effective Immediate |
| Ho011 | Motor power | | | <input type="checkbox"/> Speed <input type="checkbox"/> Position <input type="checkbox"/> Torque |
| | Setting range | Setting unit | Mfr's value | Effect |
| | 1~30000 | 0.01KW | — | Effective Immediate |

| | | | | | | |
|-------|----------------------------|------------------------------------|-------------|---------------------|----------|--------|
| Ho012 | Motor rotary inertia | | | Speed | Position | Torque |
| | Setting range | Setting unit | Mfr's value | Effect | | |
| | 0~2147483647 | 10 ⁻⁶ Kg•m ² | — | Effective Immediate | | |
| Ho016 | Encoder resolution | | | Speed | Position | Torque |
| | Setting range | Setting unit | Mfr's value | Effect | | |
| | 0~2147483647 | PPR | — | Effective Immediate | | |
| Ho018 | Encoder installation angle | | | Speed | Position | Torque |
| | Setting range | Setting unit | Mfr's value | Effect | | |
| | -2147483647~+2147483647 | N/A | — | Effective Immediate | | |
| Ho121 | Encoder installation angle | | | Speed | Position | Torque |
| | Setting range | Setting unit | Mfr's value | Effect | | |
| | 1~30000 | N/A | 500 | Effective Immediate | | |

8.1.5 Alarm Record Parameters (Ho2□□ ~ Ho3□□)

| | | | | | | |
|---------------------|--------------------------------------|--------------|-------------|--------|----------|--------|
| Ho200 ~ Ho235 | AL01 ~ AL32 alarming times | | | Speed | Position | Torque |
| | Setting range | Setting unit | Mfr's value | Effect | | |
| | — | — | — | — | | |
| Ho300 | PN voltage at last time alarm | | | Speed | Position | Torque |
| | Setting range | Setting unit | Mfr's value | Effect | | |
| | — | — | — | — | | |
| Ho301 | Current at last time alarm | | | Speed | Position | Torque |
| | Setting range | Setting unit | Mfr's value | Effect | | |
| | — | — | — | — | | |
| Ho302 | Motor speed at last time alarm | | | Speed | Position | Torque |
| | Setting range | Setting unit | Mfr's value | Effect | | |
| | — | — | — | — | | |
| Ho303 | PN voltage at second last time alarm | | | Speed | Position | Torque |
| | Setting range | Setting unit | Mfr's value | Effect | | |
| | — | — | — | — | | |

| | | | | | | |
|-------|---------------------------------------|--------------|-------------|--------|----------|--------|
| Ho304 | Current at second last time alarm | | | Speed | Position | Torque |
| | Setting range | Setting unit | Mfr's value | Effect | | |
| | — | — | — | — | | |
| Ho305 | Motor speed at second last time alarm | | | Speed | Position | Torque |
| | Setting range | Setting unit | Mfr's value | Effect | | |
| | — | — | — | — | | |
| Ho306 | PN voltage at third last time alarm | | | Speed | Position | Torque |
| | Setting range | Setting unit | Mfr's value | Effect | | |
| | — | — | — | — | | |
| Ho307 | Current at third last time alarm | | | Speed | Position | Torque |
| | Setting range | Setting unit | Mfr's value | Effect | | |
| | — | — | — | — | | |
| Ho308 | Motor speed at third last time alarm | | | Speed | Position | Torque |
| | Setting range | Setting unit | Mfr's value | Effect | | |
| | — | — | — | — | | |
| Ho310 | Alarm code at last time | | | Speed | Position | Torque |
| | Setting range | Setting unit | Mfr's value | Effect | | |
| | — | — | — | — | | |
| Ho311 | Alarm code at second last time | | | Speed | Position | Torque |
| | Setting range | Setting unit | Mfr's value | Effect | | |
| | — | — | — | — | | |
| Ho312 | Alarm code at third last time | | | Speed | Position | Torque |
| | Setting range | Setting unit | Mfr's value | Effect | | |
| | — | — | — | — | | |
| Ho313 | Alarm code at fourth last time | | | Speed | Position | Torque |
| | Setting range | Setting unit | Mfr's value | Effect | | |
| | — | — | — | — | | |
| Ho314 | Alarm code at fifth last time | | | Speed | Position | Torque |
| | Setting range | Setting unit | Mfr's value | Effect | | |

| | | | | |
|-------|---------------------------------|--------------|-------------|-----------------------|
| | — | — | — | — |
| Ho315 | Alarm code at sixth last time | | | Speed Position Torque |
| | Setting range | Setting unit | Mfr's value | Effect |
| | — | — | — | — |
| Ho316 | Alarm code at seventh last time | | | Speed Position Torque |
| | Setting range | Setting unit | Mfr's value | Effect |
| | — | — | — | — |
| Ho317 | Alarm code at eighth last time | | | Speed Position Torque |
| | Setting range | Setting unit | Mfr's value | Effect |
| | — | — | — | — |
| Ho318 | Alarm code at ninth last time | | | Speed Position Torque |
| | Setting range | Setting unit | Mfr's value | Effect |
| | — | — | — | — |
| Ho319 | Alarm code at tenth last time | | | Speed Position Torque |
| | Setting range | Setting unit | Mfr's value | Effect |
| | — | — | — | — |
| Ho320 | Alarm time at last time | | | Speed Position Torque |
| | Setting range | Setting unit | Mfr's value | Effect |
| | — | — | — | — |
| Ho321 | Alarm time at second last time | | | Speed Position Torque |
| | Setting range | Setting unit | Mfr's value | Effect |
| | — | — | — | — |
| Ho322 | Alarm time at third last time | | | Speed Position Torque |
| | Setting range | Setting unit | Mfr's value | Effect |
| | — | — | — | — |
| Ho323 | Alarm time at fourth last time | | | Speed Position Torque |
| | Setting range | Setting unit | Mfr's value | Effect |
| | — | — | — | — |
| Ho324 | Alarm time at fifth last time | | | Speed Position Torque |

| | | | | |
|-------|---------------------------------|--------------|-------------|--|
| | Setting range | Setting unit | Mfr's value | Effect |
| | — | — | — | — |
| Ho325 | Alarm time at sixth last time | | | Speed Position Torque |
| | Setting range | Setting unit | Mfr's value | Effect |
| | — | — | — | — |
| Ho326 | Alarm time at seventh last time | | | Speed Position Torque |
| | Setting range | Setting unit | Mfr's value | Effect |
| | — | — | — | — |
| Ho327 | Alarm time at eighth last time | | | Speed Position Torque |
| | Setting range | Setting unit | Mfr's value | Effect |
| | — | — | — | — |
| Ho328 | Alarm time at ninth last time | | | Speed Position Torque |
| | Setting range | Setting unit | Mfr's value | Effect |
| | — | — | — | — |
| Ho329 | Alarm time at tenth last time | | | Speed Position Torque |
| | Setting range | Setting unit | Mfr's value | Effect |
| | — | — | — | — |

8.1.6 High-speed counter parameters (PL□□□)

| | | | | |
|--------------|----------------|--------------|-------------|--|
| PL000 | E-Cam Control | | | Speed Position Torque |
| | Setting Range | Setting Unit | Mfr's Value | Effect |
| | Four-parameter | N/A | 0000 | Immediate effect |

| | | | | | | |
|-------|--|--------------|-------------|------------------|---------------------|-------------------|
| | <div><div><div><div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div></div></div><div><div><div><div><div>A</div><div>Electronic cam</div></div><div>0</div><div>Close electronic cam</div></div><div><div><div>1</div><div>Open electronic cam</div></div></div></div><div><div><div><div>B</div><div>Command resource</div></div><div>0</div><div>High counter 1</div></div><div><div><div>1</div><div>High counter 2</div></div></div><div><div><div>2</div><div>Internal position</div></div><div>3</div><div>Time</div></div></div><div><div><div><div>C</div><div>Trigger resource</div></div><div>0</div><div>Trigger immediately</div></div><div><div><div>1</div><div>DI2 trigger</div></div></div><div><div><div>2</div><div>CAP0 Trigger</div></div><div>3</div><div>CAP1 Trigger</div></div></div><div><div><div><div>D</div><div>Detachment condition</div></div><div>0</div><div>No detachment</div></div><div><div><div>1</div><div>DI control</div></div></div><div><div><div>2</div><div>Out of range</div></div></div></div></div></div></div> | | | | | |
| PL001 | E-cam Initial Position | | | <div>Speed</div> | <div>Position</div> | <div>Torque</div> |
| | Setting Range | Setting Unit | Mfr's Value | Effect | | |
| | -2147483647~+2147483647 | N/A | 0 | Immediate effect | | |
| PL003 | E-cam Occlusion Contact | | | <div>Speed</div> | <div>Position</div> | <div>Torque</div> |
| | Setting Range | Setting Unit | Mfr's Value | Effect | | |
| | -2147483647~+2147483647 | N/A | 0 | Immediate effect | | |
| PL005 | E-cam Occlusion Release Point | | | <div>Speed</div> | <div>Position</div> | <div>Torque</div> |
| | Setting Range | Setting Unit | Mfr's Value | Effect | | |
| | -2147483647~+214748364 | N/A | 0 | Immediate effect | | |
| | 7 | | | | | |
| PL007 | E-cam master axis numerator | | | <div>Speed</div> | <div>Position</div> | <div>Torque</div> |
| | Setting Range | Setting Unit | Mfr's Value | Effect | | |
| | 1~+2147483647 | N/A | 1 | Immediate effect | | |
| PL009 | E-cam master axis denominator | | | <div>Speed</div> | <div>Position</div> | <div>Torque</div> |
| | Setting Range | Setting Unit | Mfr's Value | Effect | | |
| | 1~+2147483647 | N/A | 1 | Immediate effect | | |
| PL011 | DO valid initial position | | | <div>Speed</div> | <div>Position</div> | <div>Torque</div> |
| | Setting Range | Setting Unit | Mfr's Value | Effect | | |
| | 0~2147483647 | N/A | 0 | Immediate effect | | |
| PL013 | DO valid ending position | | | <div>Speed</div> | <div>Position</div> | <div>Torque</div> |
| | Setting Range | Setting Unit | Mfr's Value | Effect | | |

| | | | | |
|---|--|--------------|-------------|------------------|
| | 0~2147483647 | N/A | 0 | Immediate effect |
| PL015 | E-cam Points Speed Position Torque | | | |
| | Setting Range | Setting Unit | Mfr's Value | Effect |
| | 5~720 | N/A | 5 | Immediate effect |
| PL016 | E-cam Pages Speed Position Torque | | | |
| | Setting Range | Setting Unit | Mfr's Value | Effect |
| | 0~14 | N/A | 0 | Immediate effect |
| PL017 | E-cam Table Refresh Speed Position Torque | | | |
| | Setting Range | Setting Unit | Mfr's Value | Effect |
| | 0~1 | N/A | 0 | Immediate effect |
| | 0 : Cam Table no refresh; 1 : Cam Table refresh; | | | |
| PL018 | E-cam Table Status Speed Position Torque | | | |
| | Setting Range | Setting Unit | Mfr's Value | Effect |
| | 0~3 | N/A | 0 | Immediate effect |
| | 0 : Ready to start ; 1 : Waiting for engaged trigger; 2 : Pre-engaged Status; 3 : Running Status; | | | |
| PL019 | Master Axis Position Speed Position Torque | | | |
| | Setting Range | Setting Unit | Mfr's Value | Effect |
| | 0~2147483647 | N/A | 0 | Check |
| PL021 | E-cam disengaged is captured again or not Speed Position Torque | | | |
| | Setting Range | Setting Unit | Mfr's Value | Effect |
| | 0~1 | N/A | 0 | Immediate effect |
| PL021=1, capture again. When selecting CAP trigger, the CAP and reset of high-speed counter are need to set as same source. | | | | |
| PL022 | Initial address of E-cam adjustment Speed Position Torque | | | |
| | Setting Range | Setting Unit | Mfr's Value | Effect |
| | 0~300 | N/A | 0 | Immediate effect |
| PL023 | Master axis variation Speed Position Torque | | | |
| | Setting Range | Setting Unit | Mfr's Value | Effect |
| | -2147483647~+2147483647 | N/A | 0 | Immediate effect |

| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
|-------|--|--------------------------|-------------|------------------|----------|--------|--------------------------|---|----------|---|-------|---|----------------------------|---|----------------------------|---|----------|---|------------------------------|---|---------|---|------------------------|---|-----------------|---|--------------------|---|-------------------|---|-----|---|----------------------------|---|-------|---|-------|
| PL025 | Slave axis variation | | | Speed | Position | Torque | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | Setting Range | Setting Unit | Mfr's Value | Effect | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | -2147483647~+2147483647 | N/A | 0 | Immediate effect | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| PL100 | High-speed counter 1 control command | | | Speed | Position | Torque | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | Setting Range | Setting Unit | Mfr's Value | Effect | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | Four-parameter | N/A | 0010 | Immediate effect | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | <div><div><div><div><div></div></div><div></div><div></div><div></div><div></div></div><div><div><div></div></div><div></div><div></div><div></div><div></div></div><div><div><div></div></div><div></div><div></div><div></div><div></div></div><div><div><div></div></div><div></div><div></div><div></div><div></div></div></div><div><table><tr><td>A</td><td>High-speed counter Reset</td></tr><tr><td>0</td><td>No Reset</td></tr><tr><td>1</td><td>Reset</td></tr></table><table><tr><td>B</td><td>High-speed counter enabled</td></tr><tr><td>0</td><td>Disabled</td></tr><tr><td>1</td><td>Enabled</td></tr></table><table><tr><td>C</td><td>High-speed counter direction</td></tr><tr><td>0</td><td>Reverse</td></tr><tr><td>1</td><td>Forward</td></tr></table><table><tr><td>D</td><td>CAP enabled</td></tr><tr><td>0</td><td>Close CAP function</td></tr><tr><td>1</td><td>Open CAP function</td></tr></table></div></div> | | | | | A | High-speed counter Reset | 0 | No Reset | 1 | Reset | B | High-speed counter enabled | 0 | Disabled | 1 | Enabled | C | High-speed counter direction | 0 | Reverse | 1 | Forward | D | CAP enabled | 0 | Close CAP function | 1 | Open CAP function | | | | | | | | |
| | A | High-speed counter Reset | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 0 | No Reset | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 1 | Reset | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| B | High-speed counter enabled | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 0 | Disabled | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 1 | Enabled | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| C | High-speed counter direction | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 0 | Reverse | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 1 | Forward | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| D | CAP enabled | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 0 | Close CAP function | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 1 | Open CAP function | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| PL101 | High-speed counter 1 command source | | | speed | position | torque | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | Setting Range | Setting Unit | Mfr's Value | Effect | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | Four-parameter | N/A | 0100 | Immediate effect | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | <div><div><div><div><div></div></div><div></div><div></div><div></div><div></div></div><div><div><div></div></div><div></div><div></div><div></div><div></div></div><div><div><div></div></div><div></div><div></div><div></div><div></div></div><div><div><div></div></div><div></div><div></div><div></div><div></div></div></div><div><table><tr><td>A</td><td>Reset source setting</td></tr><tr><td>0</td><td>Software</td></tr><tr><td>1</td><td>DI8</td></tr><tr><td>2</td><td>DI7</td></tr></table><table><tr><td>B</td><td>CAP command source setting</td></tr><tr><td>0</td><td>Software</td></tr><tr><td>1</td><td>DI8</td></tr><tr><td>2</td><td>DI7</td></tr></table><table><tr><td>C</td><td>Command source setting</td></tr><tr><td>0</td><td>Low-speed pulse</td></tr><tr><td>1</td><td>High-speed pulse</td></tr><tr><td>2</td><td>DI8</td></tr><tr><td>3</td><td>DI7</td></tr></table><table><tr><td>D</td><td>Duty-cycle correction mode</td></tr><tr><td>0</td><td>Close</td></tr><tr><td>1</td><td>Start</td></tr></table></div></div> | | | | | A | Reset source setting | 0 | Software | 1 | DI8 | 2 | DI7 | B | CAP command source setting | 0 | Software | 1 | DI8 | 2 | DI7 | C | Command source setting | 0 | Low-speed pulse | 1 | High-speed pulse | 2 | DI8 | 3 | DI7 | D | Duty-cycle correction mode | 0 | Close | 1 | Start |
| | A | Reset source setting | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 0 | Software | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 1 | DI8 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 2 | DI7 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| B | CAP command source setting | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 0 | Software | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 1 | DI8 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 2 | DI7 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| C | Command source setting | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 0 | Low-speed pulse | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 1 | High-speed pulse | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 2 | DI8 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 3 | DI7 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| D | Duty-cycle correction mode | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 0 | Close | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 1 | Start | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| PL102 | High-speed counter 1 compare register | | | speed | position | torque | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | Setting Range | Setting Unit | Mfr's Value | Effect | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | -2147483647~+2147483647 | N/A | 0 | Immediate effect | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |

| | | | | | | |
|-------|---|--------------|-------------|------------------|----------|--------|
| PL104 | High-speed counter 1 periodic value | | | speed | position | torque |
| | Setting Range | Setting Unit | Mfr's Value | Effect | | |
| | -2147483647~+2147483647 | N/A | 0 | Immediate effect | | |
| PL106 | High-speed counter 1 count value | | | speed | position | torque |
| | Setting Range | Setting Unit | Mfr's Value | Effect | | |
| | -2147483647~+2147483647 | N/A | 0 | Check | | |
| PL108 | High-speed counter1 CAP value | | | speed | position | torque |
| | Setting Range | Setting Unit | Mfr's Value | Effect | | |
| | -2147483647~+2147483647 | N/A | 0 | Check | | |
| PL110 | High-speed counter 2 control command | | | speed | position | torque |
| | Setting Range | Setting Unit | Mfr's Value | Effect | | |
| | Four- parameter | N/A | 0000 | Immediate effect | | |
| | <div><div><div><div><div></div></div><div></div><div></div><div></div><div></div></div><div><div><div><div>A</div><div>High-speed counter Reset</div></div><div><div>0</div><div>No Reset</div></div><div><div>1</div><div>Reset</div></div></div><div><div><div><div>B</div><div>High-speed counter enabled</div></div><div><div>0</div><div>Disabled</div></div><div><div>1</div><div>Enabled</div></div></div><div><div><div><div>C</div><div>High-speed counter direction</div></div><div><div>0</div><div>Reverse</div></div><div><div>1</div><div>Forward</div></div></div><div><div><div><div>D</div><div>CAP enabled</div></div><div><div>0</div><div>Close CAP function</div></div><div><div>1</div><div>Open CAP function</div></div></div></div></div></div></div></div></div> | | | | | |
| | | | | | | |
| | | | | | | |
| PL111 | High-speed counter 2 command source | | | speed | position | torque |
| | Setting Range | Setting Unit | Mfr's Value | Effect | | |
| | Four-parameter | N/A | 0100 | Immediate effect | | |

| | | | | |
|-------|---|--------------|-------------|---------------------|
| | <div><div><div><div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div></div></div><div><div><div><div>A</div><div>Reset source setting</div></div><div><div>0</div><div>Software</div></div><div><div>1</div><div>DI8</div></div><div><div>2</div><div>DI7</div></div></div><div><div><div>B</div><div>CAP command source setting</div></div><div><div>0</div><div>Software</div></div><div><div>1</div><div>DI8</div></div><div><div>2</div><div>DI7</div></div></div><div><div><div>C</div><div>Command source setting</div></div><div><div>0</div><div>Low-speed pulse</div></div><div><div>1</div><div>High-speed pulse</div></div><div><div>2</div><div>DI8</div></div><div><div>3</div><div>DI7</div></div></div><div><div><div>D</div><div>Duty-cycle correction mode</div></div><div><div>0</div><div>Close</div></div><div><div>1</div><div>Start</div></div></div></div></div></div> | | | |
| PL112 | High-speed counter 2 compare register <div>speedpositiontorque</div> | | | |
| | Setting Range | Setting Unit | Mfr's Value | Effect |
| | -2147483647~+2147483647 | N/A | 0 | Immediate effect |
| PL114 | High-speed counter 2 periodic value <div>speedpositiontorque</div> | | | |
| | Setting Range | Setting Unit | Mfr's Value | Effect |
| | -2147483647~+2147483647 | N/A | 0 | Immediate effect |
| PL116 | High-speed counter 2 count value <div>speedpositiontorque</div> | | | |
| | Setting Range | Setting Unit | Mfr's Value | Effect |
| | -2147483647~+2147483647 | N/A | 0 | Check |
| PL118 | High-speed counter2 CAP value <div>speedpositiontorque</div> | | | |
| | Setting Range | Setting Unit | Mfr's Value | Effect |
| | -2147483647~+2147483647 | N/A | 0 | Check |
| PL120 | High-speed pulse control <div>speedpositiontorque</div> | | | |
| | Setting range | Setting unit | Mfr's value | When enabled |
| | Four-parameter | N/A | 0000 | Effective Immediate |

| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
|-------|---|--------------|-------------|------------------|---|-------------------------|---|-------------------|---|---------|---|------------------|---|----------------------------|---|------|---|------|---|------|---|------|---|--------|---|--------|---|--------|---|----------------------------|---|------------------------------------|---|--|---|--|---|---|---|--------------------------|---|---------------------|---|--------|---|--------|---|--------|---|--------|---|-------|---|-------|---|-------|---|-------|---|-------|
| | <div><div><div><div><div>b</div><div></div><div></div><div></div><div></div></div><div><table><tr><td>A</td><td>High - speed pulse type</td></tr><tr><td>0</td><td>Direction + Pulse</td></tr><tr><td>1</td><td>Dipulse</td></tr><tr><td>2</td><td>Orthogonal pulse</td></tr></table><table><tr><td>B</td><td>High-speed pulse filtering</td></tr><tr><td>0</td><td>8MHz</td></tr><tr><td>1</td><td>4MHz</td></tr><tr><td>2</td><td>2MHz</td></tr><tr><td>3</td><td>1MHz</td></tr><tr><td>4</td><td>500KHz</td></tr><tr><td>5</td><td>200KHz</td></tr><tr><td>6</td><td>150KHz</td></tr></table><table><tr><td>C</td><td>High-speed pulse direction</td></tr><tr><td>0</td><td>HPULS anti-logic, HSIGN anti-logic</td></tr><tr><td>1</td><td>HPULS positive logic, HSIGN positive logic</td></tr><tr><td>2</td><td>HPULS anti-logic, HSIGN positive logic</td></tr><tr><td>3</td><td>HPULS positive logic, HSIGN anti- logic</td></tr><tr><td>4</td><td>Exchange HPULS and HSIGN</td></tr></table><table><tr><td>D</td><td>DI7/DI8 filter time</td></tr><tr><td>0</td><td>800KHz</td></tr><tr><td>1</td><td>400KHz</td></tr><tr><td>2</td><td>200KHz</td></tr><tr><td>3</td><td>100KHz</td></tr><tr><td>4</td><td>40KHz</td></tr><tr><td>5</td><td>30KHz</td></tr><tr><td>6</td><td>16KHz</td></tr><tr><td>7</td><td>8 KHz</td></tr><tr><td>8</td><td>4 KHz</td></tr></table></div></div></div></div> | | | | A | High - speed pulse type | 0 | Direction + Pulse | 1 | Dipulse | 2 | Orthogonal pulse | B | High-speed pulse filtering | 0 | 8MHz | 1 | 4MHz | 2 | 2MHz | 3 | 1MHz | 4 | 500KHz | 5 | 200KHz | 6 | 150KHz | C | High-speed pulse direction | 0 | HPULS anti-logic, HSIGN anti-logic | 1 | HPULS positive logic, HSIGN positive logic | 2 | HPULS anti-logic, HSIGN positive logic | 3 | HPULS positive logic, HSIGN anti- logic | 4 | Exchange HPULS and HSIGN | D | DI7/DI8 filter time | 0 | 800KHz | 1 | 400KHz | 2 | 200KHz | 3 | 100KHz | 4 | 40KHz | 5 | 30KHz | 6 | 16KHz | 7 | 8 KHz | 8 | 4 KHz |
| A | High - speed pulse type | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 0 | Direction + Pulse | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 1 | Dipulse | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 2 | Orthogonal pulse | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| B | High-speed pulse filtering | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 0 | 8MHz | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 1 | 4MHz | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 2 | 2MHz | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 3 | 1MHz | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 4 | 500KHz | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 5 | 200KHz | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 6 | 150KHz | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| C | High-speed pulse direction | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 0 | HPULS anti-logic, HSIGN anti-logic | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 1 | HPULS positive logic, HSIGN positive logic | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 2 | HPULS anti-logic, HSIGN positive logic | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 3 | HPULS positive logic, HSIGN anti- logic | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 4 | Exchange HPULS and HSIGN | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| D | DI7/DI8 filter time | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 0 | 800KHz | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 1 | 400KHz | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 2 | 200KHz | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 3 | 100KHz | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 4 | 40KHz | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 5 | 30KHz | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 6 | 16KHz | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 7 | 8 KHz | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 8 | 4 KHz | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| PL121 | Internal command source <div>speedpositiontorque</div> | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | Setting Range | Setting Unti | Mfr's Value | Effect | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | 0~1 | N/A | 0 | Immediate effect | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | 0 : Internal parameter PL100 1 : Internal PLC | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| PL122 | CAP1 indicating <div>speedpositiontorque</div> | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | Setting Range | Setting Unti | Mfr's Value | Effect | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | N/A | N/A | — | — | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| PL123 | CAP2 indicating <div>speedpositiontorque</div> | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | Setting Range | Setting Unti | Mfr's Value | Effect | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | N/A | N/A | — | — | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| PL124 | High-speed counter 1 increment <div>speedpositiontorque</div> | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | Setting Range | Setting Unti | Mfr's Value | Effect | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | N/A | N/A | — | — | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| PL126 | High-speed counter 2 increment <div>speedpositiontorque</div> | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | Setting Range | Setting Unti | Mfr's Value | Effect | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |

| | | | | | | | | | | | | | | | | | |
|-------|--|--------------|-------------|------------------|---|------------|---|------------------------------|---|---------------------------------------|---|--------------|---|------|---|-------|---|
| | N/A | N/A | — | — | | | | | | | | | | | | | |
| PL130 | Low-speed Timer 1 Configuration | | | PLC | | | | | | | | | | | | | |
| | Setting Range | Setting Unit | Mfr's Value | Effect | | | | | | | | | | | | | |
| | Two-parameter | N/A | 00 | Immediate Effect | | | | | | | | | | | | | |
| | <div><div><div><div></div></div><div><div></div></div><div><div></div></div></div><div><div></div><div></div></div><div><div></div></div></div> <div><table><tr><td>X</td><td>Timer Mode</td></tr><tr><td>0</td><td>Reach set value and maintain</td></tr><tr><td>1</td><td>Reach set value and continue to count</td></tr></table><table><tr><td>Y</td><td>Count Source</td></tr><tr><td>0</td><td>10ms</td></tr><tr><td>1</td><td>100ms</td></tr><tr><td>2</td><td>PLC stores B448</td></tr></table></div> | | | | X | Timer Mode | 0 | Reach set value and maintain | 1 | Reach set value and continue to count | Y | Count Source | 0 | 10ms | 1 | 100ms | 2 |
| X | Timer Mode | | | | | | | | | | | | | | | | |
| 0 | Reach set value and maintain | | | | | | | | | | | | | | | | |
| 1 | Reach set value and continue to count | | | | | | | | | | | | | | | | |
| Y | Count Source | | | | | | | | | | | | | | | | |
| 0 | 10ms | | | | | | | | | | | | | | | | |
| 1 | 100ms | | | | | | | | | | | | | | | | |
| 2 | PLC stores B448 | | | | | | | | | | | | | | | | |

| PL131 | Low-speed timer 2 Configuration | | | PLC |
| Setting Range | Setting Unit | Mfr's Value | Effect |
| Two-parameter | N/A | 00 | Immediate Effect |
| | | | |---|---------------------------------------| | X | Timer Mode | | 0 | Reach set value and maintain | | 1 | Reach set value and continue to count | | | | |---|-----------------| | Y | Count Source | | 0 | 10ms | | 1 | 100ms | | 2 | PLC stores B449 | | | | |
| PL132 | Low-speed timer 3 Configuration | | | PLC |
| Setting Range | Setting Unit | Mfr's Value | Effect |
| Two-parameter | N/A | 00 | Immediate Effect |
| | | | |---|---------------------------------------| | X | Timer Mode | | 0 | Reach set value and maintain | | 1 | Reach set value and continue to count | | | | |---|-----------------| | Y | Count Source | | 0 | 10ms | | 1 | 100ms | | 2 | PLC stores B450 | | | | |
| PL133 | Low-speed timer 4 Configuration | | | PLC |
| Setting Range | Setting Unit | Mfr's Value | Effect |
| Two-parameter | N/A | 00 | Immediate Effect |

| | | | | | | | | | | | | | | | | | | |
|-------|---|--------------|-------------|------------------|---|------------|---|------------------------------|---|---------------------------------------|---|--------------|---|------|---|-------|---|-----------------|
| | <div><div><div><div></div><div></div><div></div></div><div></div></div><div><table><tr><td>X</td><td>Timer Mode</td></tr><tr><td>0</td><td>Reach set value and maintain</td></tr><tr><td>1</td><td>Reach set value and continue to count</td></tr></table><table><tr><td>Y</td><td>Count Source</td></tr><tr><td>0</td><td>10ms</td></tr><tr><td>1</td><td>100ms</td></tr><tr><td>2</td><td>PLC stores B451</td></tr></table></div></div> | | | | X | Timer Mode | 0 | Reach set value and maintain | 1 | Reach set value and continue to count | Y | Count Source | 0 | 10ms | 1 | 100ms | 2 | PLC stores B451 |
| X | Timer Mode | | | | | | | | | | | | | | | | | |
| 0 | Reach set value and maintain | | | | | | | | | | | | | | | | | |
| 1 | Reach set value and continue to count | | | | | | | | | | | | | | | | | |
| Y | Count Source | | | | | | | | | | | | | | | | | |
| 0 | 10ms | | | | | | | | | | | | | | | | | |
| 1 | 100ms | | | | | | | | | | | | | | | | | |
| 2 | PLC stores B451 | | | | | | | | | | | | | | | | | |
| PL140 | Low-speed timer 1 set value <div>PLC</div> | | | | | | | | | | | | | | | | | |
| | Setting Range | Setting Unit | Mfr's Value | Effect | | | | | | | | | | | | | | |
| | -2147483647~+2147483647 | N/A | 0 | Immediate Effect | | | | | | | | | | | | | | |
| PL142 | Low-speed timer 2 set value <div>PLC</div> | | | | | | | | | | | | | | | | | |
| | Setting Range | Setting Unit | Mfr's Value | Effect | | | | | | | | | | | | | | |
| | -2147483647~+2147483647 | N/A | 0 | Immediate Effect | | | | | | | | | | | | | | |
| PL144 | Low-speed timer 3 set value <div>PLC</div> | | | | | | | | | | | | | | | | | |
| | Setting Range | Setting Unit | Mfr's Value | Effect | | | | | | | | | | | | | | |
| | -2147483647~+2147483647 | N/A | 0 | Immediate Effect | | | | | | | | | | | | | | |
| PL146 | Low-speed timer 4 set value <div>PLC</div> | | | | | | | | | | | | | | | | | |
| | Setting Range | Setting Unit | Mfr's Value | Effect | | | | | | | | | | | | | | |
| | -2147483647~+2147483647 | N/A | 0 | Immediate Effect | | | | | | | | | | | | | | |
| PL150 | Low-speed timer 1 current value <div>PLC</div> | | | | | | | | | | | | | | | | | |
| | Setting Range | Setting Unit | Mfr's Value | Effect | | | | | | | | | | | | | | |
| | -2147483647~+2147483647 | N/A | — | Immediate Effect | | | | | | | | | | | | | | |
| PL152 | Low-speed timer 2 current value <div>PLC</div> | | | | | | | | | | | | | | | | | |
| | Setting Range | Setting Unit | Mfr's Value | Effect | | | | | | | | | | | | | | |
| | -2147483647~+2147483647 | N/A | — | — | | | | | | | | | | | | | | |
| PL154 | Low-speed timer 3 current value <div>PLC</div> | | | | | | | | | | | | | | | | | |
| | Setting Range | Setting Unit | Mfr's Value | Effect | | | | | | | | | | | | | | |
| | -2147483647~+2147483647 | N/A | — | — | | | | | | | | | | | | | | |
| PL156 | Low-speed timer 4 current value <div>PLC</div> | | | | | | | | | | | | | | | | | |
| | Setting Range | Setting Unit | Mfr's Value | Effect | | | | | | | | | | | | | | |
| | -2147483647~+2147483647 | N/A | — | — | | | | | | | | | | | | | | |
| PL160 | High-speed counter 1 set <div>PLC</div> | | | | | | | | | | | | | | | | | |
| | Setting Range | Setting Unit | Mfr's Value | Effect | | | | | | | | | | | | | | |
| | Two-parameter | N/A | 00 | Immediate Effect | | | | | | | | | | | | | | |


| | | | | | | | | | | | | | | | | |
|-------|---|--------------|-------------|------------------|---|------------|---|------------------------------|---|---------------------------------------|---|--------------|---|-------|---|-----------------|
| | <div><div><div><div></div><div></div><div></div></div><div><div></div><div></div></div></div><div><table><tr><td>X</td><td>Timer Mode</td></tr><tr><td>0</td><td>Reach set value and maintain</td></tr><tr><td>1</td><td>Reach set value and continue to count</td></tr></table><table><tr><td>Y</td><td>Count Source</td></tr><tr><td>0</td><td>0.1ms</td></tr><tr><td>1</td><td>PLC stores B432</td></tr></table></div></div> | | | | X | Timer Mode | 0 | Reach set value and maintain | 1 | Reach set value and continue to count | Y | Count Source | 0 | 0.1ms | 1 | PLC stores B432 |
| X | Timer Mode | | | | | | | | | | | | | | | |
| 0 | Reach set value and maintain | | | | | | | | | | | | | | | |
| 1 | Reach set value and continue to count | | | | | | | | | | | | | | | |
| Y | Count Source | | | | | | | | | | | | | | | |
| 0 | 0.1ms | | | | | | | | | | | | | | | |
| 1 | PLC stores B432 | | | | | | | | | | | | | | | |
| PL161 | High-speed counter 1 set value <div>PLC</div> | | | | | | | | | | | | | | | |
| | Setting Range | Setting Unit | Mfr's Value | Effect | | | | | | | | | | | | |
| | -2147483647~+2147483647 | N/A | 0 | Immediate Effect | | | | | | | | | | | | |
| PL163 | High-speed counter 1 current value <div>PLC</div> | | | | | | | | | | | | | | | |
| | Setting Range | Setting Unit | Mfr's Value | Effect | | | | | | | | | | | | |
| | -2147483647~+2147483647 | N/A | — | — | | | | | | | | | | | | |
| PL165 | High-speed counter 2 set <div>PLC</div> | | | | | | | | | | | | | | | |
| | Setting Range | Setting Unit | Mfr's Value | Effect | | | | | | | | | | | | |
| | Two-parameter | N/A | 00 | Immediate Effect | | | | | | | | | | | | |
| | <div><div><div><div></div><div></div><div></div></div><div><div></div><div></div></div></div><div><table><tr><td>X</td><td>Timer Mode</td></tr><tr><td>0</td><td>Reach set value and maintain</td></tr><tr><td>1</td><td>Reach set value and continue to count</td></tr></table><table><tr><td>Y</td><td>Count Source</td></tr><tr><td>0</td><td>0.1ms</td></tr><tr><td>1</td><td>PLC stores B436</td></tr></table></div></div> | | | | X | Timer Mode | 0 | Reach set value and maintain | 1 | Reach set value and continue to count | Y | Count Source | 0 | 0.1ms | 1 | PLC stores B436 |
| X | Timer Mode | | | | | | | | | | | | | | | |
| 0 | Reach set value and maintain | | | | | | | | | | | | | | | |
| 1 | Reach set value and continue to count | | | | | | | | | | | | | | | |
| Y | Count Source | | | | | | | | | | | | | | | |
| 0 | 0.1ms | | | | | | | | | | | | | | | |
| 1 | PLC stores B436 | | | | | | | | | | | | | | | |
| PL166 | High-speed counter 2 set value <div>PLC</div> | | | | | | | | | | | | | | | |
| | Setting Range | Setting Unit | Mfr's Value | Effect | | | | | | | | | | | | |
| | -2147483647~+2147483647 | N/A | 0 | Immediate Effect | | | | | | | | | | | | |
| PL168 | High-speed counter 2 current value <div>PLC</div> | | | | | | | | | | | | | | | |
| | Setting Range | Setting Unit | Mfr's Value | Effect | | | | | | | | | | | | |
| | -2147483647~+2147483647 | N/A | — | — | | | | | | | | | | | | |
| PL170 | PLC Start Function <div>PLC</div> | | | | | | | | | | | | | | | |
| | Setting Range | Setting Unit | Mfr's Value | Effect | | | | | | | | | | | | |
| | 0~1 | N/A | 0 | Immediate Effect | | | | | | | | | | | | |
| | 0 : Not start PLC function; 1 : Start PLC function; | | | | | | | | | | | | | | | |
| PL172 | PLC Start Adress <div>PLC</div> | | | | | | | | | | | | | | | |
| | Setting Range | Setting Unit | Mfr's Value | Effect | | | | | | | | | | | | |
| | 0~2000 | N/A | 0 | Immediate Effect | | | | | | | | | | | | |

| | | | | |
|--------------|--|--------------|-------------|------------------|
| PL174 | PLC Reset PLC | | | |
| | Setting Range | Setting Unit | Mfr's Value | Effect |
| | 0~1 | N/A | 0 | Immediate Effect |
| | 0: Not reset PLC function; 1: Reset PLC function; | | | |
| PL199 | Download of E-cam and PLC data PLC | | | |
| | Setting Range | Setting Unit | Mfr's Value | Effect |
| | 0~1 | N/A | 0 | Immediate Effect |
| | When user refreshes cam table with PLC, if communication mode is adopted, user must set 1 to address 1199, input cam table data, set cam table points (more than 5) to address 1015 and set 1 to address 1017. | | | |

8.1.7 Function setting of DI and DO

Programmable terminals include DI1~DI8. (The related parameters are from Po407 to Po414).

Input contactor type is used to select common-open or common-close interface type. For example, when some malfunction occurs, servo drive must stop safely, which needs the common-close switch.

 After changing these parameters, turn OFF the main circuit and control power supplies and then turn them ON again to enable the new settings.

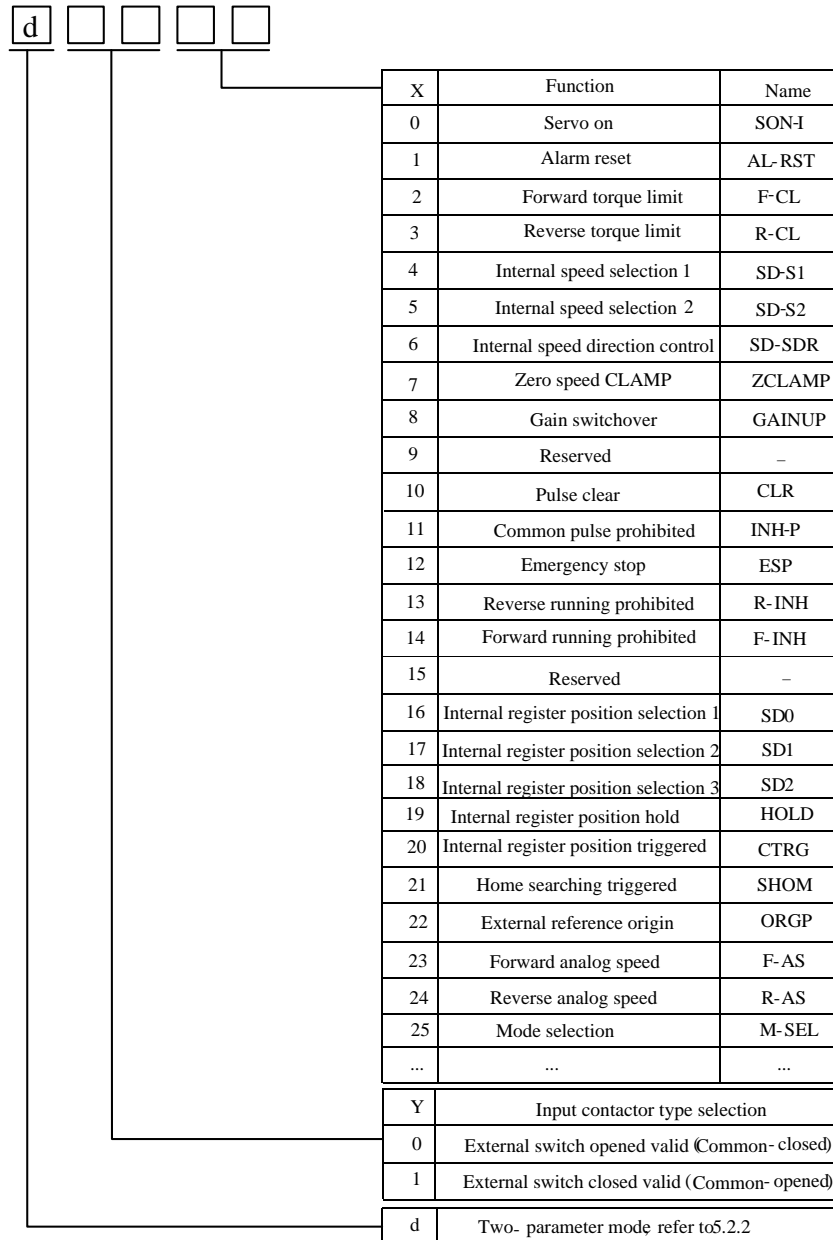



Fig 8.1.1 Setting programmable input terminal function

| Setting value | Function | Name | Instruction | Signal type |
|---------------|--|----------|--|---------------|
| 0 | Servo on | SON-I | Servo on. Switch servo to “servo ready” | Level trigger |
| 1 | Alarm reset | AL-RST | A number of faults (Alarms) can be cleared by activating AL-RST. | Edge trigger |
| 2 | Forward torque limit | F-CL | Servo drive output torque when motor is forbidden forward run. | Level trigger |
| 3 | Reverse torque limit | R-CL | Servo drive output torque when motor is forbidden reverse run. | Level trigger |
| 4 | Internal speed selection 1 | SD-S1 | The combination of internal speed selection 1 and internal speed selection 2 gets four kinds of internal speed. | Level trigger |
| 5 | Internal speed selection 2 | SD-S2 | | |
| 6 | Internal speed direction control | SD-DIR | Motor run direction is controlled by SD-DIR at the mode of internal register speed. | Level trigger |
| 7 | Zero speed CLAMP | ZCLAMP | When the absolute value of speed is lower than the value of zero speed CLAMP, the motor speed is 0 and position is locked. | Level trigger |
| 8 | Gain switchover | GAIN-SEL | Gain switchover | Level trigger |
| 9 | Internal position mode stop | STOP | Internal position mode stop | Edge trigger |
| 10 | Pulse clear | CLR | Position deviation register returns to 0 at the position mode. | Edge trigger |
| 11 | Command pulse prohibited | INH-P | External pulse command is invalid at the position mode. | Level trigger |
| 12 | Emergency stop | ESP | Motor stops urgently. | Level trigger |
| 13 | Reverse run prohibited | R-INH | Motor is forbidden reverse run. | Level trigger |
| 14 | Forward run prohibited | F-INH | Motor is forbidden forward run. | Level trigger |
| 15 | — | — | Reversed | Level trigger |
| 16 | Internal register position selection 1 | SD0 | Internal register position selection | Level trigger |
| 17 | Internal register position selection 2 | SD1 | Internal register position selection | Level trigger |
| 18 | Internal register position selection 3 | SD2 | Internal register position selection | Level trigger |

| | | | | |
|----|--------------------------------------|----------|--|---------------|
| 19 | Internal register position hold | HOLD | The present position command is hold when internal register position hold is valid. If this command is invalid, keep executing the present position command. | Edge trigger |
| 20 | Internal register position triggered | CTRG | Internal register position triggered mode | Edge trigger |
| 21 | Home searching triggered | SHOM | Home searching triggered mode | Edge trigger |
| 22 | External reference origin | ORGP | ORGP is external reference origin. | Edge trigger |
| 23 | Analog speed forward | F-AS | Realized by controlling terminal. | Level trigger |
| 24 | Analog speed reverse | R-AS | Realized by controlling terminal. | Level trigger |
| 25 | Mode switchover | M-SEL | Realized by controlling terminal. | Level trigger |
| 26 | Terminal forward jogging | JOGU | Realized by controlling terminal. | Level trigger |
| 27 | Terminal reverse jogging | JOGD | Realized by controlling terminal. | Level trigger |
| 28 | Motor overheat | HOT | Realized by controlling terminal. | Level trigger |
| 29 | Interruption of fixed length trigger | XintTrig | When interruption enabled terminal is valid, rising edge triggers internal register position mode. | Level trigger |
| 30 | Interruption of fixed length reset | XintRest | Enable system to respond new interruption. | Edge trigger |
| 31 | Gantry synchronous start | GAN-SYNC | Gantry synchronous start | Level trigger |
| 32 | Electric cam act | CAM-ACT | Realized by controlling terminal | Level trigger |
| 33 | Electric cam selection | GEAR_SEL | | Level trigger |

Programmable output terminals include terminals from DO1 to DO4 (The related parameters are from Po421 to Po424), ALM (The related parameter is Po425).

 After changing these parameters, turn OFF the main circuit and control power supplies and then turn them ON again to enable the new settings.

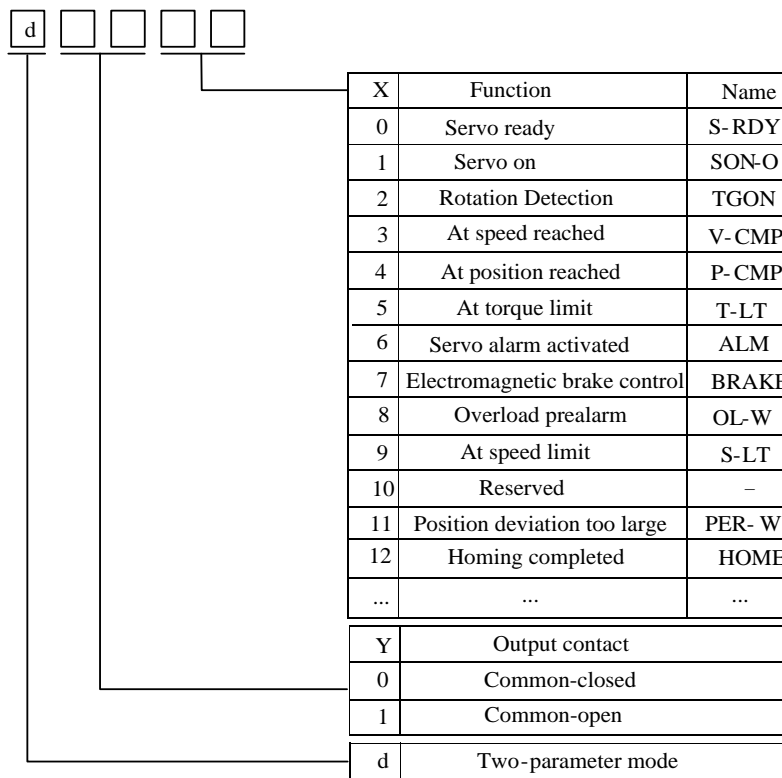


Fig 8.1.2 Setting programmable input terminal function

Function instruction of programmable output terminal:

| Setting value | Function | Name | Instructions |
|---------------|-------------------------------|-------|---|
| 0 | Servo ready | S-RDY | S-RDY is activated when the servo drive is ready to run. All fault and alarm conditions, if present, have been cleared. |
| 1 | Servo on | SON-O | SON-O is activated when the servo motor is ON. |
| 2 | Rotation Detection | TGON | When the absolute value of speed is higher than the value of at rotation detection, TGON is activated. |
| 3 | At speed reached | V-CMP | V-CMP is activated when the servo motor has reached the target rotation speed. |
| 4 | At position reached | P-CMP | Position completed |
| 5 | At torque limit | T-LT | T-LT is activated when toque is limited. |
| 6 | Servo alarm activated | ALM | ALM is activated when the drive has detected a fault condition. |
| 7 | Electromagnetic brake control | BRAKE | BRAKE is activated actuation of motor brake. |
| 8 | Overload pre-alarm | OL-W | Overload pre-alarm signal |
| 9 | At speed limit | S-LT | S-LT is activated when speed is limited. |

| | | | |
|----|------------------------------|---------|---|
| 10 | Internal position triggered | CTRGING | CTRGING is activated when internal position trigger is applied. |
| 11 | Position deviation too large | PER-W | PER-W is activated when position deviation is too large. |
| 12 | Homing completed | HOME | HOME is activated when the servo drive has detected that the HOME sensor has been detected. |
| 13 | Reserved | | Reserved |
| 14 | Electric cam act | CAM_AC | CAM_AC is activated when electric cam act. |

IX Maintenance and Inspection

9.1 Alarm and Trouble shooting at start

9.1.1 Position control mode

| Start-up process | Description | Cause | Countermeasures |
|--|---|---|---|
| Connect control power (L1C,L2C) and main power supply (R/L1 ,S/L2, T/L3) | Digital tube is not lighted or green light is not lighted | 1.Control terminal is disconnected | <ul style="list-style-type: none"> ▪ Rewire ▪ Connect L1C/L2C power cable to socket separately. |
| | | 2.Control power supply fault | <ul style="list-style-type: none"> ▪ Check the voltage between L1C and L2C <p>Note: 380V servo drive doesn't need to connect to L1C and L2C.</p> |
| | | 3. Servo drive fault | Please contact with manufacturer. |
| | Keypad panel displays 'AL-XXX' | Refer to chapter 9.2 to find the cause and solve the problem. | |
| Servo drive enabled signal is valid (/S-ON is ON) | Keypad panel displays 'AL-XXX' | Refer to chapter 9.2 to find the cause and solve the problem. | |
| | Servo motor is in unlocked state | 1. Servo drive enabled signal is invalid | <ul style="list-style-type: none"> ▪ Check whether green light is on, if it is not on, take the following step. ▪ Check whether Po004=0, if it is not, set 0 to Po004 and repower on. ▪ Check whether Lo-15.A is 1, if it is not, check whether wiring is correct. |
| | | 2. Control mode is wrong | <ul style="list-style-type: none"> ▪ Check whether Po001.X is correct. |
| Input position command | Servo motor doesn't rotate | Lo-08 has no change. | <ul style="list-style-type: none"> ▪ High/low speed pulse interface is connected wrong. <p>When user sets pulse command source to Po374, please check the wiring for high/low speed pulse interface, referring</p> |

| | | | |
|--------------------------------------|------------------------------------|---|---|
| | | | <p>to chapter 4.</p> <p>No position command is input</p> <ol style="list-style-type: none"> Whether DI function 2 (forward torque limit) or DI function 3 (reverse torque limit) is used. Whether DI function 11 (common pulse prohibited) is used. Check whether Po374 is set correctly. |
| | Servo motor is galloping. | | <ul style="list-style-type: none"> ▪ Encoder cable fault <ol style="list-style-type: none"> Check whether Lo-04 value is correct when motor rotates 1 revolution. Check whether servo drive trips into AL-17 <ul style="list-style-type: none"> ▪ U/V/W motor cable fault. <ol style="list-style-type: none"> Check whether U/V/W wiring is correct. If wiring is correct, please study motor angle referring to chapter 7.2. |
| Rotation is not smooth at low speed. | Low speed rotation is not smooth. | Gain is not set properly. | <ul style="list-style-type: none"> ▪ Adjust gain according to chapter 7. |
| | Motor shaft vibrates side to side. | Rotation inertia ratio (Po013) is too high. | <ul style="list-style-type: none"> ▪ If servo drive runs safely, please recognize inertia again according to chapter 7.3. ▪ Adjust gain according chapter 7. |
| Normally running | Location is not accurate. | There is position error. | <ul style="list-style-type: none"> ▪ Pulse received by Lo-08 is not same as the one sent by PC/PLC.. <ol style="list-style-type: none"> Check whether servo drive grounding is reliable. Check whether signal cable is twisted-pair shield cable, whether shielding layer is connected to housing correctly. <ul style="list-style-type: none"> ▪ Check whether motor shaft coupler is locked tightly. ▪ Check whether device has vibration. Adjust the gain according to chapter 7. |

9.1.2 Speed control mode

| Start-up process | Description | Cause | Countermeasures |
|--|---|--|---|
| Connect control power(L1C,L2C) and main power supply(R/L1 ,S/L2, T/L3) | Digital tube is not on or green light is not on | 1. Control terminal is disconnected | <ul style="list-style-type: none"> ▪ Rewire ▪ Connect L1C/L2C power cable to socket separately. |
| | | 2.Control power supply fault | <ul style="list-style-type: none"> ▪ Check the voltage between L1C and L2C ▪ Note: 380V servo drive doesn't need to connect to L1C and L2C. |
| | | 3.Servo drive fault | Please contact with manufacturer. |
| | Keypad Panel displays 'AL-XXX'. | Refer to chapter 9.2 to find the cause and solve the problem. | |
| Servo drive enabled signal is valid (/S-ON is ON) | Keypad Panel displays 'AL-XXX'. | Refer to chapter 9.2 to find the cause and solve the problem. | |
| | Servo motor is in unlocked state | 1. Servo drive enabled signal is invalid | <ul style="list-style-type: none"> ▪ Check whether green light is on, if it is not, take the following step. ▪ Check whether Po004=0, if it is not, set 0 to Po004, then repower on. ▪ Check whether Lo-15.A is 1, if it is not, check whether wiring is correct. |
| | | 2.Control mode is wrong | <ul style="list-style-type: none"> ▪ Check whether Po001.X is correct. |
| Input position command | Servo motor doesn't rotate or speed is not correct. | 1. Lo-12 has no change. 2. Forward and reverse running is prohibited. | <ul style="list-style-type: none"> ▪ Analog interface wiring is wrong. Before setting command source to Po428, check whether analog wiring is correct , referring to chapter 4. ▪ No speed command is input. 1. Whether DI function 2 (forward torque limit) or DI function 3(reverse torque limit) is used. 2. Whether DI function 11 (common pulse prohibited) is used. 3. Check whether Po428 is set correctly. 4. Check whether Po113, Po114, Po115 is zero when digital command is given. |
| | Servo motor is galloping. | | <ul style="list-style-type: none"> ▪ Encoder cable fault 1. Check whether Lo-04 value is correct when motor rotates 1 revolution. 2. Check whether servo drive trips into AL-17 <ul style="list-style-type: none"> ▪ U/V/W motor cable is wrong 1. Check whether U/V/W wiring is correct. 2. If wiring is correct, please study motor angle referring to chapter 7.2. |
| Rotation is not smooth at low | Rotation is not smooth at low speed. | Gain is set improperly. | <ul style="list-style-type: none"> ▪ Adjust gain according to chapter7. |

| | | | |
|--------|------------------------------------|---|--|
| speed. | Motor shaft vibrates side to side. | Rotation inertia ratio of load (Po013) is too high. | <ul style="list-style-type: none"> If servo drive runs safely, please recognize inertia again according to chapter 7.3. Adjust gain according chapter 7. |
|--------|------------------------------------|---|--|

9.1.3 Torque control mode

| Start-up process | Description | Cause | Countermeasures |
|---|--|--|--|
| Connect control power(L1C,L2C) and main power supply(R/L1 ,S/L 2, T/L3) | Digital tube is not on or green light is not on | 1. Control terminal is disconnected | <ul style="list-style-type: none"> Rewire Connect L1C/L2C power cable to socket separately. |
| | | 2.Control power supply fault | <ul style="list-style-type: none"> Check the voltage between L1C and L2C Note: 380V servo drive doesn't need to connect to L1C and L2C. |
| | | 3.Servo drive fault | Please contact with manufacturer. |
| | Keypad panel displays 'AL-XXX'. | Refer to chapter 9.2 to find the cause and solve the problem. | |
| Servo drive enabled signal is valid (/S-ON is ON) | Kaypad panel displays 'AL-XXX'. | Refer to chapter 9.2 to find the cause and solve the problem. | |
| | Servo motor is in unlocked state. | 1. Servo drive enabled signal is invalid | <ul style="list-style-type: none"> Check whether green light is on, if it is not, take the following step. Check whether Po004=0, if it is not, set 0 to Po004, then repower on. Check whether Lo-15.A is 1, if it is not, check whether wiring is correct. |
| | | 2.Control mode is wrong | <ul style="list-style-type: none"> Check whether Po001.X is correct. |
| Input torque command | Servo motor doesn't rotates or speed is not correct. | 1. Lo-13 has no change. 2. Forward and reverse running is prohibited. | <ul style="list-style-type: none"> Analog interface wiring is wrong. Check whether analog wiring is correct when set command source by Po428, referring to chapter 4. No speed command is input. 1. Check whether DI function 2 (forward torque limit) or DI function 3(reverse torque limit) is used. 2. Check whether DI function 11 (common pulse prohibited) is used. 3. Check whether Po429 is set correctly. 4.Check whether Po204 is zero when digital command is given. |
| | Servo motor is galloping. | | <ul style="list-style-type: none"> Encoder cable fault 1. Check whether Lo-04 value is correct when motor rotates 1 revolution. 2. Check whether servo drive trips into AL-17 <ul style="list-style-type: none"> U/V/W motor cable is wrong |

| | | | |
|--------------------------------------|--------------------------------------|---|--|
| | | | 1. Check whether U/V/W wiring is correct. 2. If wiring is correct, study motor angle, referring to chapter 7.2. |
| Rotation is not smooth at low speed. | Rotation is not steady at low speed. | Gain is set improperly. | ▪ Adjust gain according to chapter 7. |
| | Motor shaft vibrates side to side. | Rotation inertia ratio (Po013) is too high. | ▪ If servo drive runs safely, please recognize inertia again according to chapter 7.3. Adjust gain according chapter 7. |

9.2 Alarm code and possible cause

| Code | Alarm code | Alarm name | Possible Cause |
|------|------------|----------------------------------|---|
| 1 | AL-01 | Overcurrent | Output short-circuit or module malfunction |
| 2 | AL-02 | Overvoltage | Main circuit DC voltage is too high. |
| 3 | AL-03 | Undervoltage | Main circuit Dcvoltage is too low |
| 4 | AL-04 | Hardware fault | Hardware failure inside drive |
| 5 | AL-05 | Electric angle recognition error | Motor line sequence error |
| 6 | AL-06 | Overload | High current is ouput for long time. |
| 7 | AL-07 | Overspeed | Speed is too high |
| 8 | AL-08 | Reserved | — |
| 9 | AL-09 | Large position control error | Position loop trace error overflow |
| 10 | AL-10 | Encoder fault | Servo motor failure |
| 11 | AL-11 | Emergency stop | External emergency stop terminal is valid |
| 12 | AL-12 | Servo drive overheat | Temperature of servo drive radiator is too high |
| 13 | AL-13 | Input phase loss | In the state of power supply connection of main circuit, the voltage of one phase in three-phase power supply is too low. |
| 14 | AL-14 | Regenerative braking error | Brake parameters aren't set correct or continuous brake time is too long. |
| 15 | AL-15 | — | — |
| 16 | AL-16 | Repeat setting of input terminal | Repeat setting of input terminal |
| 17 | AL-17 | Disconnected encoder cable | Disconnection of servo encoder line |
| 18 | AL-18 | Rotary inertia recognition fault | Alarm when wrong rotary inertia recognition |
| 19 | AL-19 | Alarm of encoder battery | Battery alarm of servo encoder |
| 20 | AL-20 | Uninitialized E2ROM | Unintialized of E2ROM for servo motor |
| 21 | AL-21 | Large zero drift | Servo drive zero drift is too large |
| 22 | AL-22 | Z signal lost | Z signal is not detected after encoder rotates 3 |

| | | | |
|----|-------|--|---|
| | | | times continuously. |
| 23 | AL-23 | —— | —— |
| 24 | AL-24 | Battery undervoltage | Encoder battery undervoltage |
| 25 | AL-25 | Motor overheat | Motor temperature is too high. |
| 26 | AL-26 | Disconnected temperature detection circuit | Temperature detection circuit is disconnected |
| 27 | AL-27 | Overtravel | Overtravel alarm |
| 28 | AL-28 | E2ROM error | E2ROM error |
| 29 | AL-29 | Ground protection | Ground protection |
| 30 | AL-30 | Motor locked-rotor protection | Locke-totor happens when motor running |
| 31 | AL-31 | Large mixed error of full closed-loop | Mixed error of full closed-loop is too large |
| 32 | AL-32 | Synchronism error of gantry | Gantry drive is not synchronous. |
| 33 | AL-33 | Electronic cam error | Electronic cam error |
| 34 | AL-34 | PLC command error | PLC command error |
| 35 | AL-35 | Home searching overtime | Homing search is overtime |
| 36 | AL-36 | Parameter copy error | Parameter copy error |
| 37 | AL-41 | high-impedance state not detected | High-impedance state output is not detected after 8-core encoder is powered on. |

9.3 Alarm Display Table and Trouble shooting

| | |
|--|---|
| <h2 style="text-align: center;">Attention</h2> | |
| | |
| ★ | When malfunction occurs to servo drive, do not run by resetting immediately. Check any causes and get it removed if there is any. |
| ★ | Take counter measures by referring to this manual in case of any malfunctions on drive. Should it still be unsolved, contact with local Parker agent or Parker manufacturer. Never attempt any repairing without authorization. |

| Alarm Code | Alarm Name | Possible Cause | Treatment |
|------------|-------------|--|---|
| AL-01 | Overcurrent | Main circuit wiring error | Check the wiring. |
| | | Output short-circuit | Cable is short-circuit, fix or exchange it. |
| | | Short-circuit inside of servo drive or grounding short-circuit | Fix or exchange servo drive. |
| | | Wrong action because of interference | Adopt anti-interference methods, improve wiring, etc. |
| | | Servo drive is damaged. | Fix or exchange servo drive |

| | | | |
|-------|----------------------------------|---|--|
| AL-02 | Overvoltage | Input voltage is too high | Check input voltage. |
| | | Load rotary inertia too large | Prolong deceleration time |
| | | | Add external braking resistor |
| | | | Reduce load. |
| | | | Increase drive capacity. |
| AL-03 | Undervoltage | Input voltage is low | Check input voltage. |
| | | | Check whether main circuit is powered on. |
| AL-04 | Hardware fault | Hardware fault | Contact with Parker. |
| AL-05 | Electric angle recognition error | Motor line sequence error | Adjust line sequences, exchange two of them. |
| AL-06 | Overload | Servo motor or encoder wiring is bad. | Check the wiring of servo motor and encoder. |
| | | Machanical factors | Check the transmission ratio of mechanical equipments. |
| | | Servo drive runs when electromagnetic brake is not released | Check the wiring of electromagnetic brake. |
| | | Heavy load | Reduce load. |
| | | | Increase capacity of drive. |
| AL-07 | Overspeed | Servo motor rotary speed is higher than max speed | Servo motor wiring, encoder wiring or mechanical fault. |
| AL-08 | Reserved | | |
| AL-09 | Large position control error | U, V, W or encoder connection error or connector contact is bad | Improve connection. |
| | | Servo Drive gain is low. | Increase gain, adjust gain of speed and position |
| | | The frequency of position pulse is too high | Reduce pulse frequency or adjust electronic gear |
| AL-10 | Encoder fault | Disconnected encoder or servo motor is locked-rotor | Check encoder connection |
| | | Servo motor fault | Power on again, if alarm still occurs, please contact with Parker. |
| AL-11 | Emergency stop | Logic of ESP input terminal is not corresponding to connection. | Check connection or modify terminal logic. |
| | | Hardware damage of ESP input terminal | Set the function to other input terminal or contact with Parker. |
| AL-12 | Servo drive overheat | Enviroment temperature is too high | Improve ventilation. |
| | | Dirty radiator | Clean air outlet and cooling radiator. |
| | | Foreign matter in fan | Clear fan. |
| | | Fan damage | Exchange fan. |

| | | | |
|-------|----------------------------------|--|---|
| | | Improper installation of drive, such as poor ventilation or wrong install direction. | Install as required. |
| | | Too heavy load | |
| | | Discharge energy is too large | |
| AL-13 | Input phase loss | Phase loss with input phase | Check input power supply. |
| | | Use single-phase power supply. | Check parameter setting |
| AL-14 | Regenerative braking error | Wrong braking resistor parameter | Change parameter. |
| | | Continuous brake time is too long | Check load, servo only can drive non-potential energy load. |
| AL-16 | Repeat setting of input terminal | Repeat setting of input terminal | Reset input terminal. |
| AL-17 | Disconnected encoder cable | Disconnected encoder cable | Disconnected or damage of encoder cable |
| AL-18 | Rotary inertia recognition fault | Rotary inertia recognition fault | Turn up Po013 manually. |
| AL-19 | Alarm of encoder battery | Alarm of encoder battery | 1. Check if encoder cable is connected well. If it is disconnected, reconnect it and reset alarm. 2. Check if battery level is 3.6V. If level is lower than 3.2V, keep control power at "ON" state, 3. Shield AL-19: So-38=1, So-43=1 reset alarm. 4. Check if connecton of battery is reliable. |
| AL-20 | Uninitialized E2ROM | Unintialized E2ROM of servo motor | Servo motor encoder is not initialized, please study motor angle manually. |
| AL-21 | Large zero drift | Servo drive zero drift is too large | Check wiring or parameter setting. |
| AL-22 | Z signal lost | Z signal is not detected after encoder rotates 3 times continuously. | Check encoder and Z signal cable. |
| AL-23 | Reserved | | |
| AL-24 | Encoder battery undervoltage | Encoder battery undervoltage | 1. If encoder battery is undervoltage, AL-24 will occur leading to enoder position loss. Reset mechanical origin to eliminate. 2. Shield AL-24: So-48=1, So-41=1(set current position as machnical origin), So-43=1 reset alarm, PC/PLC will reset the mechanical origin. |
| AL-25 | Motor overheat | Motor temperature is too high. | Improve ventilation |

| | | | |
|-------|---|---|--|
| AL-26 | Temperature detection circuit is disconnected | Temperature detection circuit is disconnected | Check the cable. |
| AL-27 | Overtravel | Overtravel alarm | Setting range of FWD/FEV for overtravel protection again. |
| AL-28 | E ² ROM error | E2ROM error | Contact with Parker. |
| AL-29 | Ground protection | Ground protection | Electric leakage of drive power port or servo motor output port. |
| AL-30 | Motor locked-rotor protection | Motor locked-rotor | 1. Check if mechanical structure is blocked 2. Check if power cable is loosen 3. Locked-rotor 4. Load is too heavy, exceeding motor allowed torque; 5. Motor power cable is wired wrong. |
| AL-31 | Large mixed error of full closed-loop | Po377, Po378 and Po380 are not set properly. | Check Po377, Po378 and Po380. |
| | | Transmission part is not fastened | Check the transmission part |
| | | U, V, W terminal, encoder connection or connector contact is not good. | Check the connection of servo motor and encoder |
| | | Wrong connection of encoder at mechanical terminal | Check the connection of encoder at mechanical terminal |
| | | Drive gain is low | Increase gain, adjust the gain of speed and position |
| | | The frequency of position pulse is too high | Reduce pulse frequency or adjust electronic gear |
| AL-32 | Synchronism error of gate bridge | Po383, Po384 and Po386 are not set properly. | Check Po383, Po384 and Po386. |
| | | Transmission part is not fastened | Check the transmission part |
| | | Servo drive receives wrong pulse | Check if the wiring of servo drive is correct and PC/PLC send correct command. |
| AL-33 | Electric cam error | Electric cam data error | Check whether electric cam data is correct. |
| AL-34 | PLC command error | PLC command error | Check whether PLC command is correct. |
| AL-35 | Home searching overtime | Home searching overtime | Check the wiring. |
| | | | Check the servo drive. |
| AL-36 | Parameter copy error | Parameter copy error | Check the wiring . |
| | | | Check the parameter setting. |
| AL-41 | high-impedance state not detected | High-impedance state output is not detected after 8-core encoder is powered on. | Check 8-core encoder. |
| | | | Contact with Parker. |

9.3.1 Other malfunctions

| Malfunction | Cause | Measure |
|--|---|---|
| Servo motor does not run. | Main circuit power supply is disconnected. | Check the wiring. |
| | Control circuit power supply is disconnected. | Check the wiring. |
| | The wiring of I/O terminal is wrong. | Check the wiring. |
| | The wiring of servo motor or encoder is wrong. | Check the wiring. |
| | Control command is not inputted. | Input control command correctly. |
| | Some wrong using of input/output terminal. For example: servo on terminal is disconnected or it is defined wrong. | Define and use control terminal correctly. |
| | Forward/reverse rotation prohibited. | Make the function of forward/reverse rotation prohibited invalid. |
| | Torque limited. | Check the parameters of torque limited function. |
| | Servodrive fault. | Maintain or replace servodrive. |
| Servo motor moves instantaneously and then Stops | Servo motor wiring is incorrect. | Check the wiring. |
| | Servodrive fault. | Please contact with Parker. |
| Abnormal noise from servo motor | Mounting not secured | Check the mounting screws and tighten them. |
| | | Align the couplings. |
| | Wrong parameters setting | Check servodrive parameters. |
| | Defective bearings | Replace the servo motor. |
| | Driven machine fault | Check whether there are any foreign matters, damages or deformation on the machine section. |
| | Encoder fault | Check whether the cable of encoder is damaged. |

X Communication

10.1 Communication

Servo drive provides RS485 communication. The description below shows the communication wiring and communication protocol.

10.1.1 MODBUS General

Modbus is a serial and asynchronous communication protocol. Modbus protocol is a general language applied to PLC and other controlling units. This protocol has defined an information structure which can be identified and used by a controlling unit regardless of whatever network they are transmitted.

You can read reference books or ask for the details of MODBUS from Parker..

Modbus protocol does not require a special interface while a typical physical interface is RS485.

10.1.2 MODBUS Protocol

1 Transmission mode

(1) ASCII mode

In ASCII mode, one Byte (hexadecimal format) is expressed by two ASCII characters.

For example, 31H (hexadecimal data) includes two ASCII characters '3'(33H)', '1'(31H)'.

Common characters, ASCII characters are shown in the following table:

| Characters | '0' | '1' | '2' | '3' | '4' | '5' | '6' | '7' |
|------------|-----|-----|-----|-----|-----|-----|-----|-----|
| ASCII Code | 30H | 31H | 32H | 33H | 34H | 35H | 36H | 37H |
| Characters | '8' | '9' | 'A' | 'B' | 'C' | 'D' | 'E' | 'F' |
| ASCII Code | 38H | 39H | 41H | 42H | 43H | 44H | 45H | 46H |

(2) RTU mode

In RTU mode, one Byte is expressed by hexadecimal format. For example, 31H is delivered to data packet.

2 Baud rate

Setting range: 2400, 4800, 9600, 19200, 38400, 57600

3 Frame structure:

(1) ASCII mode

| Byte | Function |
|------|--|
| 1 | Start Bit (Low Level) |
| 7 | Data Bit |
| 0/1 | Parity Check Bit (None for this bit in case of no checking. Otherwise 1 bit) |
| 1/2 | Stop Bit (1 bit in case of checking, otherwise 2 bits) |

(2) RTU mode

| Byte | Function |
|------|--|
| 1 | Start Bit (Low Level) |
| 8 | Data Bit |
| 0/1 | Parity Check Bit (None for this bit in case of no checking. Otherwise 1 bit) |
| 1/2 | Stop Bit (1 bit in case of checking, otherwise 2 bits) |

4 Error Check

(1) ASCII mode

Longitudinal Redundancy Check (LRC): It is performed on the ASCII message field contents excluding the 'colon' character that begins the message, and excluding the CRLF pair at the end of the message.

The LRC is calculated by adding together successive 8-bit bytes of the message, discarding any carries, and then two's complementing the result.

A procedure for generating an LRC is:

1. Add all bytes in the message, excluding the starting 'colon' and ending CRLF. Add them into an 8-bit field, so that carries will be discarded.
2. Subtract the final field value from FF hex (all 1's), to produce the ones-complement.
3. Add 1 to produce the twos-complement.

(2) RTU mode

CRC-16 (Cyclical Redundancy Check), please read reference books or ask for the details from Parker..

II Command Type & Format

1 The listing below shows the function codes.

| Code | Name | Description |
|------|--------------------------|--|
| 03 | Read Holding Registers | Read the binary contents of holding registers in the slave. (Less than 10 registers once time) |
| 06 | Preset Single Register | Preset a value into holding register |
| 16 | Preset Multiple Register | Preset values into successive registers (1~120 registers) Note: In ASCII mode, register number must be less than 40. In RTU mode, register number must be less than 100. |

2 Format

(1) ASCII mode

| Start | Address | Function | Data | | | | LRC check | | End | |
|-------|---------------------|---------------|-------------|--------|-----|--------|------------------------|-----------------------|---------------|------------------|
| : | Servo drive Address | Function Code | Data length | Data 1 | ... | Data N | High-order byte of LRC | Low-order byte of LRC | Return (0X0D) | Line Feed (0X0A) |

(2) RTU mode

| Start | Address | Function | Data | CRC check | | End |
|-------------|---------------------|---------------|--------|-----------------------|------------------------|-------------|
| T1-T2-T3-T4 | Servo drive Address | Function Code | N data | Low-order byte of CRC | High-order byte of CRC | T1-T2-T3-T4 |

(3) Protocol Converter

It is easy to turn a RTU command into an ASCII command followed by the lists:

- 1) Use the LRC replacing the CRC.
- 2) Transform each byte in RTU command into a corresponding two byte ASCII. For example: transform 0x03 into 0x30, 0x33 (ASCII code for 0 and ASCII code for 3).
- 3) Add a 'colon' (:) character (ASCII 3A hex) at the beginning of the message.
- 4) End with a 'carriage return – line feed' (CRLF) pair (ASCII 0D and 0A hex).

So we will introduce RTU Mode in followed part. If you use ASCII mode, you can use the up lists to convert.

3 Parameter address rules

The address of P group parameters is the parameter numbers.

Ex1 : communication address of Po101:

The parameter numbers of Po101 is 101, the hex format is 0x0065. The address of high bit is 0x00 and the address of low bit is 0x65.

Ex2 : communication address of Po407:

The parameter numbers of Po407 is 407, the hex format is 0x0197. The address of high bit is 0x01 and the address of low bit is 0x97.

The address of S group parameters equals to parameter numbers +800

Ex3 : communication address of So-02:

The parameter numbers of So-02 is 02, so the address of So-02 is 802, the hex format is 0x0322. The address of high bit is 0x03 and the address of low bit is 0x22.

A part of L group data is 32-bit data, please refer to following table:

| Communication address | Meaning | Communication address | Meaning |
|-----------------------|--|-----------------------|--|
| 900 | Servodrive output current low 16 bits | 923 | Bit mode, low 8 bits stands for DI8~DI1 status.(Note) |
| 901 | Servodrive output current high16 bits | 924 | Reserved |
| 902 | Servodrive bus voltage low 16 bits | 925 | Bit mode, low 8 bits stands for DO8~DO1 status.(Note) |
| 903 | Servodrive bus voltage high 16 bits | 926 | Bit mode, alarm code (Note) |
| 904 | Servo motor rotation speed low 16 bits | 927 | Reserved |
| 905 | Servo motor rotation speed high16 bits | 928 | Reserved |
| 906 | Servo motor feedback pulse numbers low 16 bits | 936 | Servo motor absolution position pulse numbers high16 bits |
| 907 | Servo motor feedback pulse numbers high 16 bits. | 937 | Servo motor absolution position pulse numbers low16 bits |
| 908 | Servo motor feedback rotation low 16 bits | 938 | Servo motor absolution position rotation high16 bits |
| 909 | Servo motor feedback rotation high 16 bits | 939 | Servo motor absolution position rotation low 16 bits |
| 910 | Given pulse numbers low 16 bits | 940 | Bit mode, alarm code (bit0-bit15) |
| 911 | Given pulse numbers high 16 bits | 941 | Bit mode, alarm code (bit16-bit31) |
| 912 | Pulse counting deviation low16 bits | 942 | Bit mode, alarm code (bit32-bit47) |
| 913 | Pulse counting deviation high 16 bits | 943 | Reserved |
| 914 | Given speed low 16 bits | 952 | Actual absolute position (bit0-bit15) |
| 915 | Given speed high16 bits | 953 | Actual absolute position (bit16-bit31) |
| 916 | Given torque low 16 bits | 954 | Actual absolute position (bit32-bit47) |
| 917 | Given torque high 16 bits | 955 | Actual absolute position (bit48-bit63) |
| 918 | Analog speed low 16 bits | 956 | Actual absolute position(divided by electric gear ratio) (bit0-bit5) |
| 919 | Analog speed high 16 bits | 957 | Actual absolute position (divided by electric gear ratio bit6-bit31) |
| 920 | Analog torque low 16 bits | 958 | Actual absolute position (divided by electric gear ratio bit32-bit47) |
| 921 | Analog torque high 16 bits | 959 | Actual absolute position(divided by electric gear ratio) (bit48-bit63) |
| 922 | Reserved | 964 | Fault code |

Note: please refer to 4 Reading and writing rules of parameters about bit mode.

Ex4 : The address of servo motor feedback pulse numbers

From the above table, the address of servo motor feedback pulse includes high 16 bits (Communication address is 906, the hex form is 0x038A) and low 16 bits (Communication address is 907, the hex form is 0x038B). Read the data from the address and process them.

4 Reading and writing rules of parameters

Except two-parameter and four-parameter, the other parameters can be read directly, the data is 16-bit integer (it is complement form).

Concerning for two-parameter and four-parameter, the written and read value is hexadecimal format (The marking bits of d and b do not occupy communication bit). Under line “_” means that the bit is not displayed.

Ex5 : Two-parameter mode is d_1_10, so the hex format is 0x10A, so the read result is 266.

Ex6 : Four-parameter mode is b1234, so 0x1234 is written, and b1234 is displayed after the order succeeds.

The special instructions for 32-bit data are as the following.

Ex7 : Read servo motor feedback pulse numbers. Separately read high 16-bit and low 16-bit parameters value, shift high 16-bit data 16 bits to the left, and execute OR with low 16-bit, and confirm positive and negative according to the highest bit 0 or 1. If the highest bit is 0, the data is actual servo motor feedback pulse numbers and the data is positive number. If the highest bit is 1, to negate every bit and to add 1 to them, which equals to servo motor feedback pulse numbers and it is a negative number. If high 16 bit is 65534 and low bit is 31073, the binary form of which is 111111111111110 and 111100101100001, after shifting high 16-bit data to the left, the data becomes 111111111111110011100101100001. The highest data is 1, so the data is negative. Negate the data, the data becomes 11000011010011110, and add 1 to the data, the data becomes 11000011010011111, the decimal form is 99999. Because it is a negative number, so it is -99999.

Bit mode meaning in monitor group:

The parameter meaning in address 923:

| MSB | ← | | | | | | | | | | | | | | LSB |
|-----|----|----|----|----|----|----|---|-----|-----|-----|-----|-----|-----|-----|-----|
| 16 | 15 | 14 | 13 | 12 | 11 | 10 | 9 | 8 | 7 | 6 | 5 | 4 | 3 | 2 | 1 |
| — | — | — | — | — | — | — | — | DI8 | DI7 | DI6 | DI5 | DI4 | DI3 | DI2 | DI1 |

The parameter meaning in address 925:

| MSB | ← | | | | | | | | | | | | | | LSB |
|-----|----|----|----|----|----|----|---|---|---|---|-----|-----|-----|-----|-----|
| 16 | 15 | 14 | 13 | 12 | 11 | 10 | 9 | 8 | 7 | 6 | 5 | 4 | 3 | 2 | 1 |
| — | — | — | — | — | — | — | — | — | — | — | DO5 | DO4 | DO3 | DO2 | DO1 |

The parameter meaning in address 926, 940

| MSB | ← | | | | | | | | | | | | | | | LSB |
|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|
| 16 | 15 | 14 | 13 | 12 | 11 | 10 | 9 | 8 | 7 | 6 | 5 | 4 | 3 | 2 | 1 | |
| AL-16 | AL-15 | AL-14 | AL-13 | AL-12 | AL-11 | AL-10 | AL-10 | AL-09 | AL-08 | AL-07 | AL-06 | AL-05 | AL-04 | AL-03 | AL-02 | AL-01 |

Note: “—” means “reserved”, which is used to add new function.

• 5 Example:

(1) In RTU mode, change acc time (Po109) to 5ms in No. 01 servo drive.

Host query:

| Address | Function | Register Address Hi | Register Address Lo | Write status Hi | Write status Lo | CRC Lo | CRC Hi |
|---------|----------|---------------------|---------------------|-----------------|-----------------|--------|--------|
|---------|----------|---------------------|---------------------|-----------------|-----------------|--------|--------|

| | | | | | | | |
|----|----|----|----|----|----|----|----|
| 01 | 06 | 00 | 6D | 00 | 05 | D8 | 14 |
|----|----|----|----|----|----|----|----|

Servo1 write register Po109 5(Unit: ms) CRC check

Slave response:

| Address | Function | Register Address Hi | Register Address Lo | Write status Hi | Write status Lo | CRC Lo | CRC Hi |
|---------|----------|------------------------|------------------------|-----------------|-----------------|--------|--------|
| 01 | 06 | 00 | 6D | 00 | 05 | D8 | 14 |

Servo 1 write register Po109 5(Unit: ms) CRC check

(2) In RTU mode, read acc time (Po109) of No. 01 servo drive.

Host query:

| Address | Function | First register Hi | First register Lo | Numbers of register Hi | Numbers of register Lo | CRC Lo | CRC Hi |
|---------|----------|----------------------|----------------------|---------------------------|---------------------------|--------|--------|
| 01 | 03 | 00 | 6D | 00 | 01 | 15 | D7 |

Servo1 read register Po109 one register CRC check

Slave response:

| Address | Function | Data numbers | Data Hi | Data Lo | CRC Lo | CRC Hi |
|---------|----------|--------------|---------|---------|--------|--------|
| 01 | 03 | 02 | 00 | C8 | B9 | D2 |

Servo 1 write register 2 bits 200(Unit: ms) CRC check

10.1.3 Parameter related to communication

| Function Code | Function Definition | Setting Range | Setting unit | Mfr's value | Remarks |
|---------------|------------------------|---------------|--------------|-------------|--|
| Po500 | Communication address | 1~254 | — | 1 | |
| Po501 | Communication mode | 0~1 | — | 0 | 0 : RTU 1 : ASCII |
| Po502 | Stop bit | 0~1 | — | 0 | 0: 1bit 1: 2 bits |
| Po503 | Parity check selection | 0~2 | — | 0 | 0: No checkout 1: Odd 2: Even |
| Po504 | Baud rate | 0~5 | bit/s | 2 | 0: 2400 1: 4800 2: 9600 3: 19200 4: 38400 5: 57600 |



Note: Please set functions code related to communication consonant with the PLC/PC communication parameters, when inverter communicates with PLC/PC.

The command from PC will be written into data memory of servodrive Immediate, it is not good to write the data into the memory continuously.

Permission of Read&Write:

| Parameter | | Remarks |
|--------------|---|--|
| Po505 | 0 | Permission of Read & Write, the communication data is allowed to be written into data register. |
| | 1 | Prohibition of Read&Write, the communication commands are only executed, but they are not allowed to be written into data register. If the servodrive is power off, data will be lost and they need to be written again. |

2 Structure of Field Bus

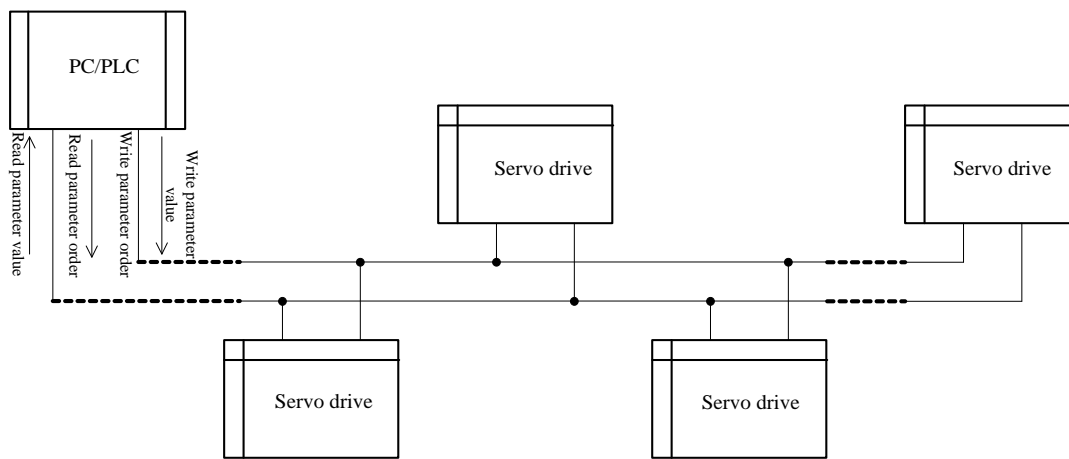


Fig 10-1-1 Connecting diagram of field bus

RS485 Half-duplex communication mode is adopted for servodrive. Daisy chain structure is adopted by 485 Bus-line. Do not use 'spur' lines or a star configuration. Reflect signals which are produced by spur lines or star configuration will interfere in 485 communications.

Please note that for the same time in half-duplex connection, and only one inverter can have communication with PC/PLC. Should two or more than two inverters upload data at the same time, then bus competition will occur, which will not only lead to communication failure, but higher current to certain elements as well.

3 Grounding and Terminal

Terminal resistance of 120Ω will be adopted for terminal of RS485 network, to diminish the reflection of signals. Terminal resistance shall not be used for intermediate network.

No direct grounding shall be allowed for any point of RS485 network. All the equipment in the network shall be well grounded via their own grounding terminal. Please note that grounding wires will not form closed loop in any case.

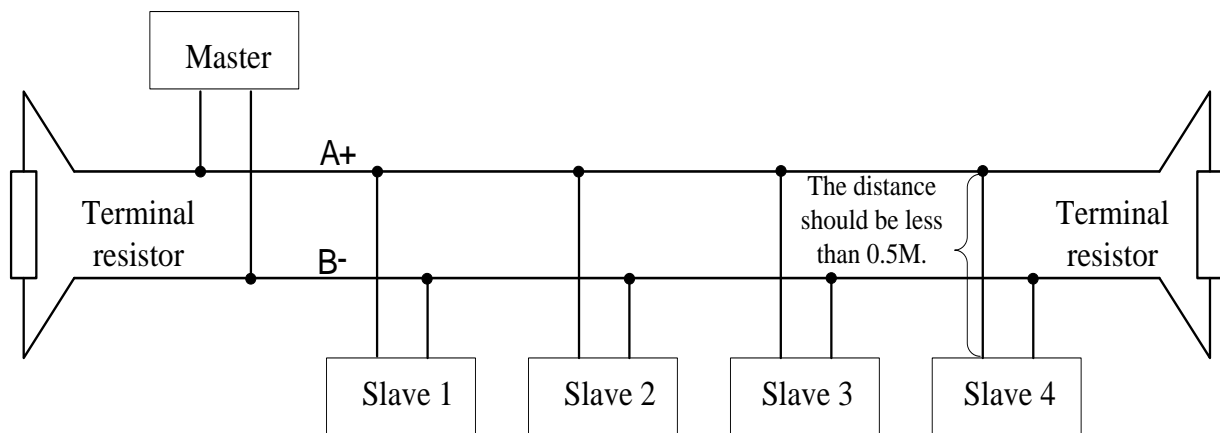


Fig 10-1-2 Connecting Diagram of Terminal Resistance

Please think over the drive capacity of PC/PLC and the distance between PC/PLC and inverter when wiring. Add a repeaters if drive capacity is not enough.





All wiring connections for installation shall have to be made when the inverter is disconnected from power supply.

XI Appendix



11.1 Encoder cable selection

11.1.1 Absolute encoder cable

Encoder cable with round plug (applicable for 80 flange and below 80 flange servo motor)

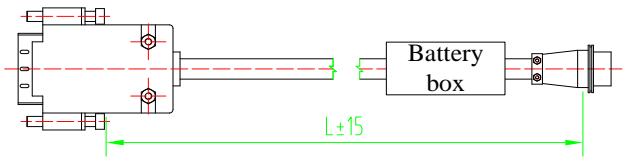
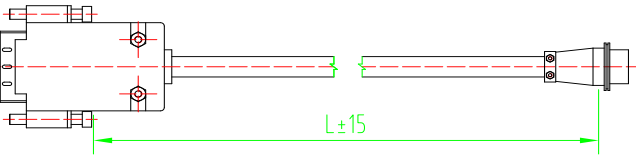
| Name | Model | Length | Cable appearance |
|---|-------------------|--------|--|
| Encoder cable (for function code D7, D71) | DB9-4BS02-3M-0.2 | 3M |  |
| | DB9-4BS02-5M-0.2 | 5M | |
| | DB9-4BS02-10M-0.2 | 10M | |
| | DB9-4GS02-3M-0.2 | 3M |  |
| | DB9-4GS02-5M-0.2 | 5M | |
| | DB9-4GS02-10M-0.2 | 10M | |

Encoder cable with L aviation plug (applicable for 110, 130 and 180 flange servo motor)

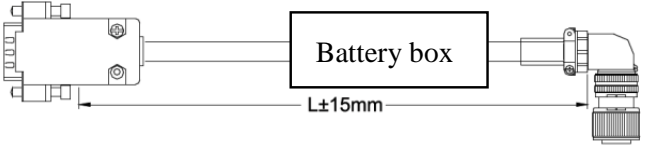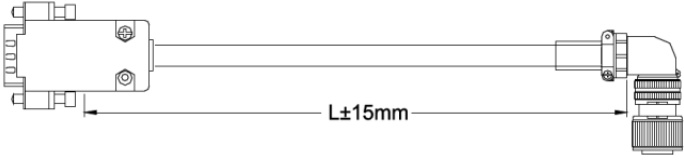
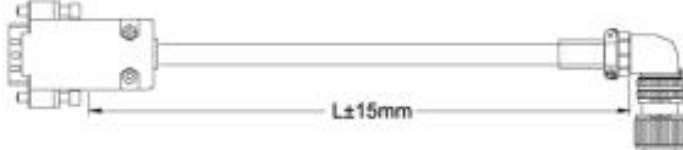
| Name | Model | Length | Cable appearance |
|---|-------------------|--------|--|
| Encoder cable (for function code D7, D71) | DB9-4BS03-3M-0.2 | 3M |  |
| | DB9-4BS03-5M-0.2 | 5M | |
| | DB9-4BS03-10M-0.2 | 10M | |
| | DB9-4GS03-3M-0.2 | 3M |  |
| | DB9-4GS03-5M-0.2 | 5M | |
| | DB9-4GS03-10M-0.2 | 10M | |

11.1.2 Incremental encoder cable


Encoder cable with DB plug (applicable for 80 flange and below 80 flange servo motor)
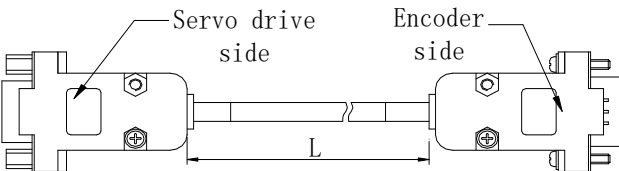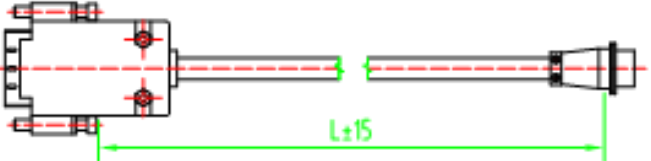
| Name | Model | Length | Cable appearance |
|--------------------------------|---------------------|--------|--|
| 15-core encoder cable (for D5) | DB15-15GP02-3M-0.2 | 3M |  |
| | DB15-15GP02-5M-0.2 | 5M | |
| | DB15-15GP02-10M-0.2 | 10M | |
| 8-core encoder cable (for D51) | DB15-8GP02-3M-0.2 | 3M | |
| | DB15-8GP02-5M-0.2 | 5M | |
| | DB15-8GP02-10M-0.2 | 10M | |
| 4-core encoder cable (for D52) | DB9-4GS02-3M-0.2 | 3M |  |
| | DB9-4GS02-5M-0.2 | 5M | |
| | DB9-4GS02-10M-0.2 | 10M | |

Encoder cable with L aviation plug (applicable for 110, 130 and 180 flange servo motor)


| Name | Model | Length | Cable appearance |
|--------------------------------|---------------------|--------|--|
| 15-core encoder cable (for D5) | DB15-15GP01-3M-0.2 | 3M |  |
| | DB15-15GP01-5M-0.2 | 5M | |
| | DB15-15GP01-10M-0.2 | 10M | |
| 8-core encoder cable (for D51) | DB15-8GP01-3M-0.2 | 3M | |
| | DB15-8GP01-5M-0.2 | 5M | |
| | DB15-8GP01-10M-0.2 | 10M | |
| 4-core encoder cable (for D52) | DB9-4GS03-3M-0.2 | 3M |  |
| | DB9-4GS03-5M-0.2 | 5M | |
| | DB9-4GS03-10M-0.2 | 10M | |

Encoder cable with I aviation plug (applicable for servo motor with base No.E,F)

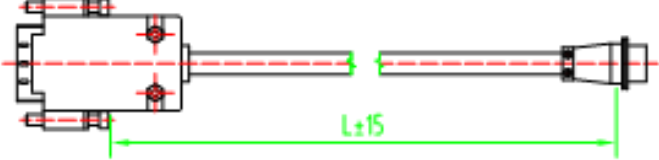
| Name | Model | Length | Cable appearance |
|--------------------------------|---------------------|--------|--|
| 15-core encoder cable (for D5) | DB15-15GP03-3M-0.2 | 3M |  |
| | DB15-15GP03-5M-0.2 | 5M | |
| | DB15-15GP03-10M-0.2 | 10M | |
| 8-core encoder cable (for D51) | DB15-8GP03-3M-0.2 | 3M | |
| | DB15-8GP03-5M-0.2 | 5M | |
| | DB15-8GP03-10M-0.2 | 10M | |

11.1.3 Resolver encoder cable

Encoder cable with Aviationplug (applicable for 180 flange and below 180 flange motor)

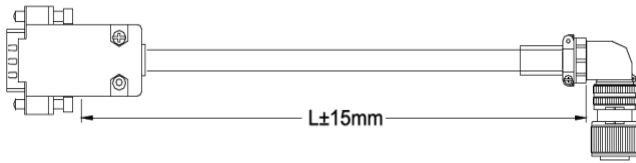
| Name | Model | Length | Cable appearance |
|------------------------|-------------------|--------|--|
| Encoder cable (for D2) | DB9-8GR01-3M-0.2 | 3M |  |
| | DB9-8GR01-5M-0.2 | 5M | |
| | DB9-8GR01-10M-0.2 | 10M | |

Encoder cable with I aviationplug (applicable for servo motor with base No. E, F)

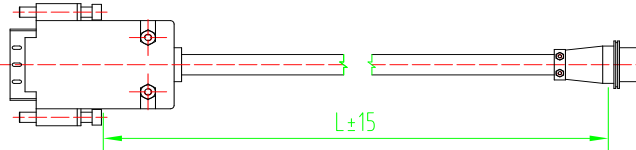
| Name | Model | Length | Cable appearance |
|------------------------|-------------------|--------|--|
| Encoder cable (for D2) | DB9-8GR02-3M-0.2 | 3M |  |
| | DB9-8GR02-5M-0.2 | 5M | |
| | DB9-8GR02-10M-0.2 | 10M | |

11.2 Control cable

Analog speed and torque mode control cable

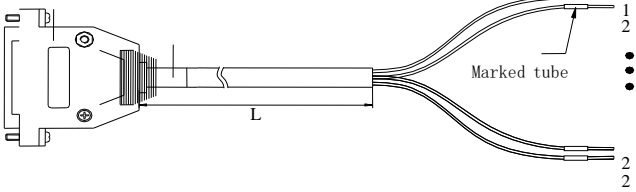
| Name | Model | Length | Appearance |
|---------------|------------------|--------|---|
| Control cable | DB44-15AI-1M-0.2 | 1M |  |
| | DB44-15AI-2M-0.2 | 2M | |
| | DB44-15AI-3M-0.2 | 3M | |

Position mode control cable

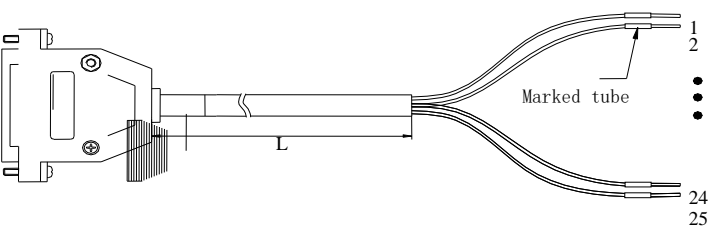
| Name | Model | Length | Appearance |
|---------------|------------------|--------|--|
| Control cable | DB44-15PC-1M-0.2 | 1M |  |
| | DB44-15PC-2M-0.2 | 2M | |
| | DB44-15PC-3M-0.2 | 3M | |

11.3 Power cable

Applicable for 80 flange and below 80 flange servo motor

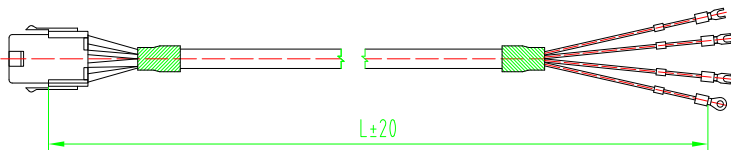
| Name | Model | Length | Appearance |
|-------------|---------------------|-----------------|--|
| Power cable | DB4-4PO-*M-diameter | *M means length |  |

Applicable for 110, 130 and 180 flange servo motor
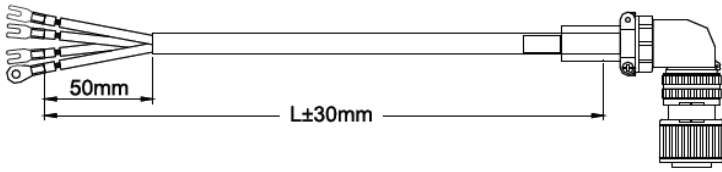
| | | | |
|-------------|--|-----------------|--|
| Power cable | HK4A-4PO-*M – diameter HK4B-4PO-*M – diameter | *M means length |  |
|-------------|--|-----------------|--|

Note: aviation plug is used for servo motor with flange above 110. Servo motor with 180 flange has large current, so the line diameter should be larger, named as “HK4B-4PO-*M-diameter”. Except servo motor with 180 flange, other cables are named as “HK4A-4PO-*M-diameter”. For M1 and M2 structure of 220V servo drive, the name of cable should add –B, for M2 structure of 380V servo drive, the name of cable should add –H.

Applicable for 180 spigpot and 250 spigpot servo motor
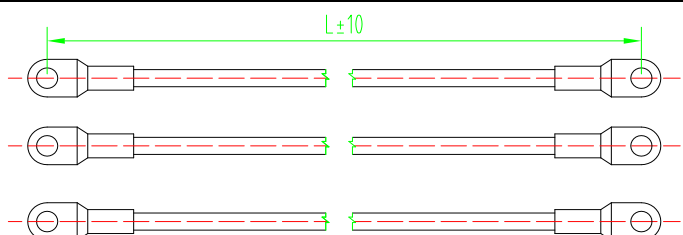
| Name | Model | Length | Appearance |
|-------------|---------------------|-----------------|--|
| Power cable | ZL4-4PO-*M-diameter | *M means length |  |


Note:

1. ZL4-4PO-XXX is single-strand cable, ground cable is yellow-green 2.5 mm² wire.
2. 180 spigpot and 250 spigpot servo motors use cable lug, please refer to below table:



| Servo Motor | Cable Lug |
|-------------|-----------|
| 11KW | 6-8 |
| 15KW-18.5KW | 10-8 |
| 22KW-30KW | 16-8 |
| 37KW | 25-8 |

11.4 Other cable

Communication cable
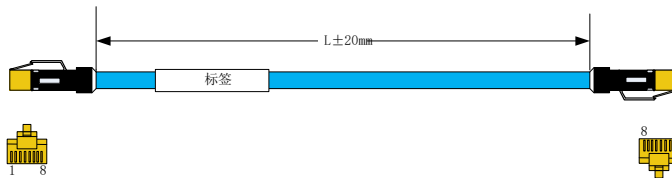
| Name | Model | Length | Appearance |
|--------------------------------|-----------------|-----------------|--|
| Communication cable | 1394-2TR-*M-0.3 | *M means length | None |
| Industry Ethernet shield cable | SC-ECT-*M-C | Actual length |  |

Motor brake cable
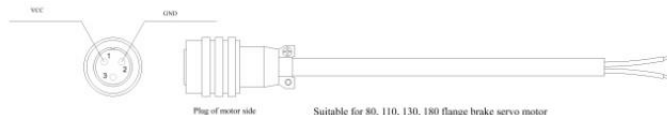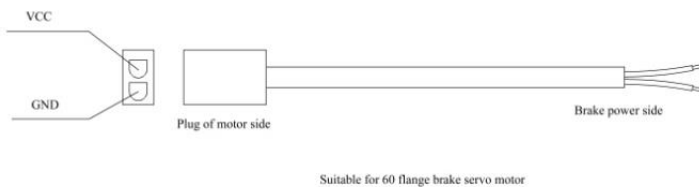
| Name | Model | Length | Appearance |
|-------------|-----------------|---------------|---|
| Brake cable | HK3-2BR-*M-0.75 | Actual length |  |
| Brake cable | DB2-2BR-*M-0.75 | Actual length |  |

11.5 Motor and matched cable

220V servo motor series

| Motor model | | Servo drive model | | Power cable model |
|-------------------------|----------------|-------------------|---------------|-------------------|
| FMS series 3000r/min | FMSA-201*32*** | FL20-S201S2M1 | FL20-S201T2M1 | DB4-4PO-*M-0.75-B |
| | FMSA-401*32*** | FL20-S401S2M1 | FL20-S401T2M1 | |
| | FMSA-751*33*** | FL20-S751S2M1 | FL20-S751T2M1 | |
| | FMSA-102*33*** | FL20-S102S2M2 | FL20-S102T2M2 | DB4-4PO-*M -1.0-B |
| | FMSA-122*35*** | FL20-S122S2M2 | FL20-S122T2M2 | |
| | FMSA-152*37*** | FL20-S182S2M2 | FL20-S182T2M2 | HK4A-4PO-*M-1.5-B |
| | FMSA-182*35*** | | | HK4A-4PO-*M-2.5-B |
| | FMSA-232*37*** | — | FL20-S302T2M3 | HK4A-4PO-*M-2.5 |
| | FMSA-302*37*** | — | FL20-S452T2M3 | HK4A-4PO-*M-4.0 |

| ===== | | | | |
|-------------------------|---------------|---------------|---------------|--------------------|
| FMM series 2000r/min | FMMA-801*35** | FL20-S102S2M2 | FL20-S102T2M2 | HK4A-4PO-*M-0.75-B |
| | FMMA-851*37** | | | HK4A-4PO-*M-1.0-B |
| | FMMA-102*37** | FL20-S122S2M2 | FL20-S122T2M2 | HK4A-4PO-*M-1.0-B |
| | FMMA-122*35** | | | |
| | FMMA-132*37** | FL20-S182S2M2 | FL20-S182T2M2 | HK4A-4PO-*M-1.5-B |
| | FMMA-152*37** | | | |
| | FMMA-202*37** | — | FL20-S302T2M3 | HK4A-4PO-*M-2.5 |
| | FMMA-312*37** | — | FL20-S452T2M3 | HK4B-4PO-*M-4.0 |
| | FMMA-352*3A** | — | | |
| ===== | | | | |
| FMM series 1500r/min | FMMB-122*37** | FL20-S122S2M2 | FL20-S122T2M2 | HK4A-4PO-*M-1.0-B |
| | FMMB-152*37** | FL20-S182S2M2 | FL20-S182T2M2 | HK4A-4PO-*M-1.5-B |
| | FMMB-232*37** | — | FL20-S302T2M3 | HK4A-4PO-*M-2.5 |
| | FMMB-272*3A** | — | | HK4B-4PO-*M-2.5 |
| | FMMB-302*3A** | — | FL20-S452T2M3 | HK4B-4PO-*M-4.0 |
| | FMMB-432*3A** | — | FL20-S452T2M3 | |
| ===== | | | | |
| FML series 1000r/min | FMLA-102*37** | FL20-S102S2M2 | FL20-S102T2M2 | HK4A-4PO-*M-1.0-B |
| | FMLA-152*37** | FL20-S182S2M2 | FL20-S182T2M2 | HK4A-4PO-*M-1.5-B |
| | FMLA-292*3A** | — | FL20-S302T2M3 | HK4B-4PO-*M-2.5 |
| | FMLA-372*3A** | — | FL20-S452T2M3 | HK4B-4PO-*M-4.0 |

380V servo motor series

| Motor model | | Servo drive model | Power cable model |
|-------------------------|----------------|-------------------|-------------------|
| FMS series 3000r/min | FMSA-751*63*** | FL20-S102T3M2 | DB4-4PO-*M-0.75-H |
| | FMSA-102*63*** | | |
| | FMSA-122*65*** | FL20-S202T3M3 | HK4A-4PO-*M-1.0 |
| | FMSA-152*67*** | | HK4A-4PO-*M-1.0 |
| | FMSA-182*65*** | | HK4A-4PO-*M-1.5 |
| | FMSA-232*67*** | FL20-S302T3M3 | HK4A-4PO-*M-1.5 |
| | FMSA-302*67*** | FL20-S452T3M3 | HK4A-4PO-*M-2.5 |
| ===== | | | |

| | | | |
|-------------------------|------------------|----------------|--------------------|
| MM series 2000r/min | FMMA-801*65** | FL20-S102T3M2 | HK4A-4PO-*M-0.75-H |
| | FMMA-851*67** | | |
| | FMMA-102*67** | | |
| | FMMA-122*65** | FL20-S152T3M2 | |
| | FMMA-132*67** | | |
| | FMMA-152*67** | FL20-S202T3M3 | HK4A-4PO-*M-1.0 |
| | FMMA-202*67** | | HK4A-4PO-*M-1.5 |
| | FMMA-312*67** | FL20-S452T3M3 | HK4A-4PO-*M-2.5 |
| | FMMA-352*6A** | | HK4B-4PO-*M-2.5 |
| | FMMA-452*6A** | | HK4B-4PO-*M-2.5 |
| | FMMA-602*6A** | FL20-S752T3MM4 | HK4B-4PO-*M-4.0 |
| | FMMA-802*6A** | | |
| | FMMA-103*6A** | FL20-S153T3M4 | HK4B-4PO-*M-6.0 |
| ===== | | | |
| FMM series 1500r/min | FMMB-122*67** | FL20-S202T3M3 | HK4A-4PO-*M-1.0 |
| | FMMB-152*67** | | HK4A-4PO-*M-1.5 |
| | FMMB-232*67** | | |
| | FMMB-302*67** | FL20-S302T3M3 | HK4A-4PO-*M-2.5 |
| | FMMB-272*6A** | FL20-S302T3M3 | HK4B-4PO-*M-2.5 |
| | FMMB-302*6A** | FL20-S302T3M3 | |
| | FMMB-432*6A** | FL20-S452T3M3 | |
| | FMMB-552*6A** | FL20-S552T3M3 | |
| | FMMB-752*6A** | FL20-S752T3MM4 | HK4B-4PO-*M-4.0 |
| | FM15-0082*6EE*FL | FL20-S752T3MM4 | ZL4-4PO-*M-4.0 |
| | FM15-0100*6EE*FL | FL20-S113T3MM4 | ZL4-4PO-*M-6.0 |
| | FM15-0124*6EE*FL | FL20-S153T3M4 | ZL4-4PO-*M-6.0 |
| | FM15-0160*6EE*FL | FL20-S183T3M5 | ZL4-4PO-*M-10.0 |
| | FM15-0180*6EE*FL | | ZL4-4PO-*M-10.0 |
| | FM15-0210*6FE*FL | FL20-S223T3M5 | ZL4-4PO-*M-10.0 |
| | FM15-0240*6EE*FL | FL20-S303T3M6 | ZL4-4PO-*M-16.0 |
| | FM15-0290*6FE*FL | FL20-S303T3M6 | ZL4-4PO-*M-16.0 |
| | FM15-0350*6FE*FL | FL20-S373T3M6 | ZL4-4PO-*M-25.0 |

| ===== | | | |
|-------------------------|------------------|----------------|--------------------|
| FML series 1000r/min | FMLA-372*6A*** | FL20-S452T3M3 | HK4B-4PO-*M-2.5 |
| | FMLA-102*67*** | FL20-S152T3M2 | HK4B-4PO-*M-0.75-B |
| | FMLA-292*6A*** | FL20-S302T3M3 | HK4B-4PO-*M-1.5 |
| ===== | | | |
| FMM series 1700r/min | FM17-0075*6EE*FL | FL20-S752T3MM4 | ZL4-4PO-*M-4.0 |
| | FM17-0092*6EE*FL | FL20-S113T3MM4 | ZL4-4PO-*M-6.0 |
| | FM17-0110*6EE*FL | FL20-S113T3MM4 | ZL4-4PO-*M-6.0 |
| | FM17-0140*6EE*FL | FL20-S153T3M4 | ZL4-4PO-*M-6.0 |
| | FM17-0180*6EE*FL | FL20-S183T3M5 | ZL4-4PO-*M-10.0 |
| | FM17-0210*6FE*FL | FL20-S223T3M5 | ZL4-4PO-*M-10.0 |
| | FM17-0240*6EE*FL | FL20-S303T3M6 | ZL4-4PO-*M-16.0 |
| | FM17-0270*6EE*FL | FL20-S303T3M6 | ZL4-4PO-*M-16.0 |
| | FM17-0330*6FE*FL | FL20-S373T3M6 | ZL4-4PO-*M-25.0 |
| FMM series 2000r/min | FM20-0070*6EE*FL | FL20-S752T3MM4 | ZL4-4PO-*M-4.0 |
| | FM20-0100*6EE*FL | FL20-S113T3MM4 | ZL4-4PO-*M-6.0 |
| | FM20-0140*6EE*FL | FL20-S153T3M4 | ZL4-4PO-*M-6.0 |
| | FM20-0180*6EE*FL | FL20-S183T3M5 | ZL4-4PO-*M-10.0 |
| | FM20-0220*6EE*FL | FL20-S223T3M5 | ZL4-4PO-*M-10.0 |
| | FM20-0250*6EE*FL | FL20-S303T3M6 | ZL4-4PO-*M-16.0 |
| | FM20-0280*6EE*FL | | ZL4-4PO-*M-16.0 |
| | FM20-0300*6EE*FL | FL20-S373T3M6 | ZL4-4PO-*M-16.0 |
| | FM20-0360*6FE*FL | | ZL4-4PO-*M-25.0 |

XII Appendix 2

12.1 EtherCAT communication card

EtherCAT is a real-time Industrial Ethernet technology with the feature of high performance, low cost, flexible topology and easy operation, which can be used in industrial field high-speed I/O network. It uses standard Ethernet physical layer, transmission medium twisted-pair or optical fiber (100Base-TX or 100Base-FX).

Matching up with EtherCAT bus card, FL20 series servo drive can realize EtherCAT communication function, and also achieve CANopen Drive Profile (CIA402) in the application layer.

Besides of consolidating the control modes of former CANopen DS402, such as profile velocity (pv), profile position (pp), homing (hm) and profile torque (tq), it also supports the control modes of cyclic synchronous

position (CSP), cyclic synchronous velocity (CSV), cyclic synchronous torque (CST). User can select the needed control mode by setting corresponding parameters. It can make the control mode be possible from simple speed control to position control of high-speed and high-precision.

| Object | | Specification |
|------------------------|----------------------------|--|
| Communication protocol | | Field bus standard: IEC 61158 Type 12, IEC 61800-7 CiA 402 Drive Profile |
| Application layer | SDO | SDO request, SDO reply |
| | PDO | Dynamic configuration for 0x1600 and 0x1A00 |
| | CiA402 | Profile position mode (pp) Profile velocity mode (pv) Profile torque mode (tq) Homing mode (hm) Cyclic synchronous position mode (csp) Cyclic synchronous velocity mode (csv) Cyclic synchronous torque mode (cst) Interpolation mode (ip) NOP |
| Phsycial layer | Transport protocol (media) | IEEE802.3 (100BASE-TX) |
| | Max distance | 100M |
| | Port | RJ45 * 2 (INT、 OUT) |

12.1.1 Installation and Connection

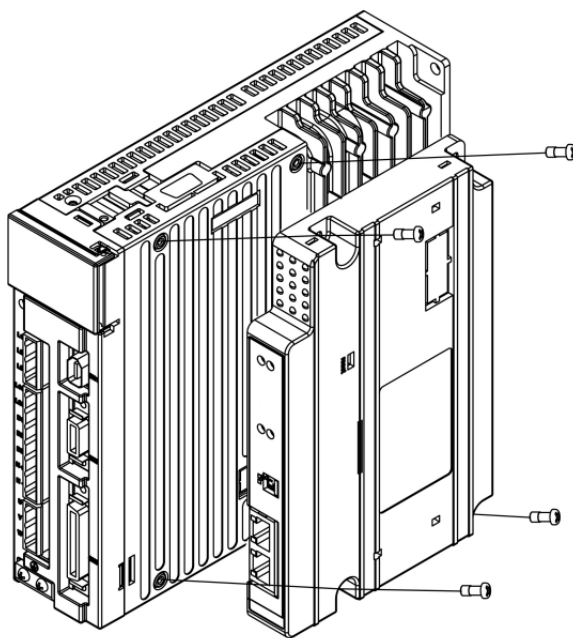


Fig 12.1.1 FL20 series servo drive EtherCAT communication card installation Instruction

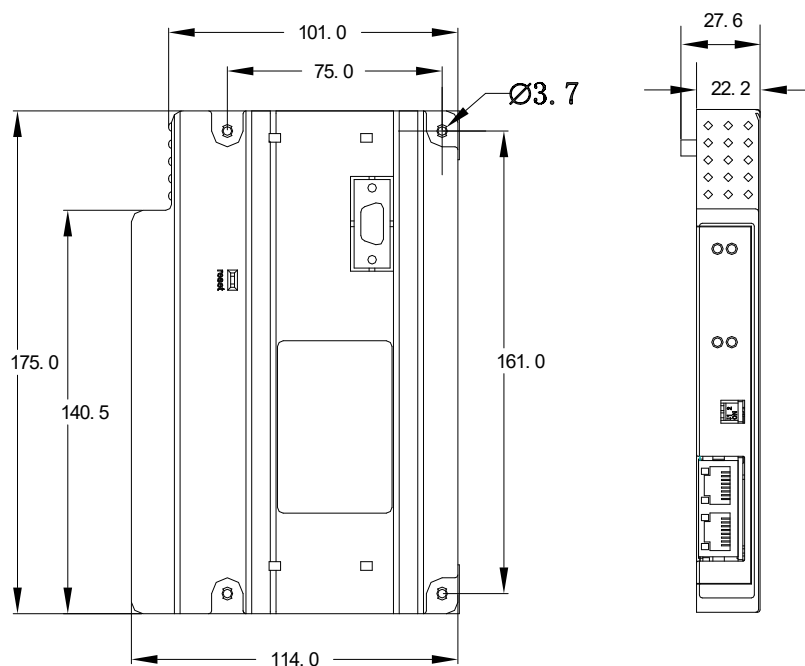


Fig 12.1.2 FL20 series servo drive EtherCAT bus card dimension figure

12.1.2 Hardware Layout

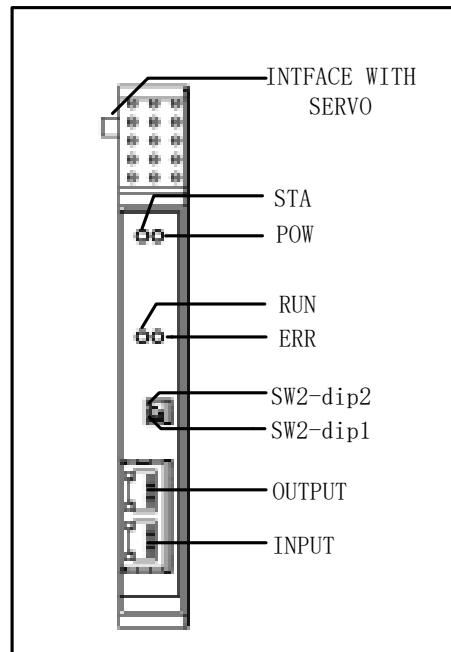


Fig 12.1.3 FL20 series servo EtherCAT bus card instruction

12.1.3 Topology Way

Bus, tree or star: EtherCAT supports almost all topology structures.

Therefore, the bus structure or linear structure can be also used in Ethernet network, and not be limited by the quantity of cascading switch or hub.

Besides of the traditional, Ethernet-based star structure, the most efficient system connection way is peer-to-peer, branch or tree structure. It is no need to add switch because the needed port has already existed in several devices such as I/O module.

User can also select different cables to promote the flexibility of connection: flexible, economic standard Cat 5E Ethernet cable can adopt 100BASE-TX transport signal, the max length of the cable between two devices is 100m.

The combination of different Ethernet wirings (e.g. different optical fiber and copper cable) can be realized by switch or media converter.

Signal variable can be selected separately according to space between each cable. Because the quantity of the connected devices can reach as high as 65535, the capacity of network can be almost unlimited.

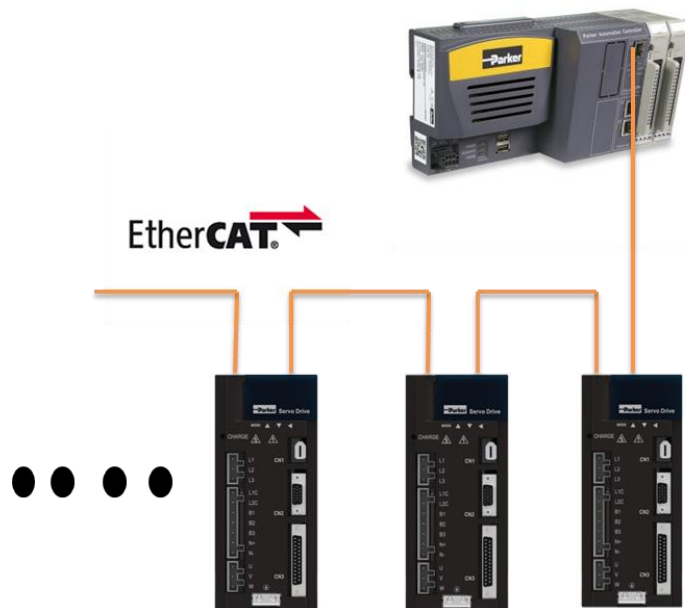


Fig 12.1.4 EtherCAT bus topology connection sketch

12.1.4 LED indicator

| Led | Color | Function |
|-----|-------|----------------|
| POW | Green | Power_on |
| STA | Green | STATUS |
| RUN | Green | FieldBus_Run |
| ERR | Red | FieldBus_Error |

12.1.5 Dial switch SW2

| | | |
|---------|-----|--|
| SW-dip1 | ON | Turn the switch to ON when downloading the program |
| | OFF | Turn the switch to OFF when running the program. |

12.1.6 Servo related parameter setting

| Parameter | Name | Setting range | Value |
|-----------|---------------------------|---------------------------|-------|
| Po001 | Control mode selection | Two-parameter | 1,21 |
| So-17 | Forward forbidden setting | 0: disabled 1: enabled | 0 |

| | | | |
|-------|---------------------------|---------------------------|---|
| So-18 | Reverse forbidden setting | 0: disabled 1: enabled | 0 |
|-------|---------------------------|---------------------------|---|

Note: Po004, Po339, Po341 will turn 0 to 1 automatically.

12.2 CANopen communication card

CANopen is a high layer protocol which bases on CAN serial bus system and CAL (CAN application layer). The communication card is used to connect inverter to CAN network.

CANopen bus card overall performance parameter

| Object | Content |
|----------------------------------|--|
| Link layer protocol | CAN bus |
| Application layer protocol | CANopen protocol |
| CAN-ID type | 11bit-CAN2.0A |
| Baud rate | 125Kbit/s (default) 125Kbit/s,250Kbit/s,500Kbit/s,1Mbit/s |
| Max sites | 64 |
| CAN frame length | 0~8 bytes |
| Application layer CAN frame type | Data frame |
| Terminal matched resistance | 120 Ω |
| Sub-protocol | Cia-301 V4.02: CANopen Application layer and communication protocol DSP-402 V2.0: Drive and motion control sub-protocol |
| Services | NMT: Network Management system SDO: Service data object PDO: Process data object Device monitor: Node protection and beat SYNC: Sync generator and sync receiver, apply to PDO |
| PDO transport type | Event trigger, sync trigger |
| PDO quantity | 2 RPDO, 2 TPDO |
| SDO transmission mode | Acceleration SDO |
| Servo running mode | Profile Position Mode (PP) Profile Speed Mode (PV) Profile Torque Mode(PT) |

| | |
|--|---|
| | Homing Mode (HM) Interpolated Position Mode (IP) |
|--|---|

12.2.1 Installation and Connection

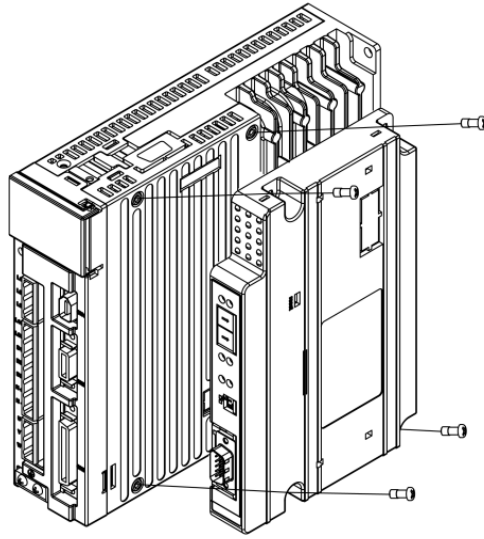


Fig 12.2.1 Servo CANopen communication card installation instruction

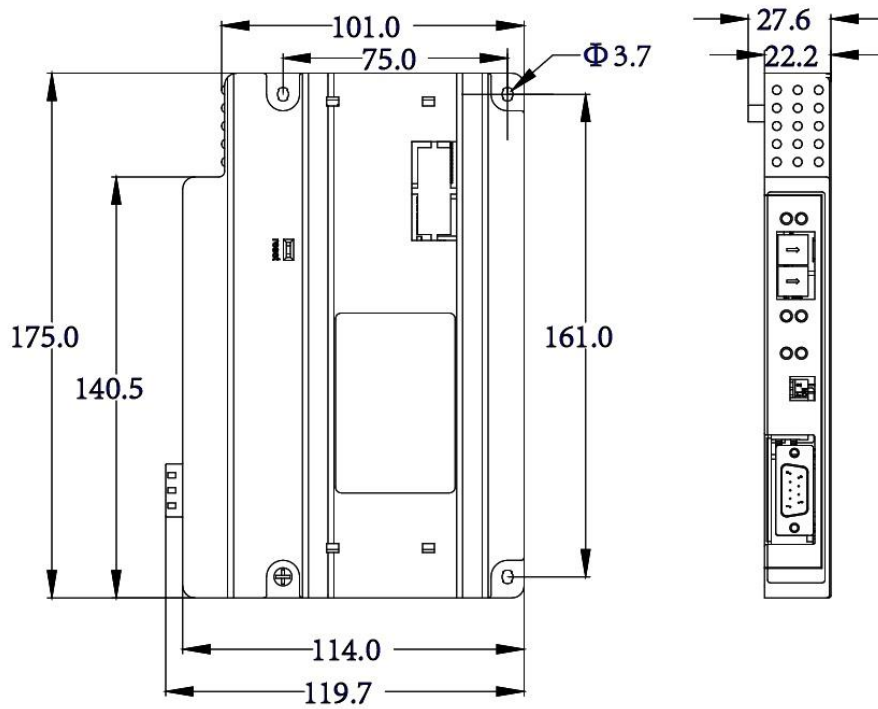


Fig 12.2.2 Servo CANopen bus card dimension

12.2.2 Hardware layout

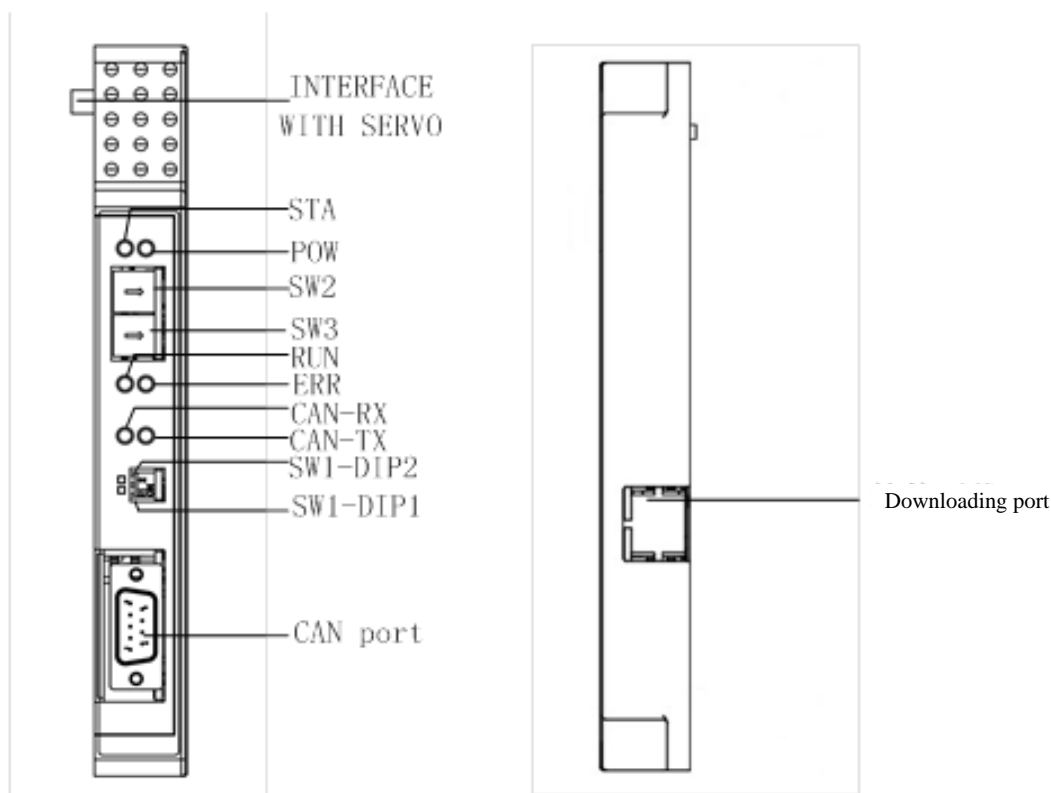


Fig 12.2.3 Servo CANopen bus card sketch map

12.2.3 CAN-bus connection

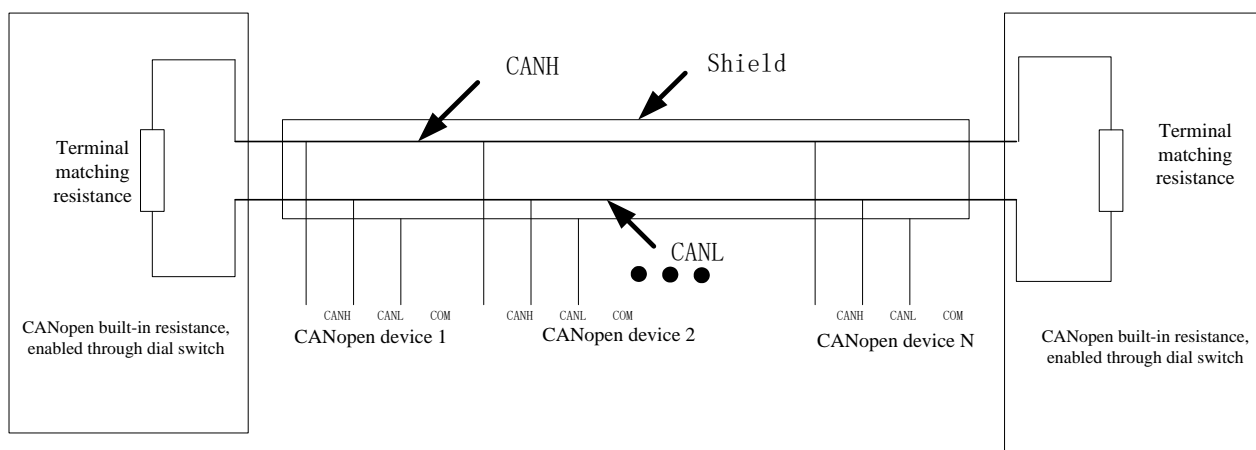
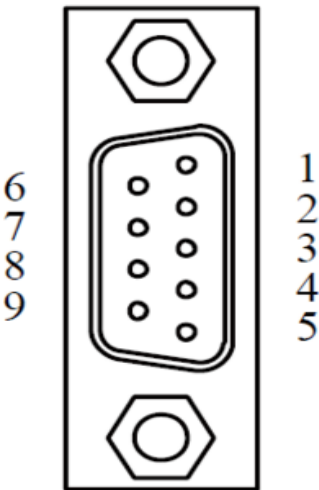


Fig 12.2.4 CAN-bus connection sketch map

12.2.4 CANopen bus interface pins

| | | | |
|--|----------------|-----------------|--|
|  <p>Fig 12.2.5 bus interface pins</p> | Pin No. | Pin name | Description |
| | 1 | -- | N/C |
| | 2 | CAN_L | CAN differential signal low-level pin |
| | 3 | GND | Ground |
| | 4 | Unused | N/C |
| | 5 | PE | Cover |
| | 6 | GND | Ground |
| | 7 | CAN_H | CAN differential signal high-level pin |
| | 8 | Unused | N/C |
| | 9 | Unused | N/C |

12.2.5 Status indicator

| Indicator | Color | Function |
|-----------|-------|----------------|
| STA | Green | STATUS |
| POW | Green | Power_on |
| RUN | Green | FieldBus_Run |
| ERR | Red | FieldBus_Error |
| RX | Green | CAN_RX |
| TX | Red | CAN_TX |

12.2.6 Switch code

[문서에서 멋진 인용문을 가져 오거나
핵심 포인트를 강조하는 공간으로
사용해 보세요. 이 텍스트 상자는
문서 어느 곳에도 끌어다 놓을 수
있습니다.]

| Switch code | Position | Instructions |
|-------------|----------|---|
| SW1-dip1 | ON | Download program |
| | OFF | Download succeeds. |
| SW1-dip2 | ON | Connect with terminal resistance of CAN network. |
| | OFF | Disconnect with terminal resistance of CAN network. |

The 16-bit switch codes of SW3 and SW2 are used to set the baud rate and communication address of CAN bus.

Table 12.2.2 CANopen bus card address and baud rate setting

| Baud rate Address | 125Kbit/s | 250Kit/s | 500Kbit/s | 1Mbit/s |
|----------------------|-----------|----------|-----------|---------|
| 1+SW2 | SW3 = 0 | SW3 = 1 | SW3 = 2 | SW3 = 3 |
| 1+16+SW2 | SW3 = 4 | SW3 = 5 | SW3 = 6 | SW3 = 7 |
| 1+31+SW2 | SW3 = 8 | SW3 = 9 | SW3 = A | SW3 = B |
| 1+47+SW2 | SW3 = C | SW3 = D | SW3 = E | SW3 = F |

12.2.7 Servo related parameter setting

| Parameter | Name | Setting range | Value |
|-----------|---------------------------|---------------------------|-------|
| Po001 | Control mode selection | Two-parameter | 1,21 |
| So-17 | Forward forbidden setting | 0: disabled 1: enabled | 0 |
| So-18 | Reverse forbidden setting | 0: disabled 1: enabled | 0 |

Note: Po004, Po339, Po341 will turn 0 to 1 automatically.

N2017122704

Parker Asia Pacific

China

Sales Office

Shanghai office, 86-21-28995000
Parker Hannifin Motion&Control Co. Ltd.
280 Yunqiao Road, Jin Qiao Export Processing Zone,
Shanghai 201206, China

Sales Office

Guangzhou Office, 86-20 32121688
Parker Hannifin Motion&Control Co.Ltd.
Room 202, Building F, Guangdong Soft Science Park,
No 11, Caipin Road, Guangzhou Science City,
Luo Gang District, Guangzhou 510663, China

Sales Office

Beijing office, 86-10-6561-0520
Parker Hannifin Motion&Control Co.Ltd.
Suite 8B01, 8th Floor, Hanwei Plaza,7 Guanghua Road,
Chaoyang District, Beijing 100004, P.R.China

Automation Division

WUXI plant, 86-510-8116-7000
Parker Hannifin Motion and Control (Wuxi) Company Ltd.
No.200, Furong Zhong Si Lu, Xishan Economic Development Zone,
Wuxi 214101, Jiangsu, China

Japan

Sales Office

Asahi Plant, 81-479-64-2282
kpl_sales@parker.com
Kuroda Pneumatics LTD
10243 Kamakazu, Asahi-shi, Chiba 289-2505 Japan

Automation Division

Asahi Plant, 81-479-64-2282
Kuroda Pneumatics LTD
10243 Kamakazu, Asahi-shi, Chiba 289-2505 Japan

Korea

Sales Office

Seoul Office, 822-559-0400
11F, U-Space1 B, 660, Daewangpangyo-ro, Bundang-gu,
Seongnam-si, Gyeonggi-do, 13494, Korea

Automation Division

Jangan Plant, 82 31-359-0700
Parker Korea Ltd.
23, Jangangongdan 1-gil, Jangan-myeon,
Hwaseong-si, Gyeonggi-do, 18579, Korea

India

Sales Office

PHI Chennai Sales office, 91-44-43910799
Parker Hannifin India Private. Limited,
Plot no. P41/2, Eight Avenue, Domestic Tariff Area,
Mahindra world city, Chengalpattu, Kanchipuram District,
Pin : 603002, Tamil Nadu, India

Automation Division

PHI Chennai MWC Plant, 91-44-43910703
Parker Hannifin India Private. Limited,
Plot no. P41/2, Eight Avenue, Domestic Tariff Area,
Mahindra world city, Chengalpattu,
Kanchipuram District,
Pin : 603002, Tamil Nadu, India

Taiwan

Sales Office

Taipei Office, 886-2-2298897
Parker Hannifin Taiwan Co., Ltd.
8F., No.22 Wuquan 7th Road., Wugu Dist., New Taipei City, 248,
Taiwan (R.O.C)

Thailand

Sales Office

Bangkok Office, (66) 2 186 7000
Parker Hannifin (Thailand) Co., Ltd.
1265 Rama 9 Road, Suanluang Bangkok 10250 Thailand

Singapore

Sales Office

Office: +65 6887 6300
Parker Hannifin Singapore Pte Ltd.
11th Fourth Chin Bee Road Singapore 619702

Malaysia

Sales Office

Selangor Office, +603 7849 0800
Parker Hannifin Industrial (M) Sdn Bhd
No.11 Persiaran Pasak Bumi
Seksyen U8, Bukit Jelutong Industrial Park
40150 Shah Alam, Selangor, Malaysia

Indonesia

Sales Office

Office: +62-21-7588-1906
PT. Parker Hannifin Indonesia
Wisma Contromatic, Jalan Kapten Soebijanto
Djodjohadikusumo, Kav. Sunburst Block CBD II No.15
BSD (Bumi Serpong Damai), Tangerang 15311,
Indonesia

Vietnam

Sales Office

Office: (84) 8 3999 1600
Parker Hannifin Vietnam Co., Ltd.
4th Floor, VRG office building,
177 Hai Ba Trung, Ward 6, District 3
Ho Chi Minh City,
Vietnam

Australia

Sales Office

Office: +61-2-9634-7777
Parker Hannifin (Australia) Automation Department
9 Carrington Rd Castle Hill, NSW, 2154 Australia

New Zealand

Sales Office

Office: +64 9 574 1744
Parker Hannifin (NZ) Ltd.
5 Bowden Road, Mt Wellington 1060, Auckland, New Zealand

